 


App download guidance on Mobile

 
Hardware Installation
Connection between power source ,router and the gateway

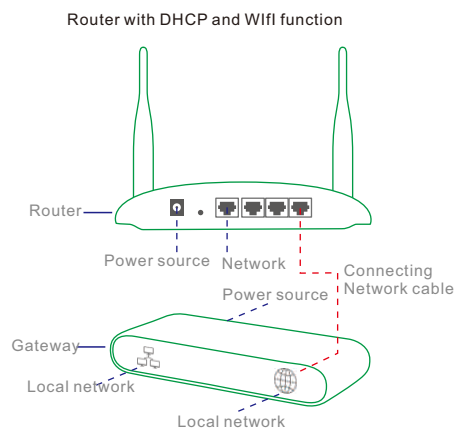

i If network connection is normal --- indicator light is normally on.
If network connection is abnormal --- indicator light keeps flashing.

Mobile network setting

i In the first setting, the mobile must connect WIFI launched by the router that is connecting gateway.

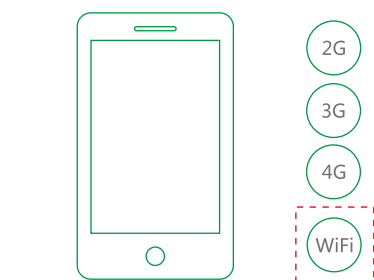

Mobile network connection

Registration

1)Click the " Register" button in the bottom right corner to enter registration interface (Fig.2)



Fig.1

Fig.2

2)In the interface (Fig. 2), input your email address, user name, password, click " Register" button, it will display " register successfully", then the registration is done.

3)Enter login interface, input your user name and password, then click the " login" button (Fig. 3)

App operation instruction

1. Preparation before operation

Before operation, the mobile should be checked to connect the local WIFI successfully (**the network should be WIFI launched by the router that is connecting gateway**)

2.User registration and login

After the App is installed, click to enter the login interface (Fig. 1), please register an account if you do not have one.



Fig.3



Fig.4

2) If you already have a gateway and intend to add another one to this system, enter the "setting" interface and click " gateway detection" button, it will display a gateway detection interface (Fig. 6).

3)After the gateway is added, click " next" button to enter the binding interface, choose the room and click " binding immediately " button to finish the binding.(Fig. 5)The default setting is to bind all rooms with gateway, you can also choose the room that is not needed for binding and click to cancel it.

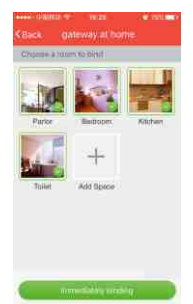 


Fig.5

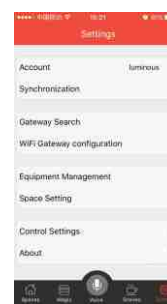 


Fig.6

3. Adding gateway and binding to room

For the first operation , the system will display " discover a new gateway"(Fig. 4) after login. In the blank of " custom name" , you can name the gateway on your preference, such as " gateway"; if you do not name it, it will be named " default gateway" automatically.

4. Adding device

1)In the room interface, click" add" button (Fig. 7 / 8)

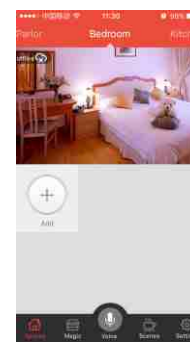 


Fig.7



Fig.8

2) Click " smart lock" button to enter " scan smart device RQ code" interface (Fig. 9), put your mobile camera on the RQ code of smart lock and scan it, it will turn to a new interface (Fig. 10). Fill in the blank of " Name" and click " complete" button to finish the adding section, it will prompt " adding successfully" .



Fig.9

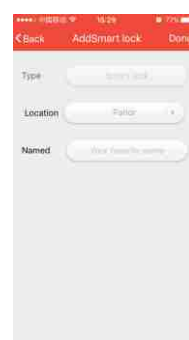 


Fig.10

Authorized Password has three types: single-use password, permanent password and time-limited password. (Fig. 15)

Single-use password is valid for unlocking once.
Permanent password is valid permanently.
Time-limited password is valid for setting time. (Fig.16)



Fig.15

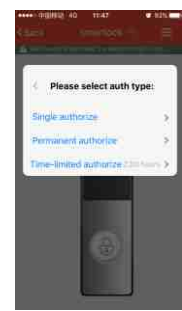 


Fig.16



Fig.11



Fig.12

5. Control the smart lock

Click the unlock icon in the lower part of the lock (Fig. 11) to enter the interface of password request (Fig. 12), input distant password to unlock the door remotely (this distant password need to be set within the actual door lock, operation details seen " input unlocking information". The distant password shall not to be saved on mobile for security, but when you use voice for unlocking, voice shall be saved.



Fig.13



Fig.14

In the decoding menu, there is three sub-menu: password authorization, warning record, cancel the saved password. (Fig. 13)

Click "password authorization" and input administrator's password.(Fig. 14)

Warning record (Fig. 17)

1. Memory of unlocking records of who and when to open the door.
 2. Messages will be sent to App when password is input for 6 times.
 3. Messages will be sent to App when the door is unlocked by key.
 4. Messages will be sent to App when the lock is pried.
 5. Messages will be sent to App when the threaten password is input. (The threaten password is set in case you are threaten)
- Cancel the saved password , you can delete the saved password. (Fig. 18)



Fig.17



Fig.18



Smart Home Door Lock Installation Instructions

Specification :

Power supply : 4.5V -6.5V
Typical dynamic current:<50μA
Action current:<140mA
Fingerprint or card capacity:<= 285groups
Password capacity:<= 285 groups
ActuatorDC :micro-motor
Available lock body:International standard lock body
Working temperature: -20°C-70°C
Storage temperature:-25°C-125°C
Working humidity: 5% - 95%RH



Packing list :

- 1.Front plate x1
- 2.Back plate x1
- 3.Lock body x1
- 4.Long axis x1
- 5.Short axis x1
- 6.Key x2
- 7.Screws x1bag

Warranty card

Warranty card number:
Item No:
Produce serial number:

Smart door lock system quality assurance description:

Dear users:
Thank you choose our company's products. in order to make our service more perfect, please carefully fill in the following data and properly keep the warranty card.
一. Three years warranty since the purchase, free maintenance if the product broken in normal use condition
二. Three years warranty since the purchase, free maintenance if the product broken in normal use condition
A. Without the warranty card, or warranty card has been altered ; B. Do not follow the instructions to use, resulting in damage to the person ;
C. dismantle it by yourself resulting seal damage ; D. Caused by force majeure factors (such as natural disasters, etc.)
三. Our company can provide spare parts and paid service when exceed the warranty period.

User information

User name :
Tel:
Address :

Dealer information

Dealer Name:
Tel:
Address :

Dealer stamp

Note: the warranty card is only for the machine itself, any additional service will be charged accordingly.

Date of purchase:

Note:

- * Be sure to carry the emergency mechanical key or place it in the safe place of outside !
- * Please read this manual carefully before using this product, please keep the instruction, in order to consult in the future.
- * This instruction is for your reference only. Any discrepancy in future, please adhere to the actual product instead.

Smart Door Lock Operating Instructions

Smart Door Lock Operating Instructions

Smart Door Lock Operating Instructions

 
 
Installation

Enter into Menu — press "1+#"
— Enter into Menu — Please verify administrator
— press "SET" for setting

Tips After Operation: Enter administrator information (the initial state administrator password: 123456), function management can be proceed after the administrator is verified


Note:
"2" means up, "8" means down, "*" means back, "#" means ok

1. Input unlock information (Need to verify administrator's Information)

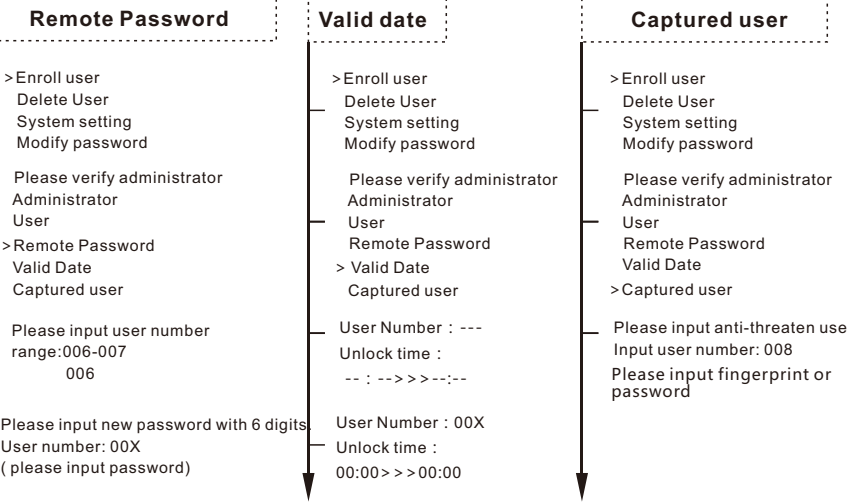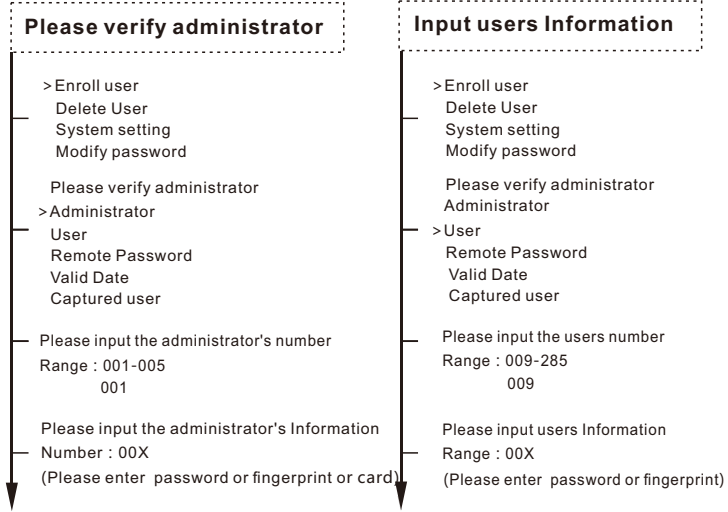



Note: In input process, directly press "#" identified as order entry, fingerprints or password are not duplicate entry, password is 4 to 16 digits.

 2. Delete unlock information (Need to verify administrator's Information)

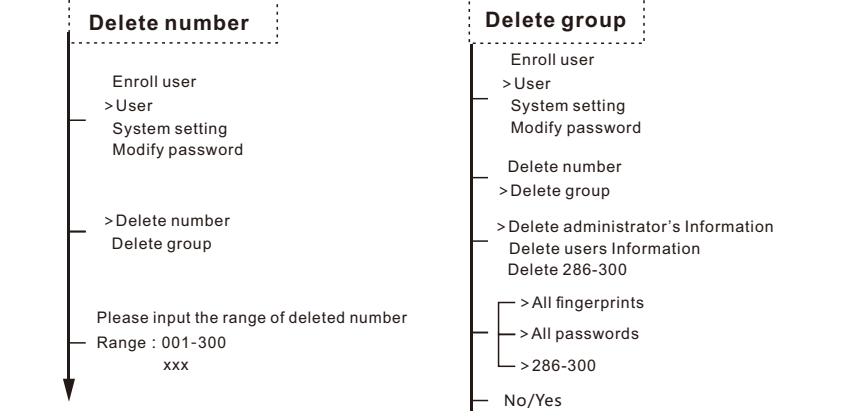


Note:
During deleting, the current authenticated administrator information can't be deleted, Delete function is not available before resetting the initial password.

  3. System setting (Need to verify administrator's Information)

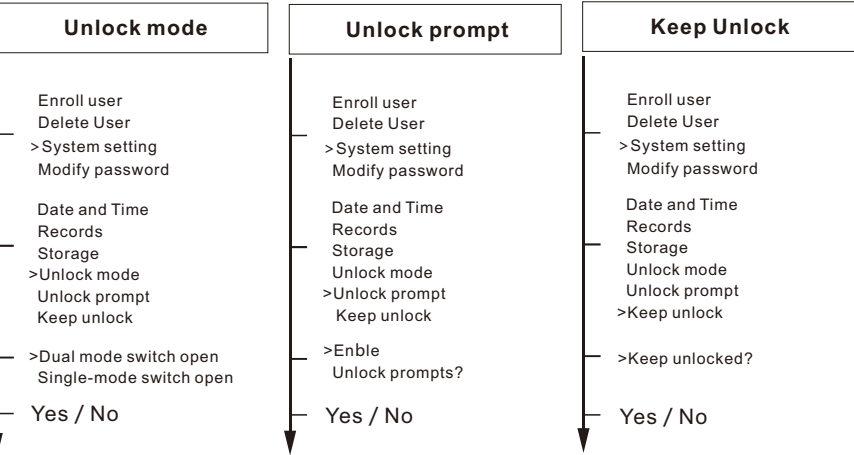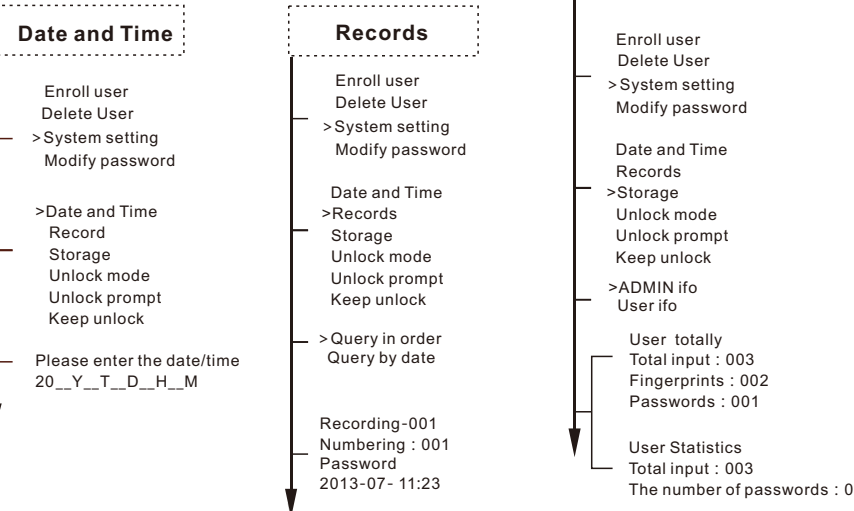

It can save up to 250 records, record number range from 001-250, records will be recovered when storage is full, it displays the latest unlock record if check by order, and it displays the nearest unlock date if check by time

 4. Modify password (Please input the administrator's Information)

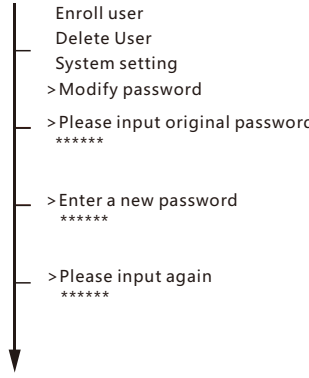

5. Unlock mode setting

1. Single unlock mode: One fingerprint or one password can unlock
 2. Two fingerprints, two passwords or fingerprint+ password to unlock
- (Input two different numbers to unlock)

6. Restore factory Settings

 
Long press backside DEL button for 5s, then enter into restore factory settings, all unlock informations and records will be deleted. After that, Initial password is 123456 (Which can be used to verify the administrators)

7. other

- ★ Input the wrong password more than 5 times in a row, keyboard will be locked for 3 minutes, System does not respond to any operation in 3 minutes.
- ★ Password anti-peep function: Password input as follows: X X X correct password X X X, adding some unrelated number in front or at the back of the correct password, then press "#" to confirmed. The correct password must be included in the input content. "*" key for (cancel) or (return), "#" key to confirm; Press the "*" key, Empty all entered keys
- ★ Turn the handle to open the door after the voice prompt "Unlock"

Note:
Initial state: Using factory's initial password "123456" can open the door. After enter the new administrator's information, The initial password "123456" will be deleted automatically

1. Standing outside of the door and face it. Confirm the direction of smart door lock and door opening direction, then adjust the handle and the latchbolt direction.
Note: Pls make sure that the axis arrow of front plate should be the same direction with the handle before installation, please don't put the key into of twist.

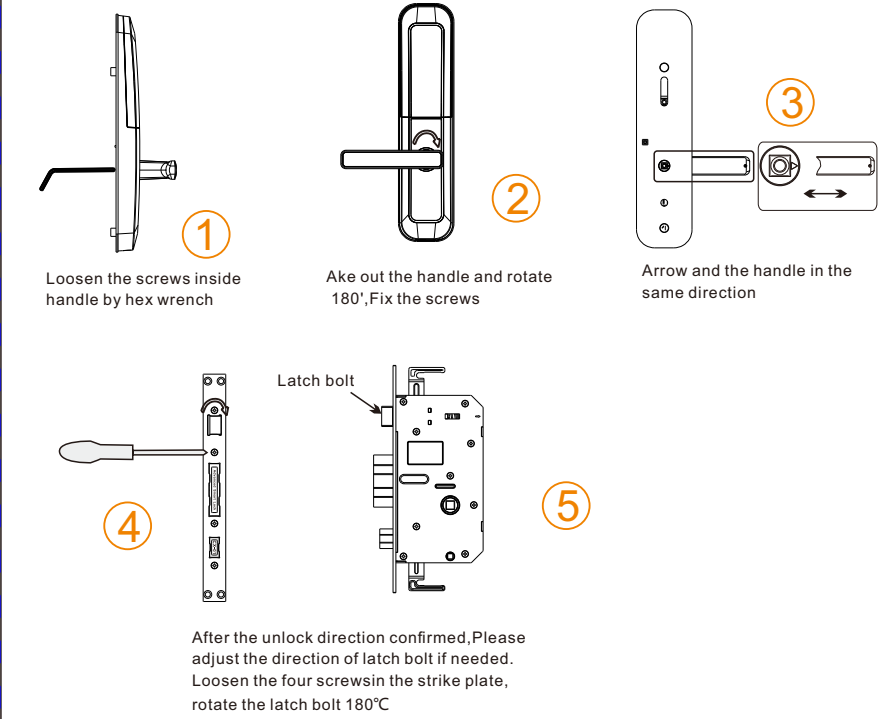

2. Adjust and install lock body. Then install front and back panel, and fix all screws
3. Install the face plate and strike plate adjust the direction of latch bolt
4. Try to open and close the door, and screw up if smoothly

