 


10.5X10CM

ULTRASONIC AROMA DIFFUSER

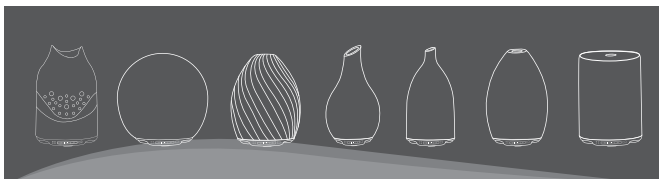

Please carefully read this manual and keep it in a safe place

WARNING

EN

Be careful while handling the diffuser, the cover is fragile and is not attached to the plastic base.  
It is therefore necessary to hold the plastic base with one hand and to keep the cover in the other.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.  
-Only to be used for ambience diffusion purpose, do not inhale.  
-Use in an environment between 50°F and 65°F (≈ 10°C and 30°C).  
-The appliance is only to be used with the power unit supply provided with the appliance.  
-For optimal maintenance, use mineral water (bottled or tap water).  
-Do not exceed the maximum water level (250 ml).  
-Always pour the water before adding essential oils or home fragrance.  
-Do not use pure essential oils, nor home fragrances without water.  
-The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or fire risk.  
-Continuous use of the diffuser may, in the long term, damage the product and shorten its lifespan.

1

WARNING

EN


-Unplug the appliance before any manipulation such as cleaning or filling operations for example. Empty the tank when the appliance is not in use.  
-Do not remove the lid or cover the diffuser when the appliance is in use.  
-Change frequently the water in the tank to avoid any dirt building up that may damage the appliance.  
-Clean the water tank every week. Do not use chemical products (such as acids, alkaline, etc.) or any corrosive detergents to clean the appliance.  
-Do not immerse.  
-In case of water infiltrations into the appliance, unplug the diffuser immediately and leave it to dry for at least 3 days before reusing it.

The producer is not responsible for damages caused by wrong use of device.

3

PRECAUTIONS FOR USE

1.Insert the adaptor's connector into the DC jack input at the back of the base of the diffuser.  
2.Place the diffuser on a flat and stable surface and away from the edge.  
3.Remove the diffuser's outer and inner cover.  
4.Pour mineral water (bottled or tap water) into the water tank up to the maximum level indicated (250 ml).  
5.Add a few drops of essential oils (3-6 drops) or home fragrances (3-7drops) to the water tank.  
6.Replace the inner cover and the outer cover on the diffuser.  
7.Plug the adaptor into the appropriate outlet.

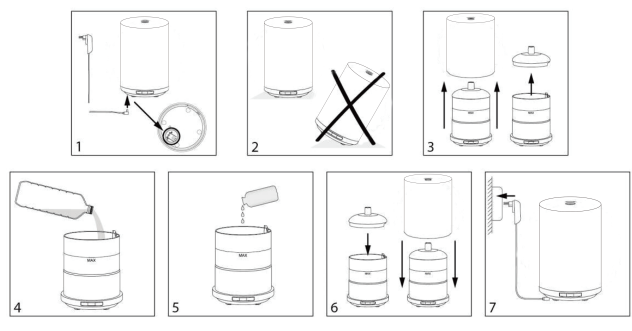

4

How to Operate

ON/OFF button – Middle button:  
1.Press the ON/OFF button once to ON mode (highest mist volume diffusion: 30 ml/h), automatically shuts down waterless.ON work indicator lights up.  
2.Press the ON/OFF button Twice to timing 1 hour (highest mist volume diffusion: 30 ml/h) automatically shuts down after 1 hour. 1 hour work indicator lights up.  
3.Press the ON/OFF button Third to timing 3 hours (highest mist volume diffusion: 30 ml/h) automatically shuts down after 3 hours. 3 hours work indicator lights up.  
4.Press the ON/OFF button Fourth to timing 6 hours (highest mist volume diffusion: 30 ml/h) 6 hours work indicator lights up. automatically shuts down after 6 hours. 6 hours work indicator lights up.

 
Light button – Right button:  
1.Press once to start the color changing ambience.  
2.Press twice to select the color ambience of your choice  
3.Press third time to turn off the lights.  
If you want to use the device as a lamp (and no diffusion) press firstly on the Light button and do not press on the ON/OFF button.

Mist volume – Left button:  
1.Press once to get the lowest mist volume diffusion ( 15 ml/h)  
2.Press second time to get the middle mist volume diffusion (22ml/h)  
3.Press third time to get the highest mist volume diffusion (30 ml/h)  
When the water level in the tank is too low or at zero, the diffuser stops automatically. To go back to a normal working, top the water up by following the « Precautions for use » steps.

5

MAINTENANCE

You are advised to change the water frequently in the tank and clean the diffuser once or twice a week, particularly if you want to change the fragrance to be diffused.

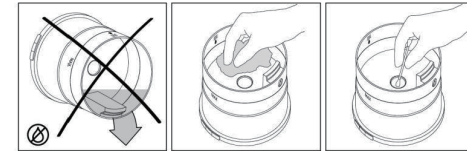


1.Turn the appliance off and unplug it.  
2.Remove the covers and empty the water on the opposite side of the air outlet. Do not empty the water in the air outlet, this would damage the diffuser.  
3.Clean the diffuser water tank using a soft damp cloth. If needed, use a little white vinegar strongly diluted. Do not use corrosive detergents. Carefully rub the ceramic disc with a cotton bud being careful not to scratch it.

6

TECHNICAL SPECIFICATIONS


Input power supply : AC 100-240V, 50/60Hz    Output power supply : DC24V 500mA  
Tank capacity: 250 ml  
Recommended for a surface of: 30 m²



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe

7


DETAILED DIAGRAM OF THE COMPONENTS  
SCHEMA DETAILLE DES COMPOSANTS

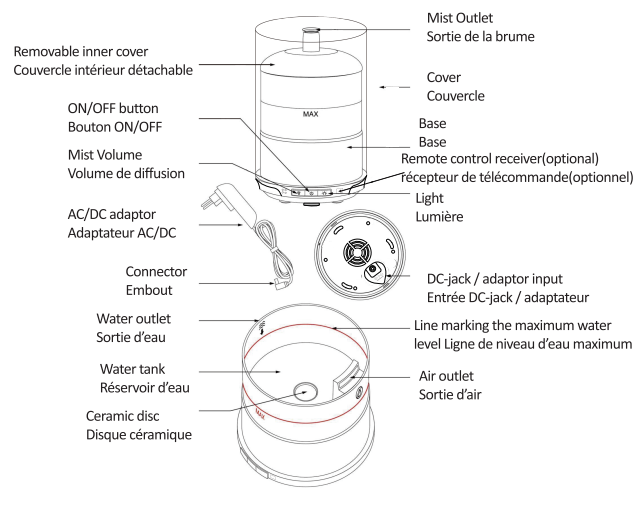 


8

App Connection Guide

 Download TuYaSmart from App Store or Google Play, TuYaSmart

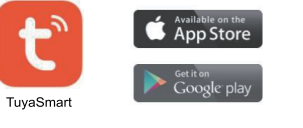


 Register and log in:  
Register a new account via mobile phone number or email, setting password as letters with numbers(password must longer than 8 letters and less than 20).

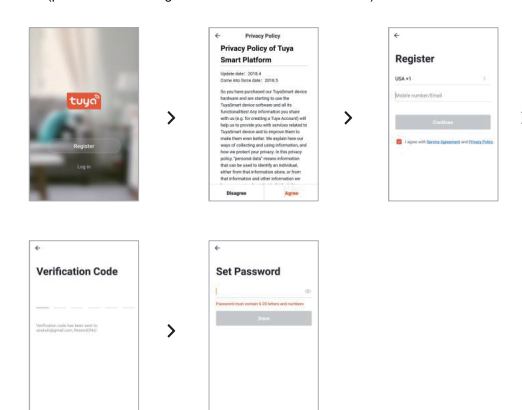


9

Click "Add Home" to create a customized operation system.

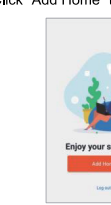


Then "Add device", select device type as "Air Purifier" or "Water Purifier" or "Humidifier". Click "Confirm indicator rapidly click", then enter your WiFi password. Wait till the circle 100% completed. Now you can name your diffuser and control it via APP.

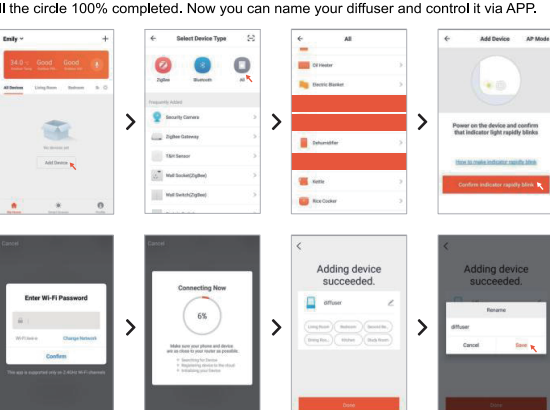


10


APP Control Guide




Click Power to turn on/off both the light and the mist.




Click Spray to control mist. Spray Mode: Weak Mode & Strong Mode Spray Timer: On/Off/10min

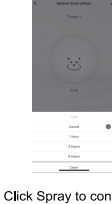

Click Light to control light. Gradient Light color will cycle automatically. Fixed: Fix one color and brightness adjustable. Nightlight: Fix at green light and brightness adjustable.

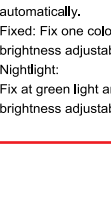

Click Schedule to set mist or light schedules.



11

Note & QA

Note

- In order to pairing successfully, it's better to operate near the WIFI router. If your home WiFi does not require a password, leave it blank.
- The device only supports 2.4GHz networks. 5GHz network is unavailable.
- If failed to Add, please unplug the diffuser for 2 minutes and try again.

QA

Q: Router can not access the Internet, does it support the local area network? Can it directly connect to cellphones hot spots?

A: The Android version supports LAN control, while Apple version currently not. The device must be connected to the Internet via a router to communicate with the mobile server.

Q: Why can not I get a registered SMS verification code? Why can not mobile phone connect device hotspot?

A: Permission is limited. Select "Allow" when you encounter authorization during installation.

Q: My router is 5GHz, but the diffuser only work with 2.4GHz, can I connect with this diffuser?

A: Yes, some routers will run dual band by default – both 5.0GHz and 2.4GHz.

In this case, there are two steps you need to do as follows:

- Disable 5.0 GHz frequency (temporarily)
- Set up a guest network

After doing both these things, the device will pair correctly and you can re-enable the 5.0GHz frequency without any other influence.

12

Amazon Echo Connection


Compatible with Amazon Echo


- Download and install Alexa app.
- Register an Alexa account and pair your Echo.
- Add TuYaSmart skill.


Click menu at the upper left corner

Click Skills to enter skill store.

Search TuYaSmart

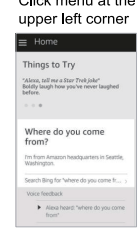

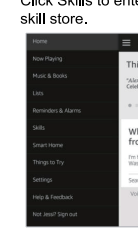


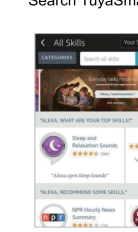



Click Profile and Settings

Click Integration.

Choose amazon alexa.

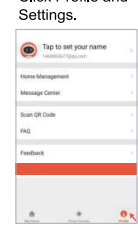

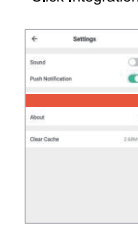

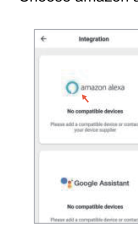

13

Follow the steps to connect with Alexa.

Step 1: Add Device

Make sure there is at least 1 device that is supported by Amazon Alexa. This is shown on the Integration Screen.

Step 2 : Modify Device Name

Modify device name so your Amazon Alexa can easily recognize the name. For Example: Living Room Lamp, Bedroom Light.

Step 3 : Set Up Alexa

Use Alexa App or Computer (<http://alexa.amazon.com>) to set up your Amazon Alexa.

Step 4 : Add Skill

In the menu bar, go to "Skills" and search for "TuYa Smart". Enable Skill, then type in your login info from your app account to finish the account linking.

Step 5 : Control Device

Ask Alexa to discover devices. After 20 seconds, devices will be discovered and Alexa will tell you "I found x devices". Then you can control your devices using voice through your Amazon Alexa product.

14

After completing, enjoy your smart home journey.  
Or, you can search devices by the following orderings:  
\* Alexa, discover my device.  
\* Alexa, discover device.  
\* Alexa find device  
After 20 seconds, echo will tell you how many devices it found.  
Sign in Alexa app and click Smart Home to control the devices it found.

Operational Orderings.  
( Make sure device name is English and don't use special characters that device cannot recognize.  
Such as: My lamp; Switch, My switch, etc.)

Searching Devices:

"Alexa,Discover my Rainbow diffuser(device name)"

Device On/Off Orderings:  
"Alexa,turn on Rainbow diffuser(device name)"  
"Alexa,turn off Rainbow diffuser(device name)"

Color Setting:  
"Alexa,turn Rainbow light(device's light name) to red/white/green/yellow/blue/purple/orange"

Percentage Setting - LED Brightness Adjustment:  
"Alexa,set Rainbow light(device's light name) to 10/20/30/40/50...percent"

15