 


DIGITAL DOOR LOCK

D2000

D201


Product Guide

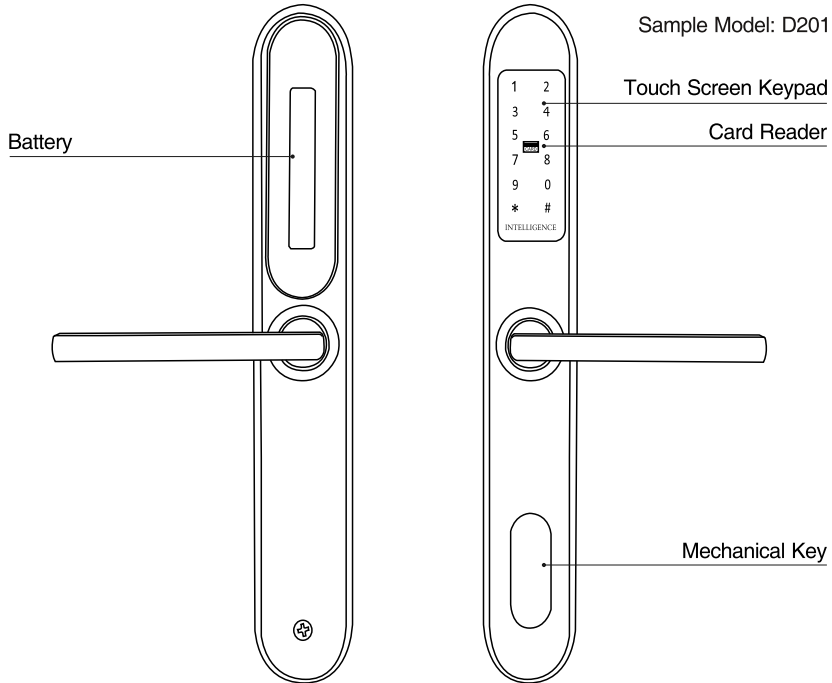


Brief Introduction

- 1 The default master password is “123-456”;
- 2 There are 100 password users and 800 card users available in the lock;
- 3 The password can be 6 to 10 digits;
- 4 The micro-USB port is covered by the cylinder cover, which is the port for emergency power supply;
- 5 The lock has 2 unlocking modes: Single Unlocking Mode and Double Unlocking Mode.


Installation

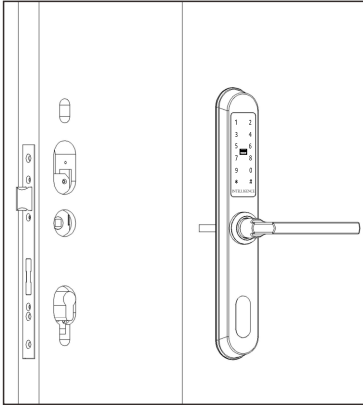


1. Drill the holes on the door and then install the mortise into the door;

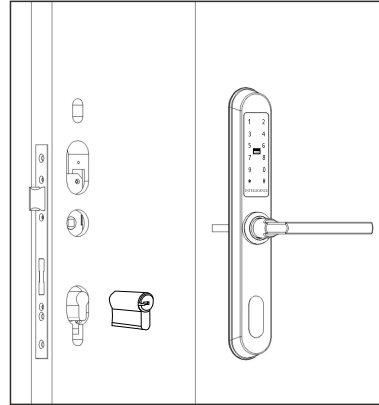

2. Install the cylinder into the mortise and fasten it by the screw;

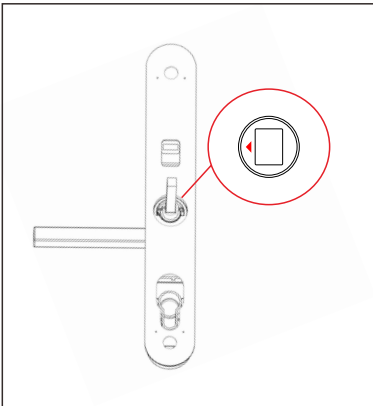


3. Install the spindle into the handle hole in the front panel, and then insert the rod and fasten it;

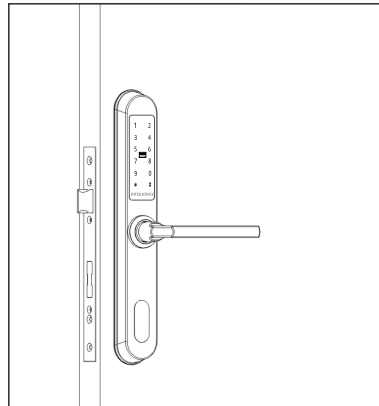


4. Install the front panel on the door


Installation

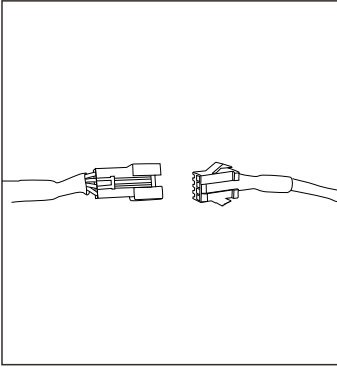

5. Contact the cable between the front and back panel

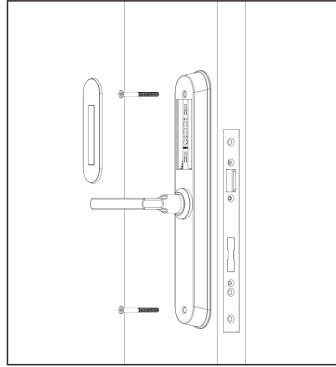


6. Install the back panel on the other side of door, and then fasten both panels

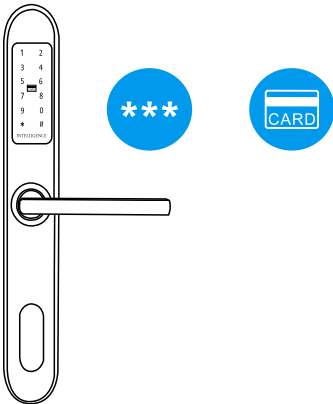


7. Install the batteries and test the installation to confirm the installation is successful.

Operation


1 Change The Master Password

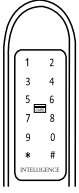


a Input * + #

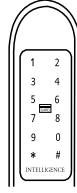


b Input the master password, press # to confirm

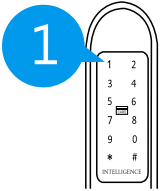

c Input 1

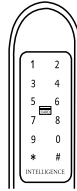


d Input the new master password, press # to confirm;

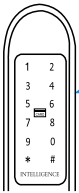


e Input the new master password again, press # to confirm and finish.

 **The master password can be 6 to 10 digits;**


 **Once finishing the operations, please try to unlock the lock to confirm the operation is successful.**

 **There is only one master password user in the lock.**

2 Add Users (Password and Card)

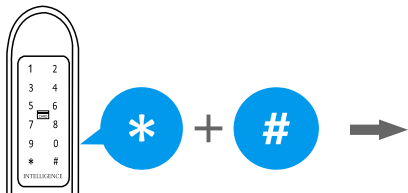


a Input * + #

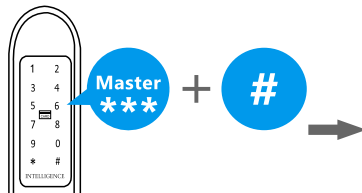 


b Input the master password, press # to confirm



c Input 2

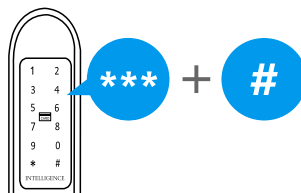


d Password User: input the password, press # to confirm

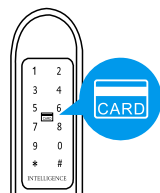


e RF Card User: place the card close to the card reader


 **The password can be 6 to 10 digits**

 **Once finishing the operations, please try to unlock the lock to confirm the operation is successful.**

3 Delete Single User (Password and Card)

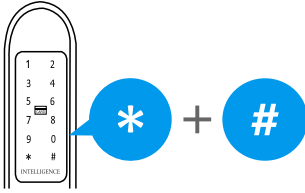


a Input * + #

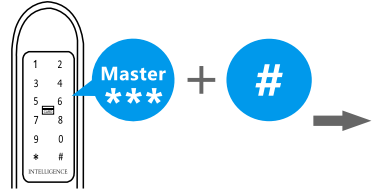 


b Input the master password, press # to confirm




c Input 3

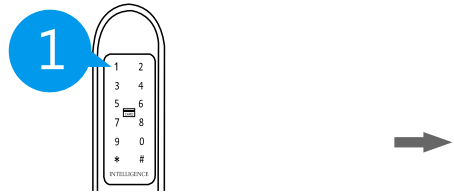


d Input 1

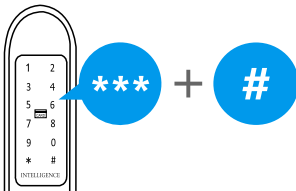


e Delete Password: input the password, press # to confirm to delete it

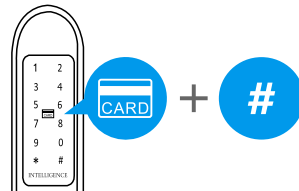


e Delete Card: place the card close to the card reader to delete it

 **Once finishing the operations, please try to unlock the lock to confirm the operation is successful.**

4 Delete All Users

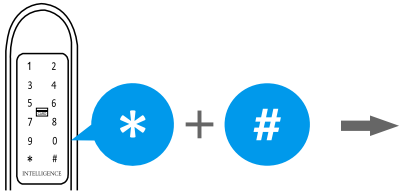


a Input * + #

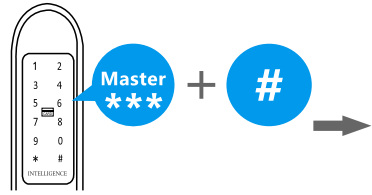


b Input the master password, press # to confirm



c Input 3

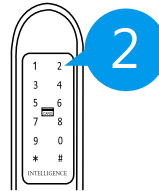


d Input 2 to delete all normal users

 **Once finishing the operations, please try to unlock the lock to confirm the operation is successful.**


5 Passage Mode

When the lock is requested for unlocking frequently, you can activate the passage mode and let the people unlocking without identifications.


Enable:

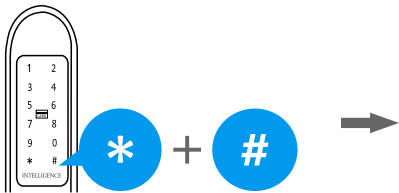


a Input * + #

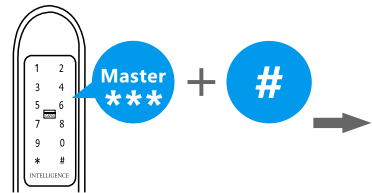 


b Input the master password, press # to confirm

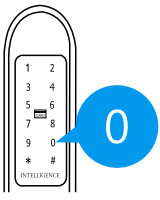


c Input 0

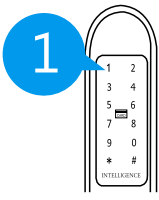

d Input 1

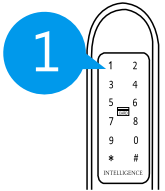


e Input 1

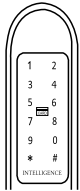


f Input the registered user to unlock and activate the passage mode.


Disable:

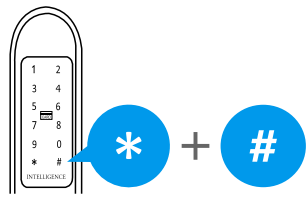


a Input * + #

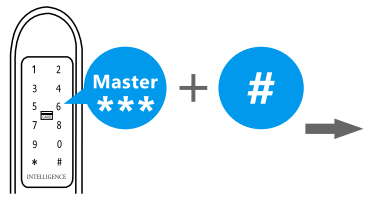


b Input the master password, press # to confirm

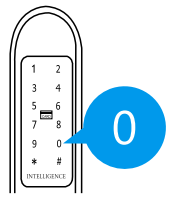


c Input 0

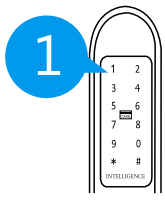

d Input 1

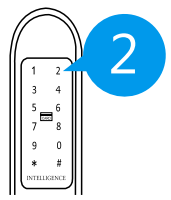


e Input 2

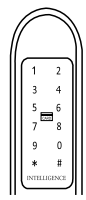


f Input the registered user to unlock and cancel the passage mode.

6 Unlocking Mode


Sometime if you need a higher security level, you can set up the lock in double unlocking mode, which the unlock needs 2 registered users for unlocking each time.

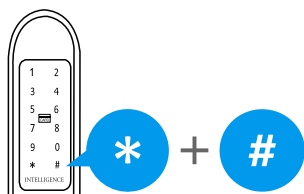


a Input * + #

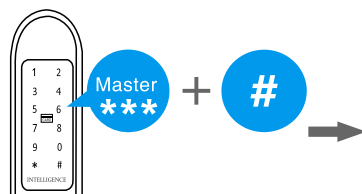


b Input the master password, press # to confirm

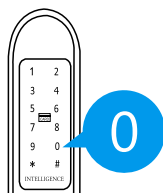


c Input 0

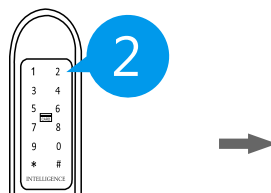


d Input 2

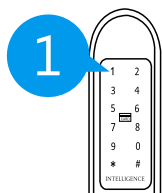

e Single Unlocking Mode: input 1

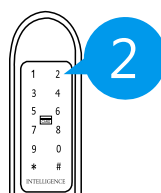

f Double Unlocking Mode: input 2

 **Once finishing the operations, please try to unlock the lock to confirm the operation is successful.**

 
 **When the lock is under double unlocking mode, you have to input 2 registered users to unlock every time. These 2 registered users can be password users, card users, and one password user and one card user.**

 **The master password can unlock directly even the lock is under double unlocking mode.**


7 Voice Setting

You can turn on/off the voice for unlocking.


Enable:

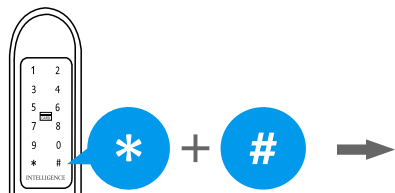


a Input * + #

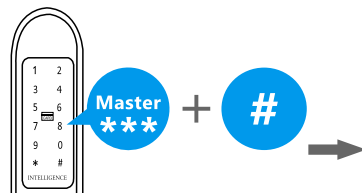 


b Input the master password, press # to confirm

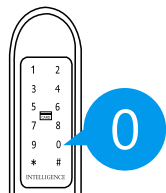

c Input 0


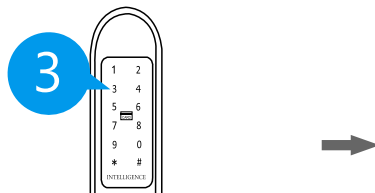


d Input 3

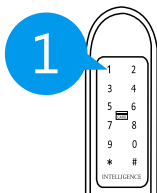


e Input 1 to turn on the voice

Disable:

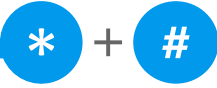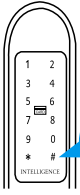


a Input * + #

b Input the master password, press # to confirm

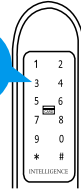

c Input 0

d Input 3

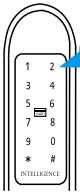

e Input 2 to turn off the voice




Once finishing the operations, please try to unlock the lock to confirm the operation is successful.



The voice setting only manages the voice for unlocking. It cannot manage the sound for the keypad and the motor.

8 Restore The Lock

When the lock has problems and you can try to restore the lock to solve the problems.

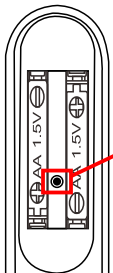

Press the reset key in the battery case for 6 seconds, and then the lock will be restored to the factory default. The master password will be restored to "123-456".