

## Terminator Configuration

The scanner provides a shortcut for configuring the terminating character suffix to CR or CR LF and enabling it by scanning the appropriate barcode below.

For example:

If you want set TAB as terminator, please follow below steps to configure it:

Enter Setup → TAB → Exit Setup



Enter Setup



TAB



No terminator



CR/Enter (by default)



CR/LF



Exit Setup