

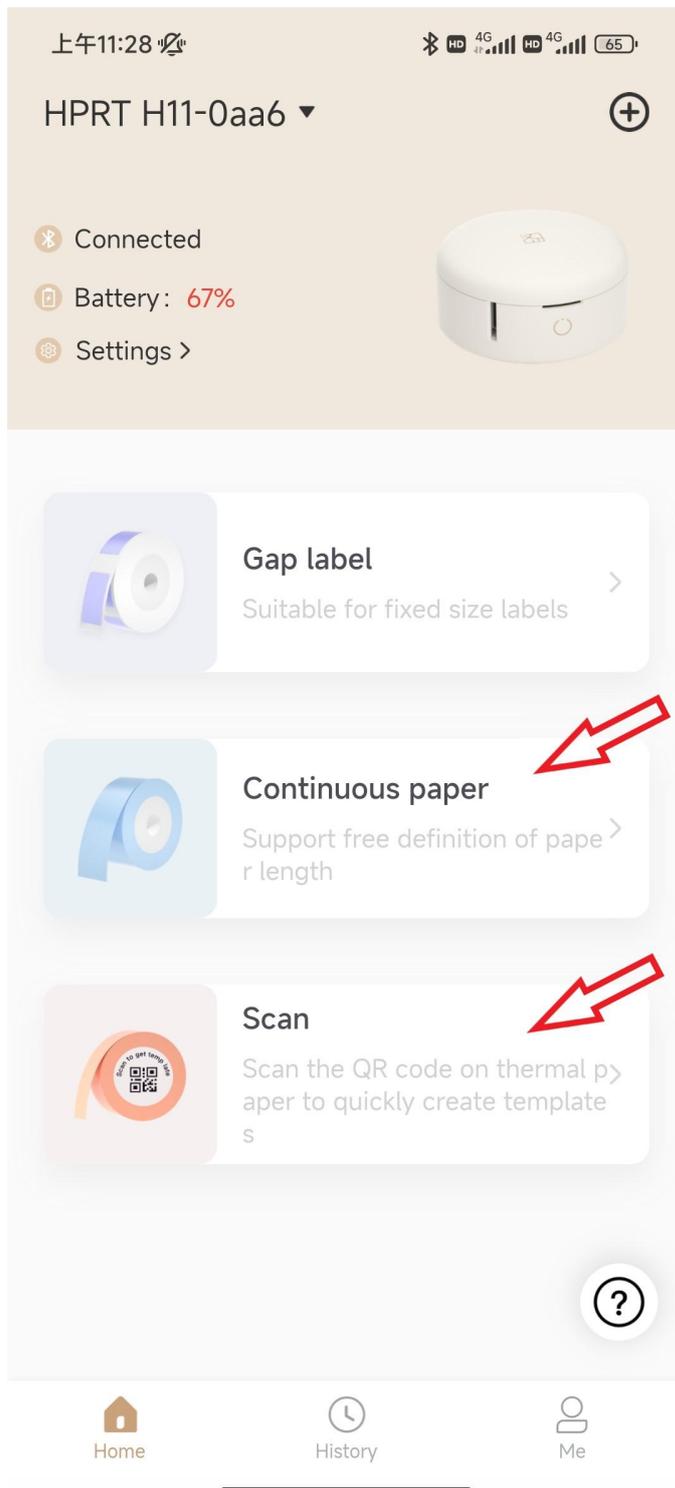
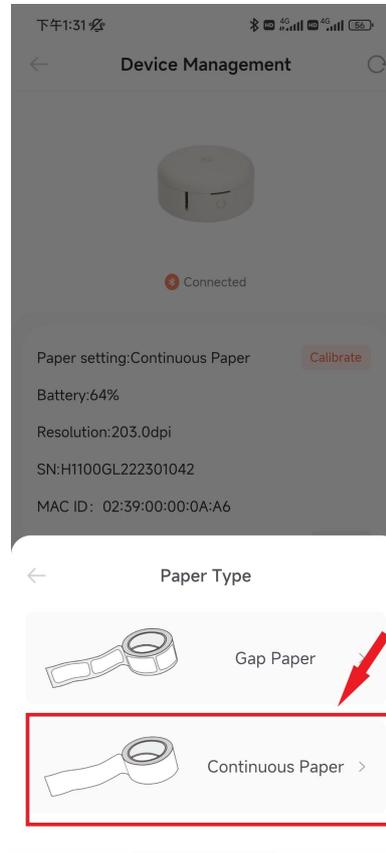
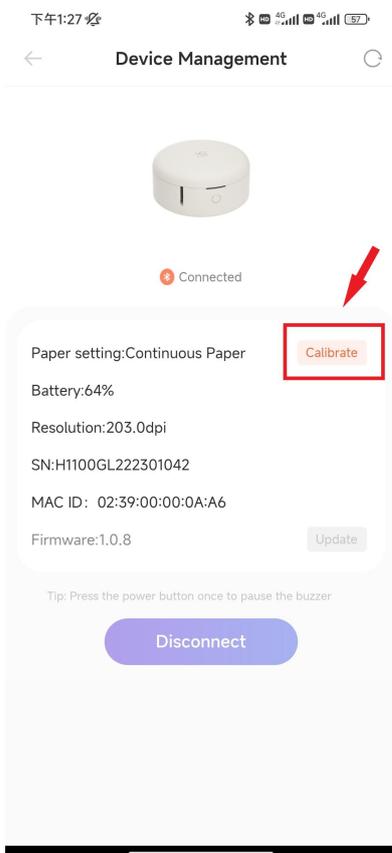


1. When you use continuous paper to print, please scan the QR code on paper roll or click “Continuous paper” on the homepage to edit and print.


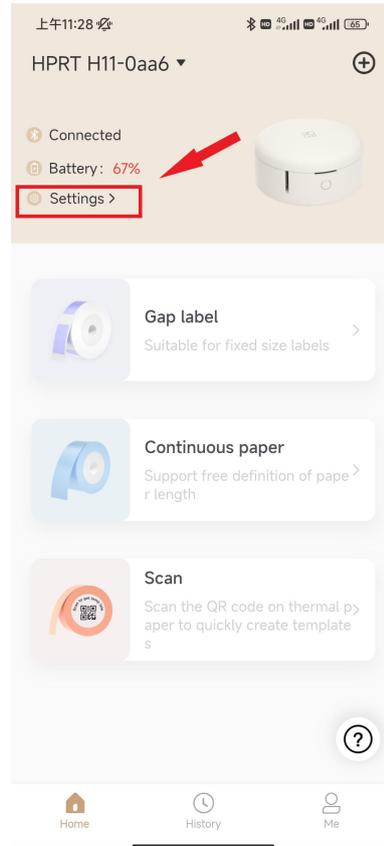


2. If the APP prompt “Paper error”, please click “Got it”--“Settings”--“Calibrate”--“Continuous Paper”.


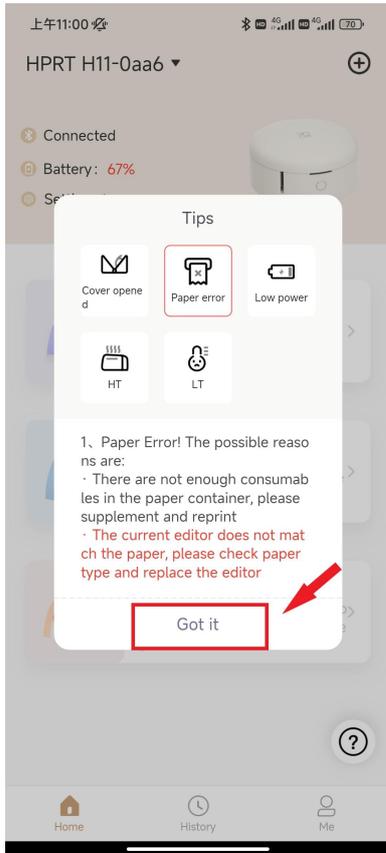


3. Remove the paper roll in the label maker and close the lid.



4. Click "Start", and then "Got it", reload the paper roll into the printer and pull the paper a short distance out of the outlet.

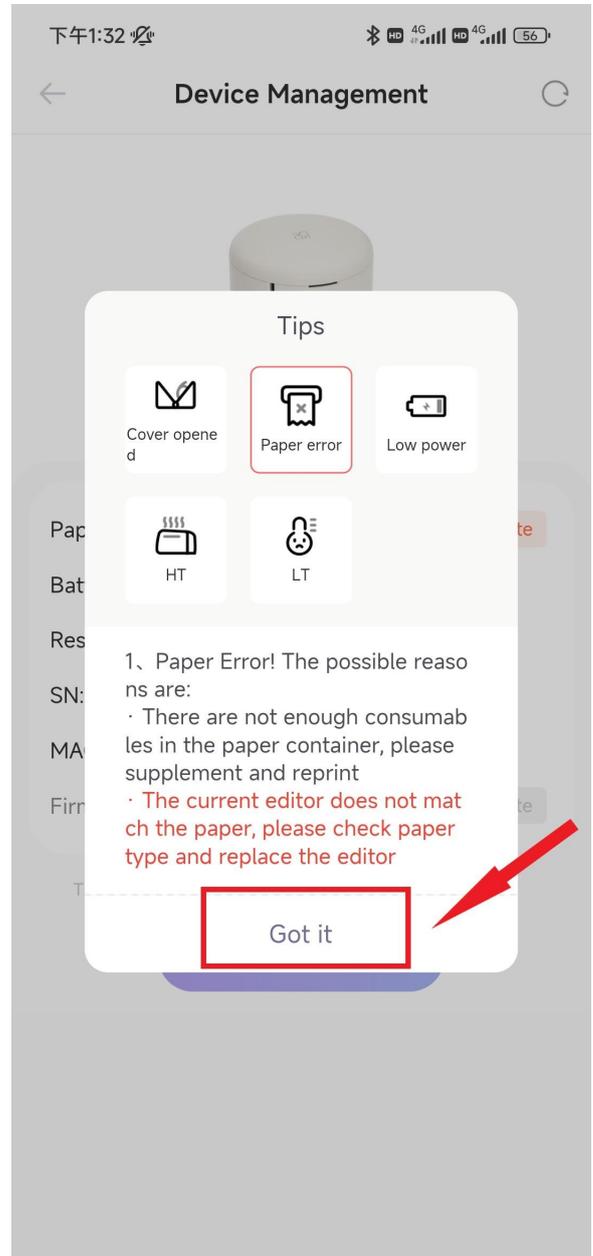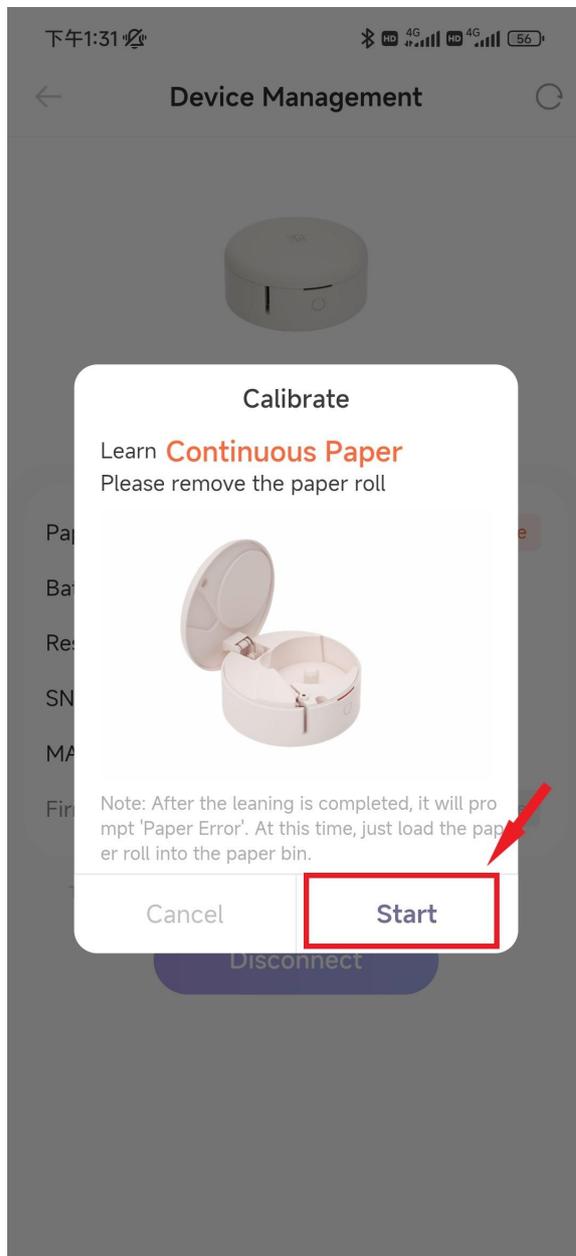

5. Now back to homepage, click “Continuous paper” to edit and print.

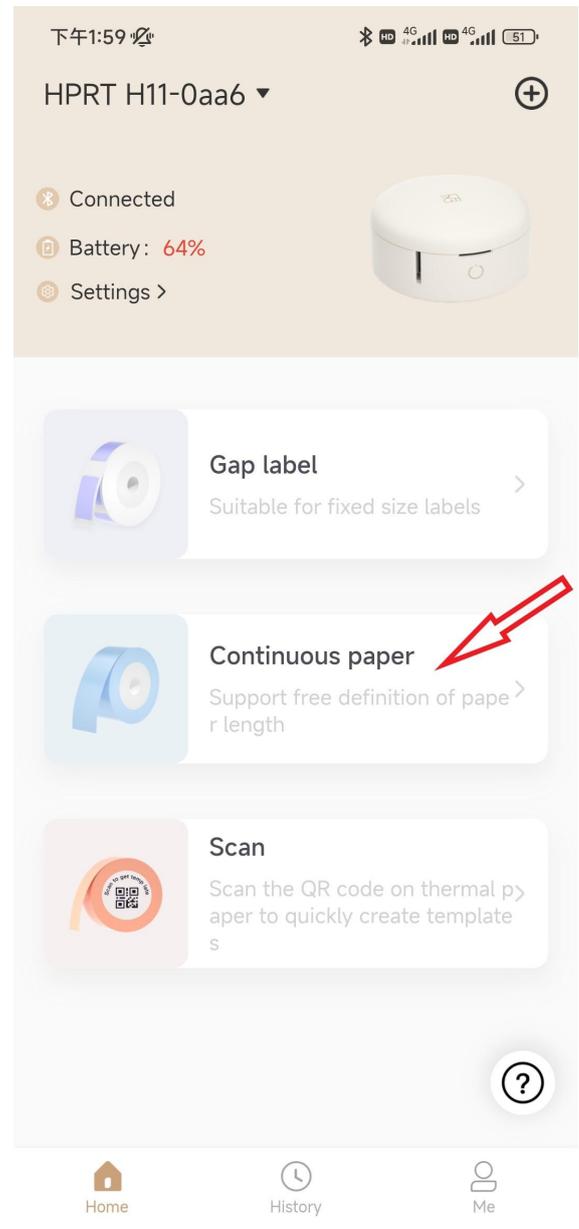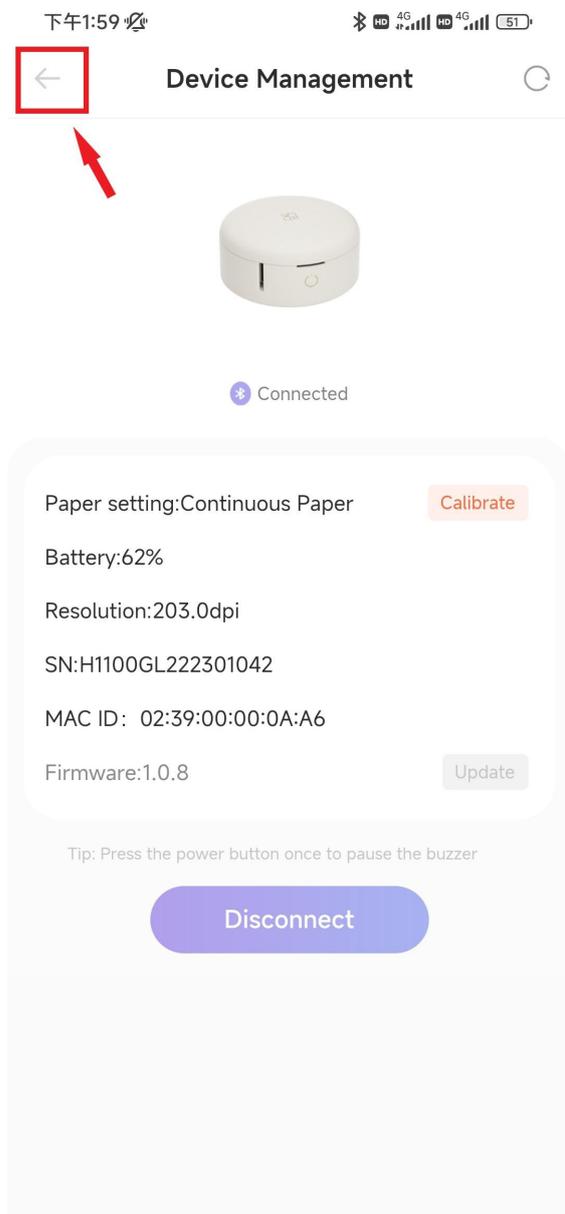

6. If you use gap label, please choose "Gap Paper" when "Calibrate" and follow the APP tips to operate.

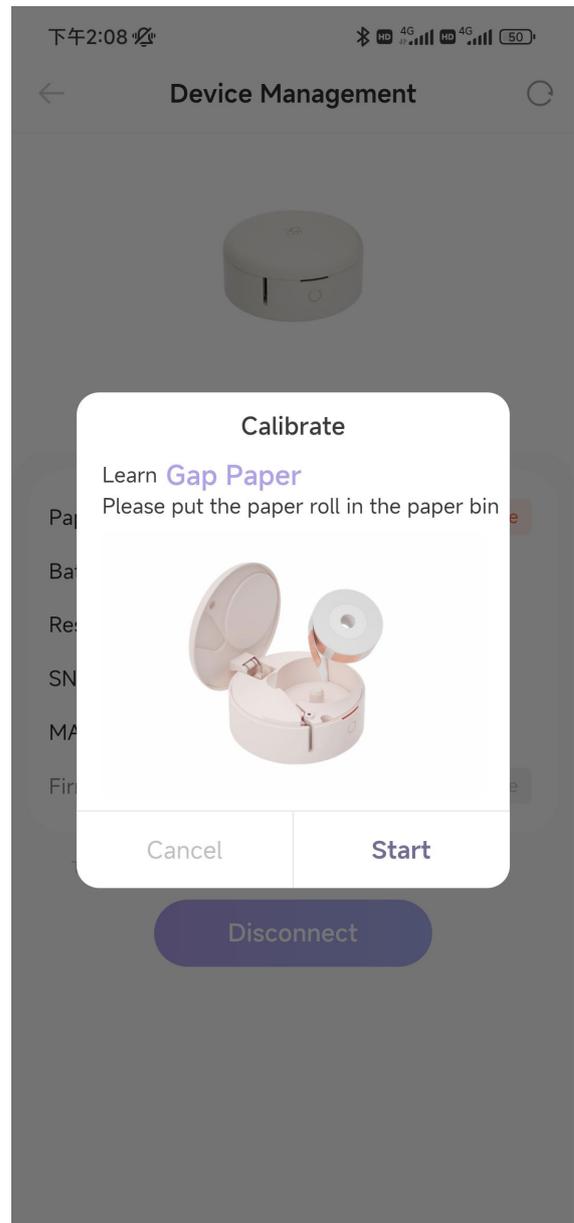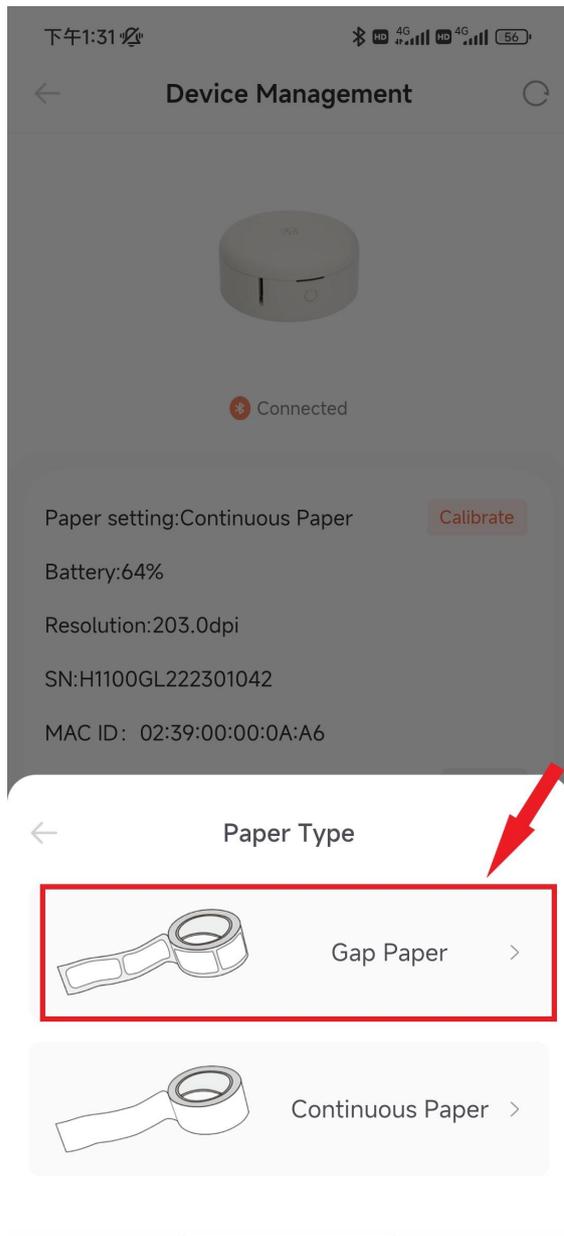

7. If you still can't solve the problem or have more questions pls email us via support@hprt.com or scan the QR code below to email us.

