

## ATEX Instruction Sheet

Part Number: ATEX74

Publish date: July 2021

## 40-Pin Mass Terminal Block

# KJ4006X1-BP1 40-Pin Mass Terminal Block

### Hazardous Atmosphere



II 3G Ex ec IIC Gc  
FM19ATEX0173U  
IECEX FMG 19.0019U  
FM21UKEX0017U



CL. I Div. 2 GP. A,B,C,D  
CL. I Zone 2 AEx/Ex ec IIC Gc  
FM17CA0145U  
FM17US0286U

### Power Specifications

Field Power 30 VDC at 3.2 A

### Environmental Specifications

Ambient Temperature -40°C to +70°C

Shock 10g ½ Sinewave for 11msec

Vibration 1mm Peak to Peak from 2 to 13.2Hz;  
0.7g from 13.2 to 150Hz

Airborne Contaminants ISA-S71.04 –1985 Airborne  
Contaminants Class G3

Relative Humidity 5 to 95% Non-Condensing

Terminal Block Key Position Set according to I/O card installed

**Note:** Refer to the product label for serial number and location and date of manufacture.

**Warning:** This product has specific instructions for installation, removal and operation in hazardous areas. Refer to document 12P5404 "*DeltaV™ S-Series Digital Automation System Zone 2 Installation Instructions*". Other installation instructions are available in the "*DeltaV™ S-Series and CHARMS Hardware Installation*" manual.

### Removal and Insertion

Terminals Block can be added or removed with System Power applied only when no I/O Card is installed, and no field wiring is connected to the terminal.

A rotary keying system ensures compatibility between I/O cards and terminal blocks after installation is complete. The terminal block must have the keys set for the I/O card with which it is used.

### Maintenance and Adjustment

This unit contains no user serviceable parts and should not be disassembled for any reason. Calibration is not required.

### Other Safety Approvals

