

3.Sleep mode-- the purifier will operate ultra-low noise for a comfortable sleeping environment

• The purifier cannot turn on when the fan grille and the filter compartment cover are not installed properly.

• Maintain a distance of at least 20 cm between the air inlets and walls or other objects.

• Frequently remove dust, hair, and other particles from the outer mesh screen of the filter,

To avoid fire, electric shocks, or other damage, use the power cord and electrical outlet as

• Always unplug the purifier before carrying out maintenance to or moving the air purifier.

• The power cord must be plugged into a suitable electrical outlet.

• Remove dust, hair, and particles from the purifier's air inlets to prevent a reduction of air intake.

UV Disinfection

Warning

1.Tap (1) to turn on/off the UV light;

• Turn off and unplug the purifier before moving it.

so as to reduce the chance of bacteria growth.

manufacturer or after-sales service department.

• Do not sit on, lean on or tilt the purifier.

electric stoves, electric irons.

sufficiently to avoid carbon monoxide poisoning.

multipurpose torches, candle lighters, or fire pans.

• Make sure no inflammable objects get into the purifier.

Children shall not play with the appliance.

• In unstable locations where the purifier can easily fall over.


• In environments that are extremely hot, humid, or damp, such as bathrooms.


• Cleaning and user maintenance shall not be made by children without supervision.


left unused for a long time.


instructed below:

fanrotates irregularly.

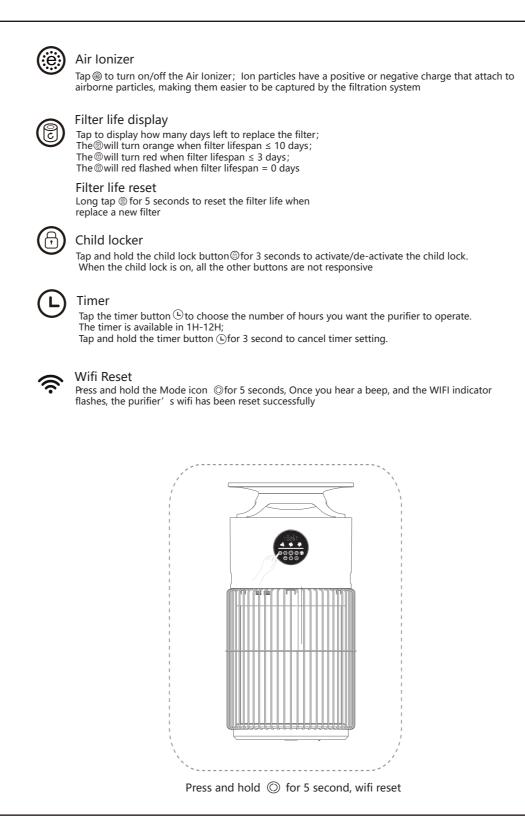

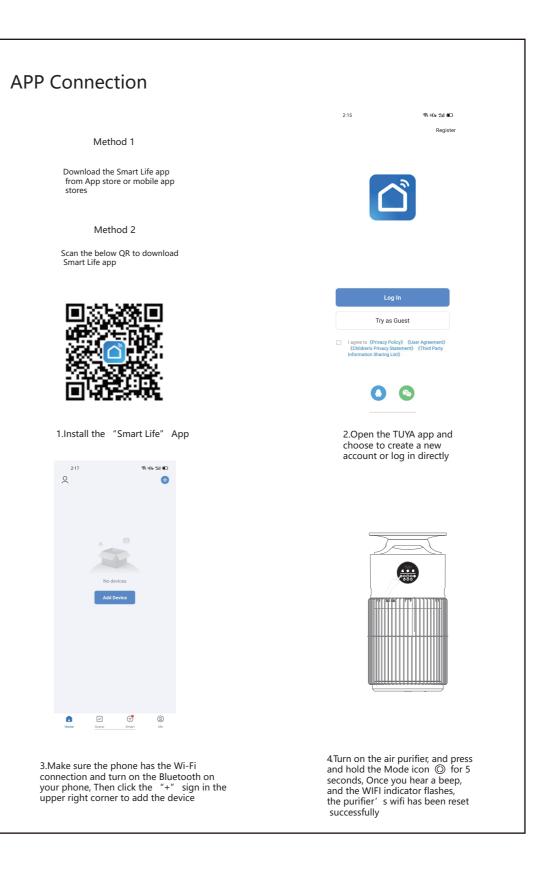

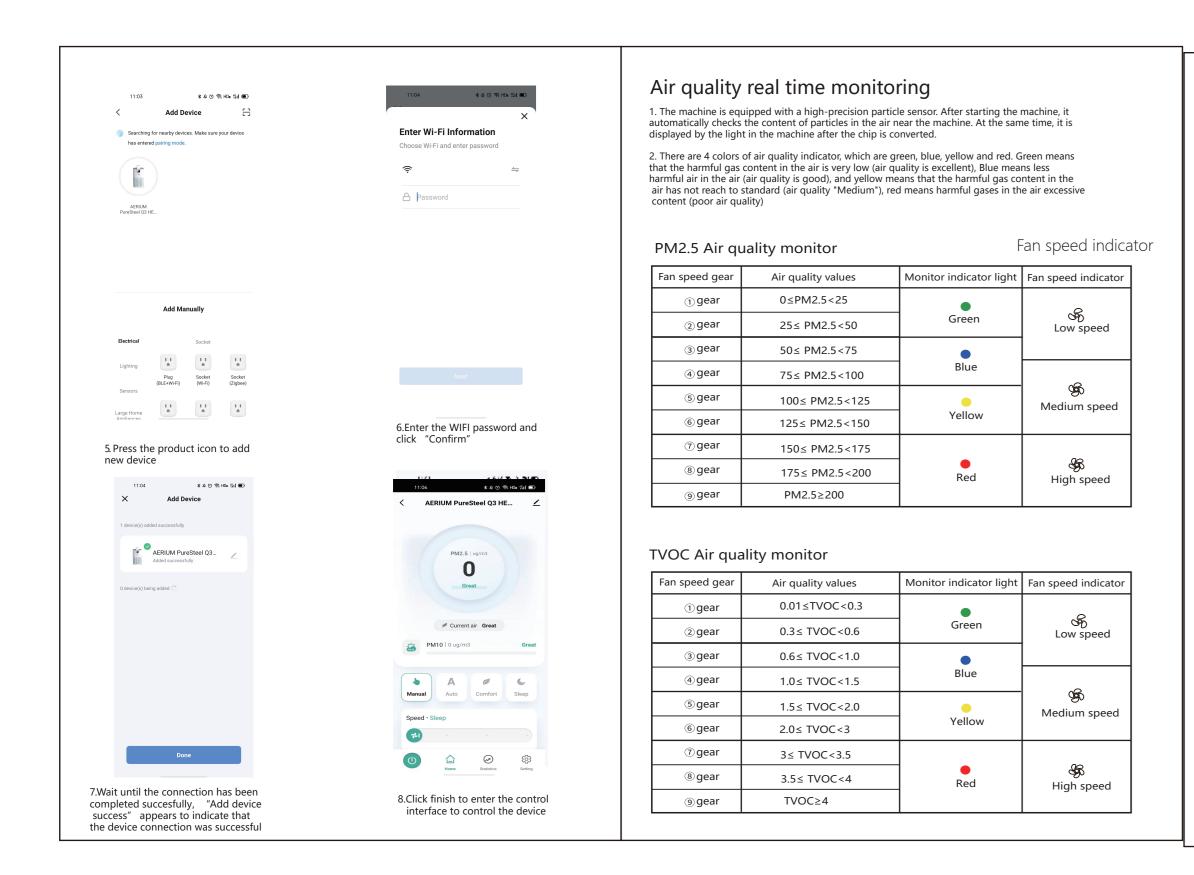

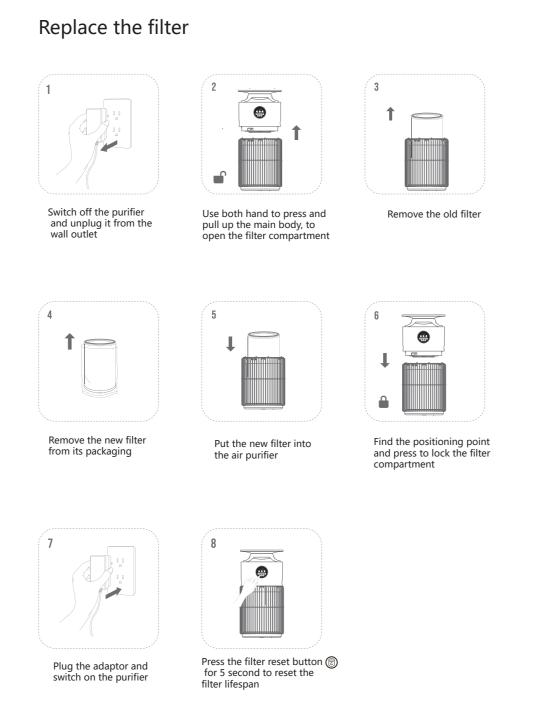

• Cover the air outlet to prevent dust, hair, and other particles from falling in when the purifier is It's recommended to clean the filter once a month by lightly brushing off any visible dust or dirt [take care to avoid disturbingthe delicate network of interior fibers]. Notes: Check and replace the filter when the filter indicator lights red flashes. • Do not excessively pull, twist or bend the power cord, as this may expose or break the cord's core. Toubleshooting • Use the power cord that was provided with the purifier, do not use any third party power cords. • When the power cord is damaged, it must be replaced with a genuine power cord purchased from the Problem Possible Solution The filter indicator stays | Check and replace the filter. • Immediately stop using the purifier when it makes unusual sounds, gives off bad odors, overheats, or its flashes red. • Do not stick your fingers or foreign objects into the protective parts, movable parts, air inlets, or air outlets. • Keep objects such as hairs or fabrics away from the purifier to avoid blocking the air inlets or air outlets. flashed red after replacing | reset the filter indicator. the filter indicator will go out. • When using in conjunction with gas-fueled appliances (such as gas stoves, gas heaters), please ventilate Poor air purification. Tap the fan speed button⊚to increase fan speed. • Do not pour liquids, nor throw powders or other small substances into the purifier's air outlet. It's normal to produce a plastic smell when you use the appliance for the first few times. Do not use the purifier in the following circumstances, as they may result in electric shocks, fire, or Clean or replace the filter if the air purifier has been A strange smell comes from • Near open flames, such as candles, incense burners, stoves, fireplaces, cigarettes, firecrackers, lighters, frequently used for a period of time. Near appliances that generate high temperatures, such as electric heaters, fan heaters, electric foot warmers, If the appliance produces a smell ofburning, please unplug the device andimmediately contact customer The child lock button light | If the child lock is activated, the child lock button light | will flash when you tap any other button. • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Clean at least once a month with a clean, dry, soft cloth. More frequent cleaning may be

Clean and Care

Clean the Filter

Clean the Purifier Housing

required depending on environmental conditions.