 


# Smart Speaker With Alexa

## User Manual

Model: CK315



## CONTENTS

### **Introduction**

Features

Includes

### **Overview**

Speaker Controls & Inputs

LED Operation

### **Start with CK315**

Download the SameSay APP

Connecting your device to the internet

Alternative Connection

Multi-room play

Play with Air Play

Use Android DLNA to play

Bluetooth mode

AUX IN mode

Services

### **Troubleshooting**

### **Contact Information**

### **FCC Warnings**

## Introduction

The CK315 is a hands-free speaker that you can control with your voice. With the CK315 speaker, you can ask Alexa to play music, read the news, check weather, and control your smart home and more. Amazon Alexa is built in the cloud, so it is always getting smarter. The more you use Alexa, the more it adapts to your speech patterns, vocabulary, and preferences with new features continually being added. With the CK315 speaker, you can pair up to 6 speakers together on Wi-Fi for whole home audio or use Bluetooth/Aux In when listening on-the-go.

## Features


- Far-field voice control
- Supports Alexa Voice Service(AVS)
- Multi-room and multi-user capable
- Free SmaeSay APP download
- Built-in Wi-Fi
- Supports Bluetooth Wireless-range 33 ft.
- Aux In (3.5mm audio input)
- Built-in rechargeable battery - up to 3.5 hours of playtime
- Micro-USB port for battery recharge

## Includes


- User manual
- Power adapter: 5V 1A
- Micro-USB to USB power cable

## Overview

### Speaker Controls & Inputs

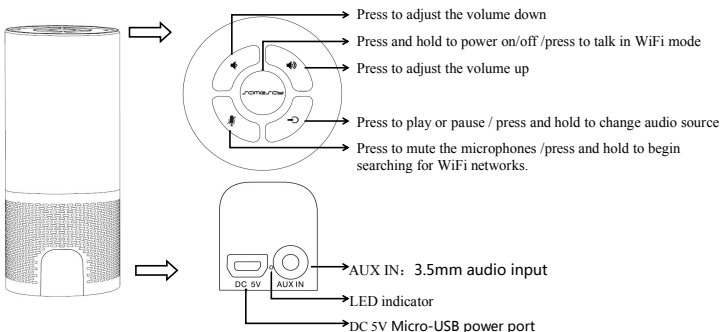

## LED Operation

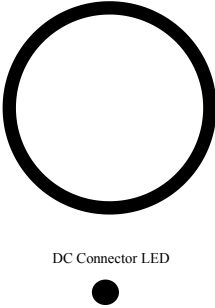Operation Status LED Ring	Speaker State	LED Indication
 <p>DC Connector LED</p>	Power off	LED off
	Alexa idle mode	LED off
	Alexa mode (active listening)	Cyan
	Bluetooth mode	Blue
	Aux mode	Green
	Alexa connecting	Cyan flashing
	Alexa thinking	Blue/cyan alternating fast flashing
	Alexa speaking	Blue/cyan alternating slow flashing
	Alexa mode error	Orange flashing
	Microphone off	Red
	Setup mode (WPS + BT pairing)	White flashing
	Charging	Red
	Fully charged	LED off

## Start with CK315



### Download the SameSay APP

Download and install the SameSay APP to your phone. Then the APP will guide you to setup your device to the network. If you want to get more Alexa skills and more information, go to the **Amazon Alexa APP**. Both SameSay APP and Amazon Alexa APP are available on App Store and Google Play.



Android















IOS







**Note: The QR code of android need to be opened from browser.**



## Connecting your device to the internet

Make sure your CK315 speaker was powered on, then open the SameSay APP on your mobile. The app will guide you through the process, just follow the on-screen instructions and have your network password ready. SameSay APP screens one-by-one are showed as below(IOS system as sample).

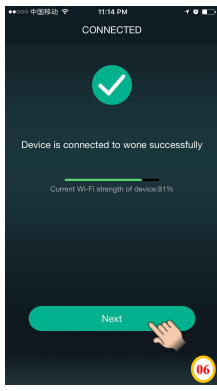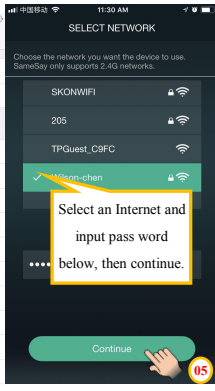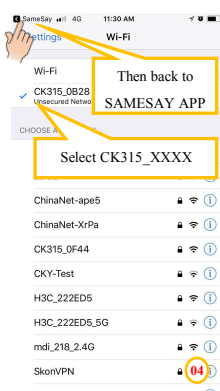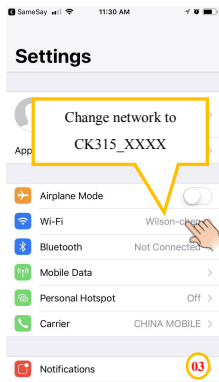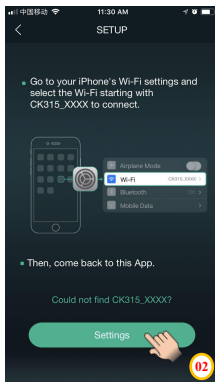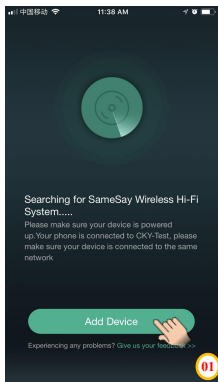

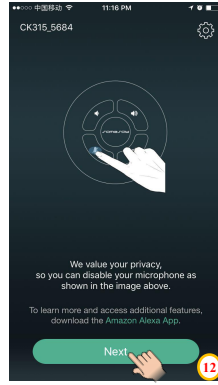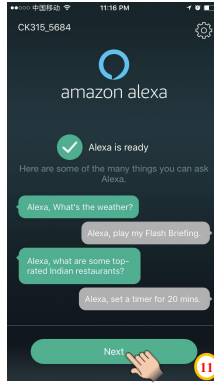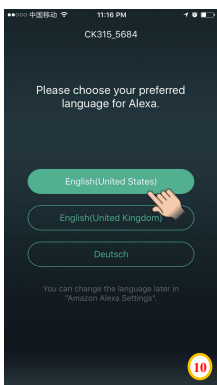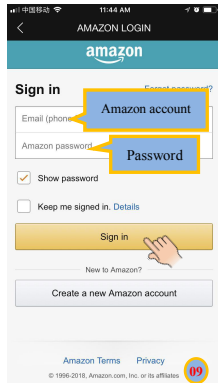
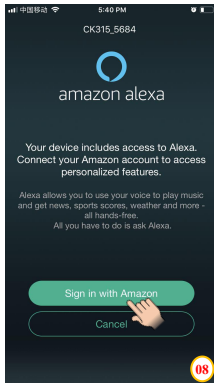
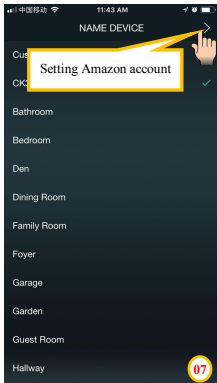


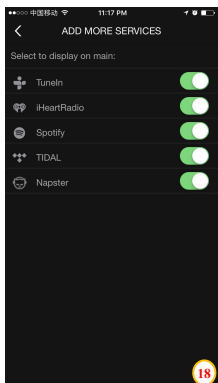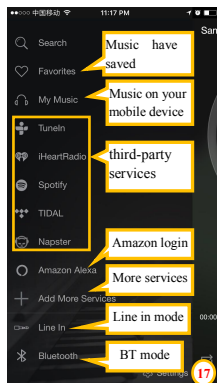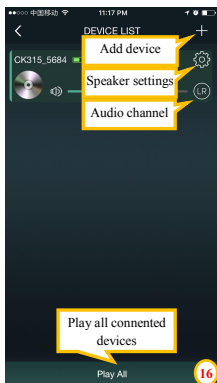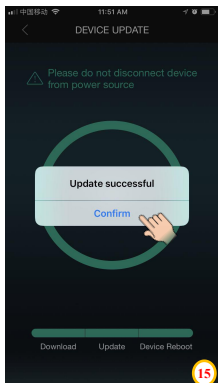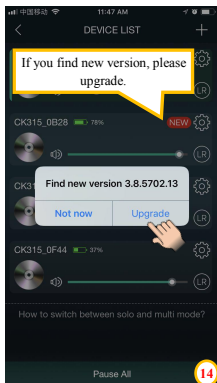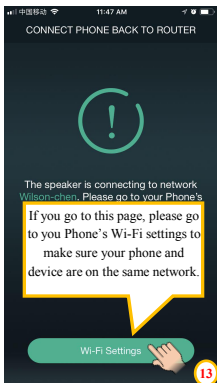

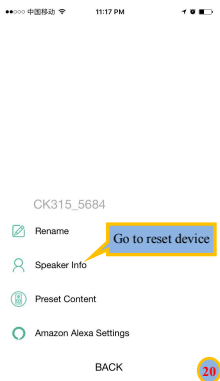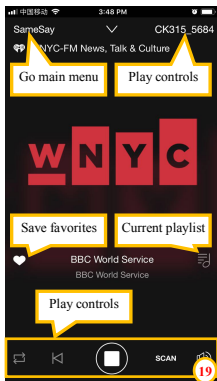


## Alternative Connection

After the initial connection, the speaker will remember the Wi-Fi network and automatically connect to it when it is in Wi-Fi Mode. If the speaker should become disconnected or will not connect normally, repeat the steps below or try the Alternative Connection Method .

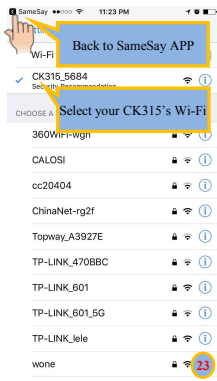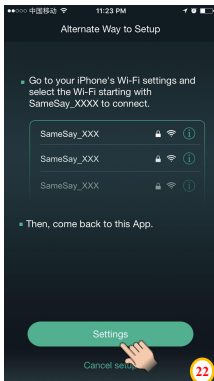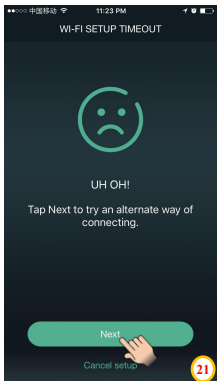




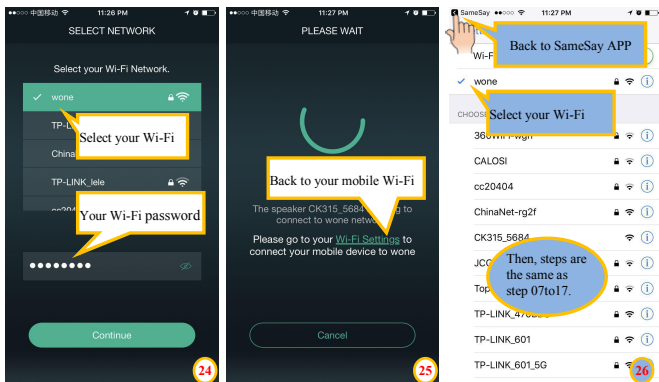

Tip: If you are still experiencing issues, consult the Troubleshooting section or send us feedback.



## Multi-room play

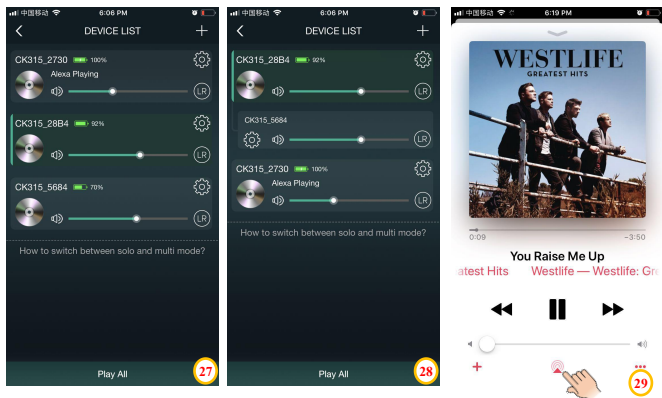
Add devices to DEVICE LIST in your APP, then long press and drag slave device up to main device until they are in same room to play in sync. You can both control main device or slave devices.(eg. Fig23-24)



## Play with Air Play

When CK315 speaker network connected, IOS users can use Air Play to achieve wireless music!

1. IOS 10 & IOS 11 users: Slide up from the bottom of the device to open the Control Center and find the "Play in" screen in the horizontal direction, click , then select your CK315\_XXXX. (eg, Fig29-30)
2. IOS 9 & IOS 8 users: Slide up from the bottom of the device to open the Control Center, Smoothes along the horizontal to find the "Play" screen, click , then select your CK315\_XXXX.

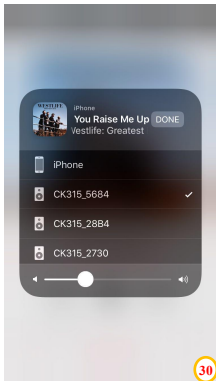

## Use Android DLNA to play

When CK315 speaker network connected, Android users can use DLNA to play.

 
Open the phone or tablet comes with DLNA function of the music player software, click on the playback interface, click the push icon, then select your CK315\_XXXX device to play music.

Tips:

Push icon examples:			
Samsung 	HTC 	Sony 	Huawei 

- Make sure your WiFi is 2.4G Wi-Fi and the CK315 does not support the 5G currently.
- It is recommended that you use the router do not connect multiple internet devices, so as not to take up too much bandwidth and affect user's experience.
- Do not use in a complex Wi-Fi network environment (eg, office, hotel, multiple routers bridged, too many routers around, etc.) to avoid unrestricted connection, play cardon, connection failure, inability to use, etc.

## Bluetooth mode

Long press mode switch button " " and select Bluetooth mode. or select Bluetooth mode on the SameSay APP. Then top LED will turn into blue and flashing. Pairing CK315's Bluetooth with your device (Such as: smart

phones, tablet PCs, PC, Mac and so on). If CK315 Bluetooth connected, top LED stop flashing, also with a warning sound, then you can play content.

## AUX IN mode

Long press mode switch button “↻” and select AUX mode, also you can select AUX mode on the SameSay APP. While equipments (such as: smart phones, tablet PCs, PC, Mac, etc.) are connected by cable to the AUX, you can play your content.

Tips:

The line in cable shall be inserted with a relatively fast speed for software change mode needed.

## Services

The CK315 now is available third-party services TuneIn, iHeartRadio, TIDAL and Napster. Subsequent increases will be updated directly to the SameSay APP .

## Troubleshooting

PROBLEM	POSSIBLE SOLUTION
Cannot complete Wi-Fi network setup	<ul style="list-style-type: none"><li>» Make sure the speaker has power and is charged.</li><li>» Make sure you are connecting to the correct Wi-Fi network.</li><li>» If using a dual band wireless router, be sure to use the 2.4GHz band.</li><li>» Be sure to enable Wi-Fi on your mobile device.</li><li>» Test your internet connection by loading/reloading a web page. If you cannot load the page, you may need to restart your router.</li><li>» Use the alternate connection method .</li><li>» Uninstall then reinstall the app, power the speaker OFF, then ON, and restart setup.</li></ul> Please download the latest user manual from our website, and operate accordingly. <a href="http://www.samesay.com/product/alexa-speaker-ck315#download">http://www.samesay.com/product/alexa-speaker-ck315#download</a>
Intermittent audio/Audio doesn't play	<ul style="list-style-type: none"><li>» Make sure the volume on the speaker or your connected device is not too low.</li><li>» Interference or weak Wi-Fi signal may be interrupting reception (possible sources could be microwaves, cell phone signals, etc.). Move the system to another location to test.</li></ul>

	» Stop other applications that may be streaming media from the internet.
Bluetooth won't play or fails to connect	<p>» Make sure the volume on your Bluetooth device is turned up to an audible level.</p> <p>» Make sure the speaker has power and is charged.</p> <p>» Make sure both the speaker and your device are in Bluetooth mode.</p> <p>» Stay within 3 ft. of the speaker when pairing.</p>
Aux In won't play	<p>» Make sure the audio cable is firmly connected to the audio ports of both devices.</p> <p>» Make sure the volume on the speaker or your connected device is not too low.</p> <p>» Press the Mode button to manually switch to Aux In mode.</p>
White noise/Speaker will not function properly	» Power the speaker OFF, then ON again.

## Contact Information

Website: [www.samesay.us](http://www.samesay.us)

Email Support: [info@samesay.com](mailto:info@samesay.com)

## FCC Warnings

**WARNING:** To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**This product specifications and design are subject to change without notice!**