


1


**CLEAN
&
DRY**

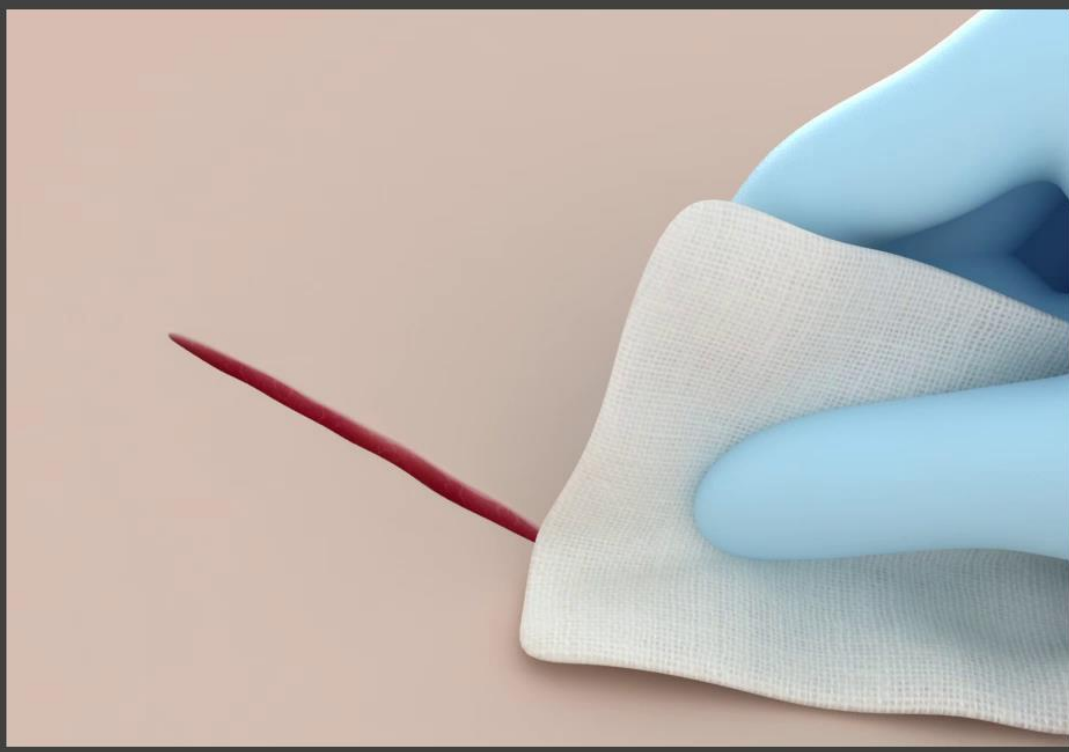

The area must be clean and dry for adhesive to stick properly.

2


**REMOVE
#1 FILM**

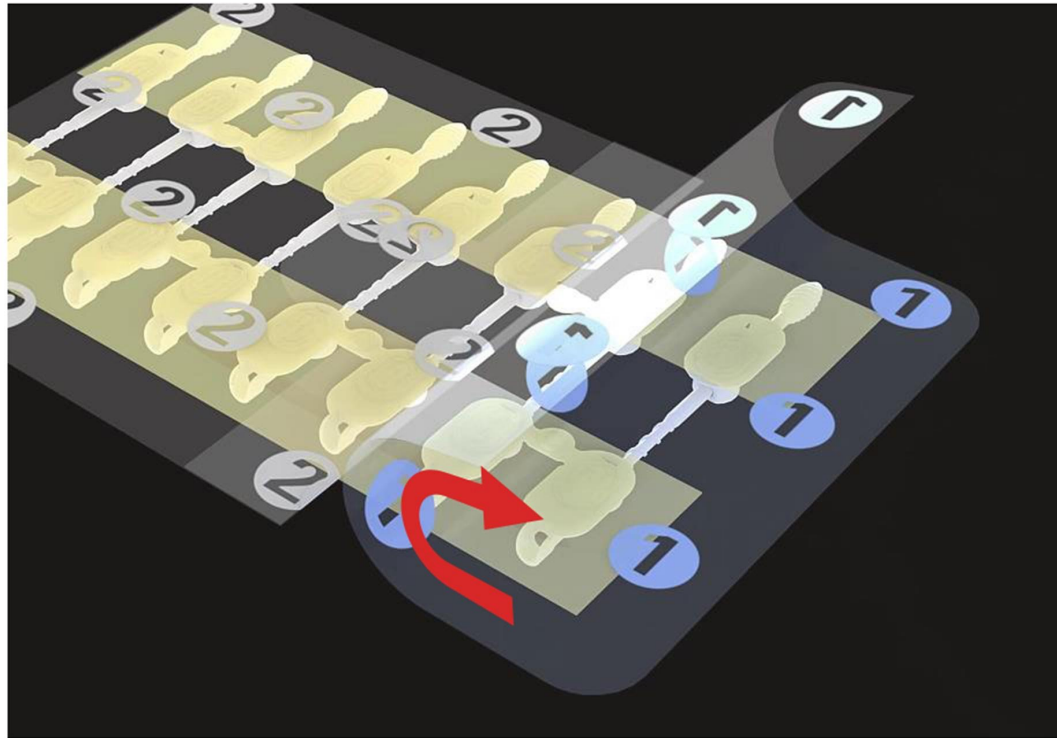

Remove #1 release paper and do not remove #2 release paper at this step

3


**CENTER
&
LINE-UP**

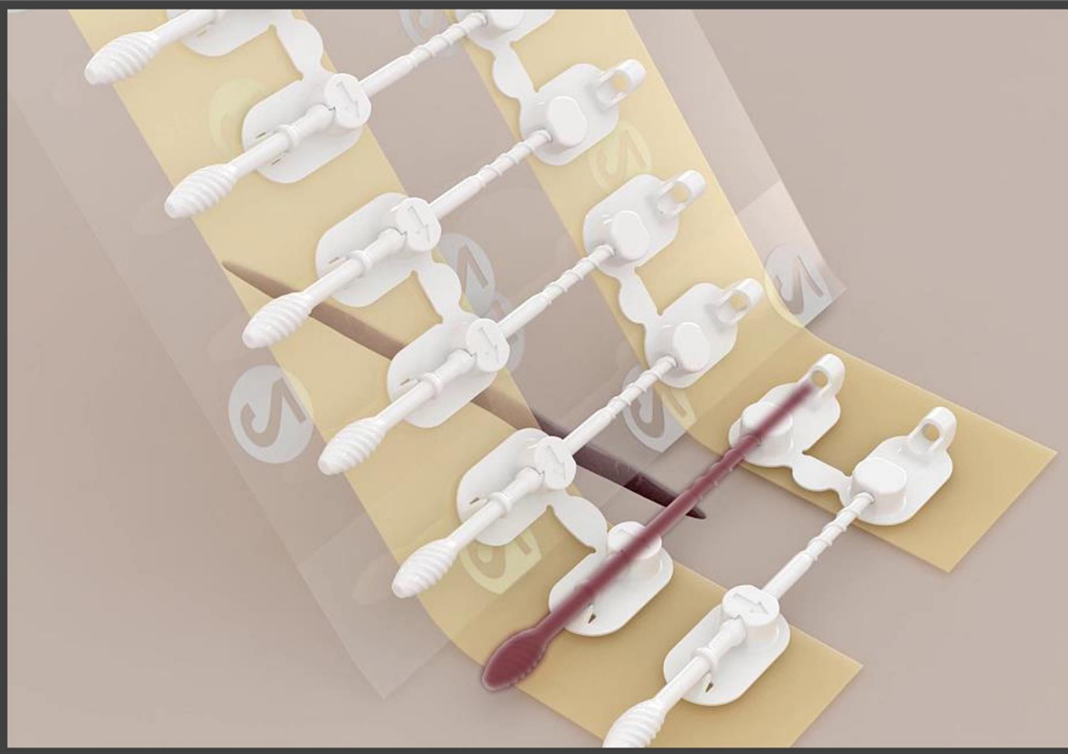

Line-up the first regulate lever as shown and center the set on incision.

4


REMOVE
#2 FILM
&PRESS

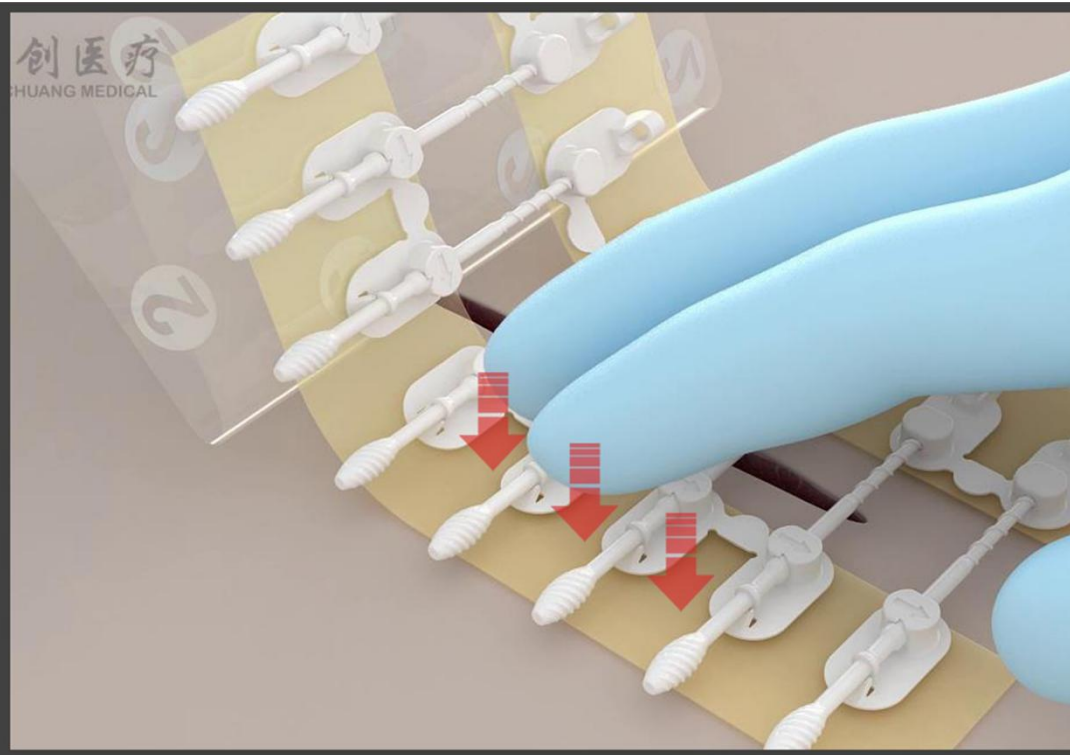

Remove #2 release paper and press the set to stick to the skin at same time.

5


SCREW LEVERS

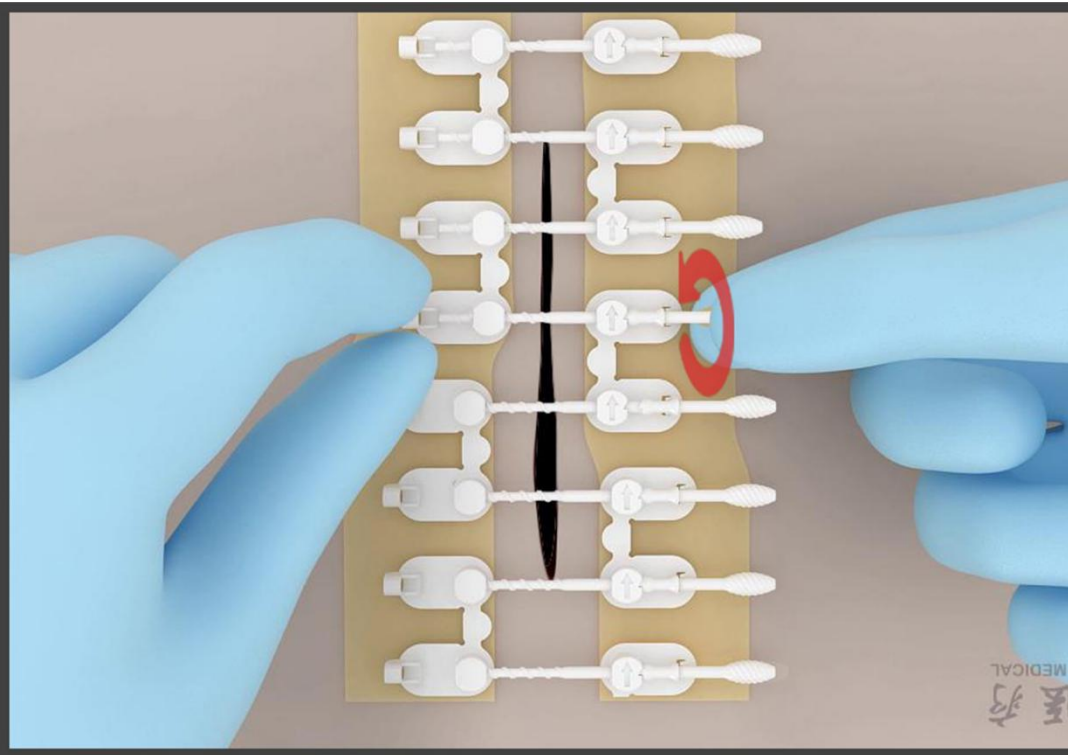

Screw the regulate levers clockwise, repeat for each lever to fully close the incision, do not screw too tight at first time, so leave space for accurate adjustment.

6

**GAUZE
&
DRESSING**

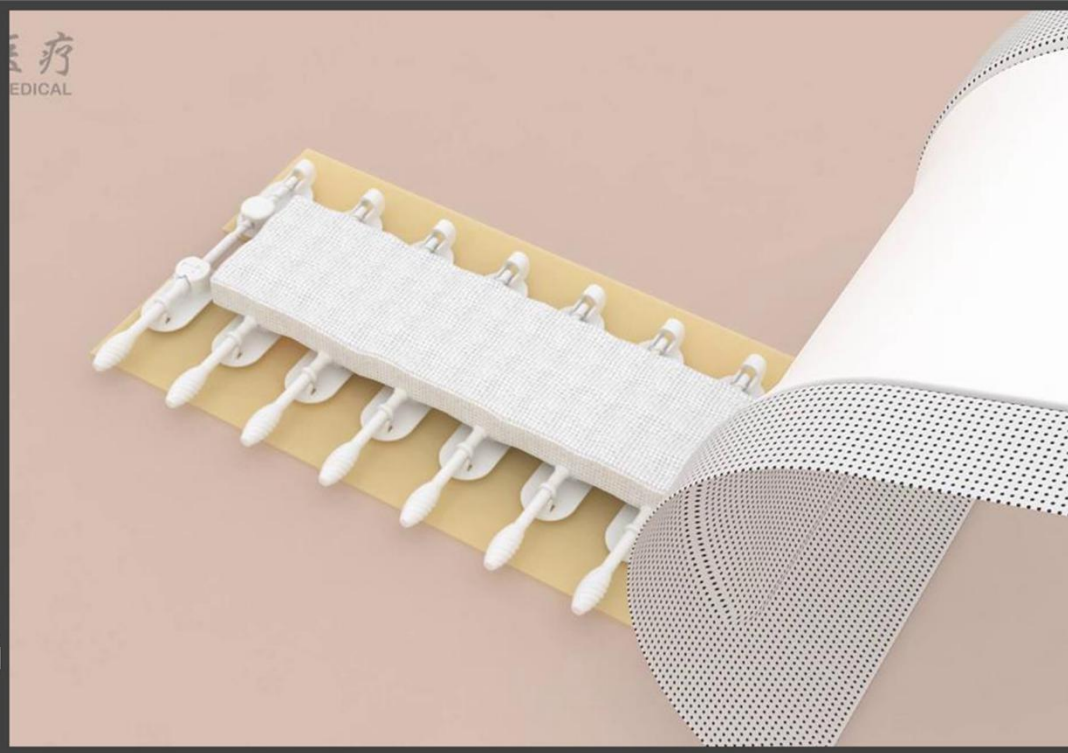

Cover the strip gauze over the incision to absorb the exudate and cover the dressing on top of the set.