



cabinets as an example. Actual installation, please note that the cabinet installation dimensions, the product applies to the

- 01 -

Pre-drilled installation


holes for base


and top seats

This installation guideline is based on 800

cabinet width and depth of the minimum 864mm, height 1900-2100mm.

Mark the center point of both sides of the cabinet width and depth.

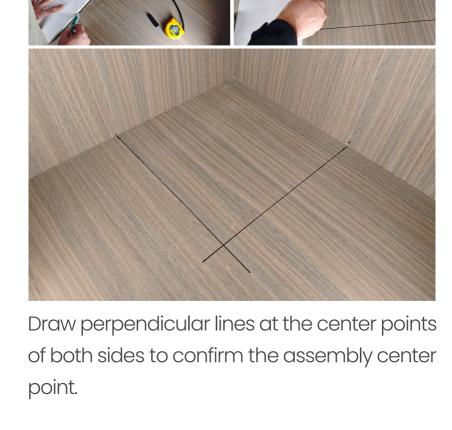

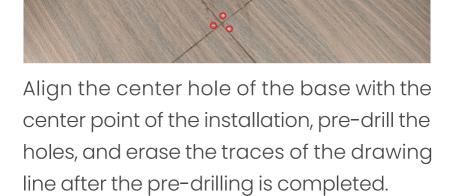



Pre-installation

of accessories

Pass the decorative cover and plastic lock nut

into the adjustable tube in sequence, then

insert the adjustable tube into the upper end


of the main pole.

Thread the upper hanger and bracket into

the main rod from the bottom in sequence,

and determine the position of the pin hole

according to the actual working height.

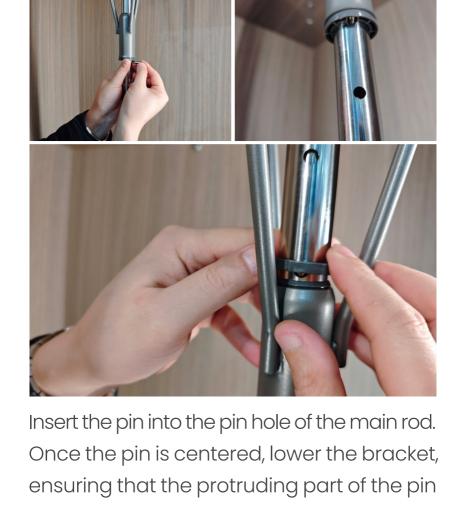

is aligned with the groove of the bracket,

and snap the plastic positioning piece into

Install the center pants rack in the same way.

the upper hole.

Installation of the lower tier basket rack in the same way.



Base hole alignment pre-drilled holes, locking

Align the notch at the bottom of the main

rod with the protrusion on the base, lower

it downwards, and the fixing of the main

rod's bottom end is completed.


self-tapping screws.


- 03 -

Fixing of the

main pole

Accessory Installation is completed.

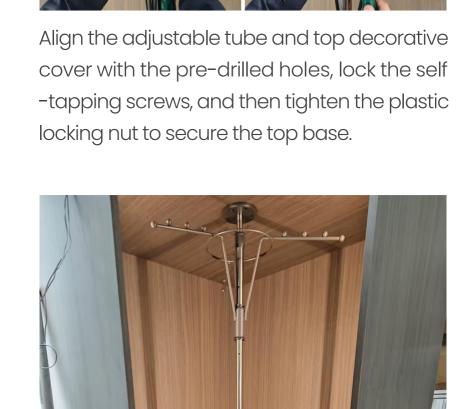

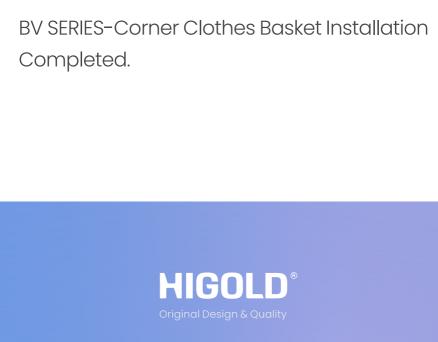

HIGOLD® Original Design & Quality PARTICLE OF THE PARTICLE OF