


# HIGOLD® Nebula 2.0 lift Basket

Installation manual

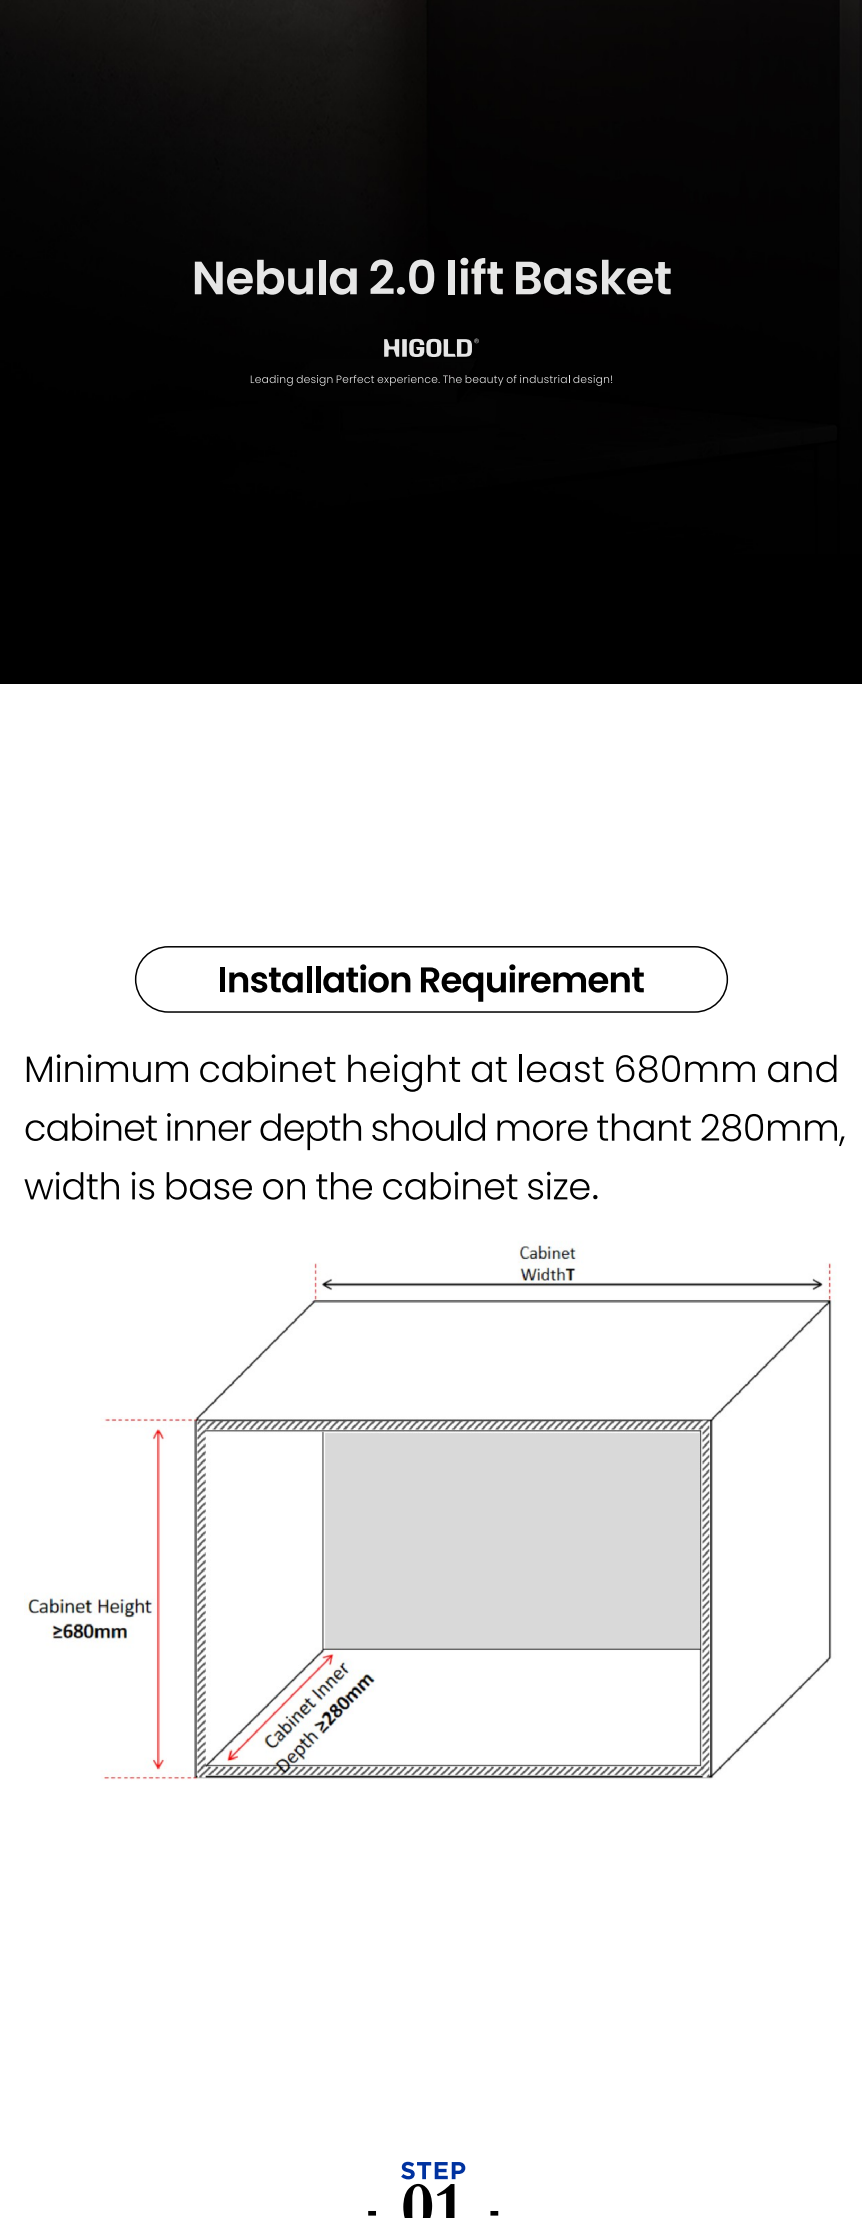


## Nebula 2.0 lift Basket

HIGOLD®

Leading design Perfect experience. The beauty of industrial design


### Installation Requirement

Minimum cabinet height at least 680mm and cabinet inner depth should more than 280mm, width is base on the cabinet size.

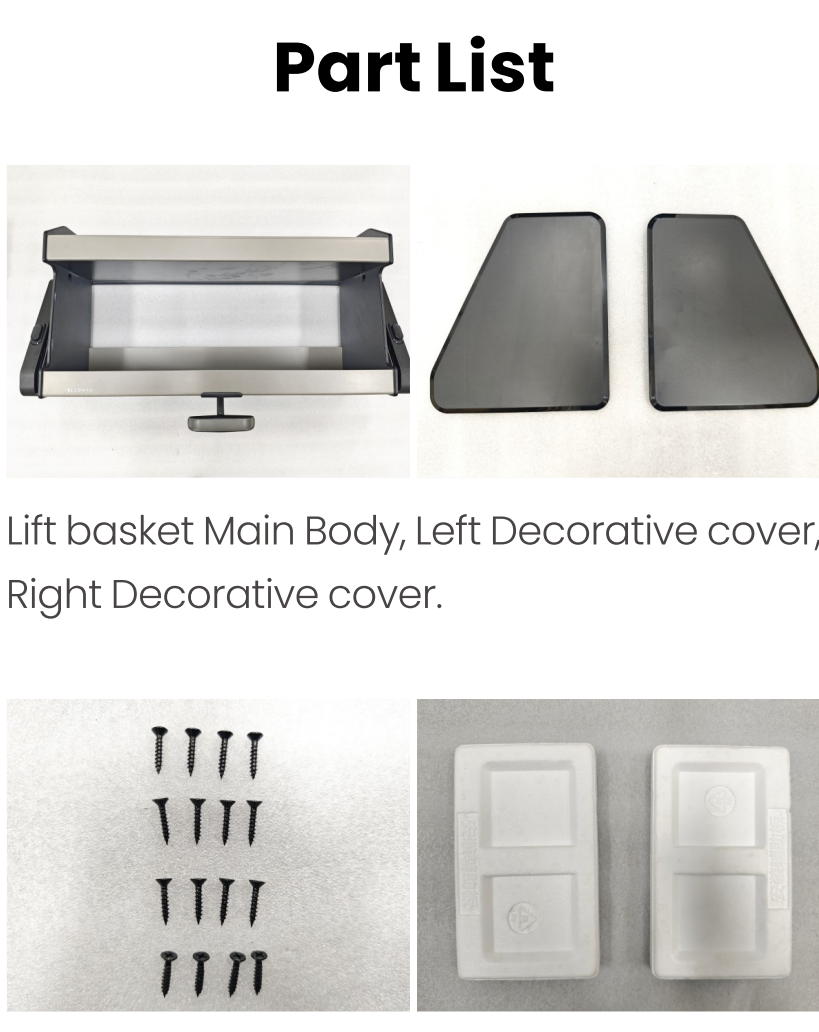

### STEP - 01 -

## Part List

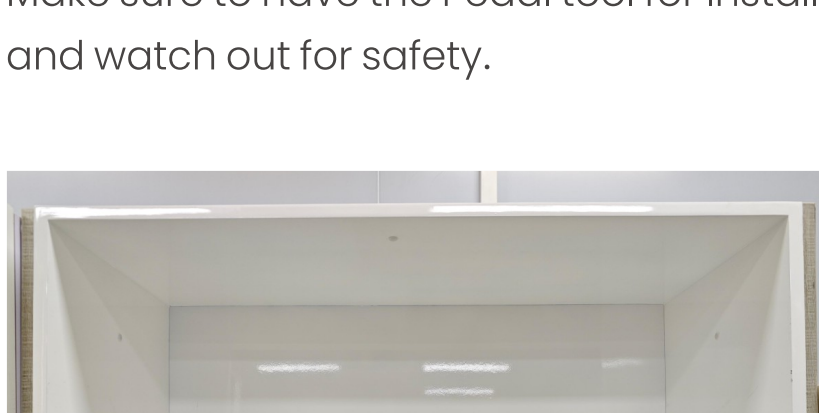

Lift basket Main Body, Left Decorative cover, Right Decorative cover.



ST4.0\*20 Self-tapping screw \*16, Installation Auxiliary board\*2.

### STEP - 02 -

## Install Main body

Make sure to have the Pedal tool for Install and watch out for safety.



Auxiliary board on both side as show in Photo.




Put the main body on top of the Auxiliary board.(Attention: The main body is heavy, so it should be held firmly when placed to prevent personal injury and product damage caused by product falling!).



Adjust the product both side 40mm away from the side of the cabinet.



Fixed in with 4pcs ST4.0\*20 Self-tapping screw on both side of the rear end of the product.

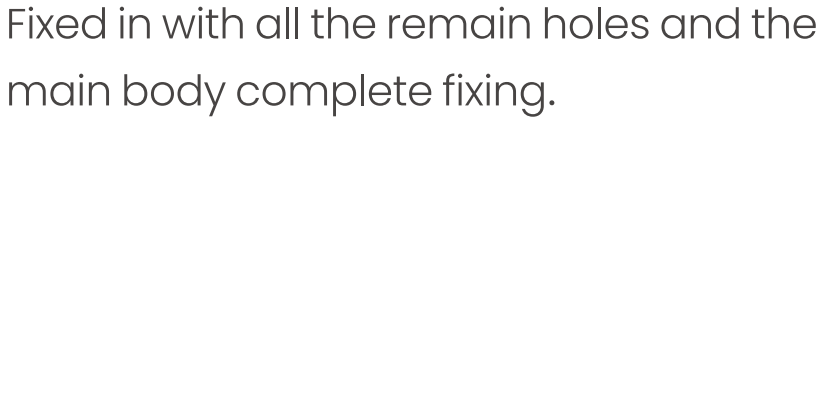

Pull down lift basket to the fixed position.




Fixed in with ST4.0\*20 Self-tapping screw on both side of the product.



Fixed in with all the remain holes and the main body complete fixing.

### STEP - 03 -


## Installation of the decorative cover

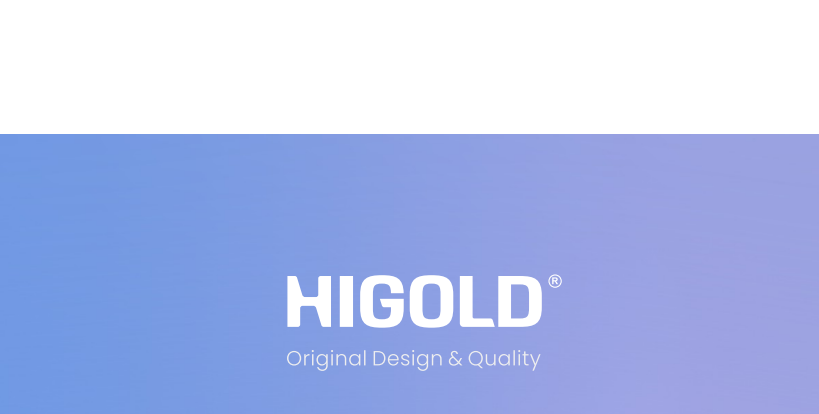

Match with hole and clamp the cover in for both side.



Take out the Auxiliary board.

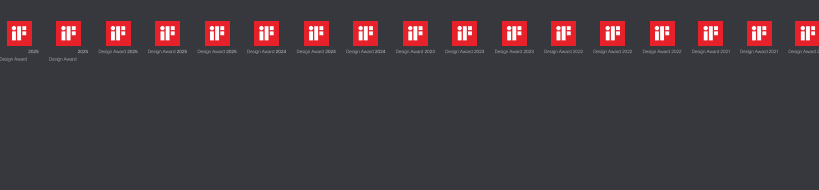

Finished Installation for the lift basket.Make sure the hinges avoid interference with the lift basket and it can not match with Inset type Hinges.

HIGOLD®

Original Design & Quality

