

TUTTI 图特



**STRAIGHT PLATE
CLIP ON SOFT CLOSING HINGE**

一字底座快装缓冲铰链

Model No.: H97

H97

一字底座快装缓冲铰链

STRAIGHT PLATE CLIP ON SOFT CLOSING HINGE

开启角度: 105°
 铰杯直径: $\Phi 35\text{mm}$
 铰杯高度: 11.3mm
 铰杯孔距: 45mm、48mm、52mm
 面板尺寸K: 3~7mm
 可选用门板厚度: 14~22mm


Opening degree: 105°
 Diameter of hinge cup: $\Phi 35\text{mm}$
 Height of hinge cup: 11.3mm
 Cup hole distance: 45mm/48mm/52mm
 Dimension of door: 3~7mm
 Range for door thickness: 14~22mm



安装尺寸 Installation Dimensions

H=安装板高度 Height of mounting plate.
 K=面板外线与铰链盒钻孔距离 Distance from edge of door to the edge of the cup.
 D=柜边上所需的面板盖 Required cover distance on side panel.
 A=门与侧板间隙 Gap between door and side panel.
 L=面板内线/侧边外线距 Distance from inside edge of door to the outside edge of side panel.
 T=门身厚度 Door thickness.

用以下公式决定铰臂的种类, 解决问题时必须要有门身钻孔“K”及安装高度“H”的数值。
 Formulas below can be used according to different type of arm of hinges, and need figures of both drilling holes “K” on the door and the height or the mouning plate “H” when solving problem.

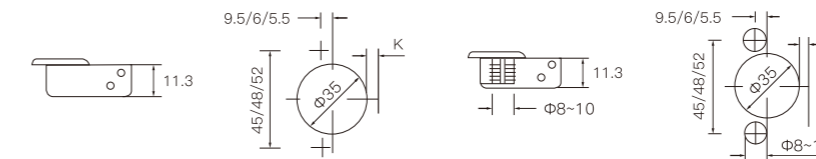

可配螺丝种类 Options of screws and dowels

	欧式螺丝 Euro screw		M8胶栓 M8 dowel
6.4mm	螺丝代号 Screw No. E	8mm	胶栓代号 Dowel No. D8
	快装胶栓 Easy dowel		M10胶栓 M10 dowel
8mm	胶栓代号 Dowel No. DE	10mm	胶栓代号 Dowel No. D10

盖位计算值表 Coverage calculation table

D	K	3	4	5	6	7	
H		0	17	18	19	20	21

$H=14+K-D$

D	K	3	4	5	6	7	
H		0	8	9	10	11	12

$H=5+K-D$

D	K	3	4	5	6	7	
H		0	1	0	-1	-2	-3

$H=A+K-D$

H97A
直臂 Full overlay

H97B
中弯 Half overlay

H97C
大弯 Inset door

TUTTI 图特

TWO WAY CLIP ON SOFT CLOSING HINGE

二段力快装缓冲铰链



Model No.: H88

H88

二段力快装缓冲铰链

TWO WAY CLIP ON SOFT CLOSING HINGE

开启角度: 105°
铰杯直径: $\Phi 35\text{mm}$
铰杯高度: 11.5mm
铰杯孔距: 45mm、48mm、52mm
面板尺寸K: 3~7mm
可选用门板厚度: 16~22mm


Opening degree: 105°
Diameter of hinge cup: $\Phi 35\text{mm}$
Height of hinge cup: 11.5mm
Cup hole distance: 45mm/48mm/52mm
Dimension of door: 3~7mm
Range for door thickness: 16~22mm



安装尺寸 Installation Dimensions


H=安装板高度 Height of mounting plate.
K=面板外线与铰链盒钻孔距离 Distance from edge of door to the edge of the cup.
D=柜边上所需的面板盖 Required cover distance on side panel.
A=门与侧板间隙 Gap between door and side panel.
L=面板内线/侧边外线距 Distance from inside edge of door to the outside edge of side panel.
T=门身厚度 Door thickness.

用以下公式决定铰臂的种类, 解决问题时必须有门身钻孔“K”及安装高度“H”的数值。
Formulas below can be used according to different type of arm of hinges, and need figures of both drilling holes “K” on the door and the height or the mouting plate “H” when solving problem.


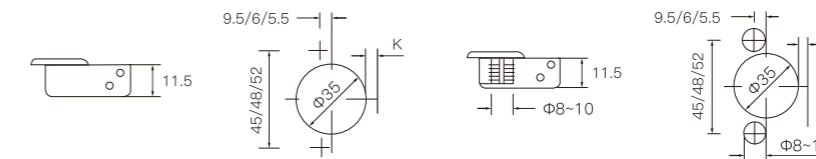


可配螺丝种类 Options of screws and dowels



 6.4mm	欧式螺丝 Euro screw 螺丝代号 Screw No. E	 8mm	M8胶栓 M8 dowel 胶栓代号 Dowel No. D8
 8mm	快装胶栓 Easy dowel 胶栓代号 Dowel No. DE	 10mm	M10胶栓 M10 dowel 胶栓代号 Dowel No. D10

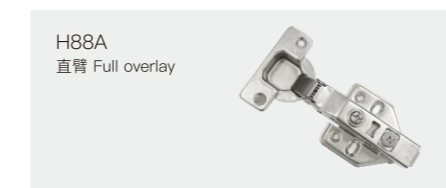


H88A
直臂 Full overlay

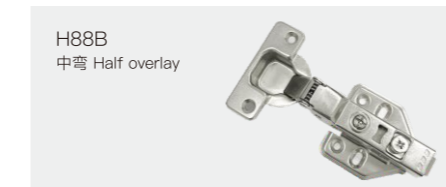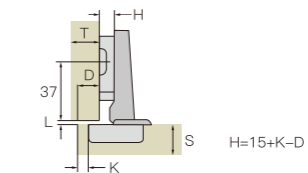

H88B
中弯 Half overlay

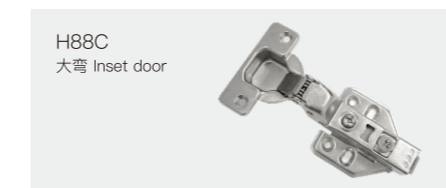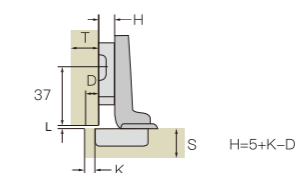

H88C
大弯 Inset door

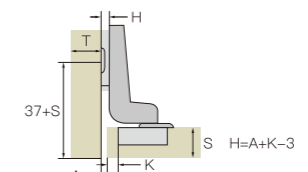

盖位计算值表 Coverage calculation table

D \ K	3	4	5	6	7
H 0	18	19	20	21	22
2	16	17	18	19	20
4	14	15	16	17	18


D \ K	3	4	5	6	7
H 0	8	9	10	11	12
2	6	7	8	9	10
4	4	5	6	7	8

A \ K	3	4	5	6	7
H 0	0	-1	-2	-3	-4
2	2	1	0	-1	-2
4	4	3	2	1	0

TUTTI 图特

155° TWO WAY CLIP ON SOFT CLOSING HINGE

155°二段力快装缓冲铰链

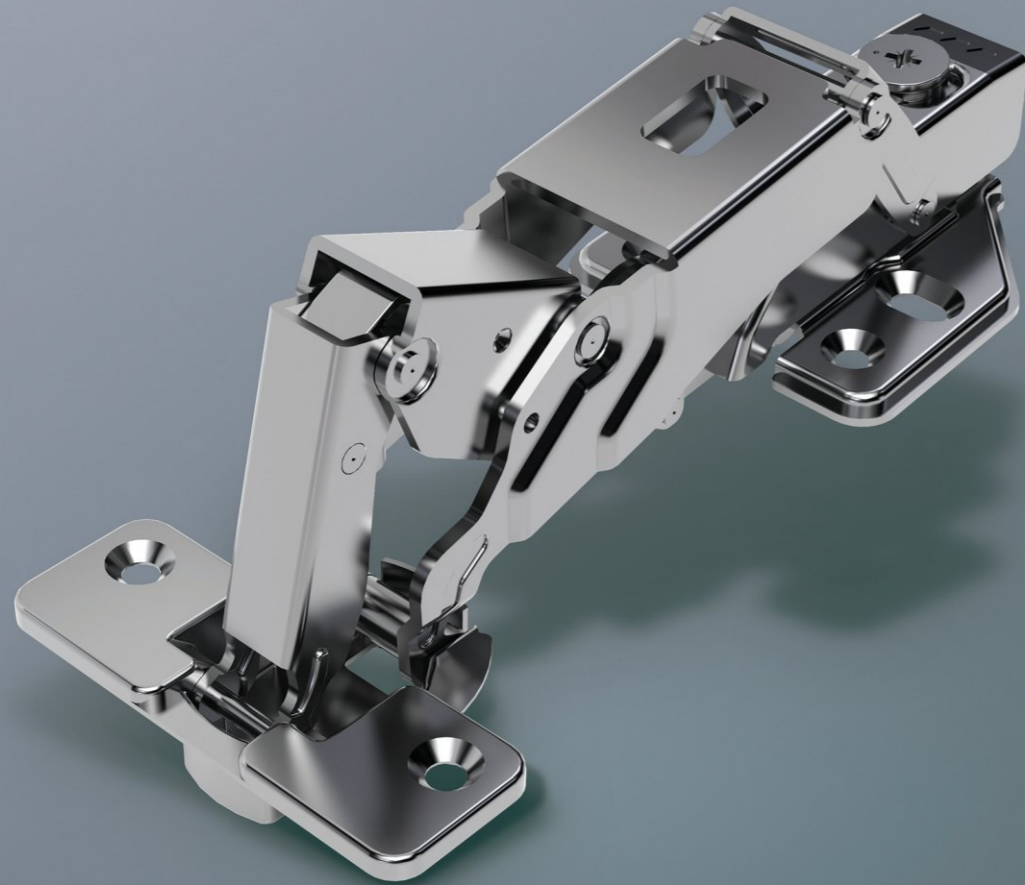

Model No.: H96

H96

155°二段力快装缓冲铰链

155° TWO WAY CLIP ON SOFT CLOSING HINGE

开启角度: 155°
 铰杯直径: $\Phi 35\text{mm}$
 铰杯高度: 11.5mm
 铰杯孔距: 45mm、48mm、52mm
 面板尺寸K: 3~7mm
 可选用门板厚度: 16~24mm


Opening degree: 155°
 Diameter of hinge cup: $\Phi 35\text{mm}$
 Height of hinge cup: 11.5mm
 Cup hole distance: 45mm/48mm/52mm
 Dimension of door: 3~7mm
 Range for door thickness: 16~24mm



安装尺寸 Installation Dimensions

H=安装板高度 Height of mounting plate.
 K=面板外线与铰链盒钻孔距离 Distance from edge of door to the edge of the cup.
 D=柜边上所需的面板盖 Required cover distance on side panel.
 A=门与侧板间隙 Gap between door and side panel.
 L=面板内线/侧边外线距 Distance from inside edge of door to the outside edge of side panel.
 T=门身厚度 Door thickness.

用以下公式决定铰臂的种类, 解决问题时必须要有门身钻孔“K”及安装高度“H”的数值。
 Formulas below can be used according to different type of arm of hinges, and need figures of both drilling holes “K” on the door and the height or the mouning plate “H” when solving problem.

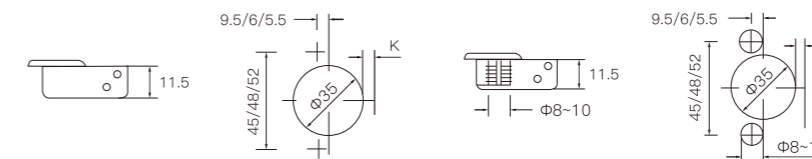


可配螺丝种类 Options of screws and dowels

	欧式螺丝 Euro screw		M8胶栓 M8 dowel
6.4mm	螺丝代号 Screw No. E	8mm	胶栓代号 Dowel No. D8
	快装胶栓 Easy dowel		M10胶栓 M10 dowel
8mm	胶栓代号 Dowel No. DE	10mm	胶栓代号 Dowel No. D10


	T	16	17	18	19	20	21	22	23	24
K=3	A	0	0	0	0	0	0	0	0	0
K=4	A	0	0	0	0	0	0	0	0	0
K=5	A	0	0	0	0	0	0	0	0	0
K=6	A	0	0	0	0	0	0	0	0	0
K=7	A	0	0	0	0	0	0	0	0	0




H96A
直臂 Full overlay

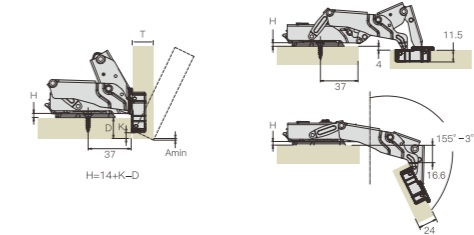

H96B
中弯 Half overlay

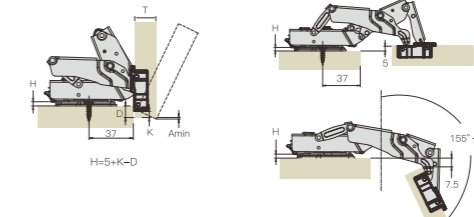

H96C
大弯 Inset door

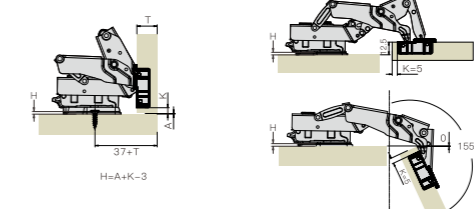

盖位计算值表 Coverage calculation table

D	K	3	4	5	6	7
H	0	17	18	19	20	21
	2	15	16	17	18	19
	4	13	14	15	16	17

D	K	3	4	5	6	7
H	0	8	9	10	11	12
	2	6	7	8	9	10
	4	4	5	6	7	8

A	K	3	4	5	6	7
H	0	0	-1	-2	-3	-4
	2	2	1	0	-1	-2
	4	4	3	2	1	0

TUTTI 图特

SPECIAL ANGLE
SOFT CLOSING HINGE

特殊角度缓冲铰链



Model No.: H49

H49

特殊角度缓冲铰链

SPECIAL ANGLE SOFT CLOSING HINGE

铰杯厚度: 11.3mm
铰杯直径: $\Phi 35$ mm
面板尺寸K: 3~7mm
可选用门板厚度: 14~22mm


Thickness of hinge cup: 11.3mm
Diameter of hinge cup: $\Phi 35$ mm
Dimension of door: 3~7mm
Range for door thickness: 14~22mm



安装尺寸 Installation Dimensions



H=安装板高度 Height of mounting plate.
K=面板外线与铰链盒钻孔距离 Distance from edge of door to the edge of the cup.
D=柜边上所需的面板盖 Required cover distance on side panel.
A=门与侧板间隙 Gap between door and side panel.
L=面板内线/侧边外线距 Distance from inside edge of door to the outside edge of side panel.
T=门身厚度 Door thickness.

用以下公式决定铰臂的种类, 解决问题时必须要有门身钻孔“K”及安装高度“H”的数值。
Formulas below can be used according to different type of arm of hinges, and need figures of both drilling holes “K” on the door and the height or the mouning plate “H” when solving problem.

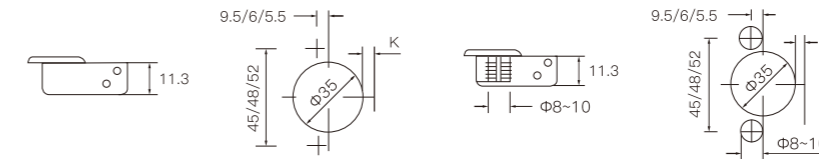

可配螺丝种类 Options of screws and dowels

 6.4mm	欧式螺丝 Euro screw 螺丝代号 Screw No. E	 8mm	M8胶栓 M8 dowel 胶栓代号 Dowel No. D8
 8mm	快装胶栓 Easy dowel 胶栓代号 Dowel No. DE	 10mm	M10胶栓 M10 dowel 胶栓代号 Dowel No. D10

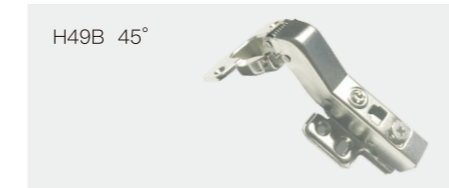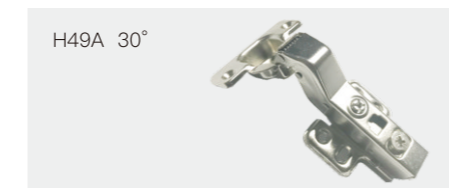

X: 安装板钻孔尺寸计算值表 Table of mounting plate drilling holes-position

H	K	4	5	6	7			
0	37	2.5	36	3.4	35	4.3	34	5.2
2	37	0.5	36	1.4	35	2.3	34	3.2
4	37	-1.5	36	-0.6	35	0.3	34	1.2
		X						D

H	K	4	5	6	7			
0	37	4.5	36	5.4	35	6.3	34	7.2
2	37	2.5	36	3.4	35	4.3	34	5.2
4	37	0.5	36	1.6	35	2.3	34	3.2
		X						D

H	K	4	5	
0	20	2.8	19	2.8
2	20	0.8	19	0.8
4	20	-1.2	19	-1.2
		X		D

H55

滑入式缓冲铰链

SLIDE ON SOFT CLOSING HINGE


开启角度: 105°
 铰杯直径: $\Phi 35\text{mm}$
 铰杯高度: 11.5mm
 铰杯孔距: 45mm、48mm、52mm
 面板尺寸K: 3~7mm
 可选用门板厚度: 14~22mm

Opening degree: 105°
 Diameter of hinge cup: $\Phi 35\text{mm}$
 Height of hinge cup: 11.5mm
 Cup hole distance: 45mm/48mm/52mm
 Dimension of door: 3~7mm
 Range for door thickness: 14~22mm

安装尺寸 Installation Dimensions







H=安装板高度 Height of mounting plate.
 K=面板外线与铰链盒钻孔距离 Distance from edge of door to the edge of the cup.
 D=柜边上所需的面板盖 Required cover distance on side panel.
 A=门与侧板间隙 Gap between door and side panel.
 L=面板内线/侧边外线距 Distance from inside edge of door to the outside edge of side panel.
 T=门身厚度 Door thickness.

用以下公式决定铰臂的种类, 解决问题时必须有门身钻孔“K”及安装高度“H”的数值。
 Formulas below can be used according to different type of arm of hinges, and need figures of both drilling holes “K” on the door and the height or the mouning plate “H” when solving problem.

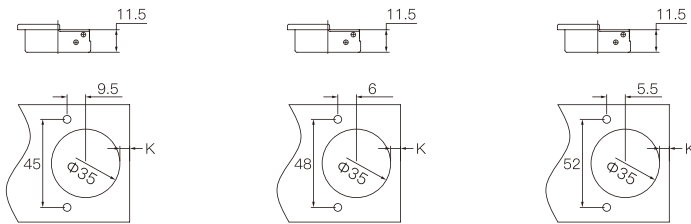

可配螺丝种类 Options of screws and dowels

	M8胶栓 M8 dowel 胶栓代号 Dowel No. L08
	M10胶栓 M10 dowel 胶栓代号 Dowel No. L10
	快装胶粒 Quick dowel 胶粒代号 Dowel No. F
	快装胶粒 Quick dowel 胶粒代号 Dowel No. E
	欧式螺丝 Euro screw 螺丝代号 Dowel No. L07

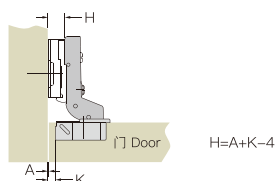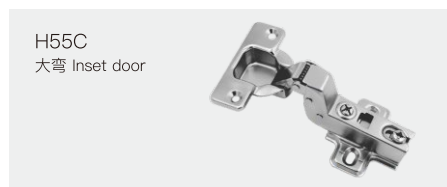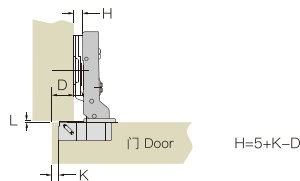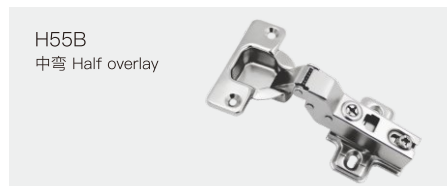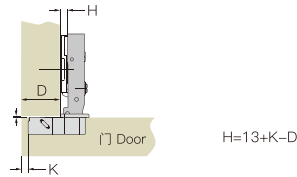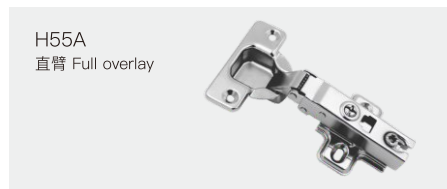

盖位计算值表 Coverage calculation table

D \ K	3	4	5	6	7
H \ 0	16	17	18	19	20
H \ 2	14	15	16	17	18
H \ 4	12	13	14	15	16

D \ K	3	4	5	6	7
H \ 0	8	9	10	11	12
H \ 2	6	7	8	9	10
H \ 4	4	5	6	7	8

间隙位计算值表 Cap calculation table

A \ K	3	4	5	6	7
H \ 0	1	0	-1	-2	-3
H \ 2	3	2	1	0	-1
H \ 4	5	4	3	2	1

H11

二段力滑入式铰链

TWO WAY SLIDE ON HINGE

开启角度: 110°
 铰杯直径: $\Phi 35\text{mm}$
 铰杯高度: 11.3mm
 铰杯孔距: 45mm、48mm、52mm
 面板尺寸K: 3~7mm
 可选用门板厚度: 14~22mm


Opening degree: 110°
 Diameter of hinge cup: $\Phi 35\text{mm}$
 Height of hinge cup: 11.3mm
 Cup hole distance: 45mm/48mm/52mm
 Dimension of door: 3~7mm
 Range for door thickness: 14~22mm



安装尺寸 Installation Dimensions







H=安装板高度 Height of mounting plate.
 K=面板外线与铰链盒钻孔距离 Distance from edge of door to the edge of the cup.
 D=柜边上所需的面板盖 Required cover distance on side panel.
 A=门与侧板间隙 Gap between door and side panel.
 L=面板内线/侧边外线距 Distance from inside edge of door to the outside edge of side panel.
 T=门身厚度 Door thickness.

用以下公式决定铰臂的种类，解决问题时必须要有门身钻孔“K”及安装高度“H”的数值。
 Formulas below can be used according to different type of arm of hinges, and need figures of both drilling holes “K” on the door and the height or the mouting plate “H” when solving problem.

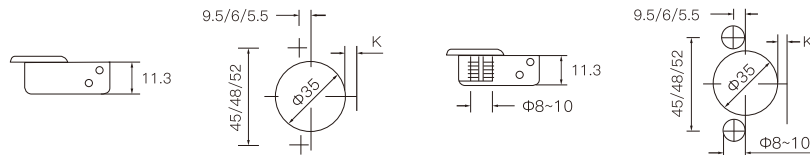

可配螺丝种类 Options of screws and dowels

 6.4mm	欧式螺丝 Euro screw 螺丝代号 Screw No. E	 8mm	M8胶栓 M8 dowel 胶栓代号 Dowel No. D8
 8mm	快装胶栓 Easy dowel 胶栓代号 Dowel No. DE	 10mm	M10胶栓 M10 dowel 胶栓代号 Dowel No. D10

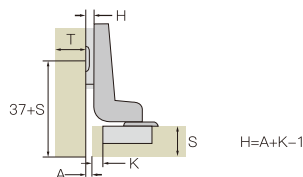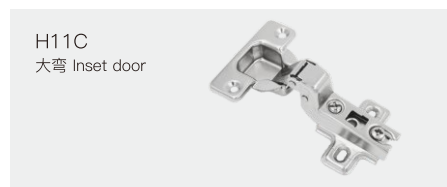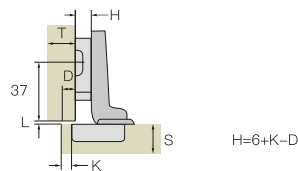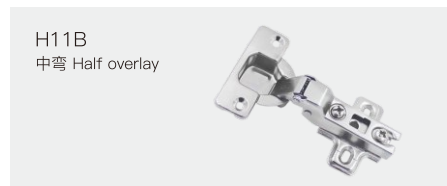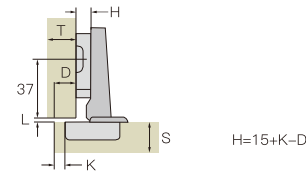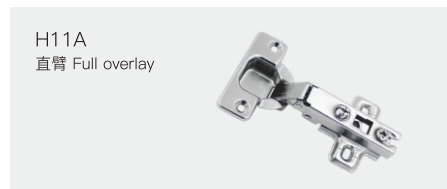

盖位计算值表 Coverage calculation table

D	K	3	4	5	6	7
H	0	18	19	20	21	22
	2	16	17	18	19	20
	4	14	15	16	17	18
	6	12	13	14	15	16

D	K	3	4	5	6	7
H	0	9	10	11	12	13
	2	7	8	9	10	11
	4	5	6	7	8	9
	6	3	4	5	6	7

A	K	3	4	5	6	7
H	0	-2	-3	-4	-5	-6
	2	0	-1	-2	-3	-4
	4	2	1	0	-1	-2