



LW-P50^{NEW}

Up/Down

ACCESSORIES :



Aluminum Profile
Code: P50



Aluminum Profile
Code: P50-Gear




Aluminum Endcap
(without hole)
Code: P50-Cap



Aluminum Screwless Endcap
(without hole)
Code: P50-Cap-N



Suspension Kits
Code: Sus.KitsB



Wall Clips
Code: WClip



Aluminum diffuser
Code: E50-AD



Joiners 90°A
Code: J-90A




Joiners 90°B
Code: J-90B




Joiners 180°A
Code: J-180A




Joiners 120°
Code: J-120

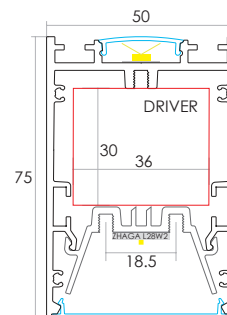

Optional Diffuser(PMMA/PC)

D003 type					
Dimensions(mm)	Max strip width	Opal	Milky	Frosted	Clear
50*75	20mm	✓	✓	✓	✓
Code		D003-O	D003-M	D003-F	D003-C
Light Transmittance		70%	78%	91%	95%


D050 type					
Dimensions(mm)	Max strip width	Opal	Milky	Frosted	Clear
50*75	26mm	✓	✓	/	/
Code		D050-O	D050-M	/	/
Light Transmittance		67%	80%	/	/

<38.4W/m
Stocked length availability:2m,2.5m.
Customized length below 6m upon your request.




Installing Instructions


Wall Mounted

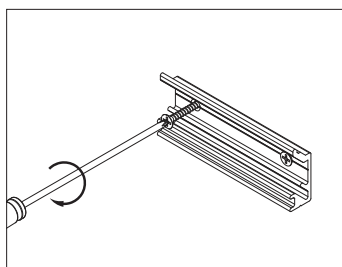


1. Attach the wall side clip to surface

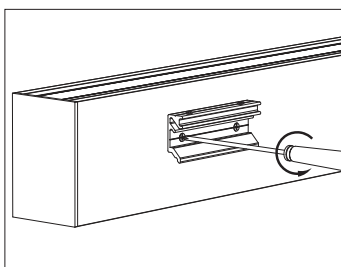

2. Attach the other side of clip to light fixture

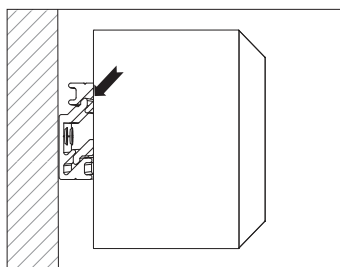


3. Mount the light fixture onto the wall attachment

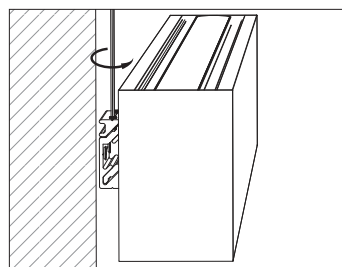


4. Secure the clips to ensure it stays in place


Applicable joiners

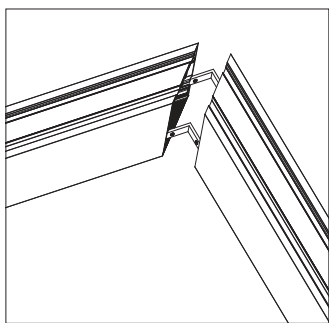


90°B

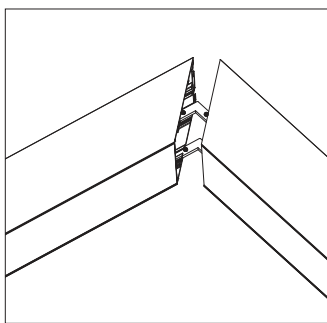

90°A

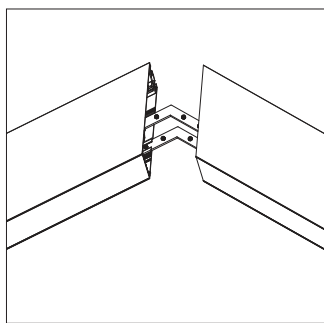


120°

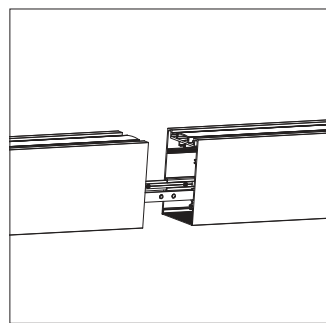

180°A


Installation & Joint Options

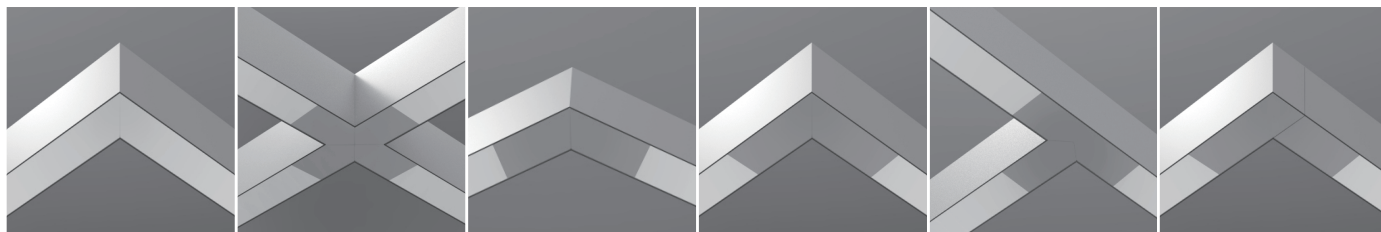




Installing Instructions


Suspended

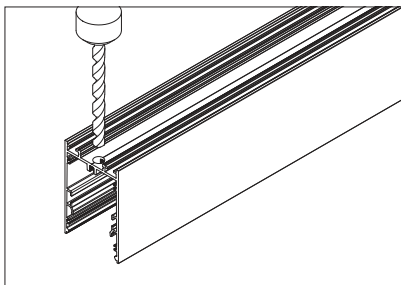


1. Drill a hole on the aluminium base

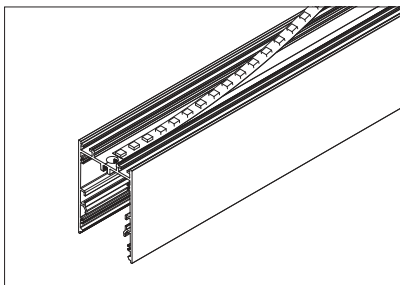


2. Apply the LED strips on to base

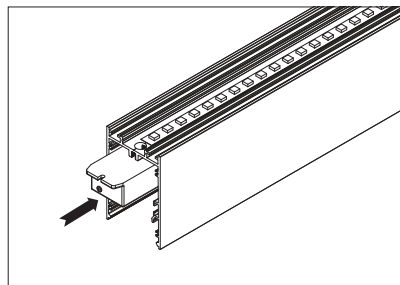


3. Secure LED driver on underside of profile cavity

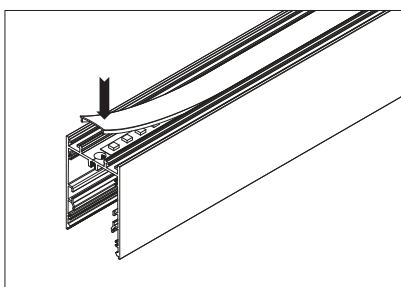


4. Attach smaller diffuser into place, working from end to end

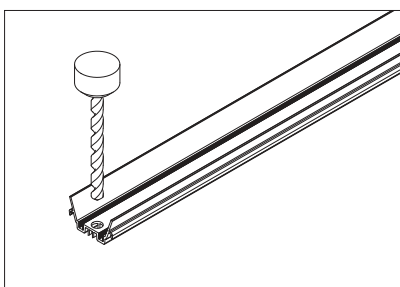


5. Drill a hole on the reflector for cable feed from LED strip

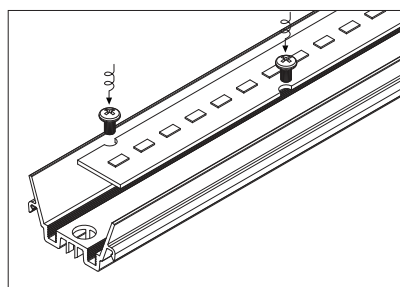


6. Fixing Rigid Led strip on reflector with suitable screws.

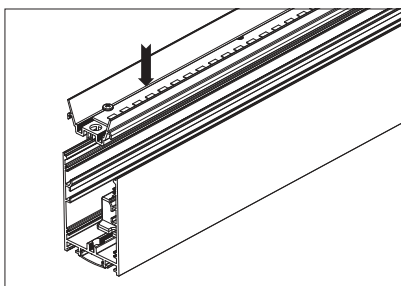


7. Place the reflector into the profile, and connect the LED strip up

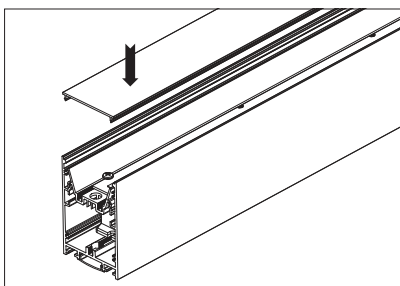


8. Attach diffuser into place, working from end to end

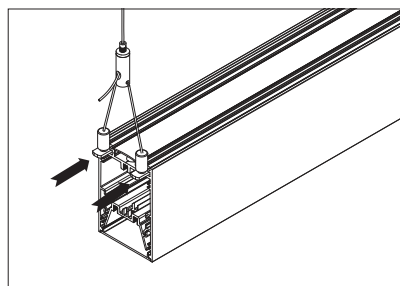

9. Slide the suspension base into the profile groove

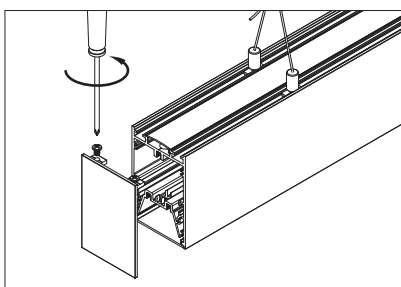

10. Screw the end caps on

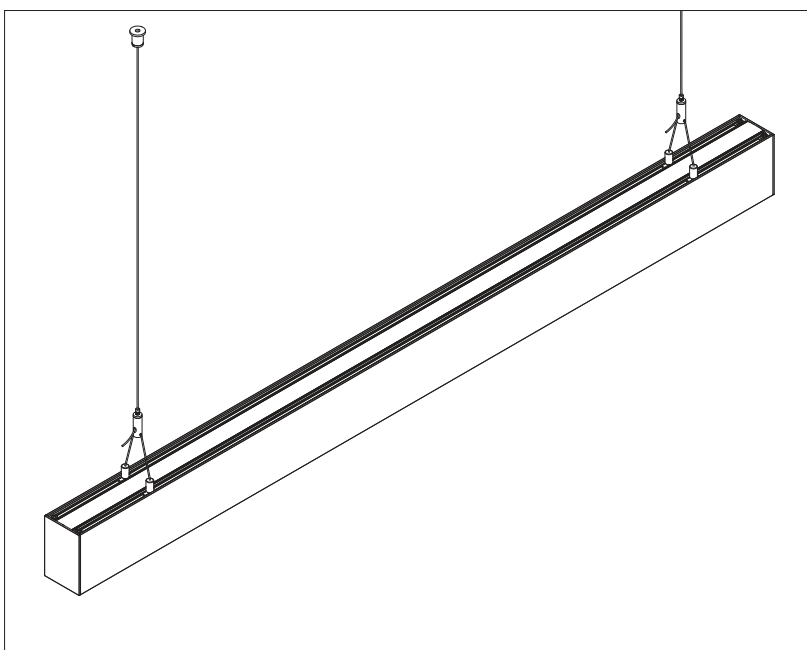

11. Installation completed.

