

Trimless



Wall Mounted



Suspended



LW-P60 ^{HOT}
Up/Down

ACCESSORIES :



Aluminum Profile
Code: P60



Aluminum Profile
Code: P60-Gear



Aluminum Endcap
(without hole)
Code: P60-Cap



Aluminum Screwless Endcap
(without hole)
Code: P60-Cap-N



Suspension Kits
Code: Sus.KitsB



Wall Clips
Code: WClip



Aluminum diffuser
Code: E60-AD



Joiners 90°A
Code: J-90A




Joiners 90°B
Code: J-90B



Joiners 180°A
Code: J-180A



Joiners 120°
Code: J-120

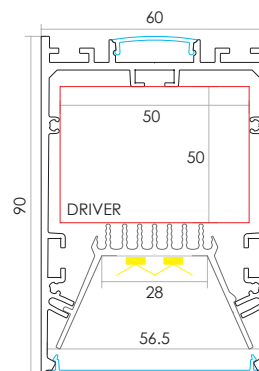

Optional Diffuser(PMMA/PC)

D003 type					
Dimensions(mm)	Max strip width	Opal	Milky	Frosted	Clear
60*90	20mm	✓	✓	✓	✓
Code		D003-O	D003-M	D003-F	D003-C
Light Transmittance		70%	78%	91%	95%

D060 type					
Dimensions(mm)	Max strip width	Opal	Milky	Frosted	Clear
60*90	28mm	✓	✓	/	/
Code		D060-O	D060-M	/	/
Light Transmittance		69%	80%	/	/

<57.6W/m

Aluminum Profile Weight:2.2kg/m


Stocked length availability:2m,2.5m.

Customized length below 6m upon your request.




Installing Instructions


Wall Mounted

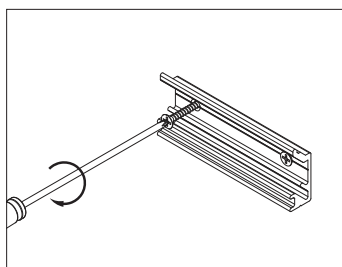


1. Attach the wall side clip to surface

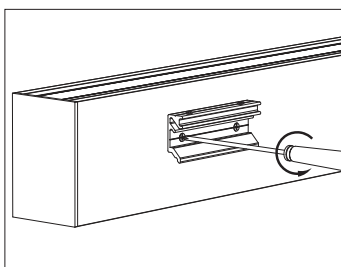

2. Attach the other side of clip to light fixture

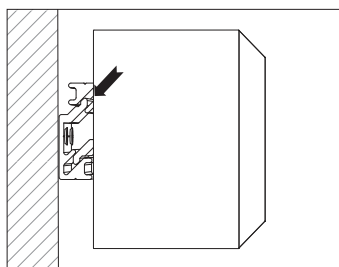


3. Mount the light fixture onto the wall attachment

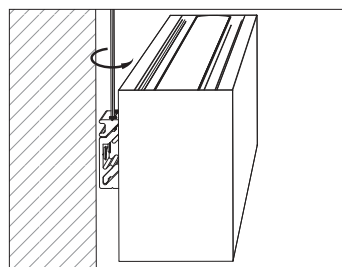


4. Secure the clips to ensure it stays in place


Applicable joiners

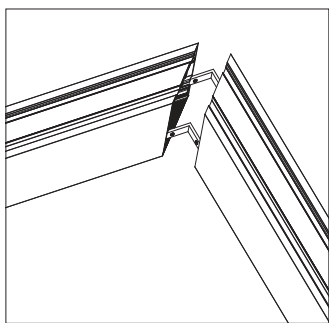


90°B

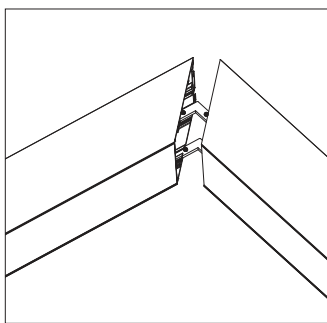

90°A

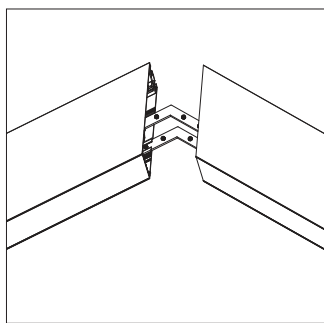


120°

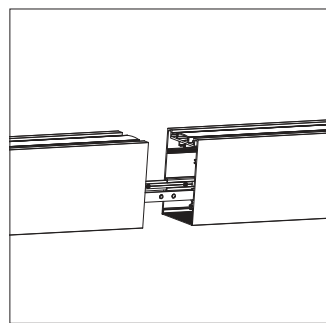

180°A


Installation & Joint Options

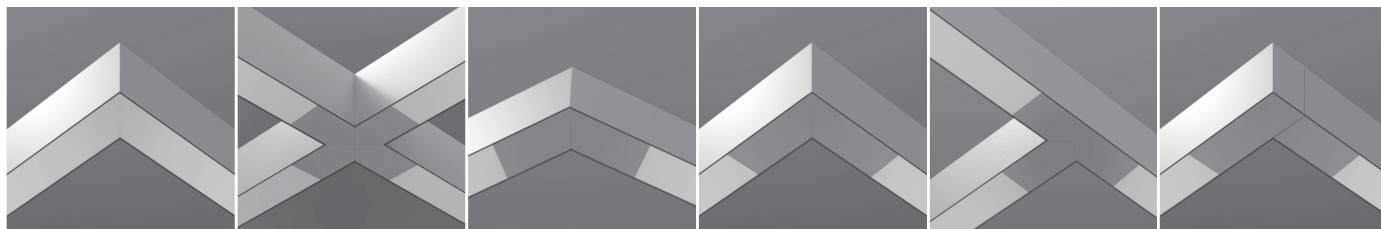




Installing Instructions


Trimless

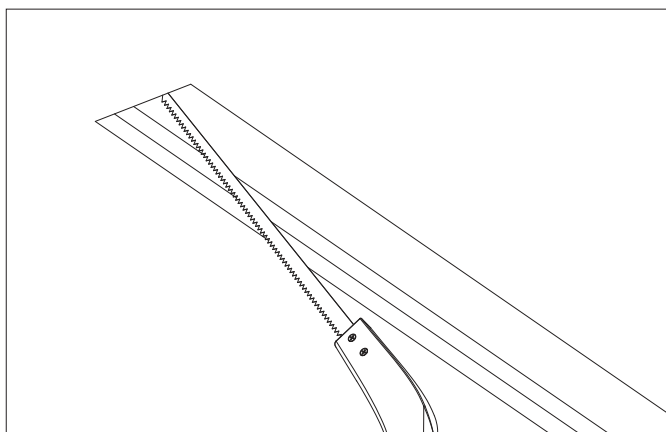


1. Prepare cut-out hole in ceiling

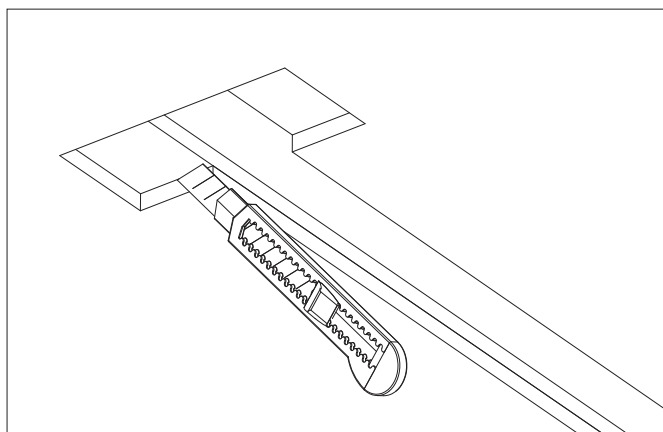


2. Recess a small part of the ceiling plaster board to fit the L bracket

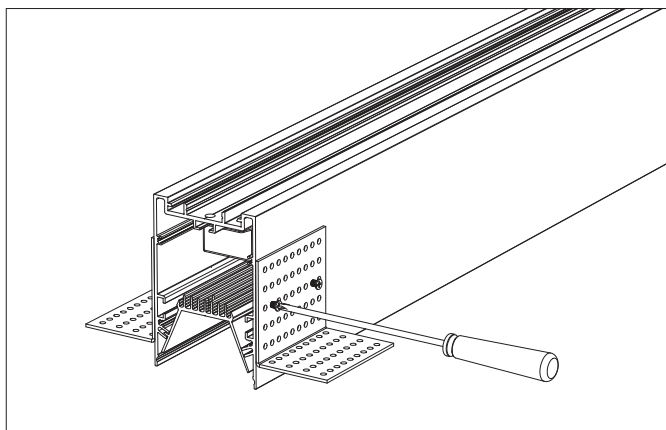


3. Screw on the perforated L brackets to the profile

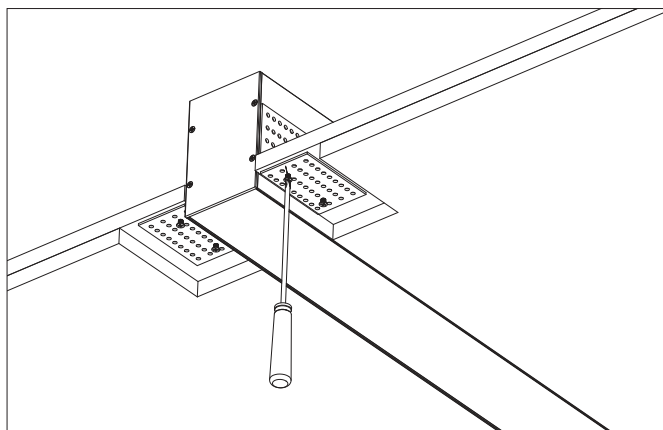

4. Place the profile into the cut-out hole with the L brackets fitting into the small recess made area. Secure L brackets accordingly.

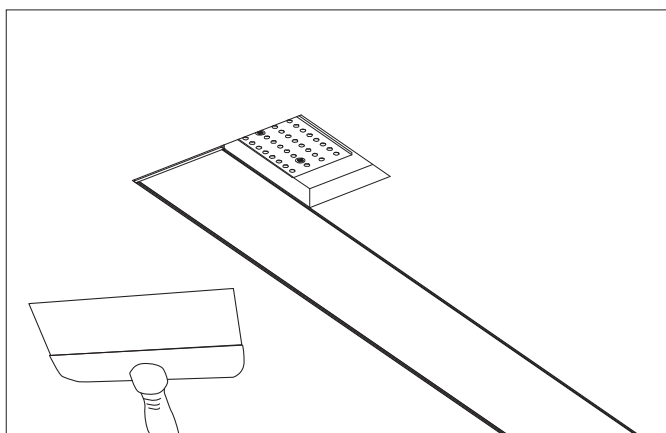

5. Re-plaster the recess area so it becomes level with the plaster board surface

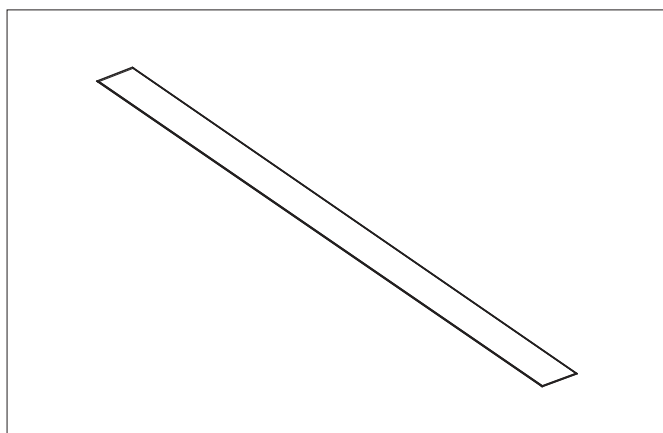


6. Once install is completed, profile should appear trimless on ceiling surface




Installing Instructions


Suspended

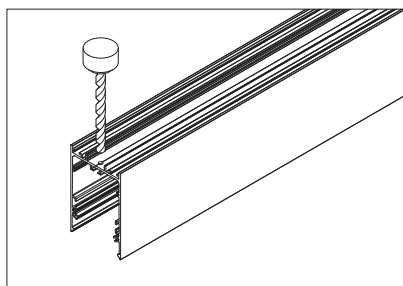


1. Drill a hole on the aluminium base

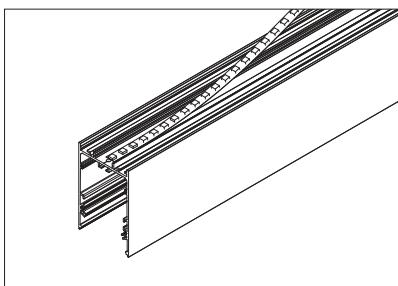


2. Apply the LED strips on to base

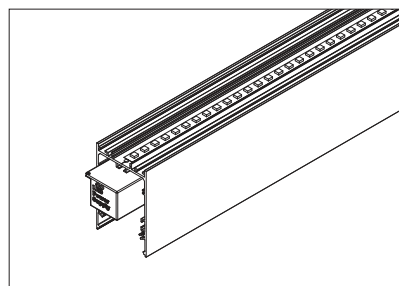


3. Secure LED driver on underside of profile cavity

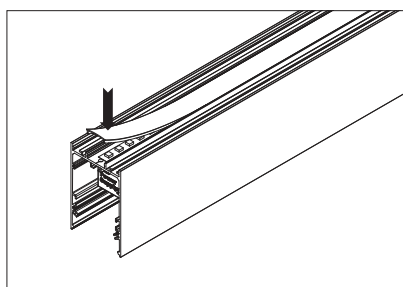


4. Attach smaller diffuser into place, working from end to end

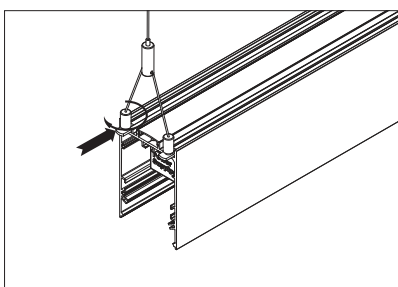


5. Slide the suspension base into the profile groove

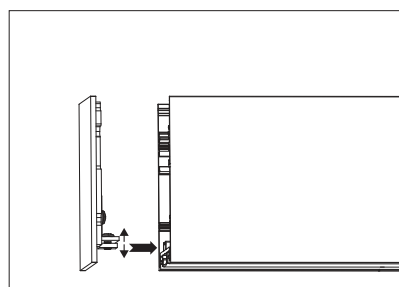


6. Align the screwless end cap into place

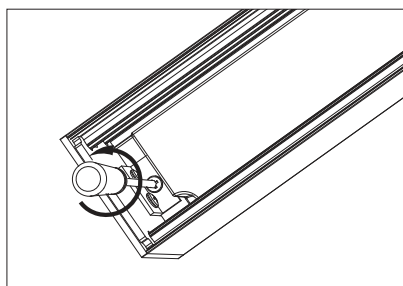


7. Secure the end cap at the L bracket base with screws

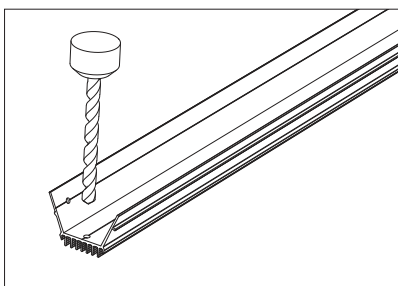


8. Drill a hole on the reflector for cable feed from LED strip

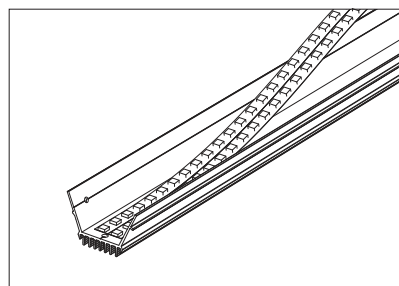


6. Affix the LED strip onto the reflector

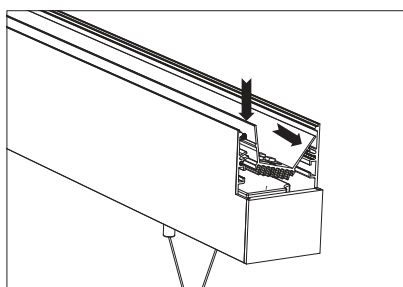


10. Ease the reflector into the profile cavity

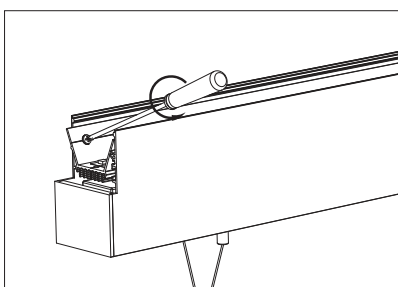

11. Secure the reflector with screws

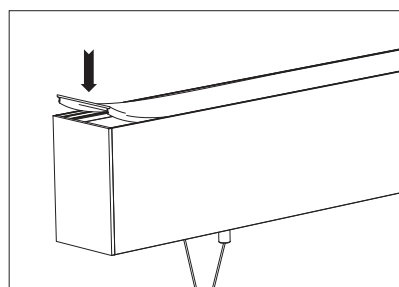

12. Attach diffuser into place, working from end to end

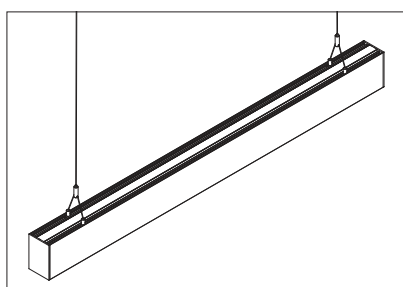


13. Installation completed.




Installing Instructions


Suspended

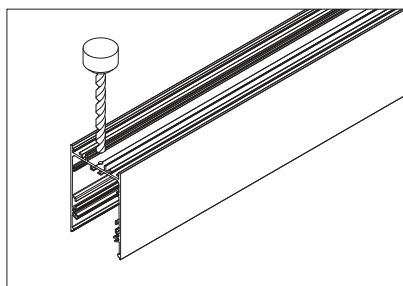


1. Drill a hole on the aluminium base

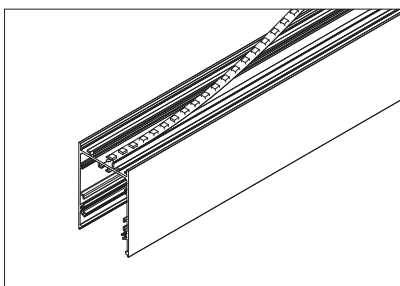


2. Apply the LED strips on to base

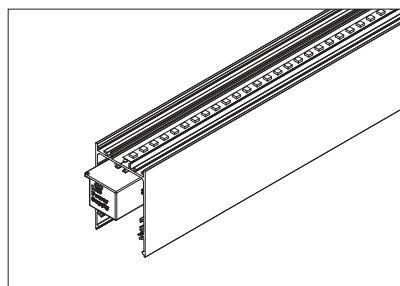


3. Secure LED driver on underside of profile cavity

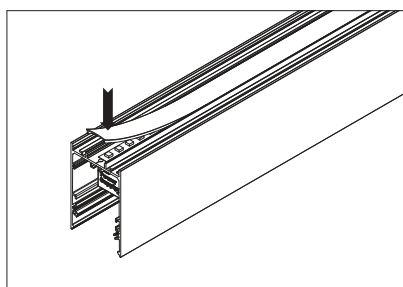


4. Attach smaller diffuser into place, working from end to end

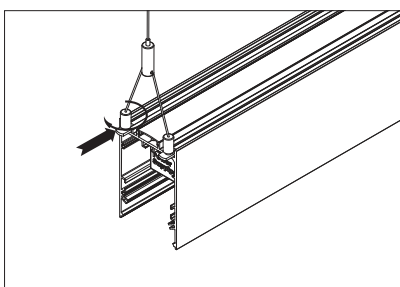


5. Slide the suspension base into the profile groove

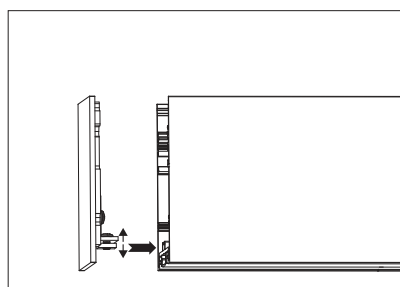


6. Align the screwless end cap into place

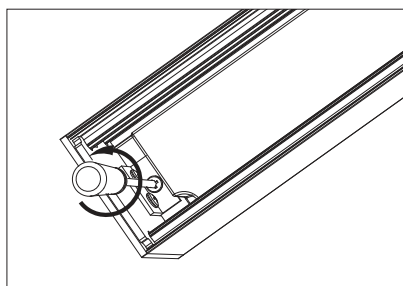


7. Secure the end cap at the L bracket base with screws

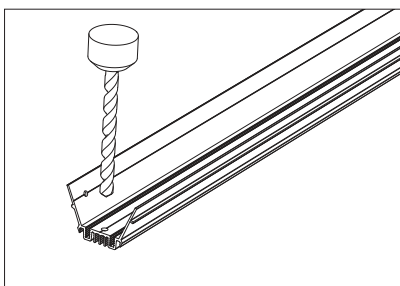


8. Drill a hole on the reflector for cable feed from LED strip

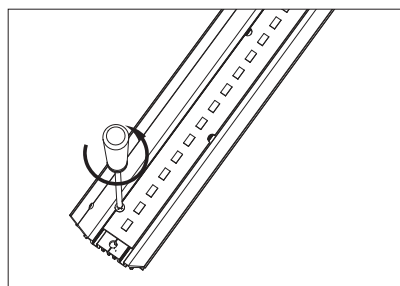


9. Fixing Rigid LED strip on reflector with suitable screws.

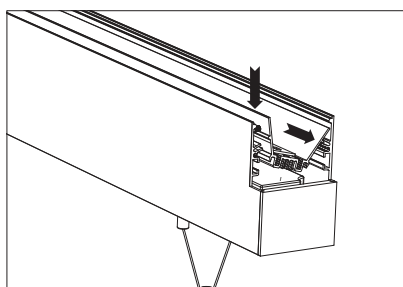


10. Ease the reflector into the profile cavity

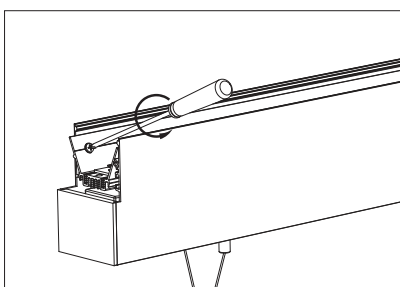

11. Secure the reflector with screws

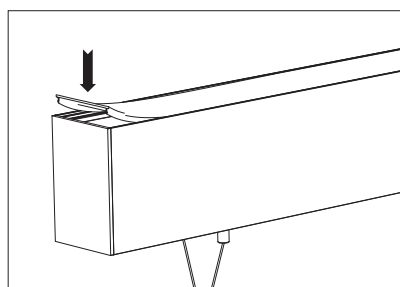

12. Attach diffuser into place, working from end to end

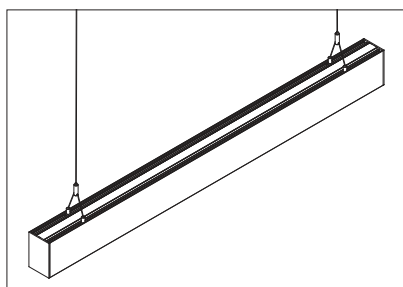

13. Installation completed.

