

LW-EU50

ACCESSORIES :



Aluminium Endcap Code: EU50-Cap
(with/without hole) Code: EU50-Cap-H



Suspension Kits
Code: Sus.KitsA



(Optional)

Screwless aluminum Cap
(with/without hole) Code: EU50-Cap-N



(Optional)

Wall Clips
Code: WClip



(Optional)

Joiners 90°A
Code: J-90A



(Optional)

Joiners 180°A
Code: J-180A




(Optional)

Joiners 120°A
Code: J-120A



(Optional)

Joiners 180°B
Code: J-180B

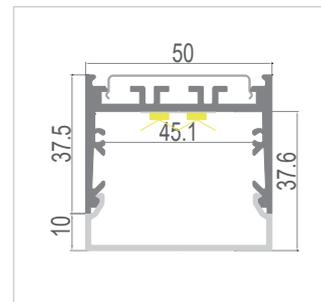

LW-EU50

Optional Diffuser(PMMA)

EU50					
Dimensions(mm)	Max strip width	Opal	New Opal	Frosted	Clear
50*47.5	45.1mm	✓	/	/	/
Code		EU50-O	/	/	/
Light Transmittance		60%	/	/	/

<57.6W/m


Aluminum Profile Weight:0.92kg/m

Stocked length availability:2m,2.5m.
Customized length below 6m upon your request.




Installing Instructions


Wall Mounted

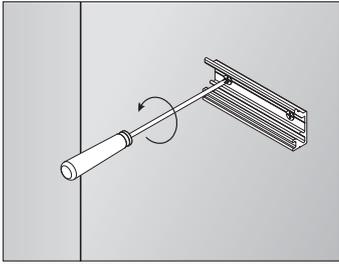


1. Attach the wall side clip to surface

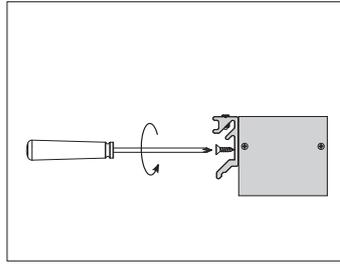

2. Attach the other side of clip to light fixture

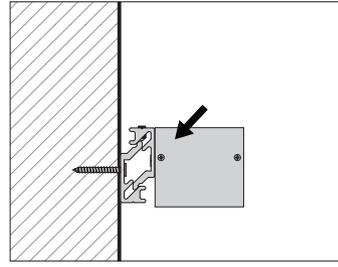


3. Mount the light fixture onto the wall attachment

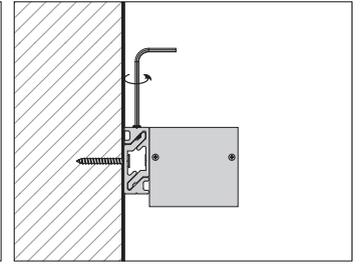


4. Secure the clips to ensure it stays in place


Applicable joiners

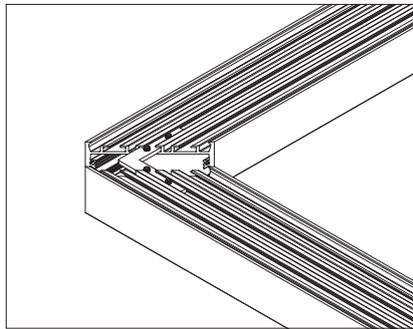


90°A

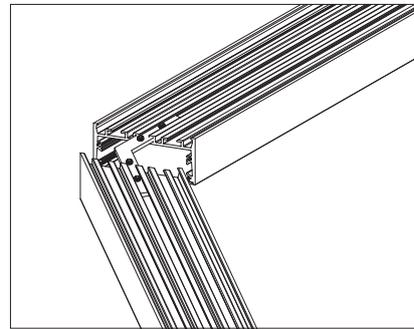

120°A

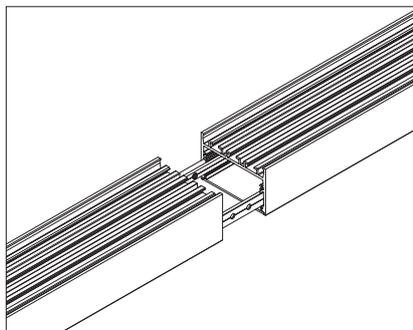

180°B

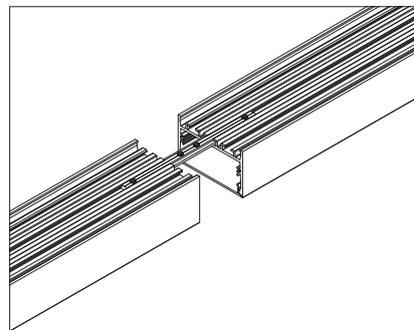

180°A

Aluminium Endcap Code: EU50-Cap-
(with/without hole) Code: EU50-Cap-h


Other installation & Connection ways.






Installing Instructions


Suspended

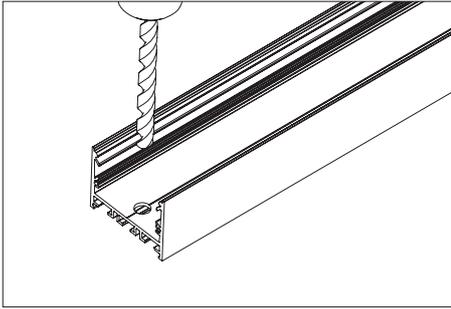


1. Drill a hole on the aluminium

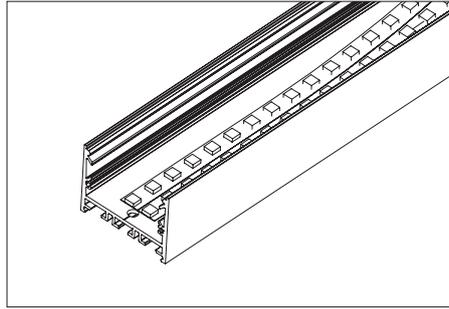


2. Fit the led strip on the aluminium

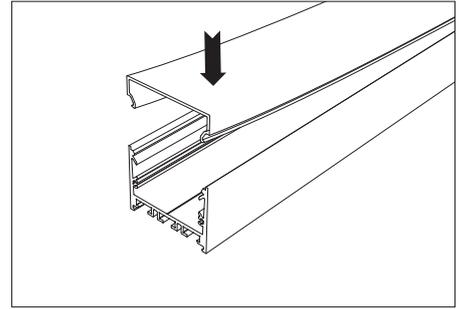


3. Click/snap on the diffuser from end to end

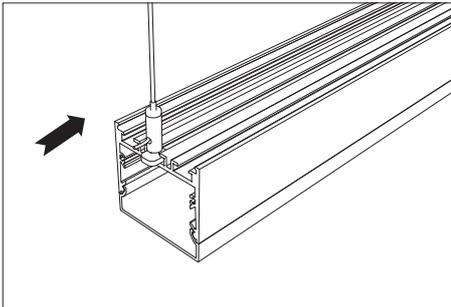

4. Install the suspension kits

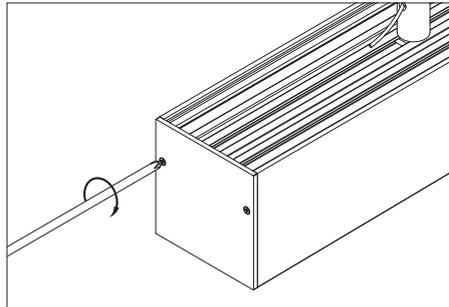

5. screws the end caps

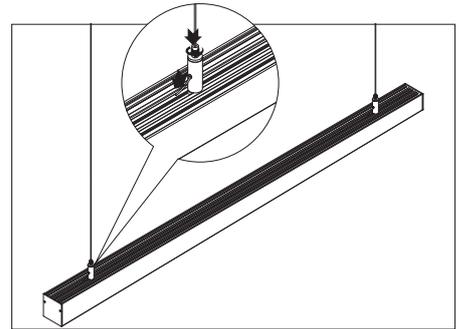


6. Adjust the cable length to suit.




Installing Instructions

Surface

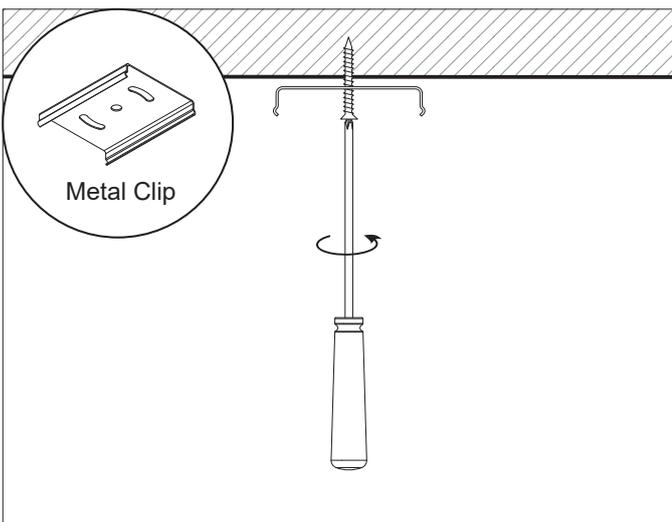


Metal Clip

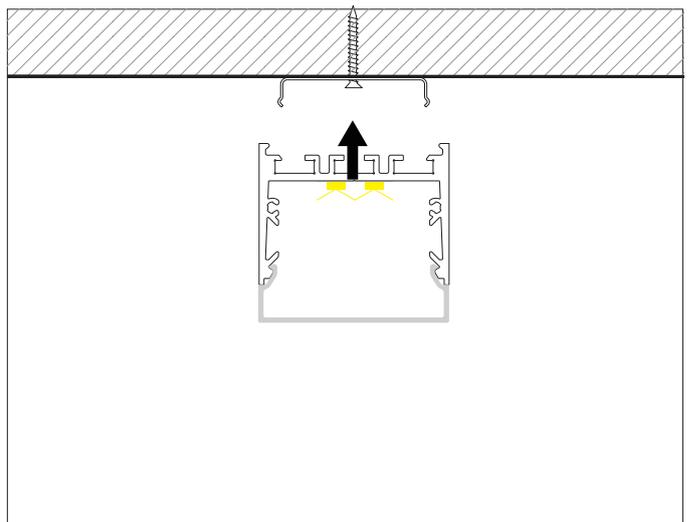




Installing Instructions


Trimless

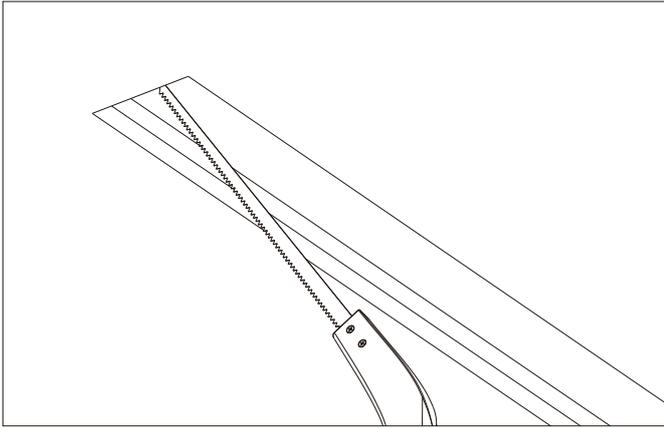


1. Prepare cut-out hole in ceiling

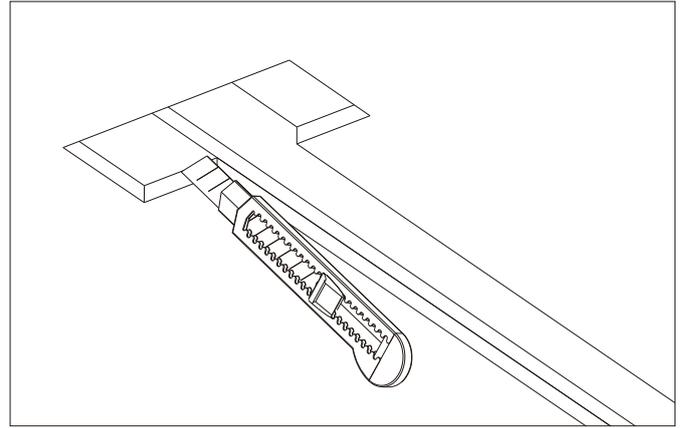


2. Recess a small part of the ceiling plaster board to fit the L bracket

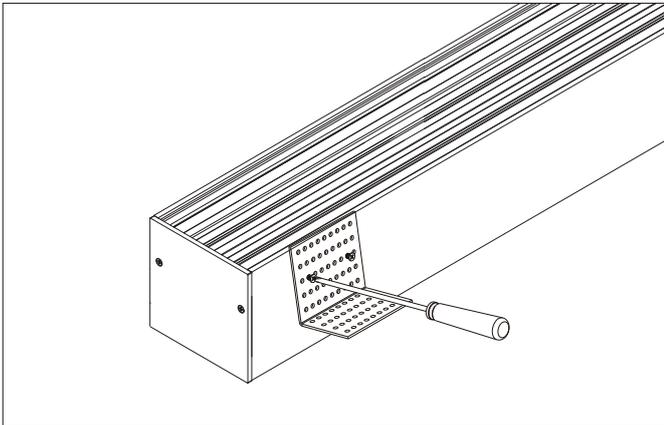


3. Screw on the perforated L brackets to the profile

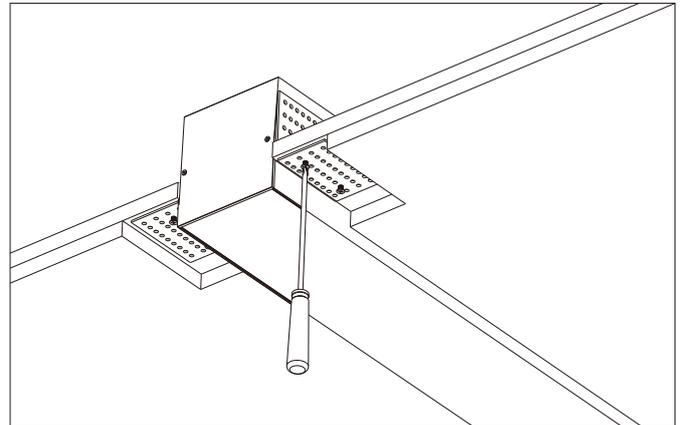

4. Place the profile into the cut-out hole with the L brackets fitting into the small recess made area. Secure L brackets accordingly.

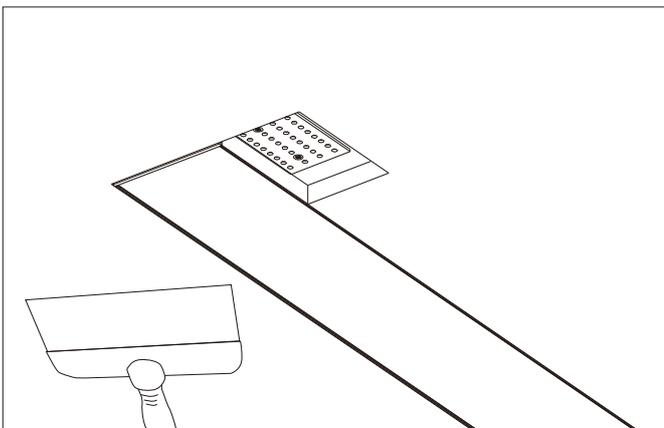

5. Re-plaster the recess area so it becomes level with the plaster board surface

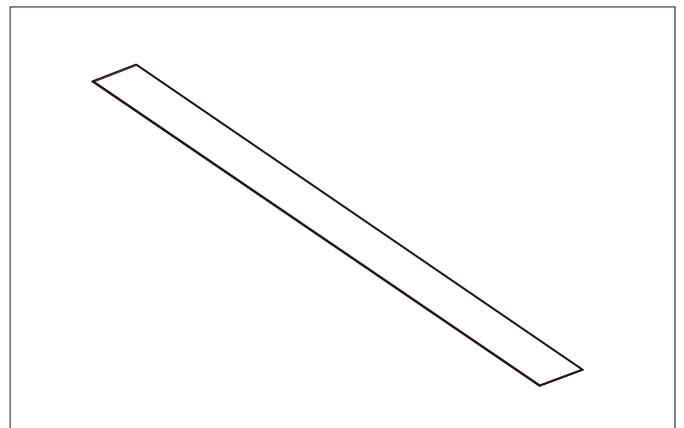

6. Once install is completed, profile should appear trimless on ceiling surface

