HIGOLD®

SHEARER Series 2.0 NARROW BASKET

Installation manual

SHEARER 2.0

HIGOLD®

Leading design Perfect experience. The beauty of industrial design!

Please note before installation

The minimum cabinet depth for the
Shearer 2.0 series narrow pull-out basket is 500mm,
and the width is based on the cabinet size

STEP

· 01 ·

Accessories List

There is no difference in the number of accessories between the left and right installation of SHEARER 2.0 series narrow basket, only the left and right directions are different.This installation instruction is based on the example of "150 cabinet left installation" .

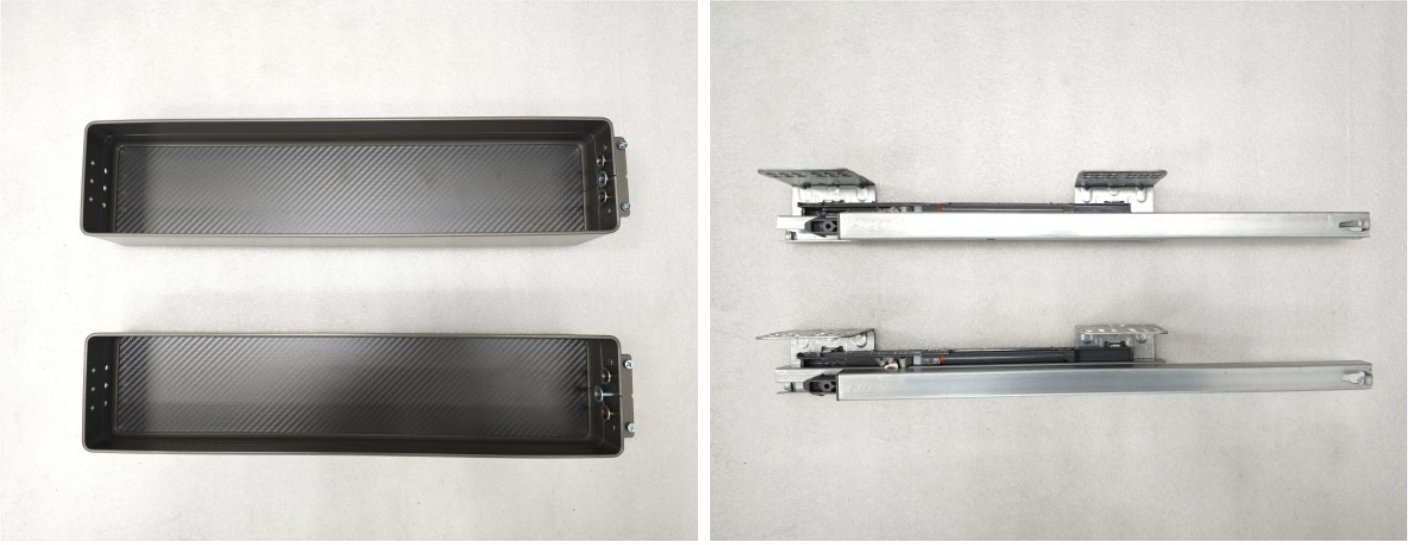

Left basket*1, left slide*2

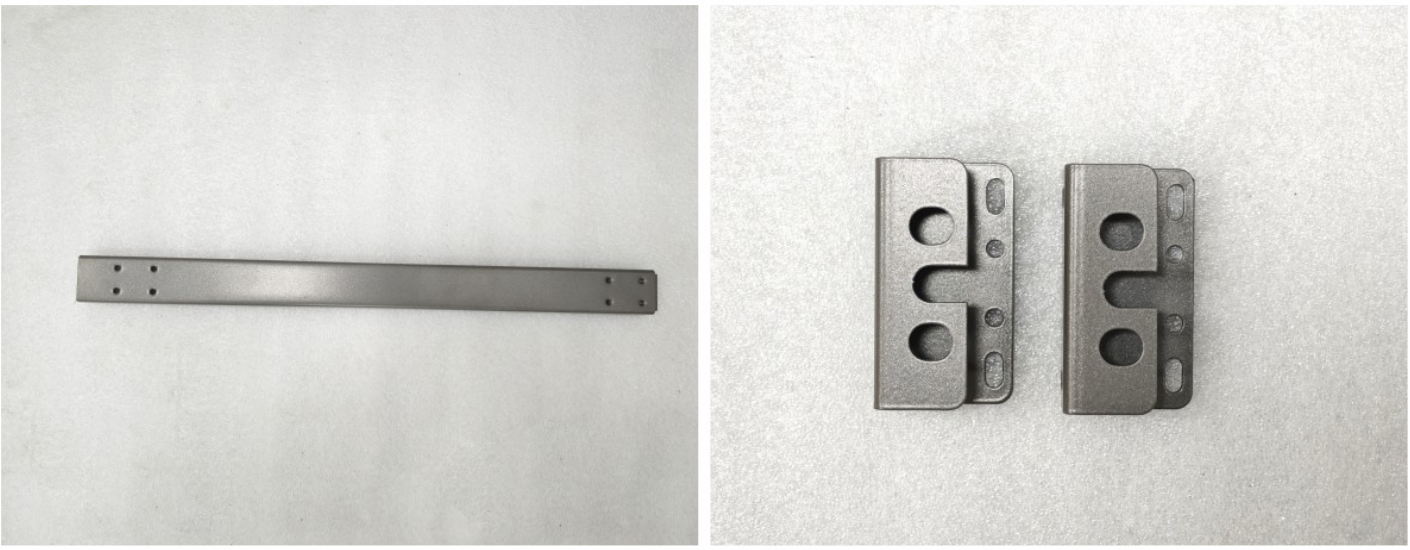

Support rod*1, door panel fixings*2

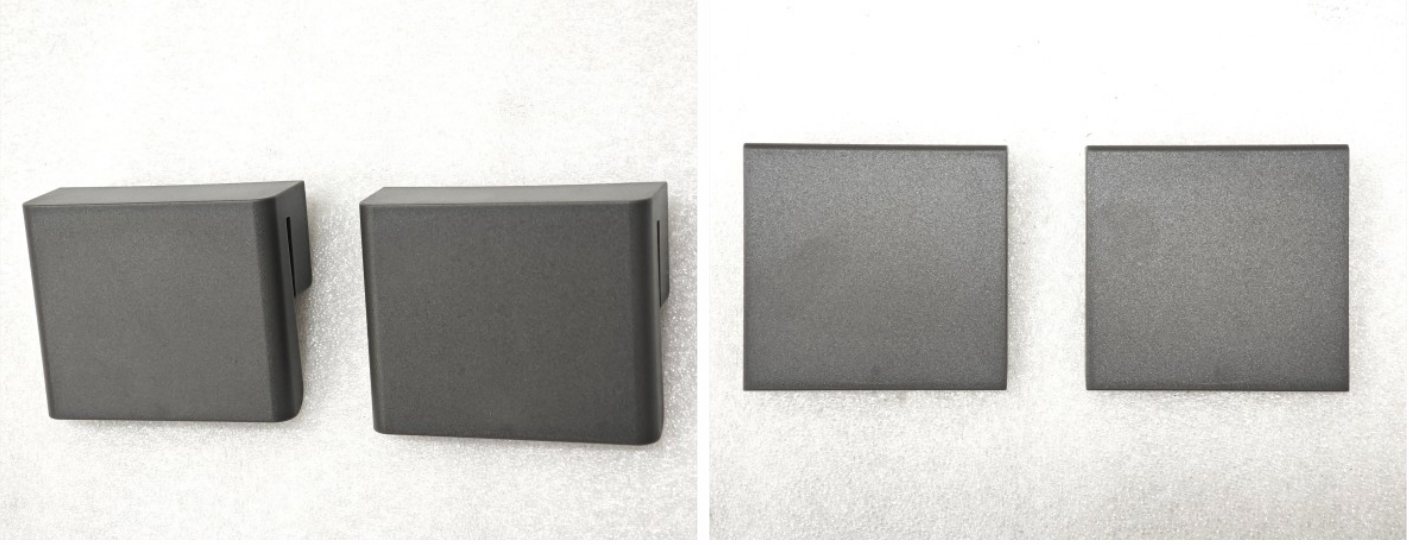

Front decoration parts*2, back decoration parts*2

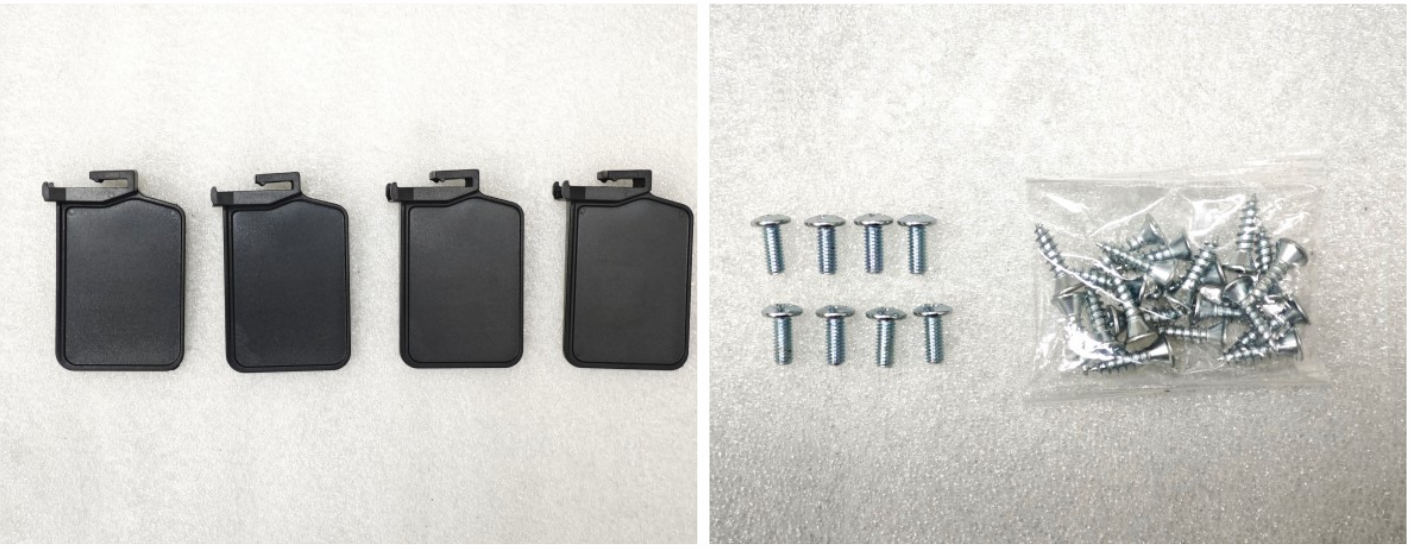

Divider*4, M4*10mm pan head screw*8, ST4.0*16mm self-tapping screw*20

STEP

· 02 ·

Slide Installation

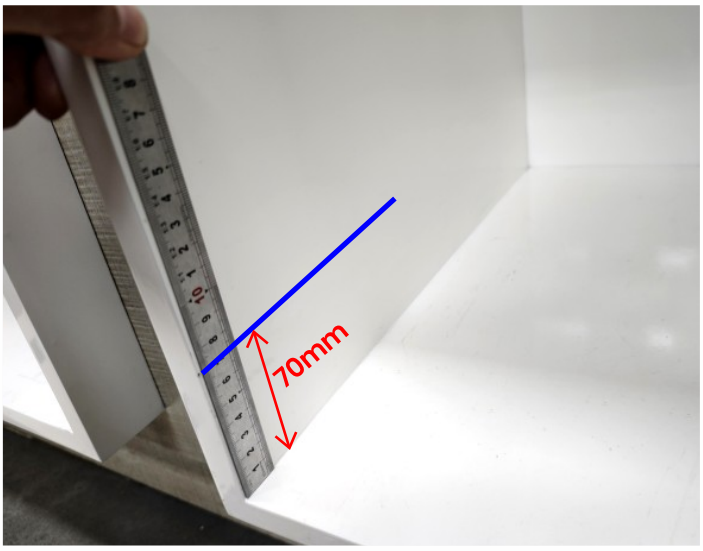

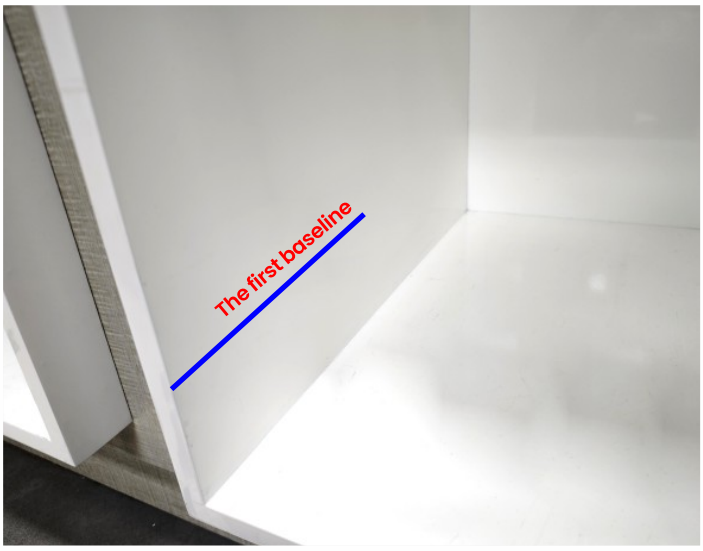

Take the first reference line at a height of 70mm from the bottom side of the left cabinet, measure the height and draw a line mark.

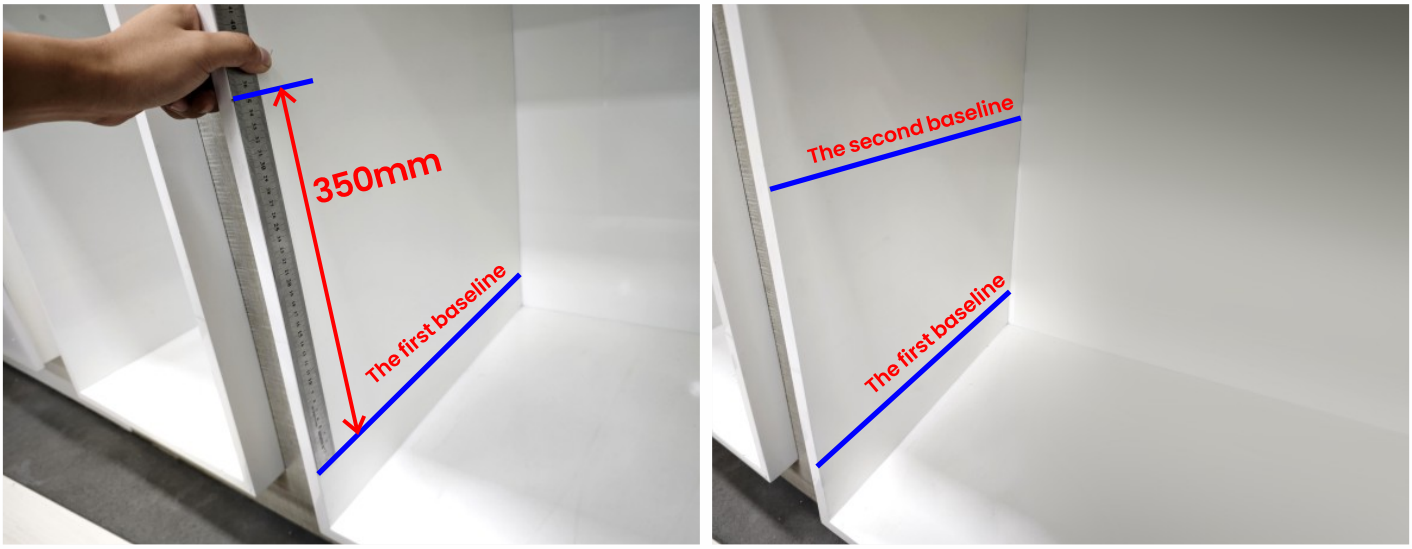

Take the second reference line at a height of 350mm from the first reference line, measure the height and draw a line mark.

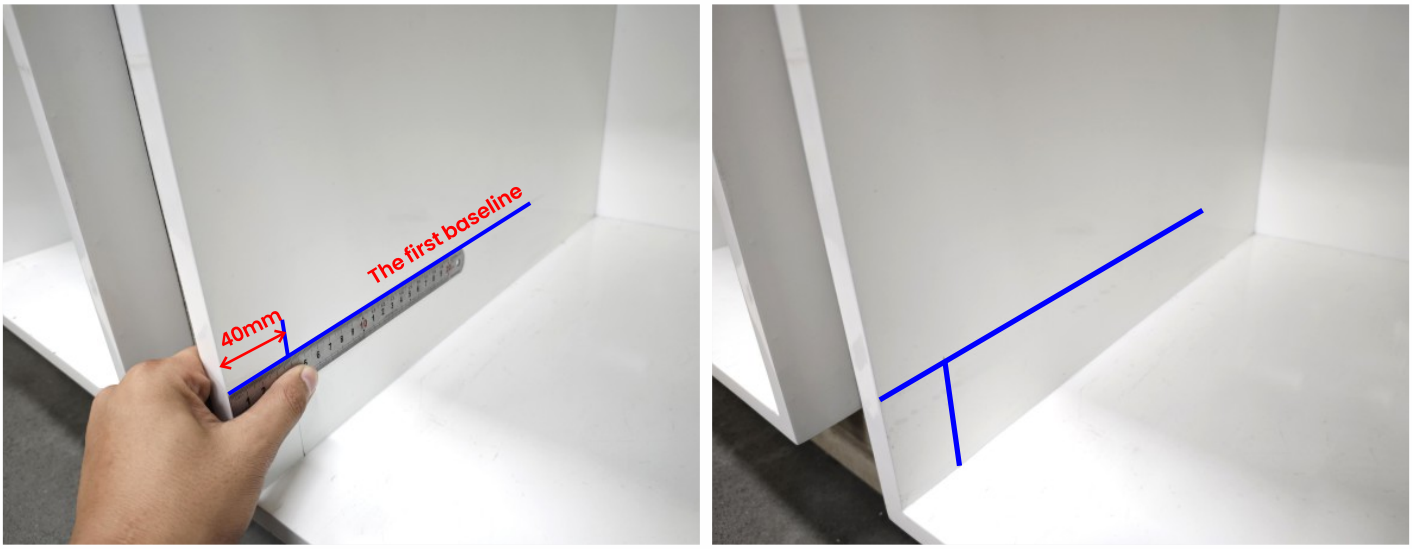

On the first reference line, draw a 40mm vertical line downwards from the cabinet edge.

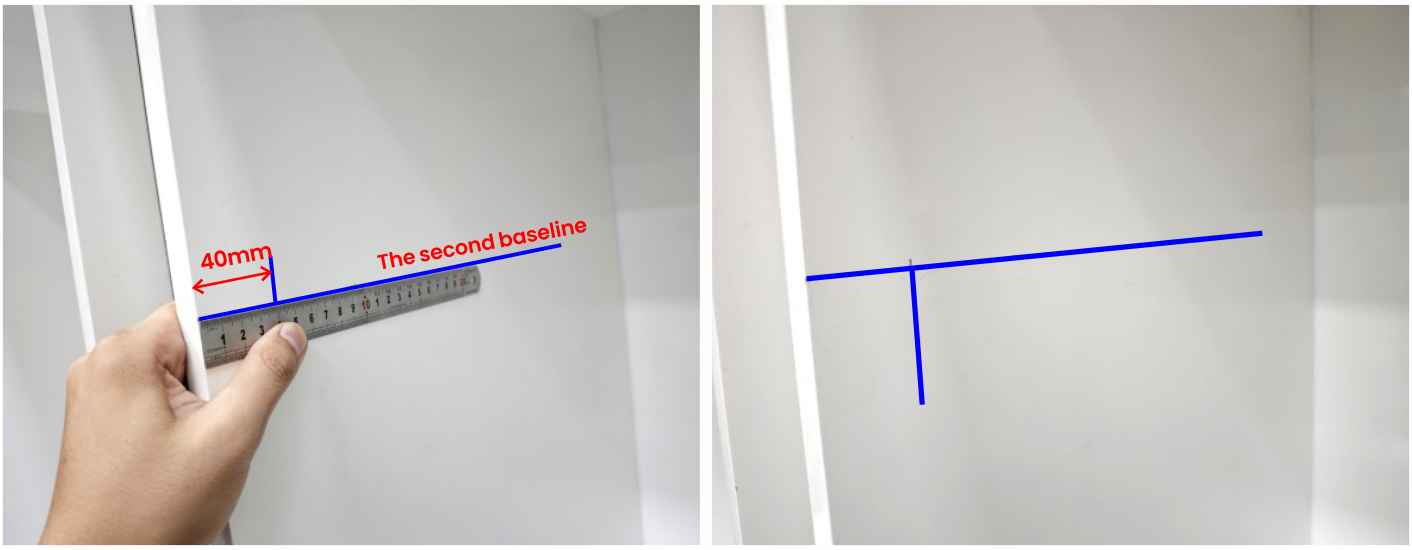

Similarly, on the second reference line, take a 40mm vertical line downwards from the cabinet edge.

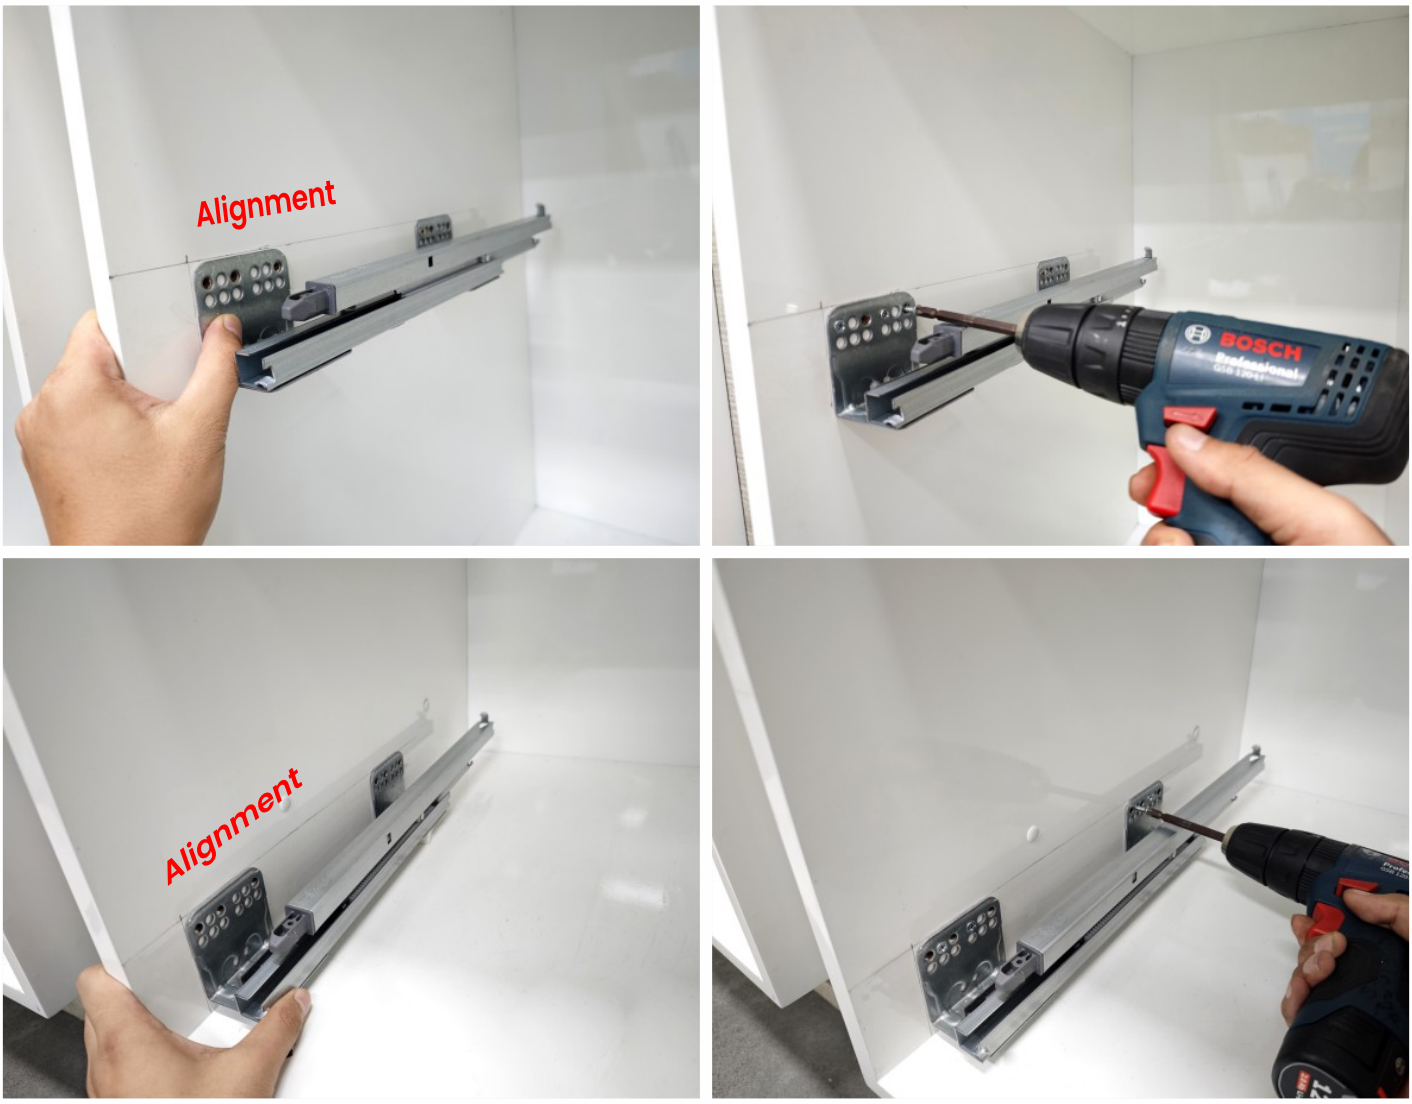

Align the slide bracket with the reference line and the vertical line, and use ST4.0*16mm self-tapping screws to fix the slide. To ensure the load-bearing and stability of the slide, please use at least 6 screws to lock a single slide (up/down).

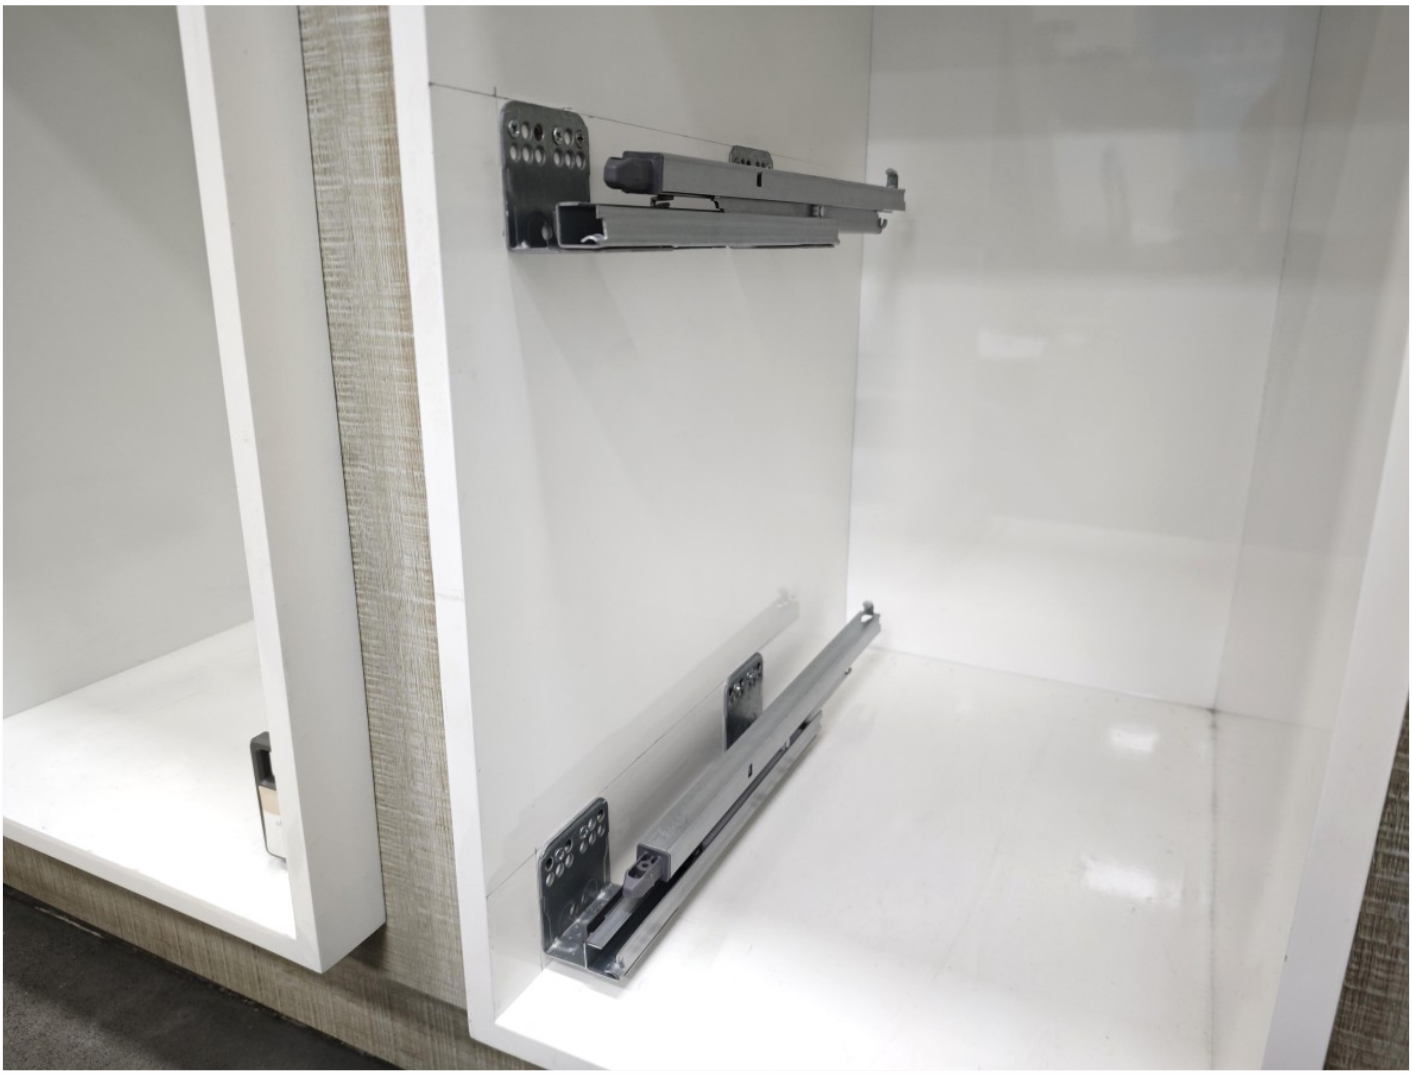

Erase the traces of the drawing and the guide rail installation is completed.

STEP

· 03 ·

Support Rods Pre-installation

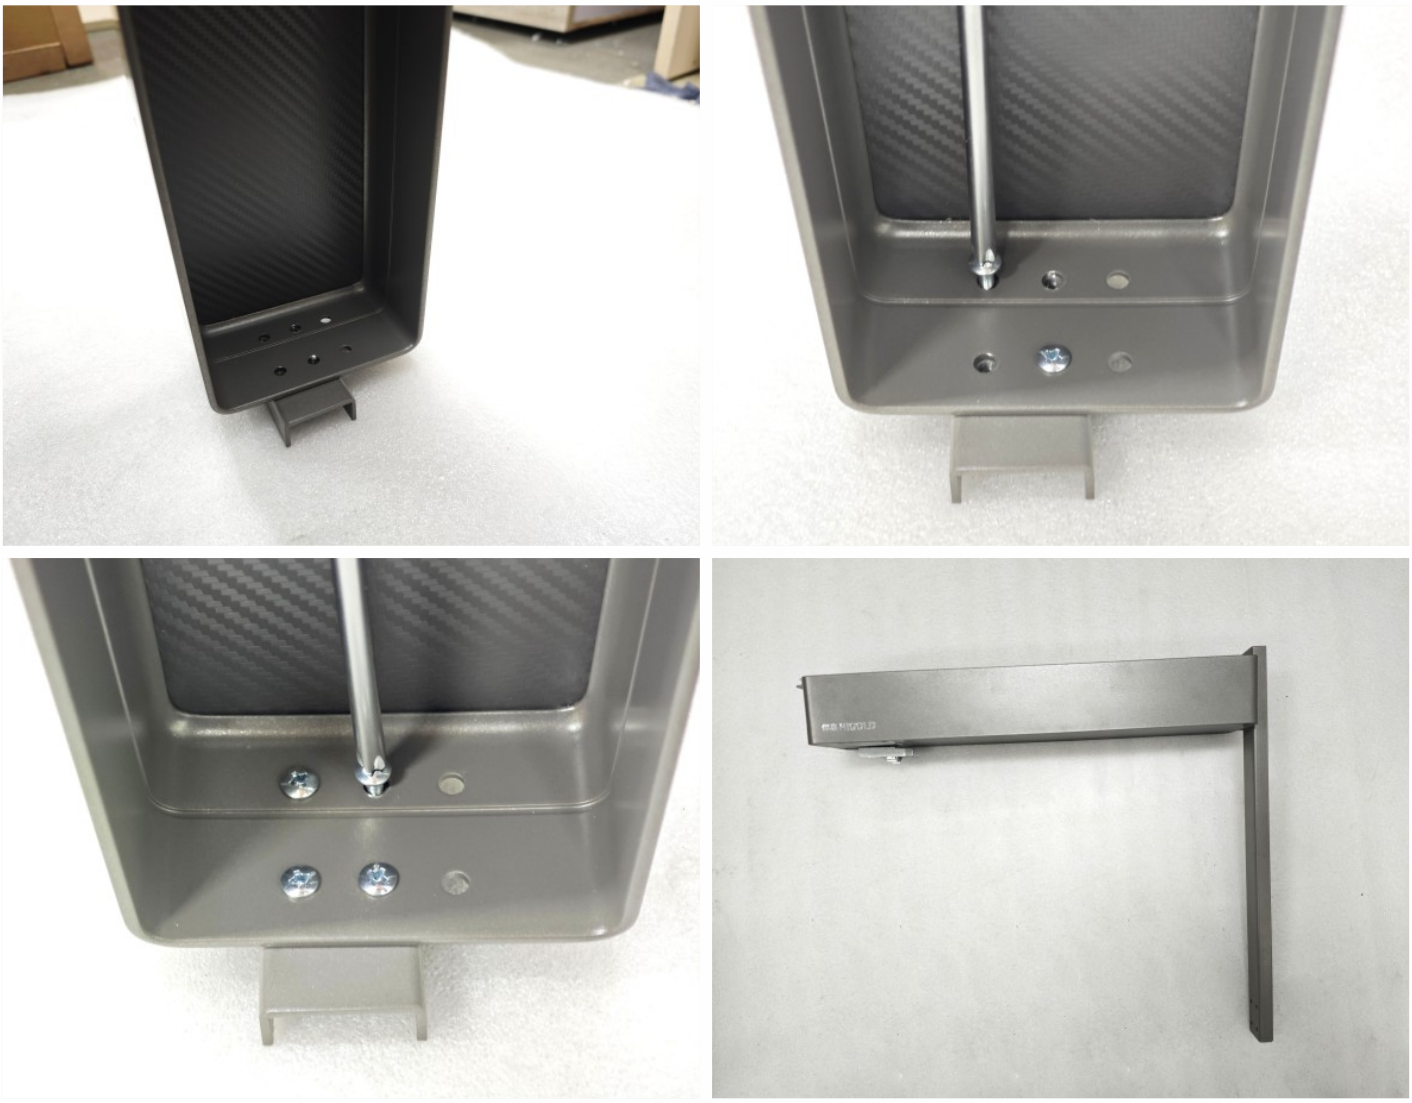

Align the rear hole of the basket with the hole of the support rod and use 4 M4*10mm pan head screws to lock and secure it.

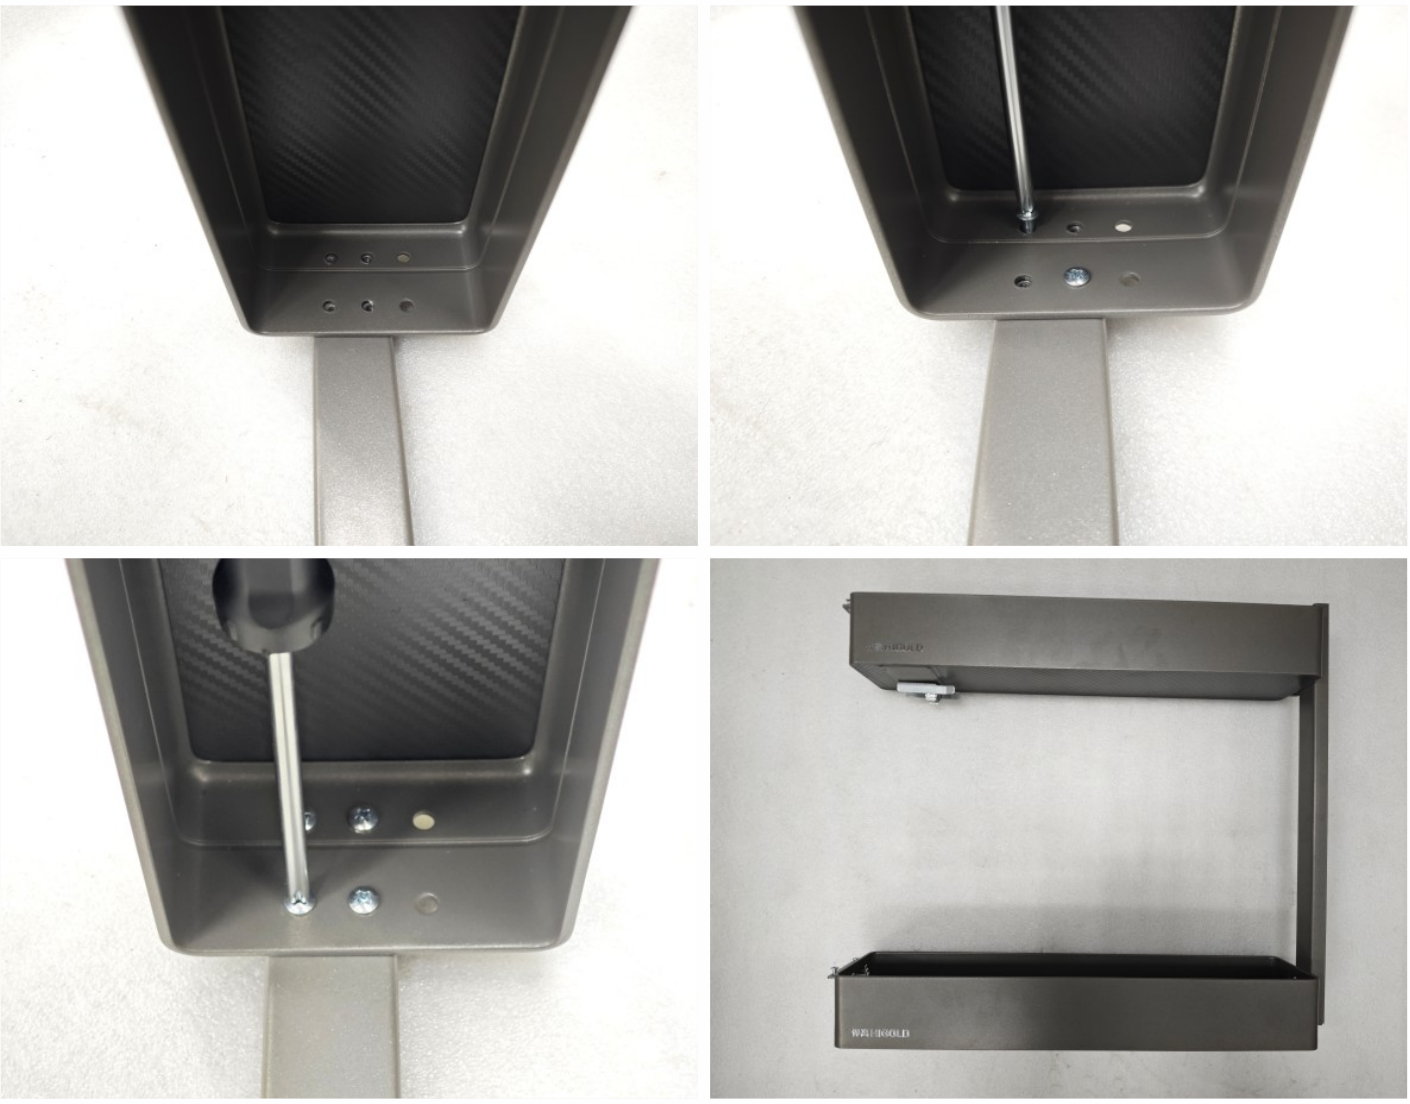

Similarly, use 4 M4*10mm pan head screws to lock and fix the other basket, and the support rod is pre-installed.

STEP

- 04 -

Basket Installation

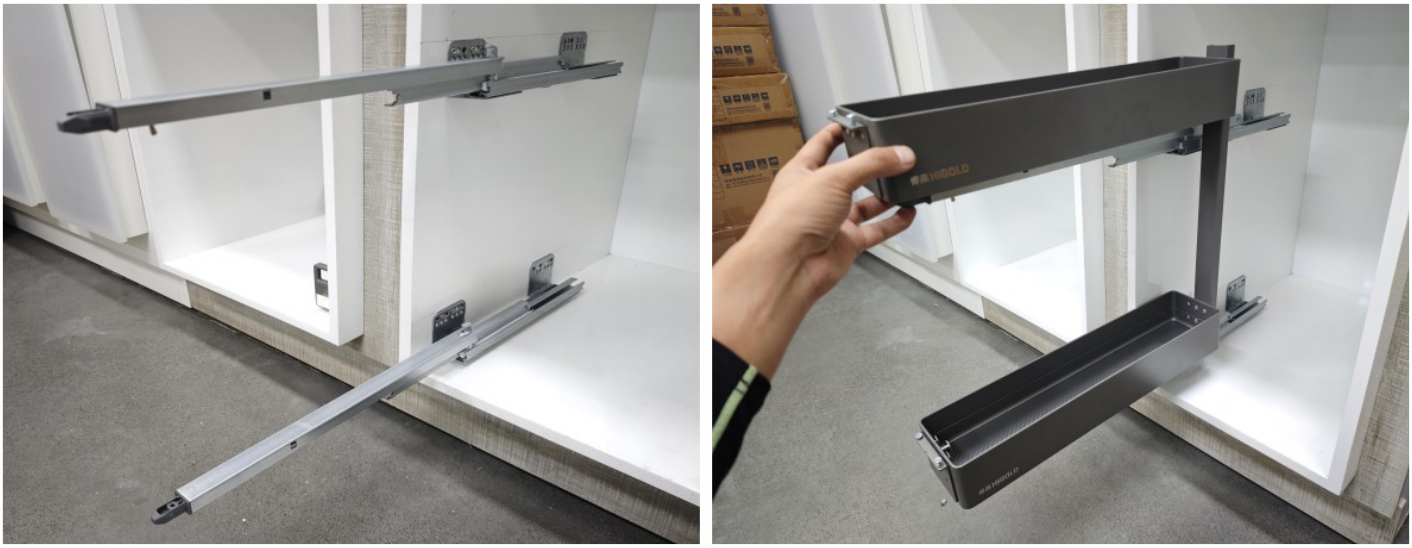

Pull out the upper and lower slides and place the basket on the slides.

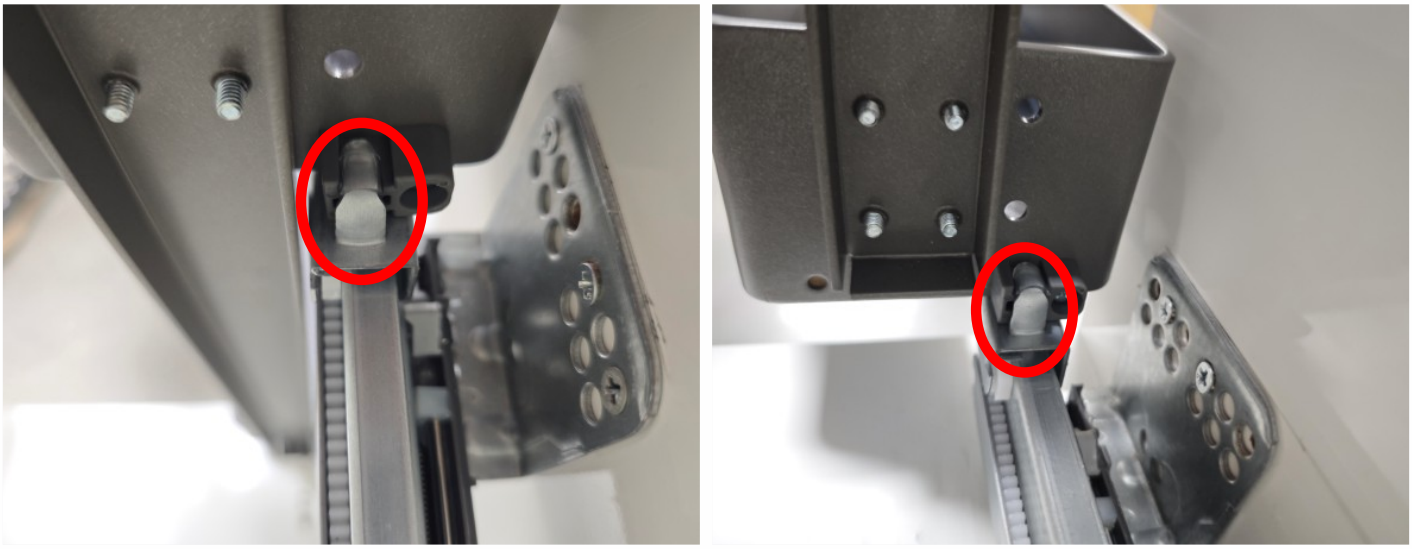

Adjust the basket and insert the tail hook of the slide into the groove at the rear end of the basket (up/down).

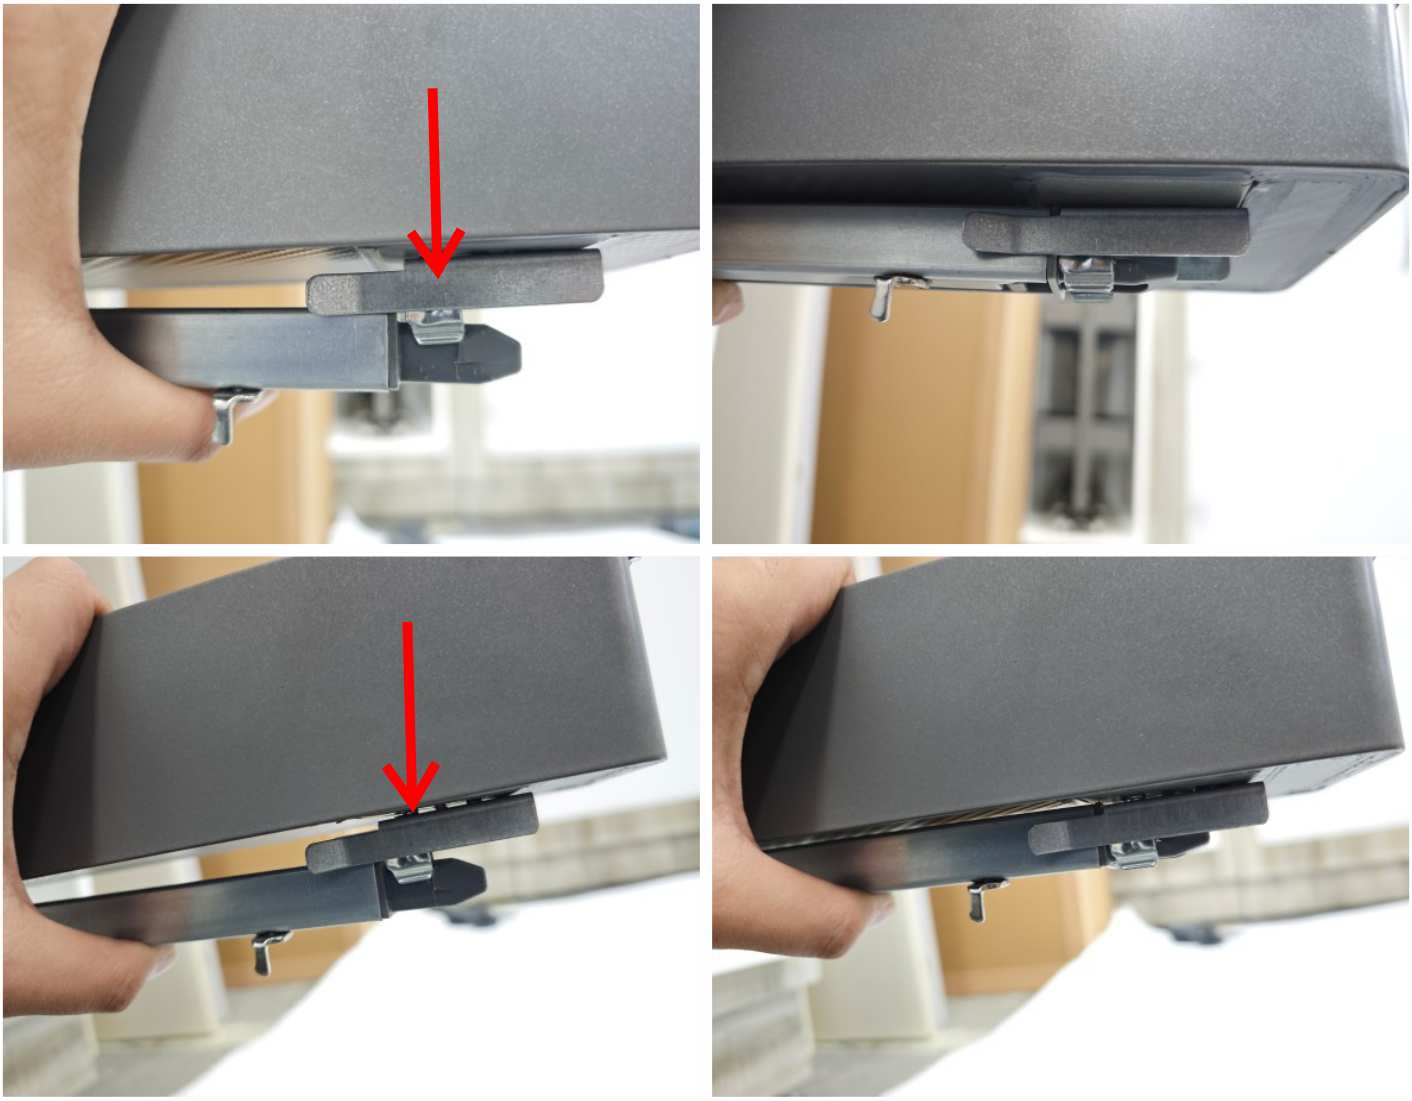

Align the front buckle of the basket body and press down to clamp the front end of the slide (up/down).

Basket installation is completed.

STEP

- 05 -

Door Panel Fixing Installation

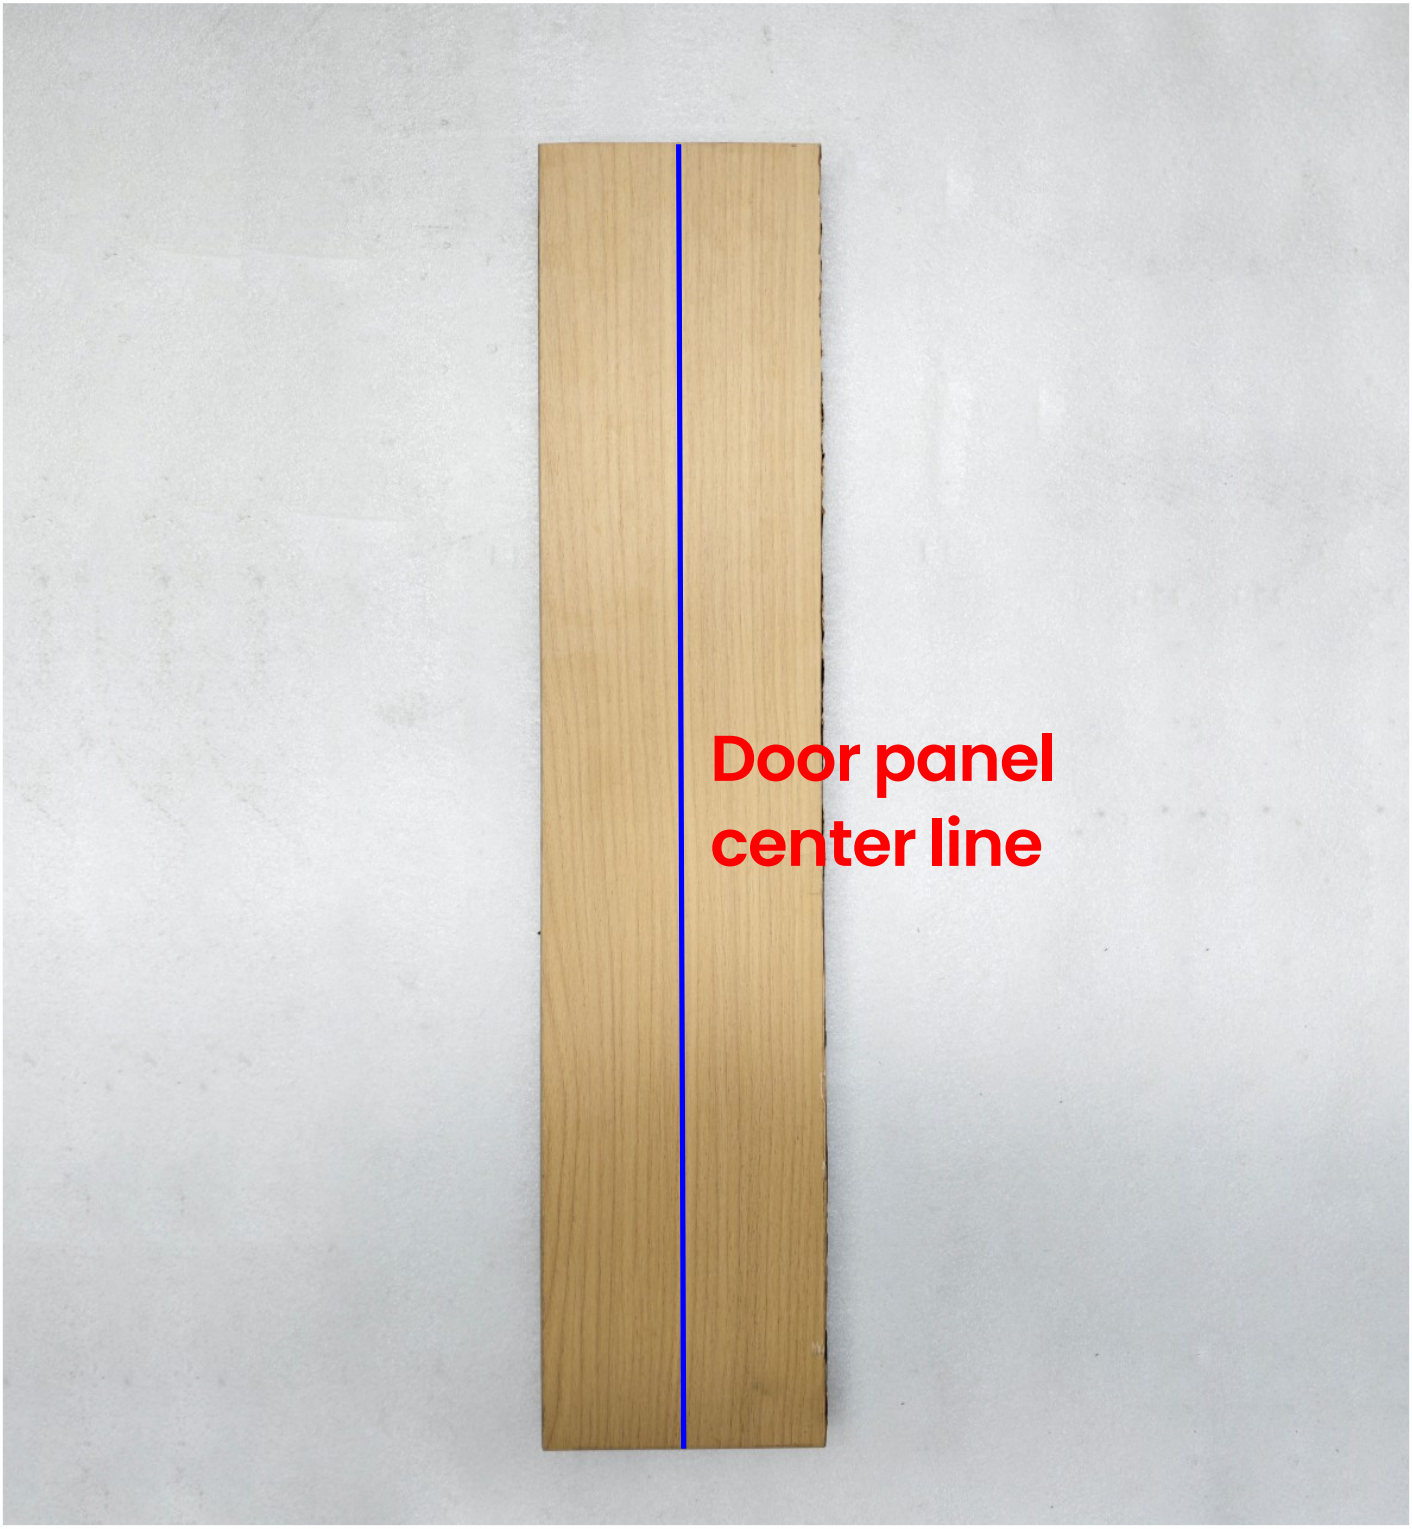

Measure and mark the center line of the door panel.

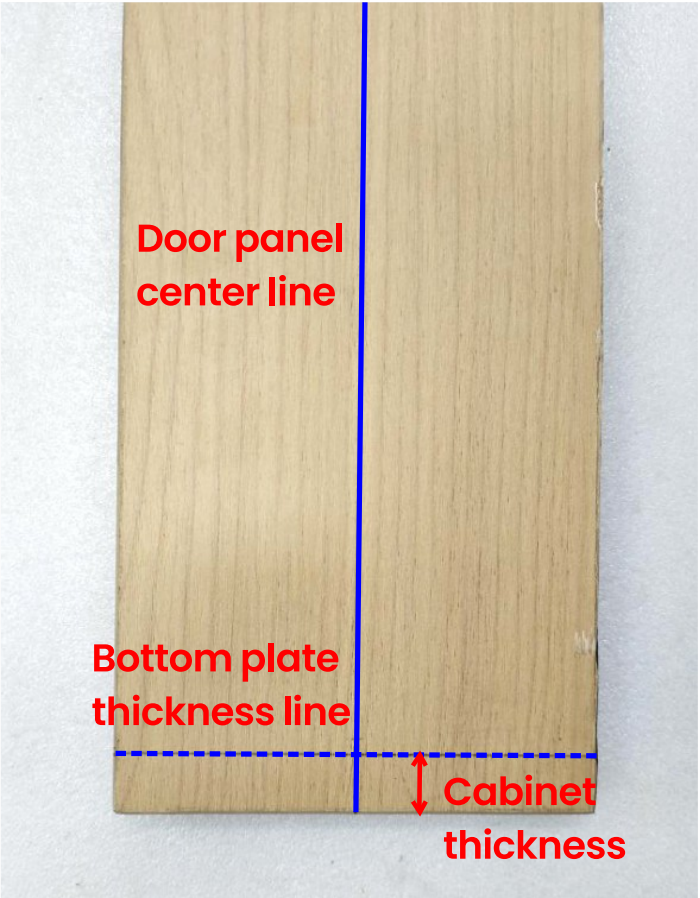

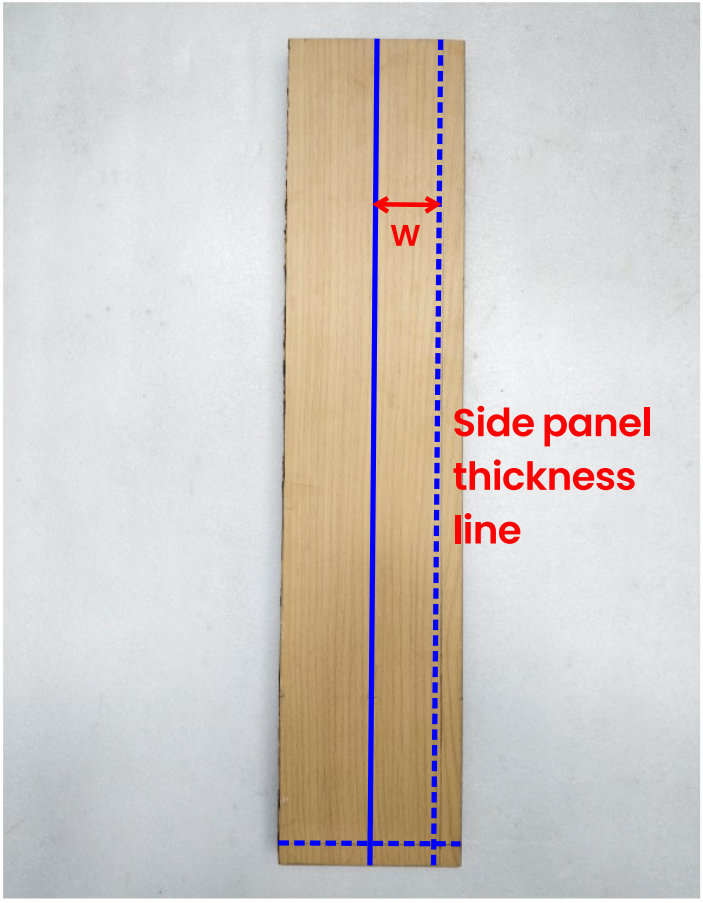

Measure and mark the bottom and side board thickness lines (Note: the left-mounted side board thickness line is on the right, the right-mounted side board thickness line is on the left, W: 150 cabinet 57mm, 200 cabinet = 82mm).

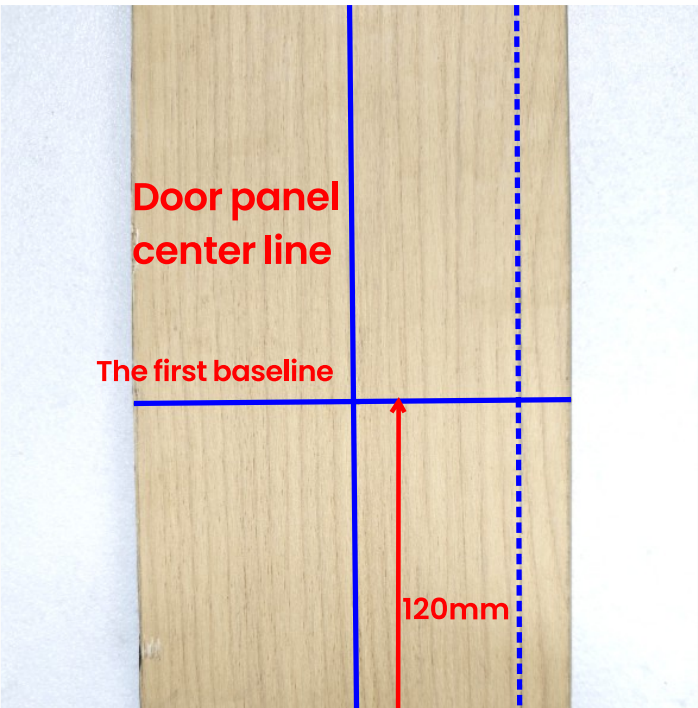

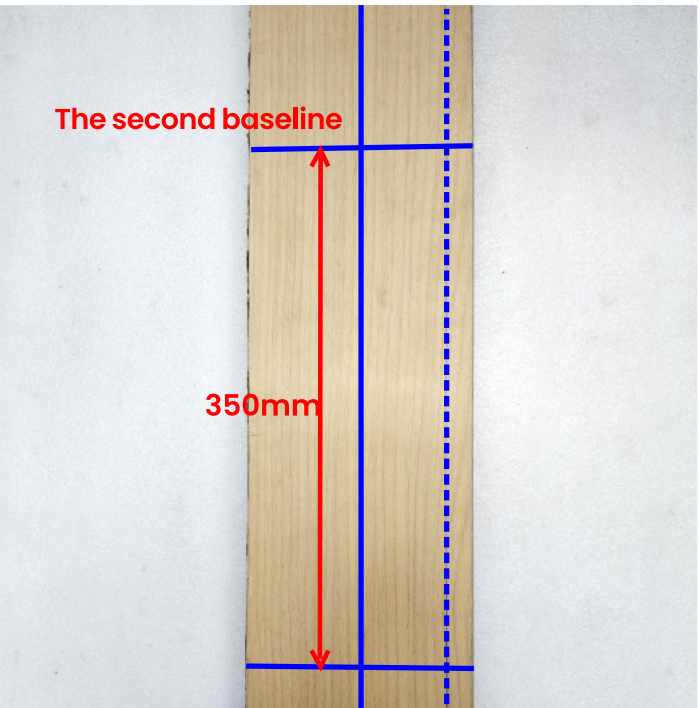

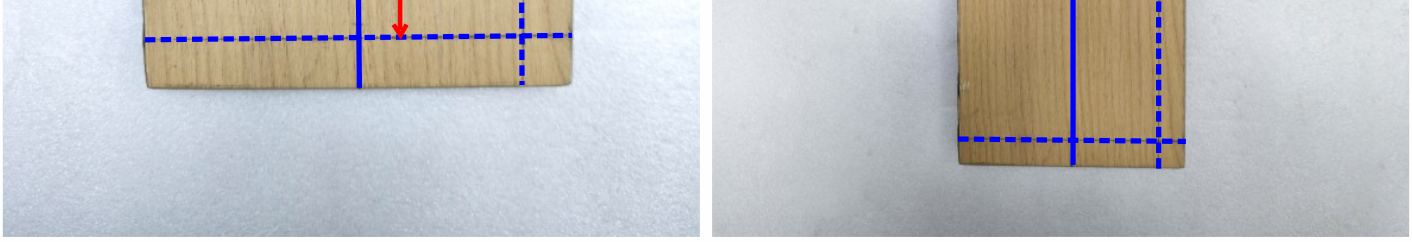

Take the first reference line at a height of 120mm from the bottom plate thickness line, measure the height and draw a line mark;

Take the second reference line at a height of 350mm from the first reference line, measure the height and draw a line mark.

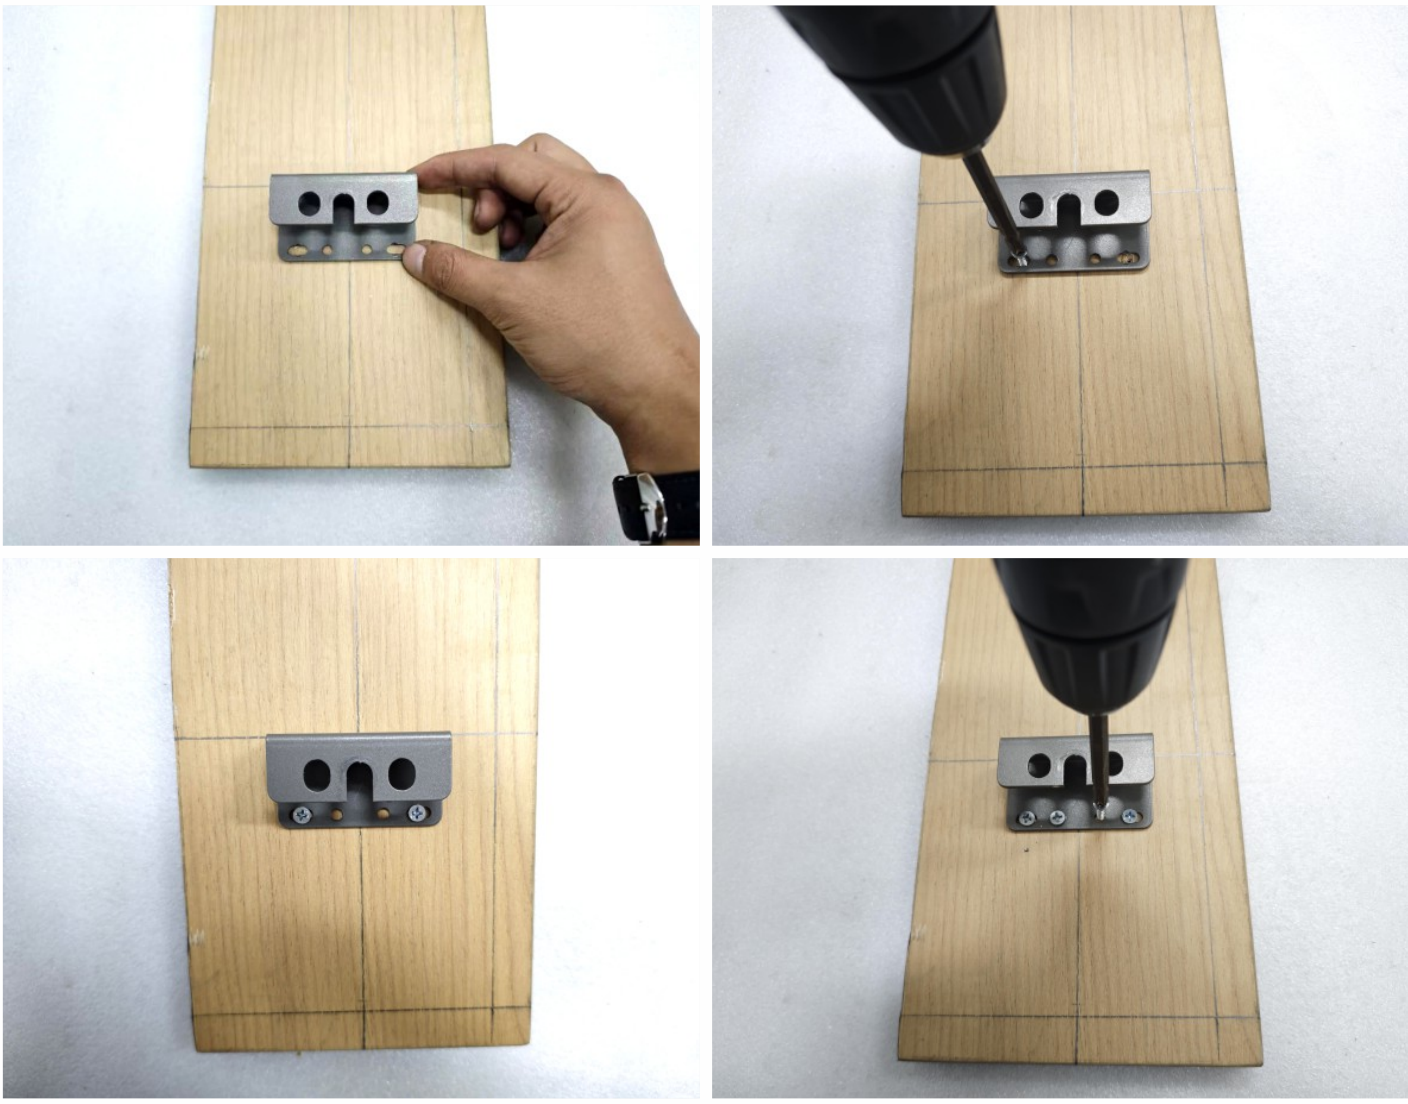

Align the top of the door panel fixing with the first reference line, and the center line with the center line of the door panel, and use 4 ST 4.0*16mm self-tapping screws to lock and fix (recommendation: firstly lock the screws in the adjustable holes on both sides, adjust them to the center position, and then tighten the other screws).

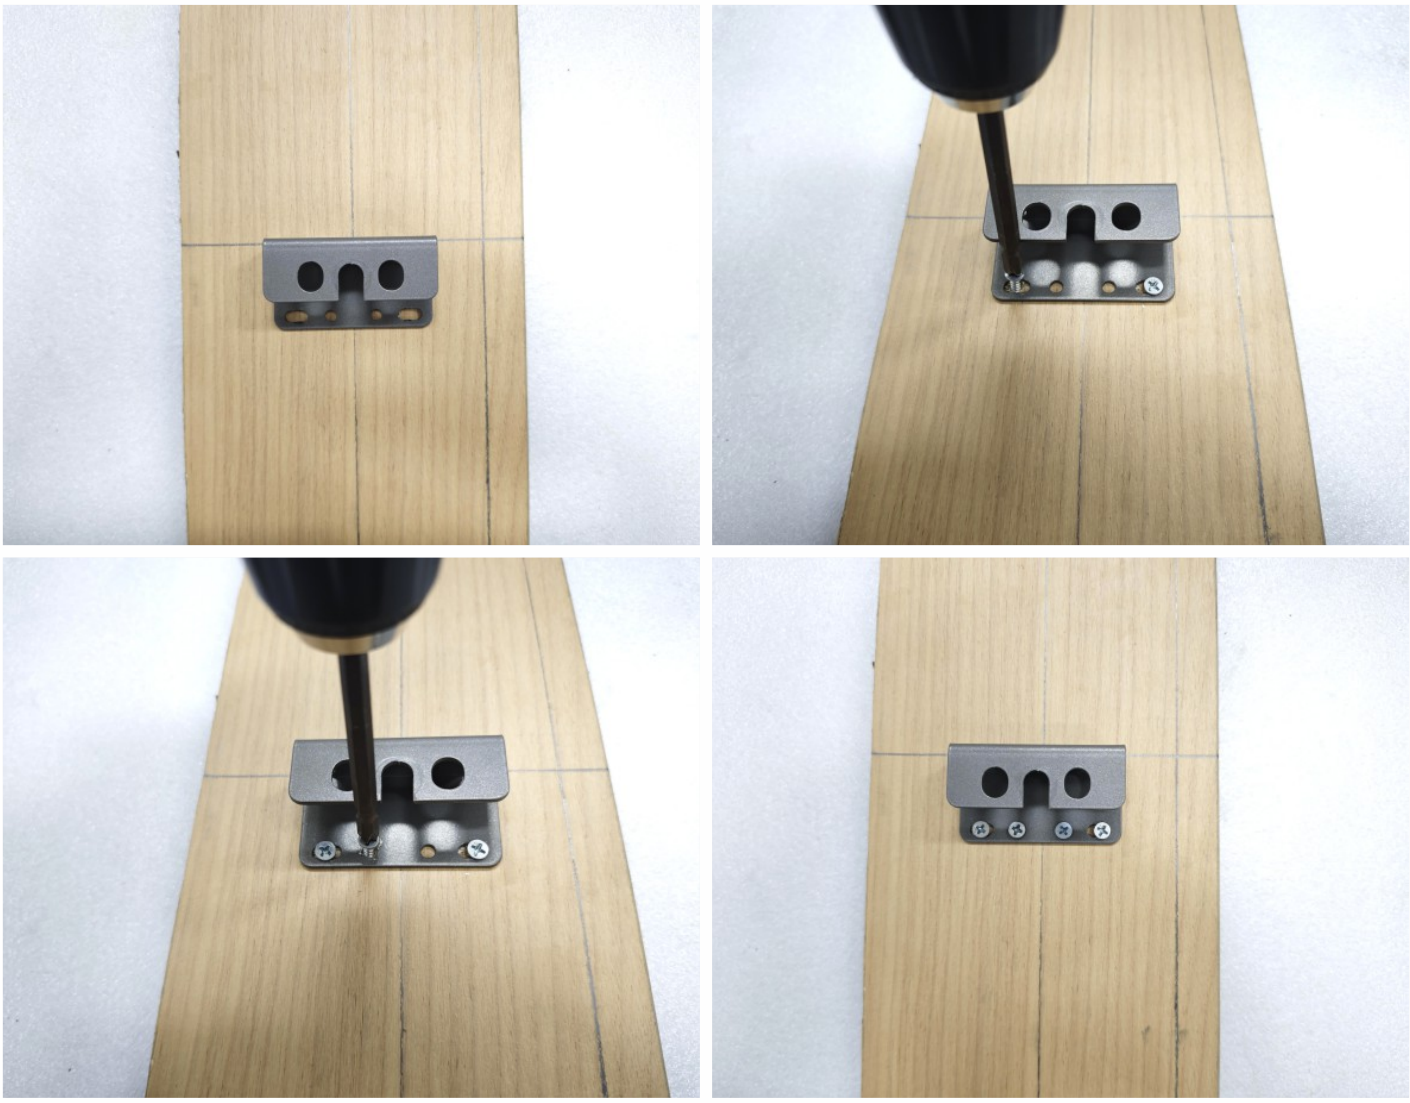

Similarly, align the second reference line with the center line of the door panel, and use 4 ST4.0*16mm self-tapping screws to tighten the other door panel fixings.

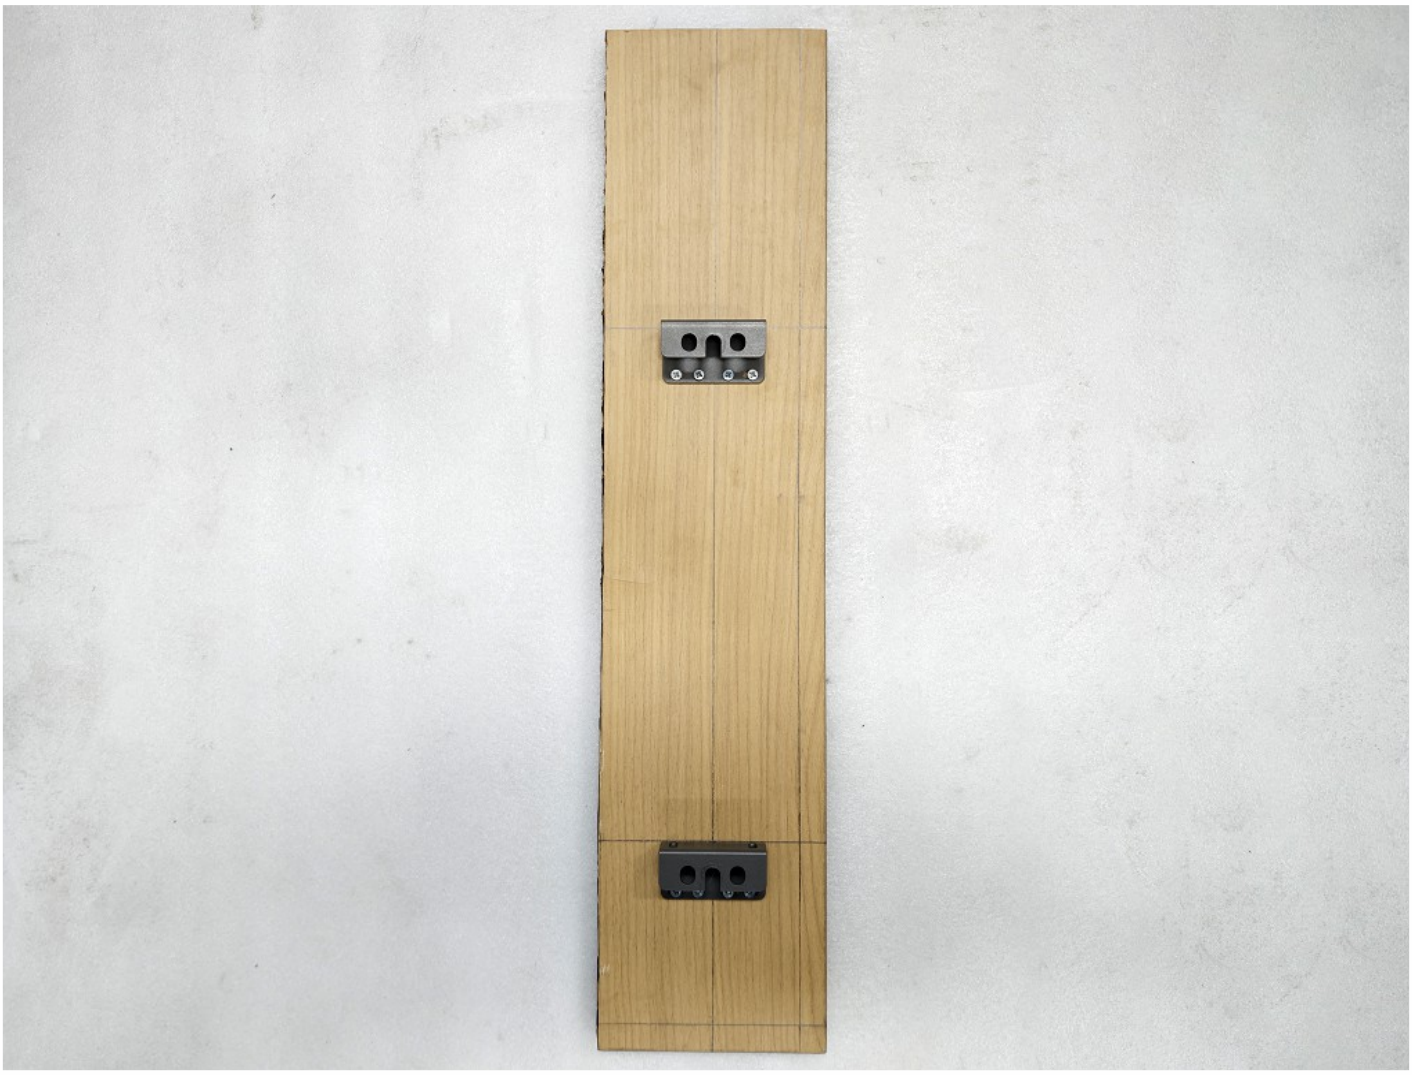

Erase the line drawing marks and the installation of the door panel fixings is completed.

STEP

- 06 -

Door Panel Installation

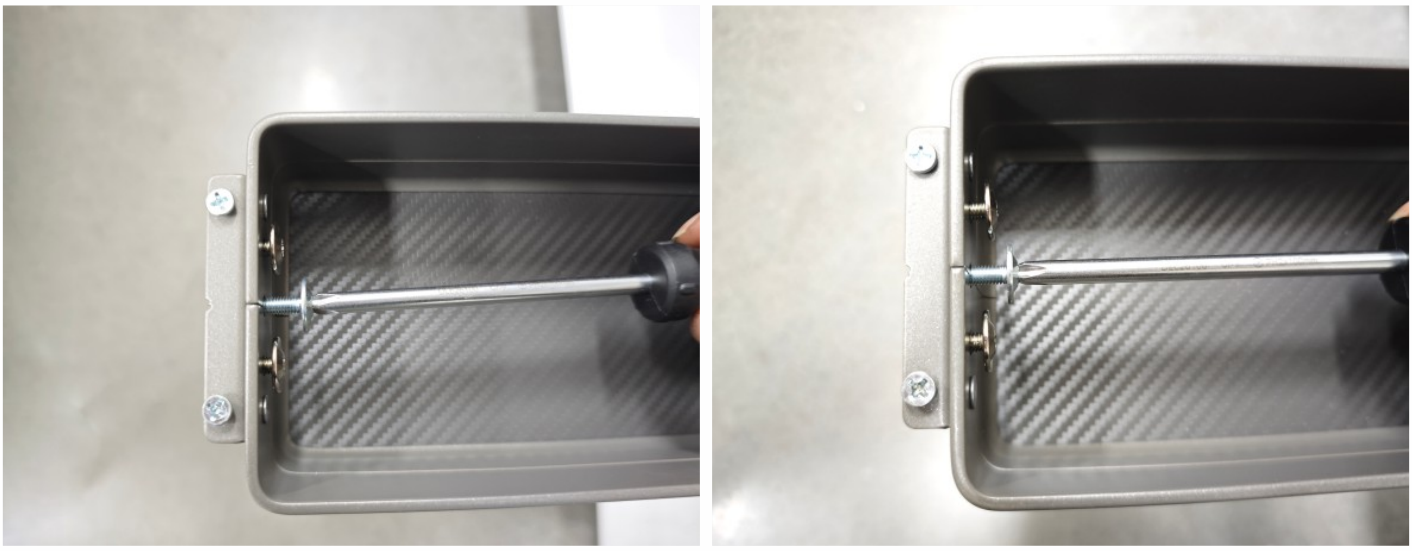

Unscrew the M5*18mm screws pre-installed on the front of the basket to a certain length (up/down).

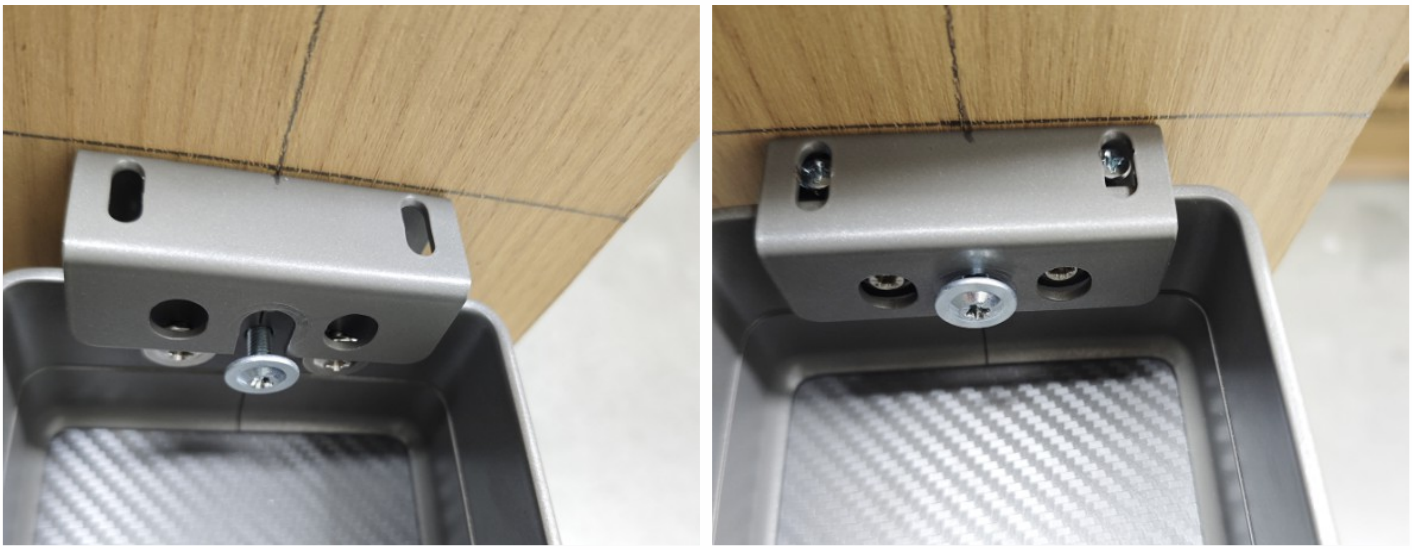

Adjust the position of the door fixings and hang the door fixings into the front of the basket (up/down).

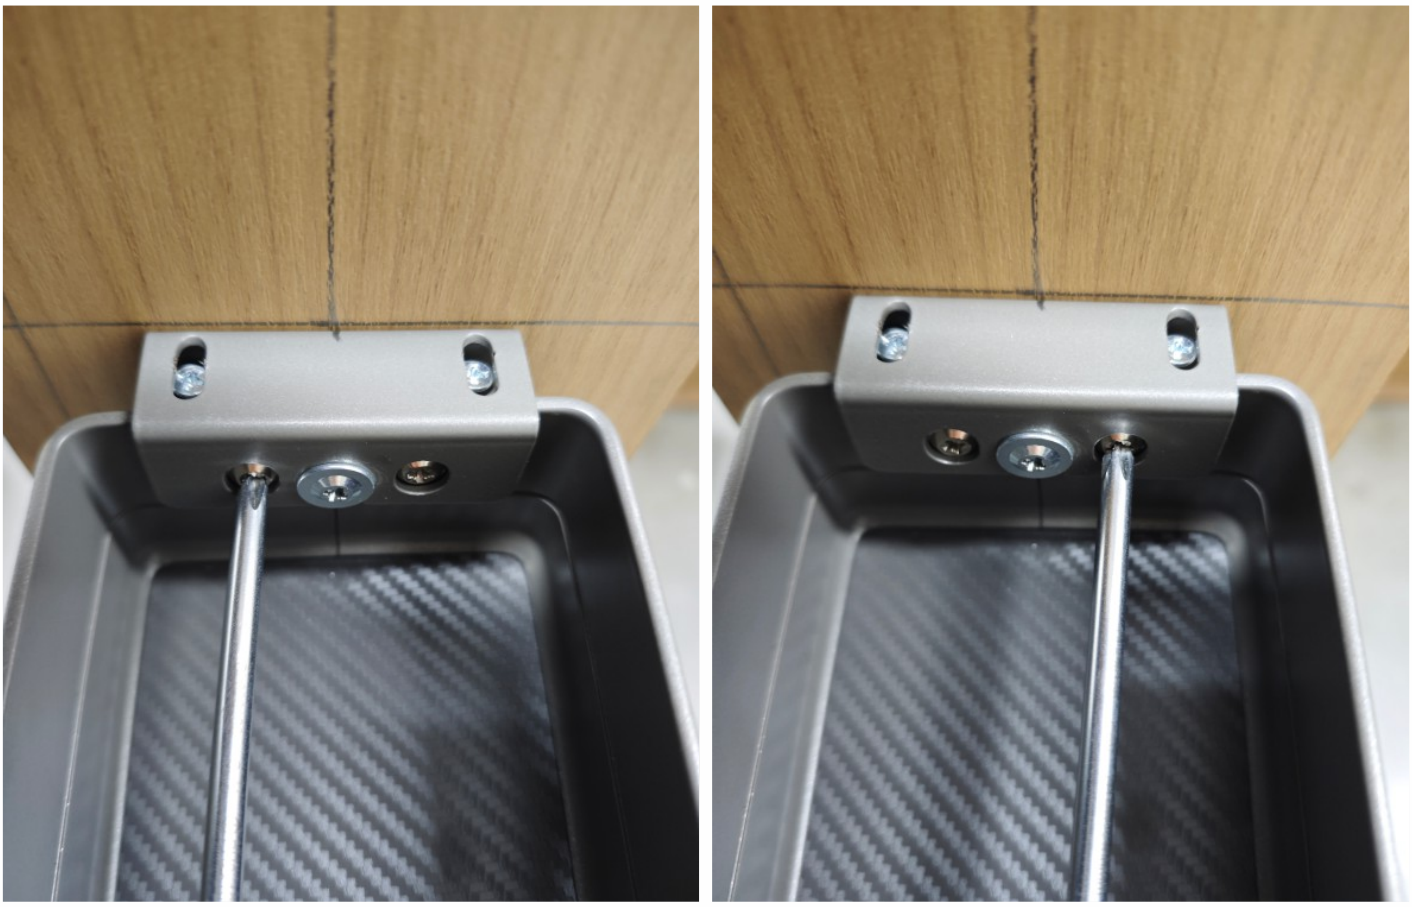

Adjust the inner screws on the left and right sides of the door panel fixings to adjust the door panel tilt angle (up/down).

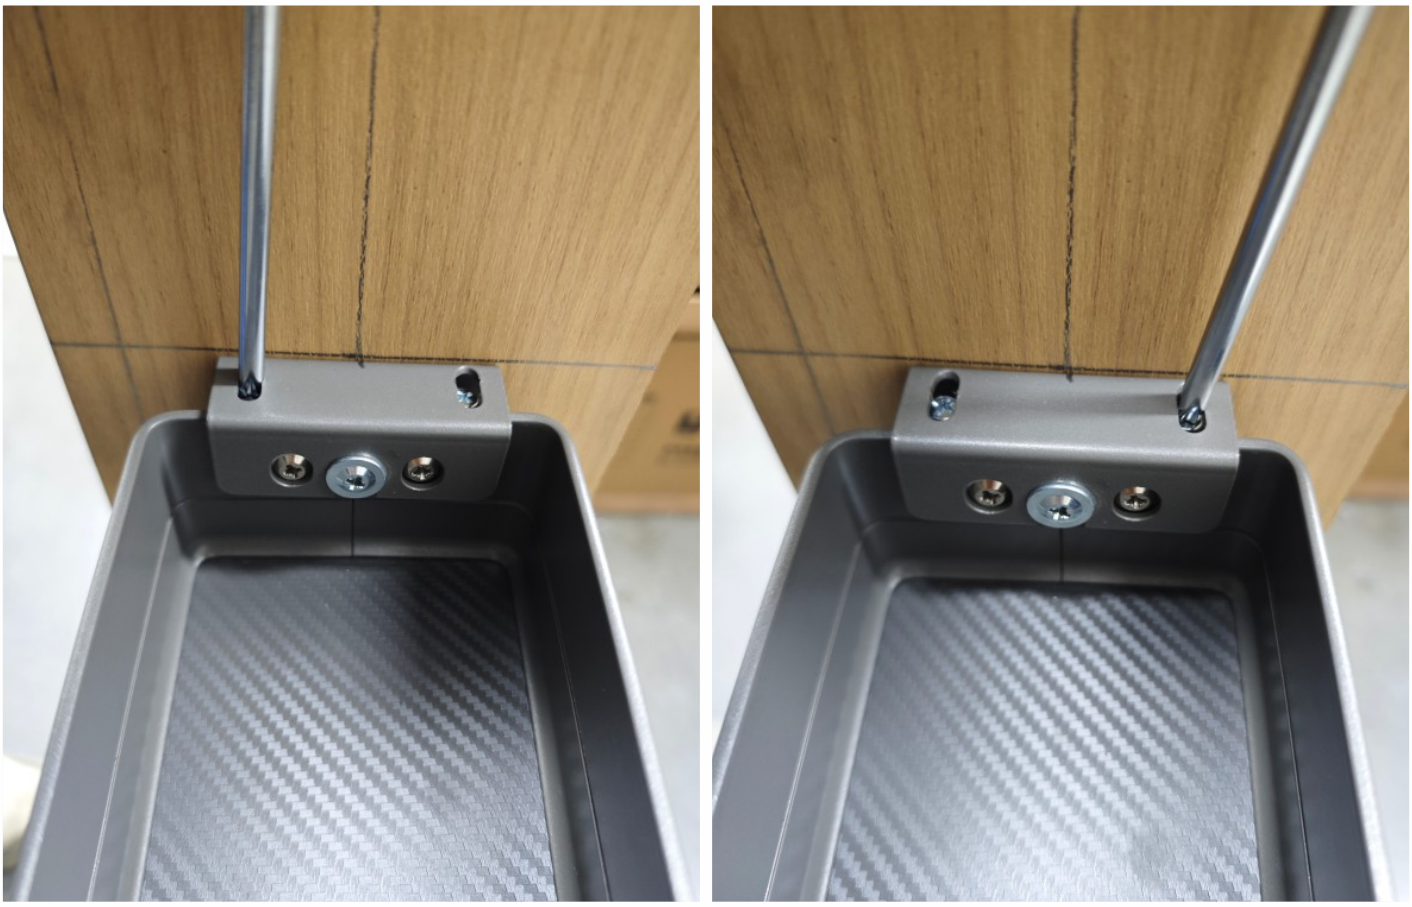

Adjust the inner screws on both sides of the top of the door panel fixings to adjust the door panel height (up/down).

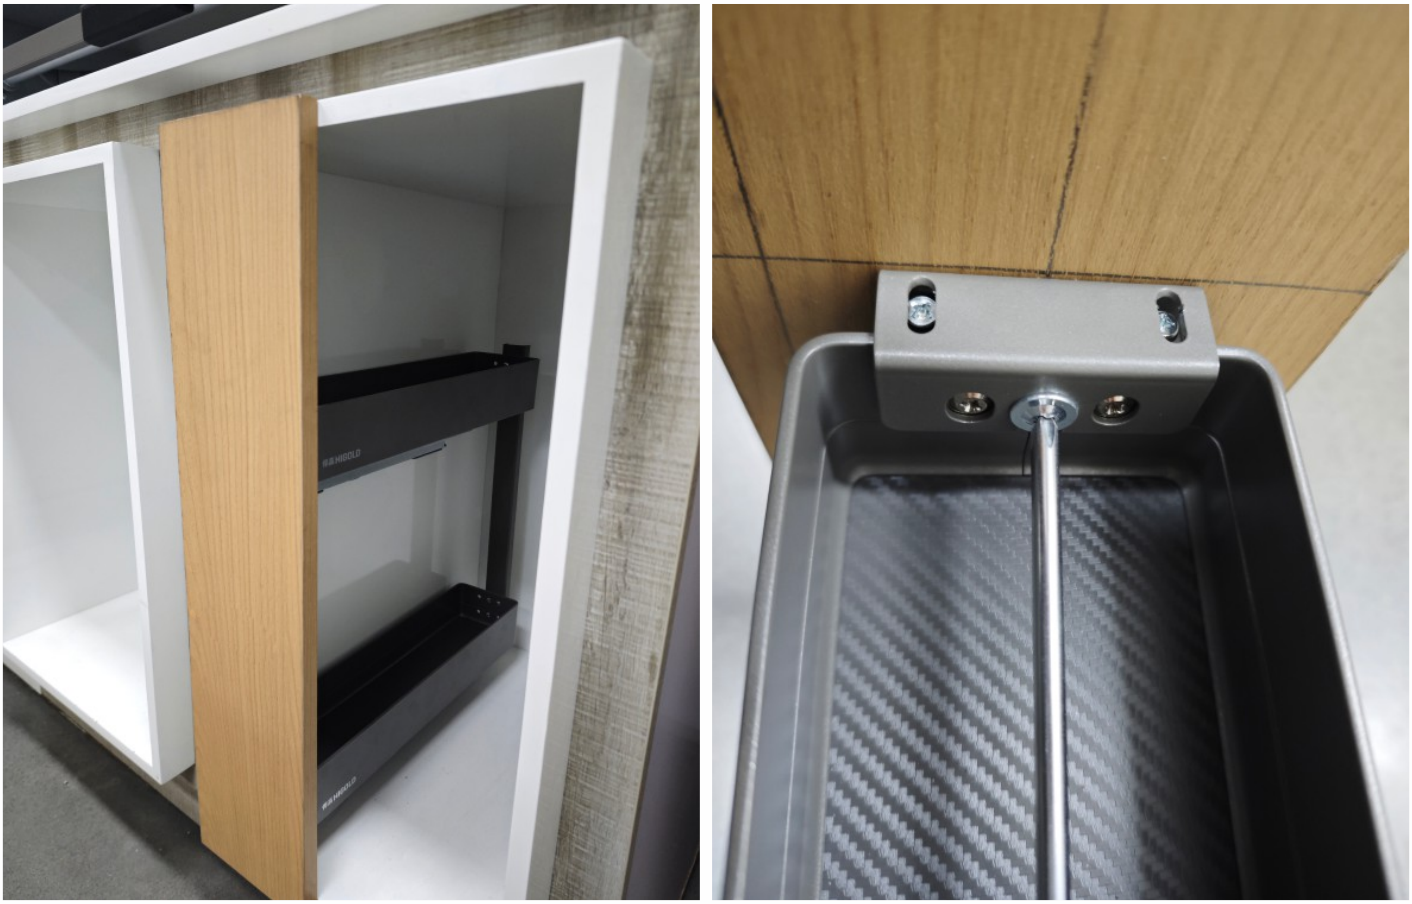

You can use your hands to adjust the door panel left and right, up and down, until the door panel fits tightly and flush with the cabinet, and then tighten the M5*18mm screws (up/down) at the front end of the basket.

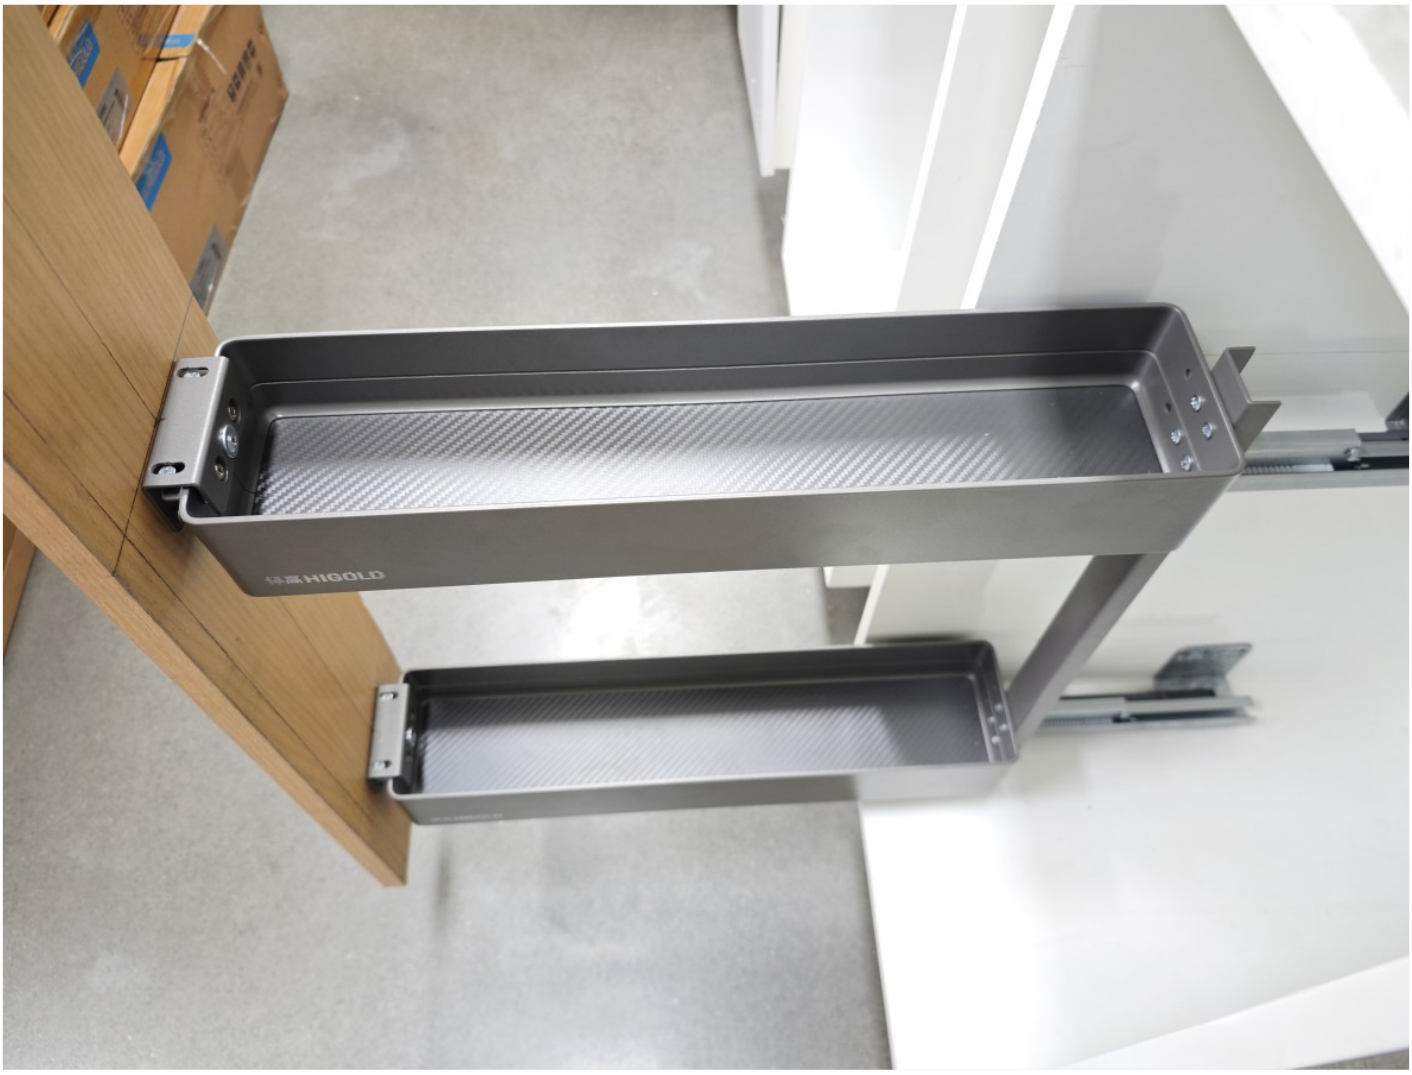

Door panel installation is completed.

STEP

· 07 ·

Accessories Installation

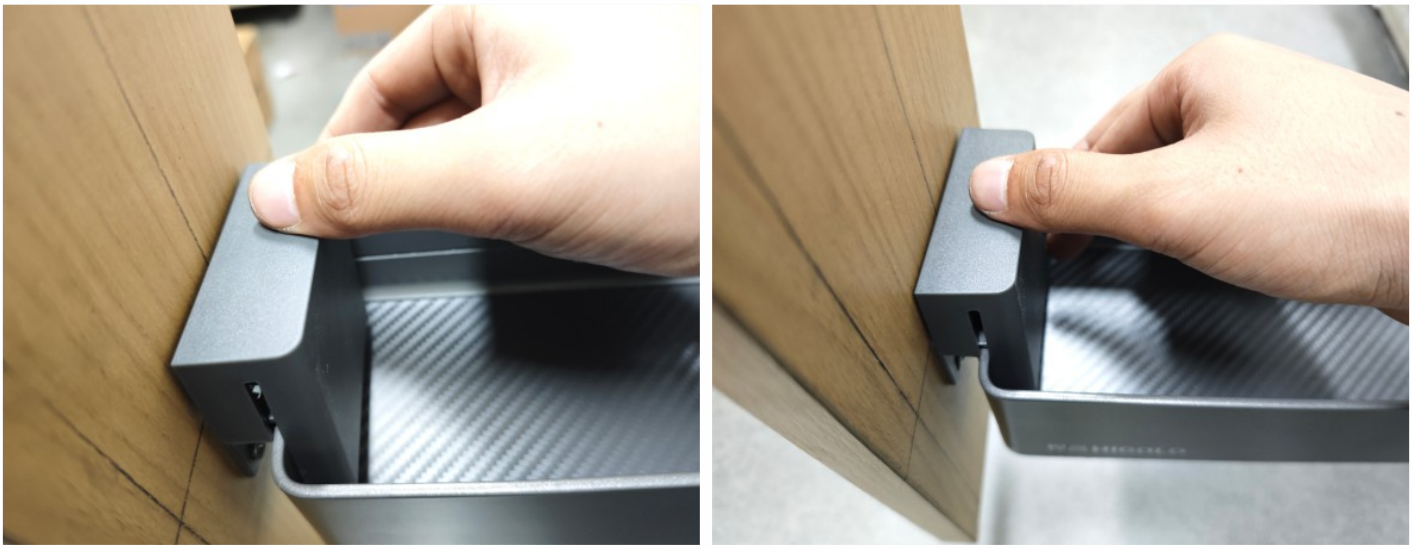

Install the front decorative piece, snap it down in the right position (top/bottom).

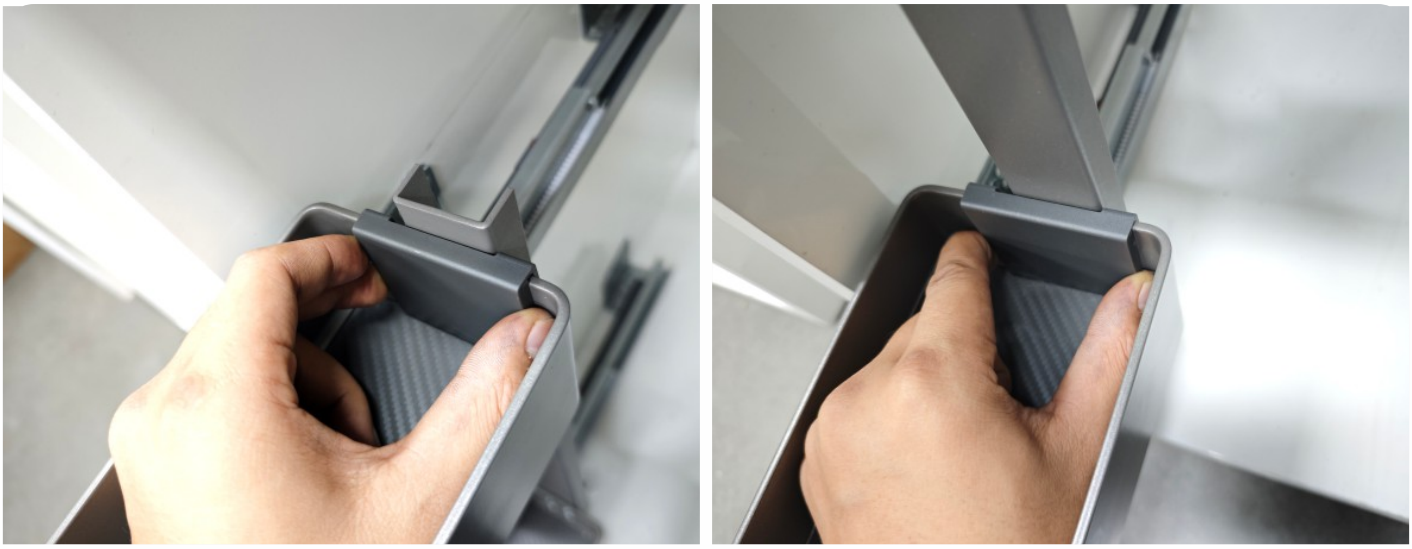

Install the rear decorative piece, snap it down in the right position(top/bottom).

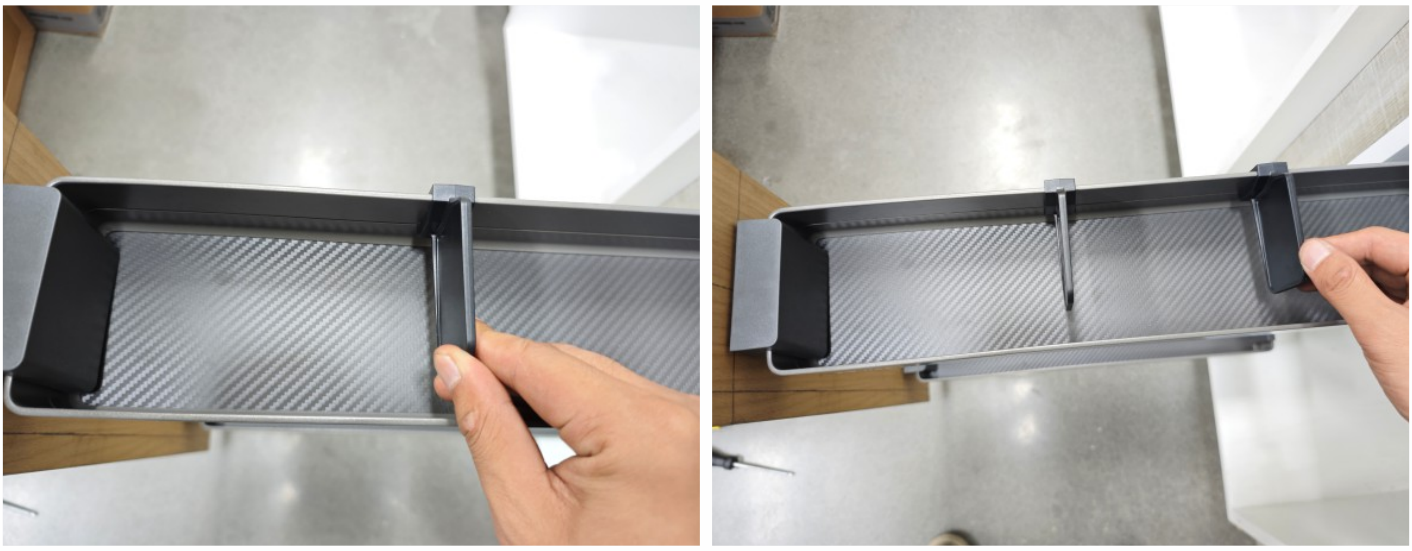

Align the dividers with the edge of the basket and snap them into place.

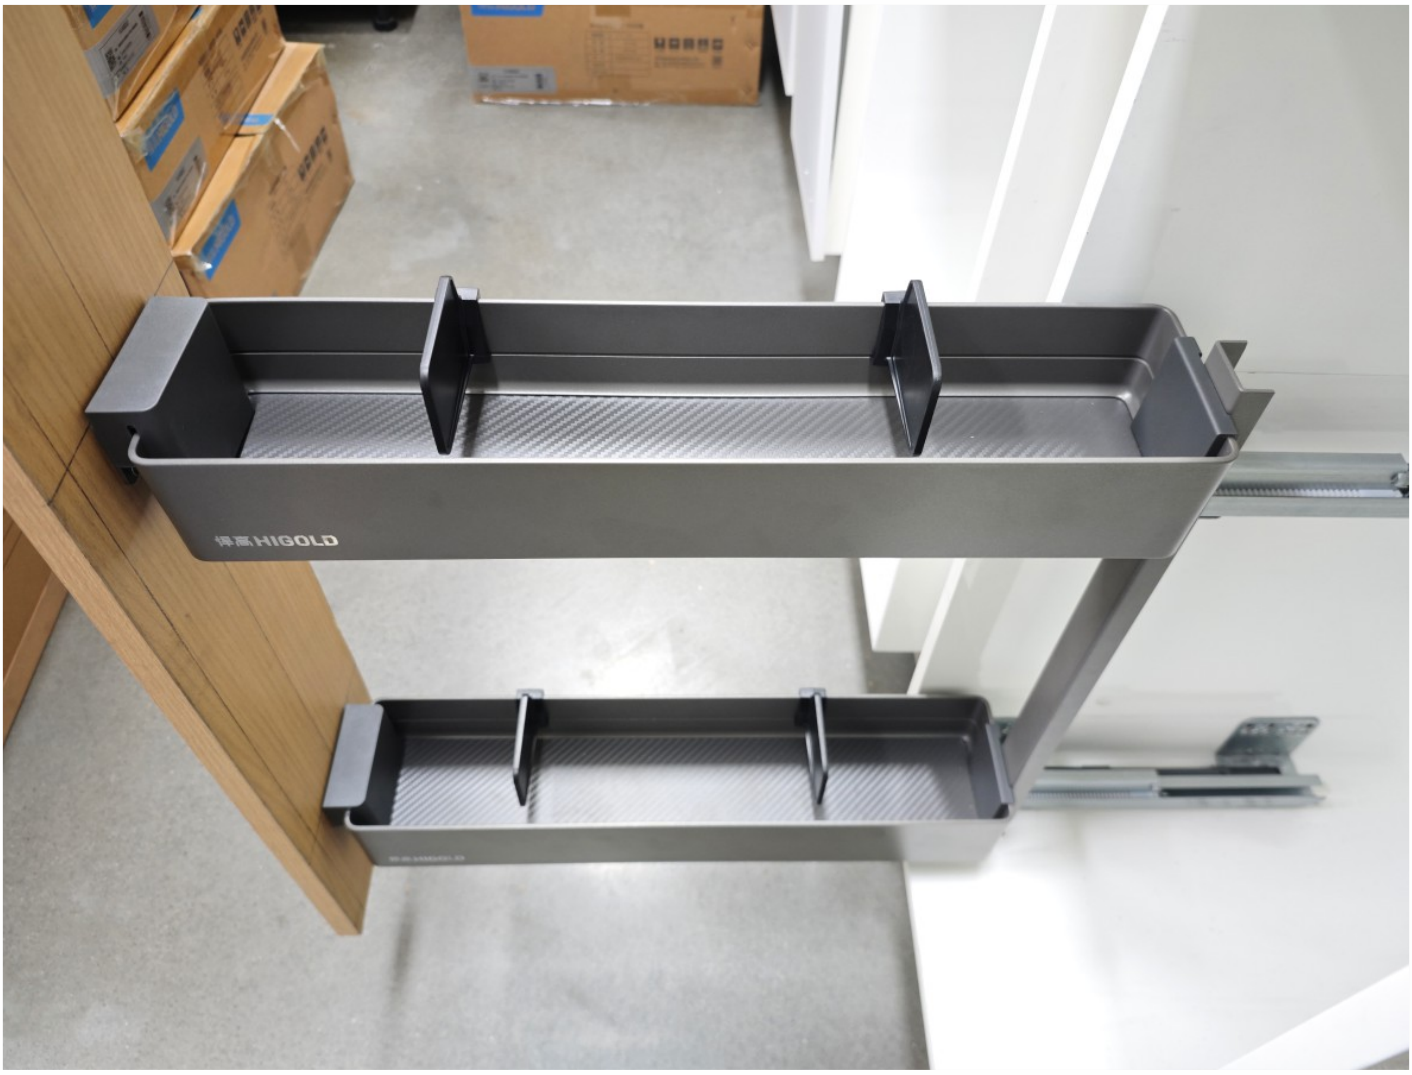

Installation of SHEARER 2.0 series narrow pull-out basket is completed.

HIGOLD®

Original Design & Quality

reddot award 2025 winner
reddot award 2025 winner
reddot award 2024 winner
reddot award 2024 winner
reddot award 2024 winner
reddot award 2023 winner
reddot award 2023 winner
reddot award 2022 winner
reddot award 2022 winner
reddot award 2021 winner
reddot award 2018 winner
reddot award 2017 winner
reddot award 2014 winner

2025 Design Award
2025 Design Award
Design Award 2025
Design Award 2025
Design Award 2025
Design Award 2024
Design Award 2024
Design Award 2024
Design Award 2023
Design Award 2023
Design Award 2023
Design Award 2022
Design Award 2022
Design Award 2022
Design Award 2021
Design Award 2021
Design Award 2020