HIGOLD®

SOFT CLOSE WATEBIN

Installation manual

SOFT CLOSE WATEBIN

HIGOLD®

Leading design Perfect experience. The beauty of industrial design!

Please note before installation

1. The minimum cabinet depth for embedded wastebin is 500mm, and the width is based on the cabinet size.
2. The following installation example is a 400 cabinet (with Angus slide rails). The installation parameters of each cabinet are slightly different, please refer to the installation instructions for

details.

STEP

· 01 ·

Accessories list

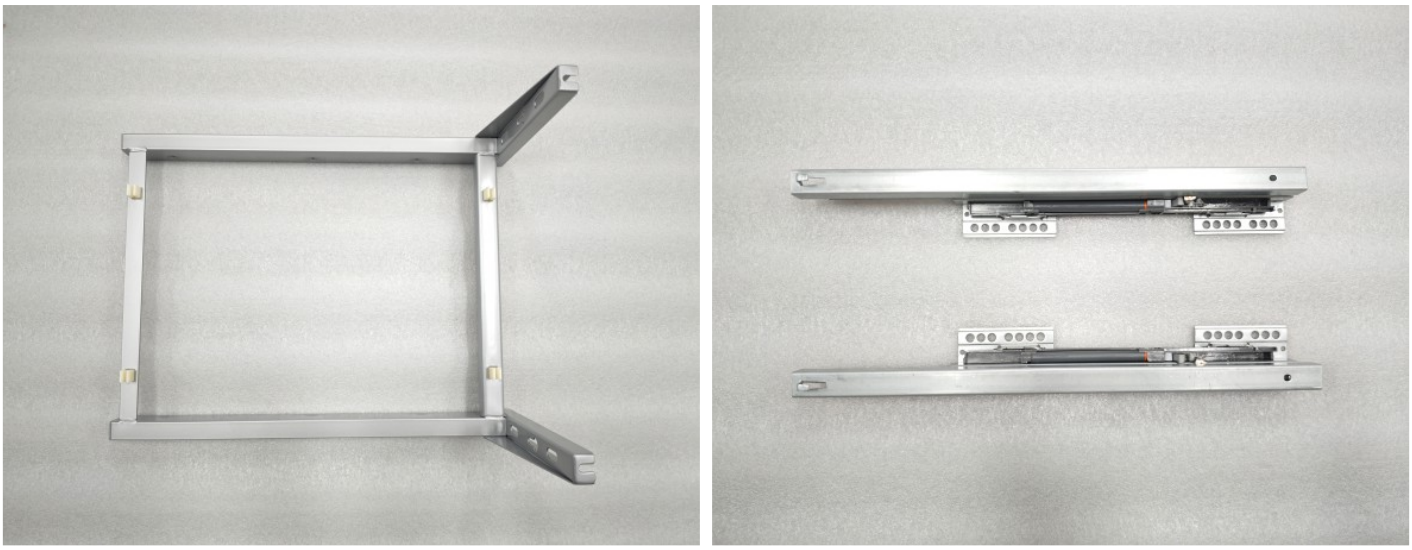

Frame*1, Slide rail*1 SET

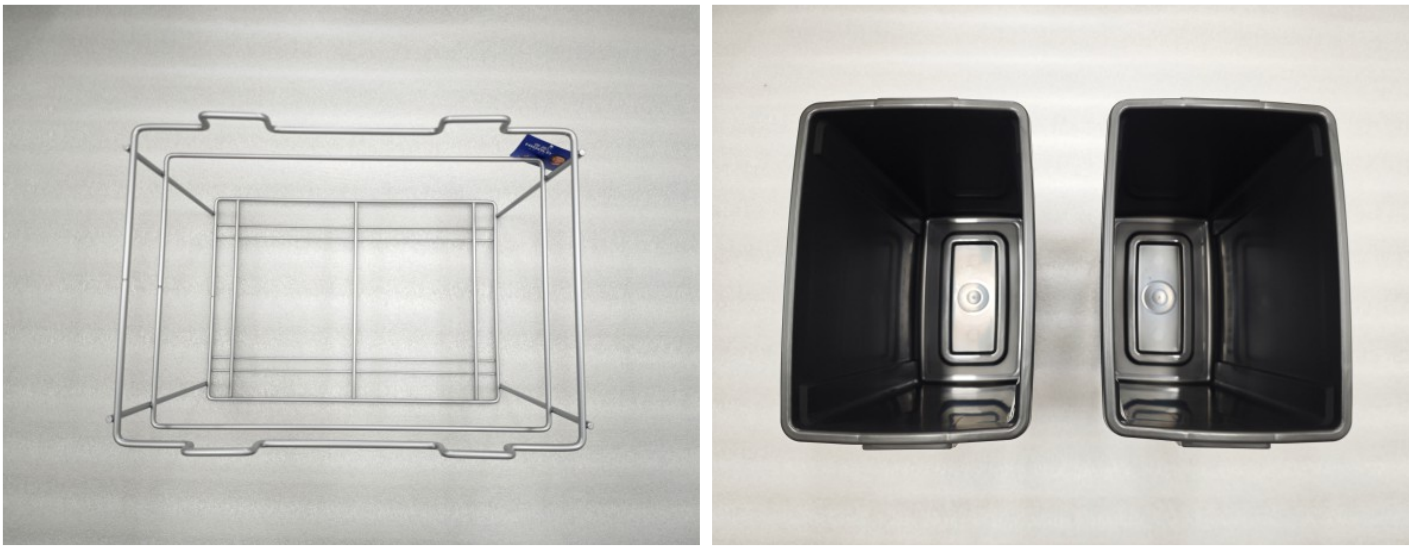

Basket Body*1, Wastebin*2

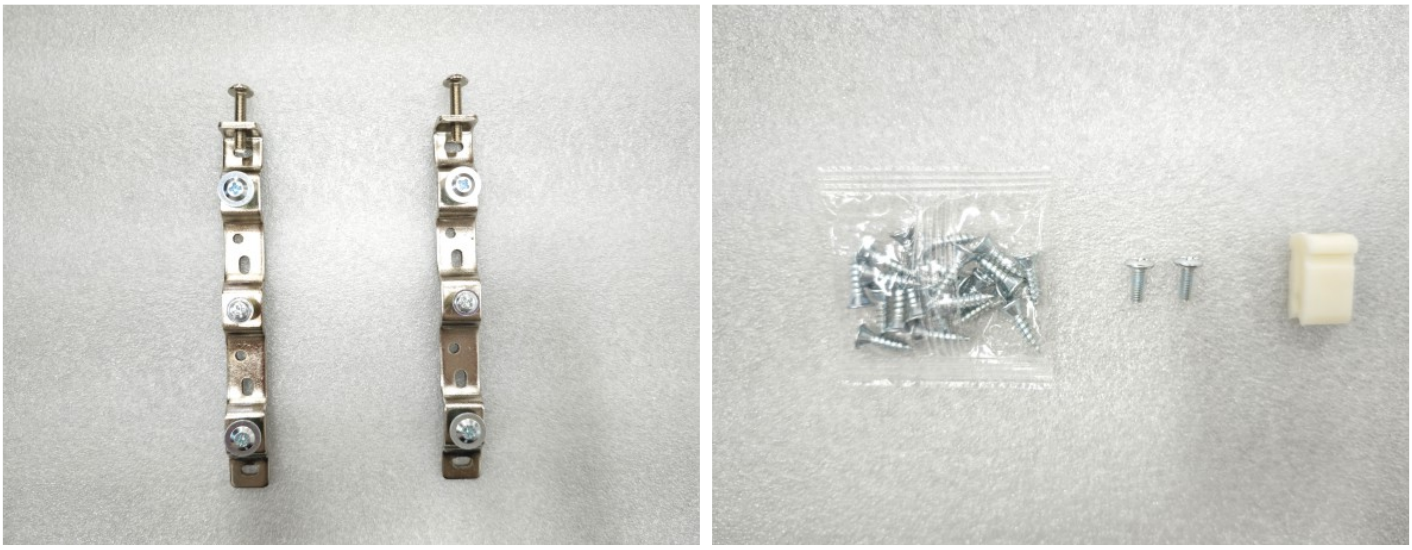

Door panel fixings*2, ST4.0*16mm self-tapping screws*20, M4*12mm screws*2, basket fixing clip*1 (spare)

STEP

- 02 -

Slide Rail Pre-installation

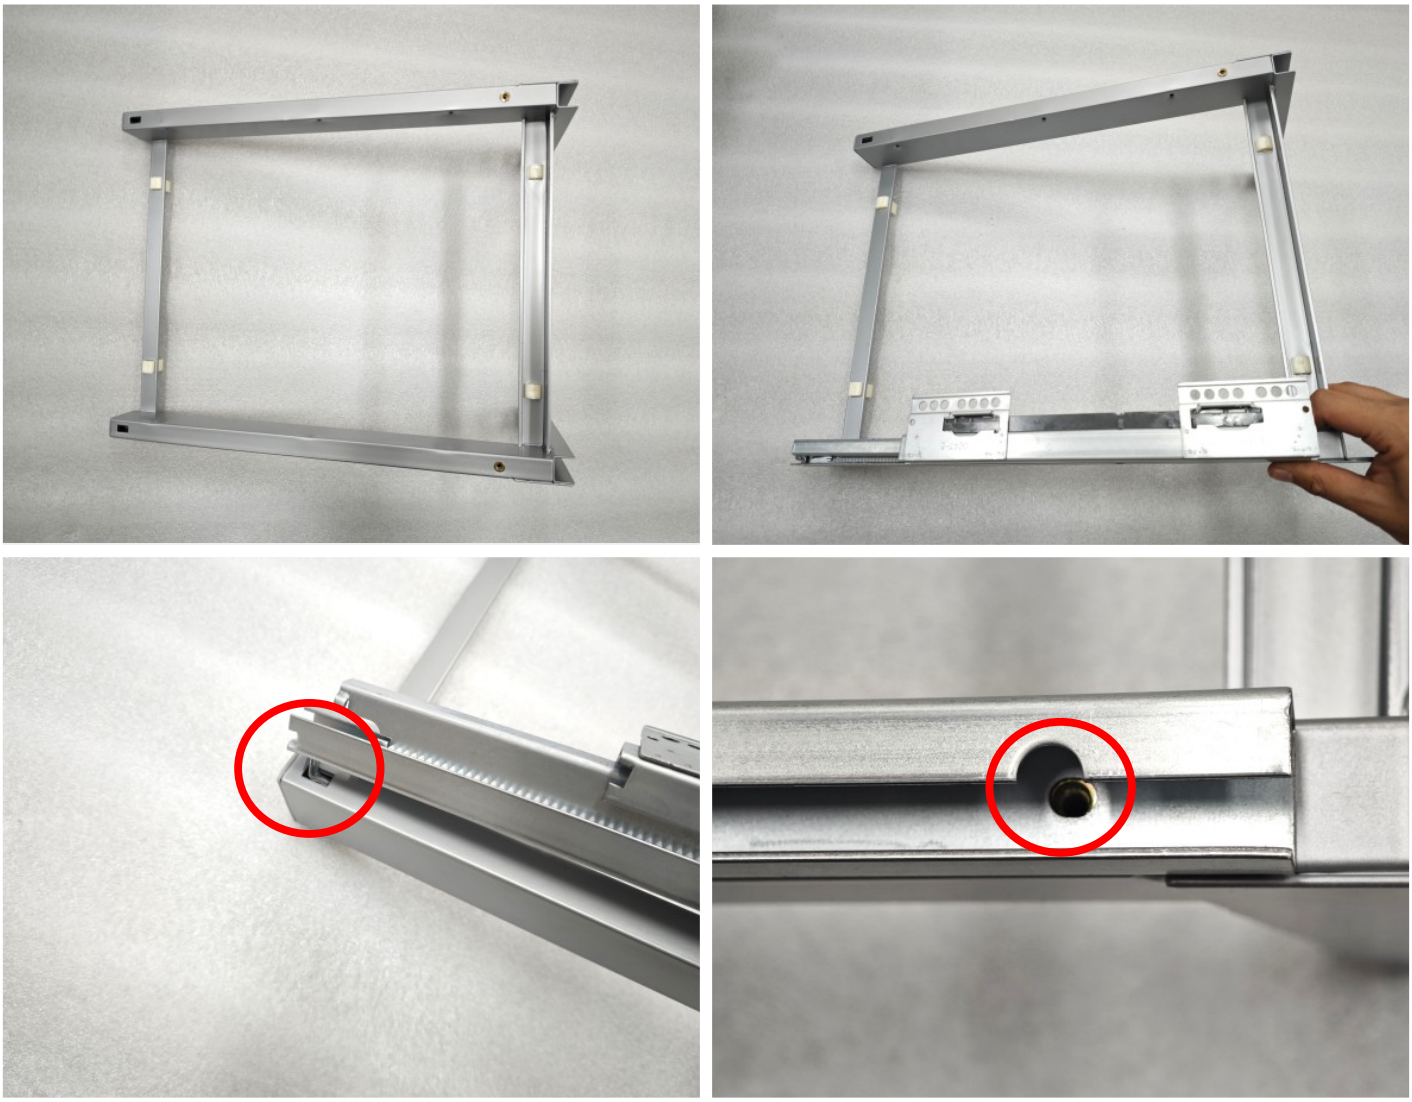

Turn the frame over, place the slide rail at the bottom of the frame, buckle the tail hook of the slide rail into the rear hole of the frame, then push out the slide rail, align the front hole of the slide rail with the front hole of the frame.

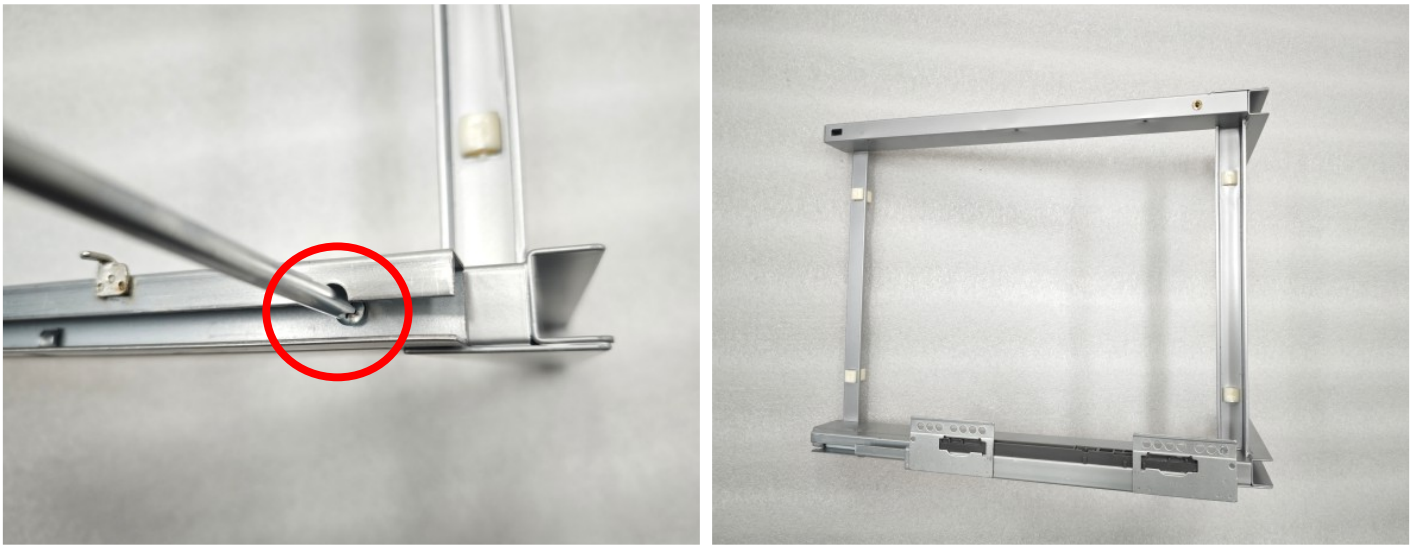

After the front hole of the slide rail is aligned with the front hole of the frame, use 1 M4*12mm screw to fix it.

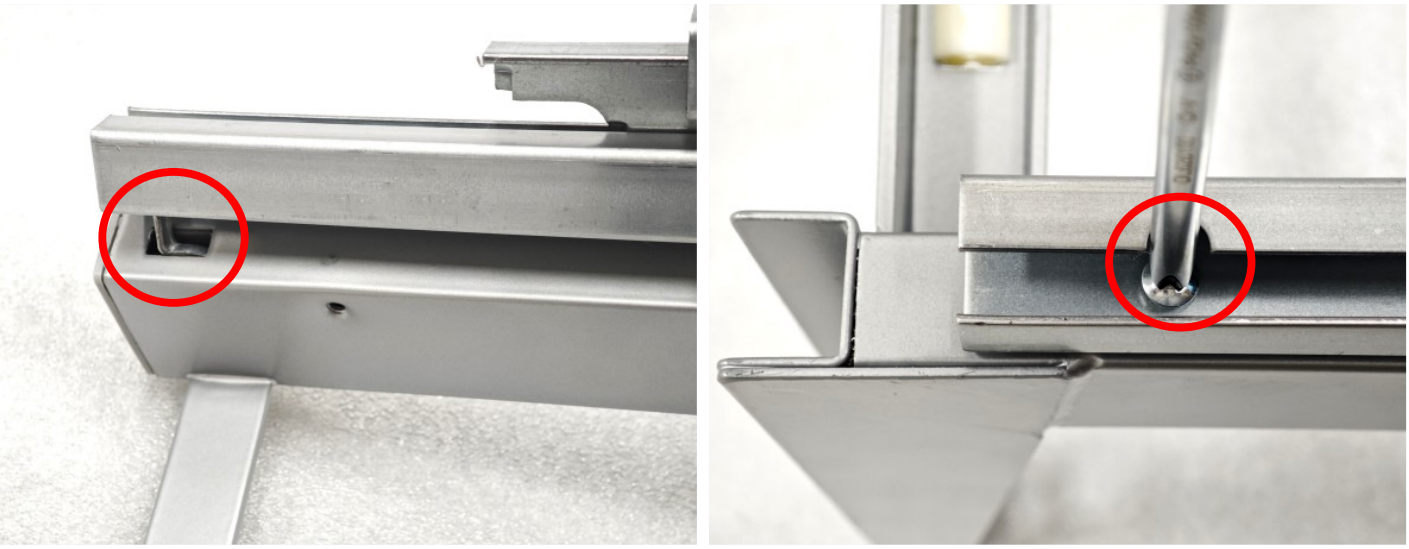

Fix the other side rail in the same way. The tail hook of the rail is buckled into the rear hole of the frame. Use an M4*12mm screw to fix the front hole of the rail.

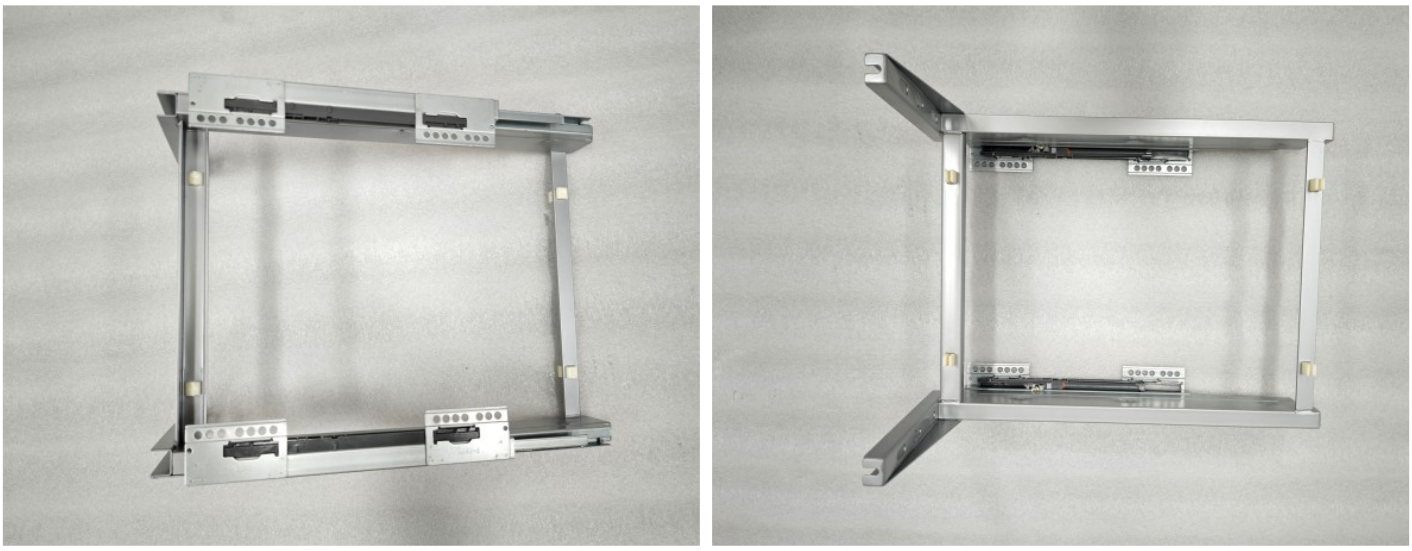

Slide rails pre-installed is completed.

STEP

- 03 -

The Frame Installation

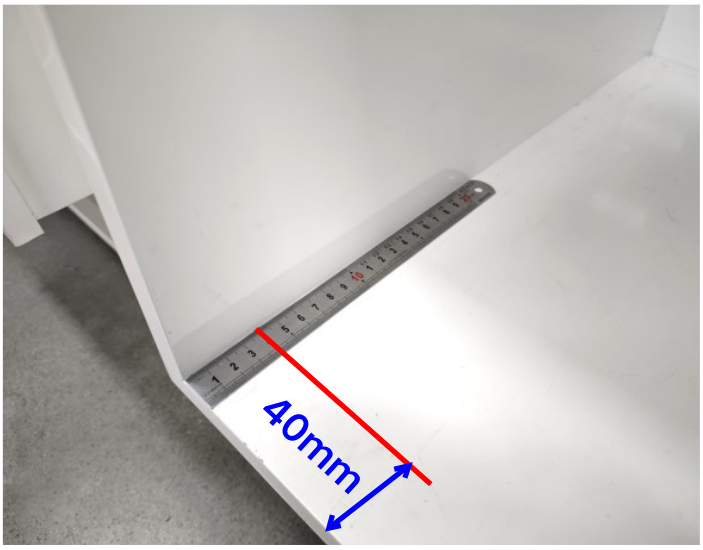

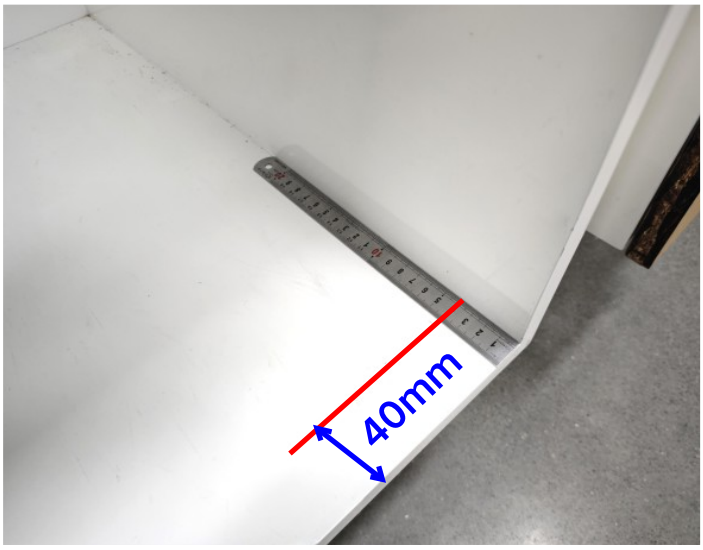

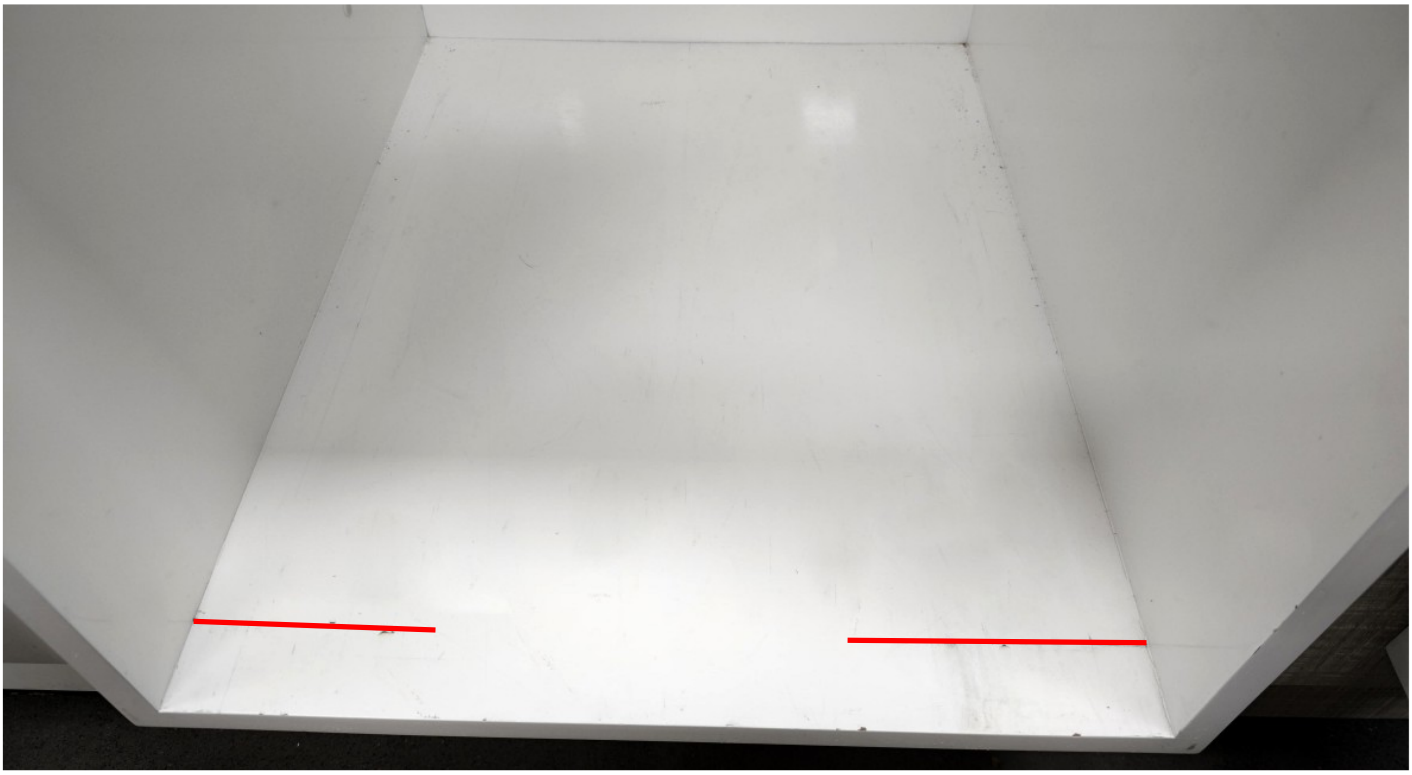

Take a reference line (left/right) perpendicular to the side of the cabinet bottom 40mm from the front edge of the cabinet bottom, measure the distance and draw a line mark.

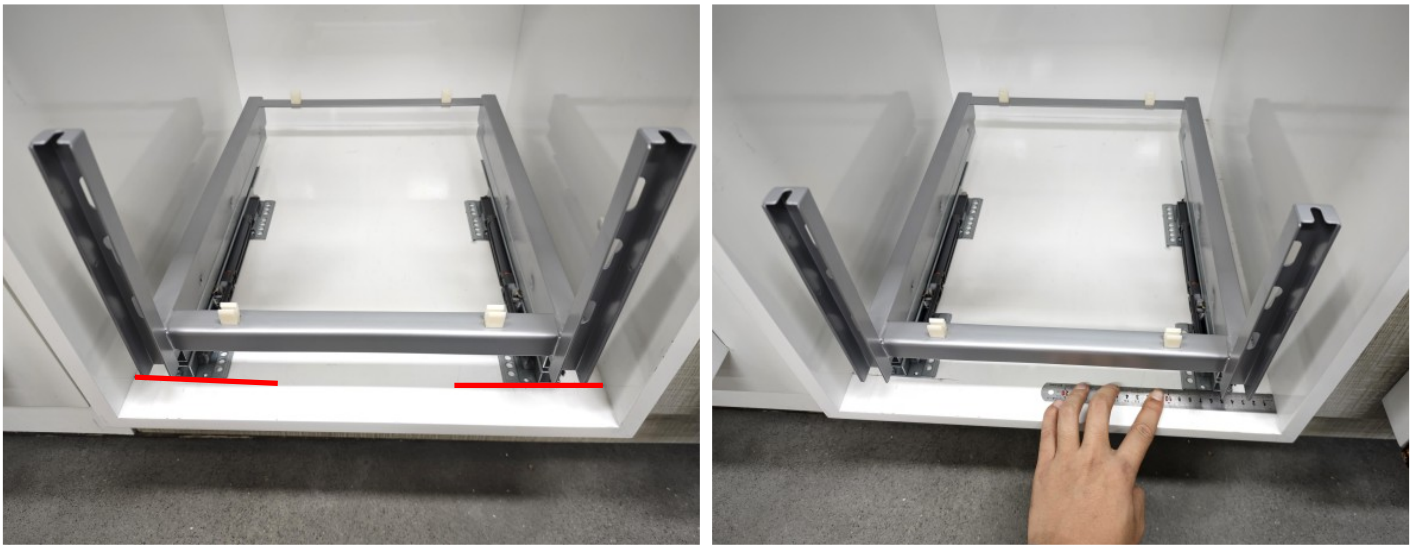

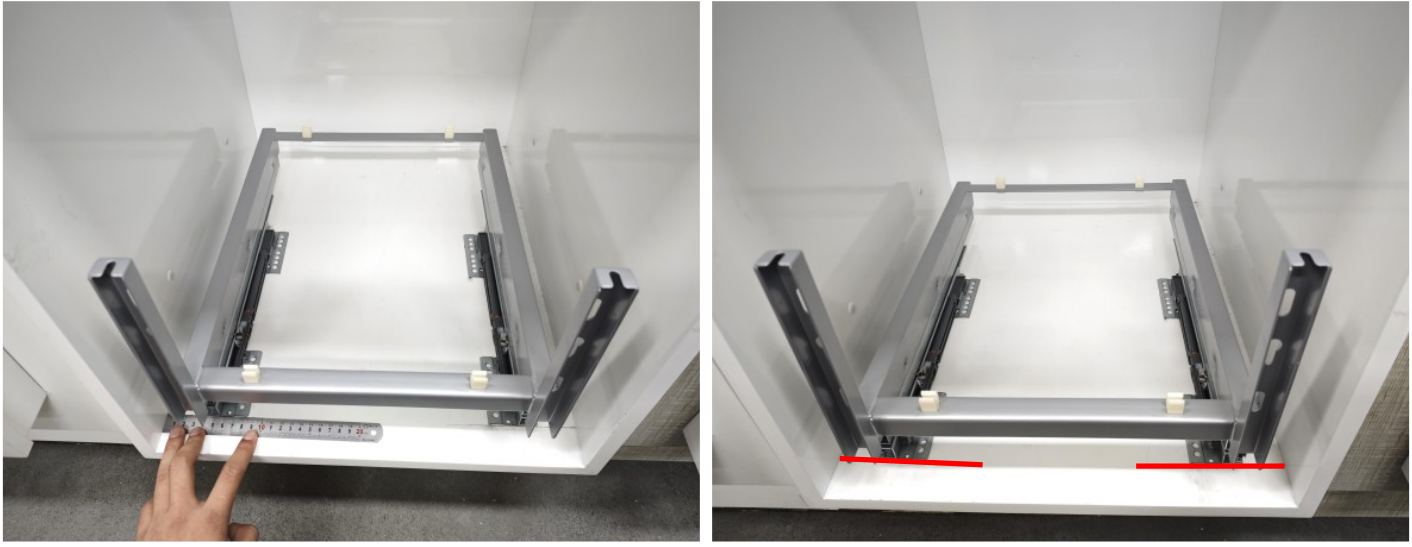

Place the frame with pre-installed slide rails into the cabinet, align the front end of the slide rail bracket with the left and right reference lines, and use a ruler to adjust the frame to the center position.

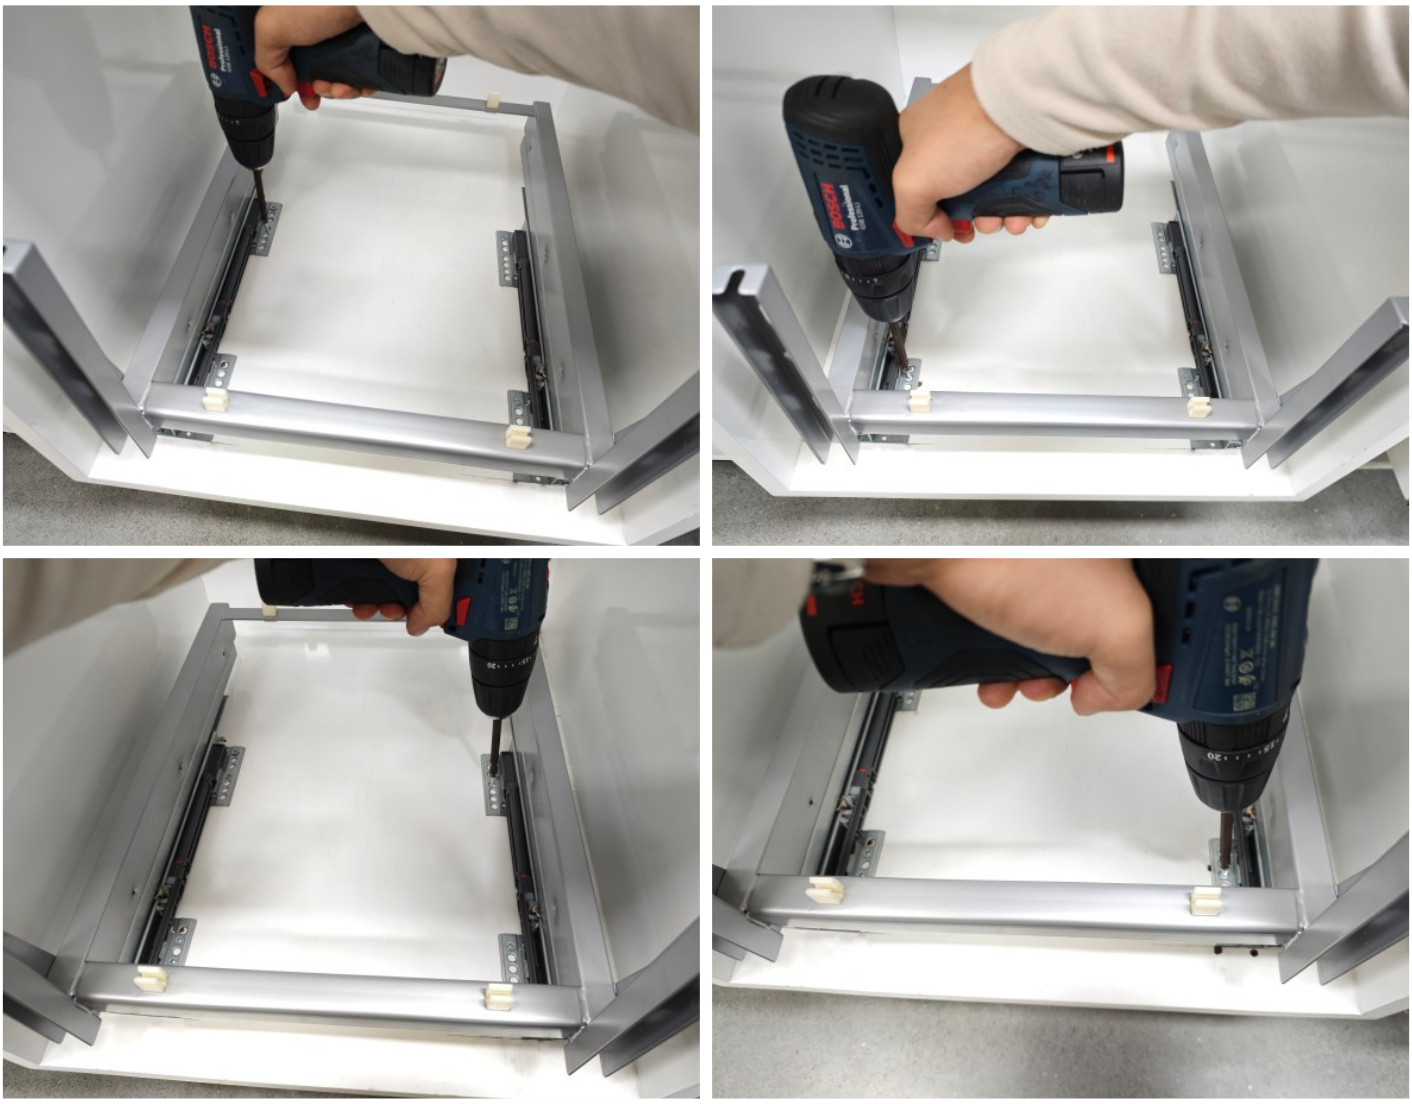

After the frame position is adjusted, use ST 4.0*16mm self-tapping screws to lock the slide rail (left/right). To ensure the load and stability of the slide rail, use at least 6 self-tapping screws to fix the single-side slide.

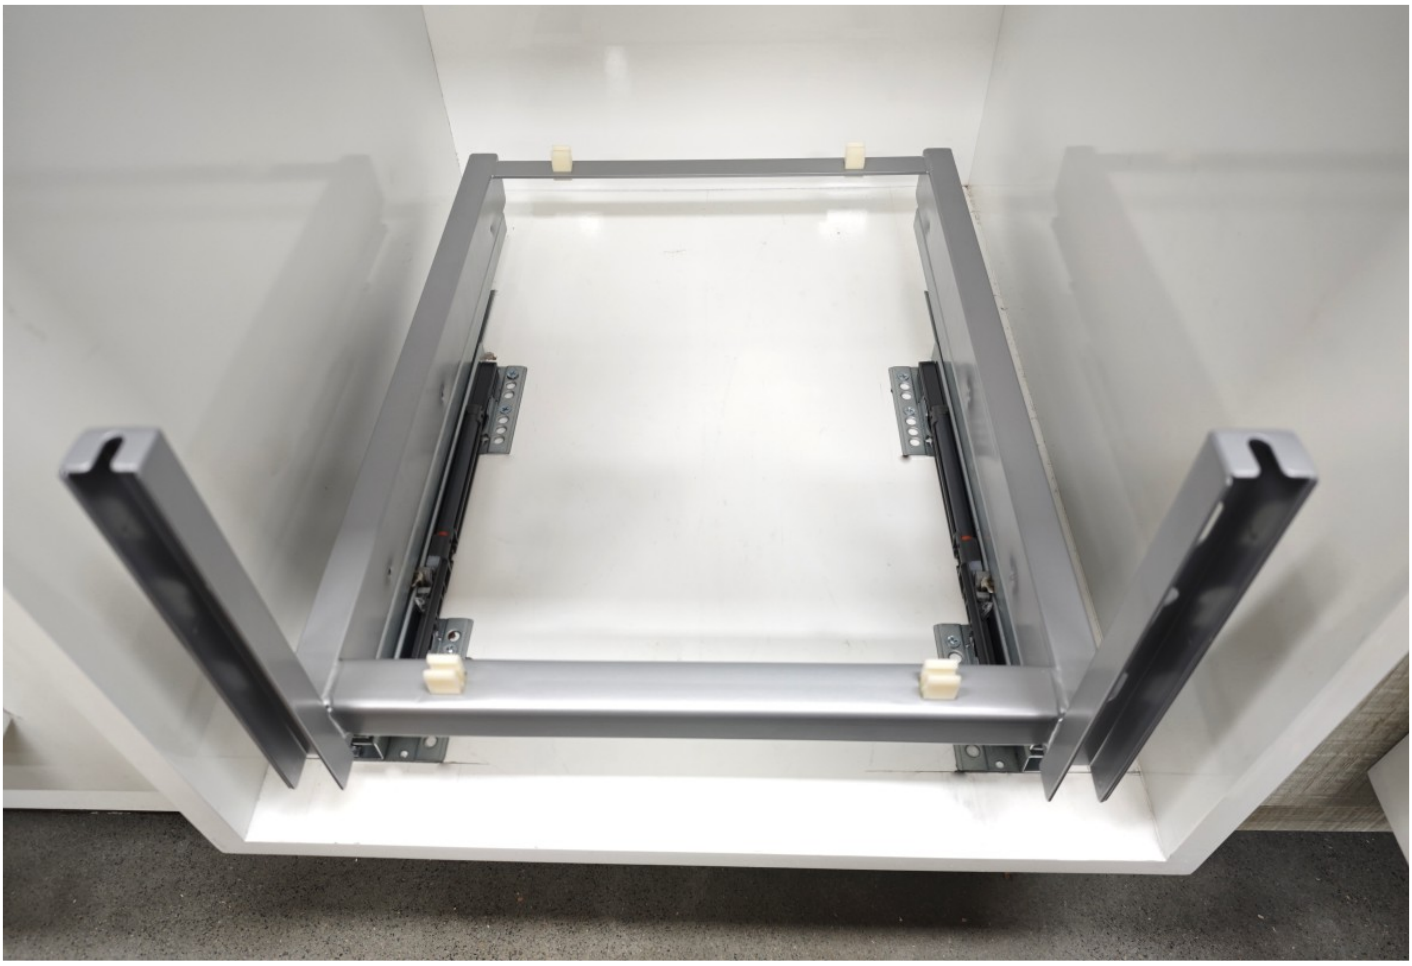

The bottom frame installation is completed.

STEP

- 04 -

Door Panel Fixing Installation

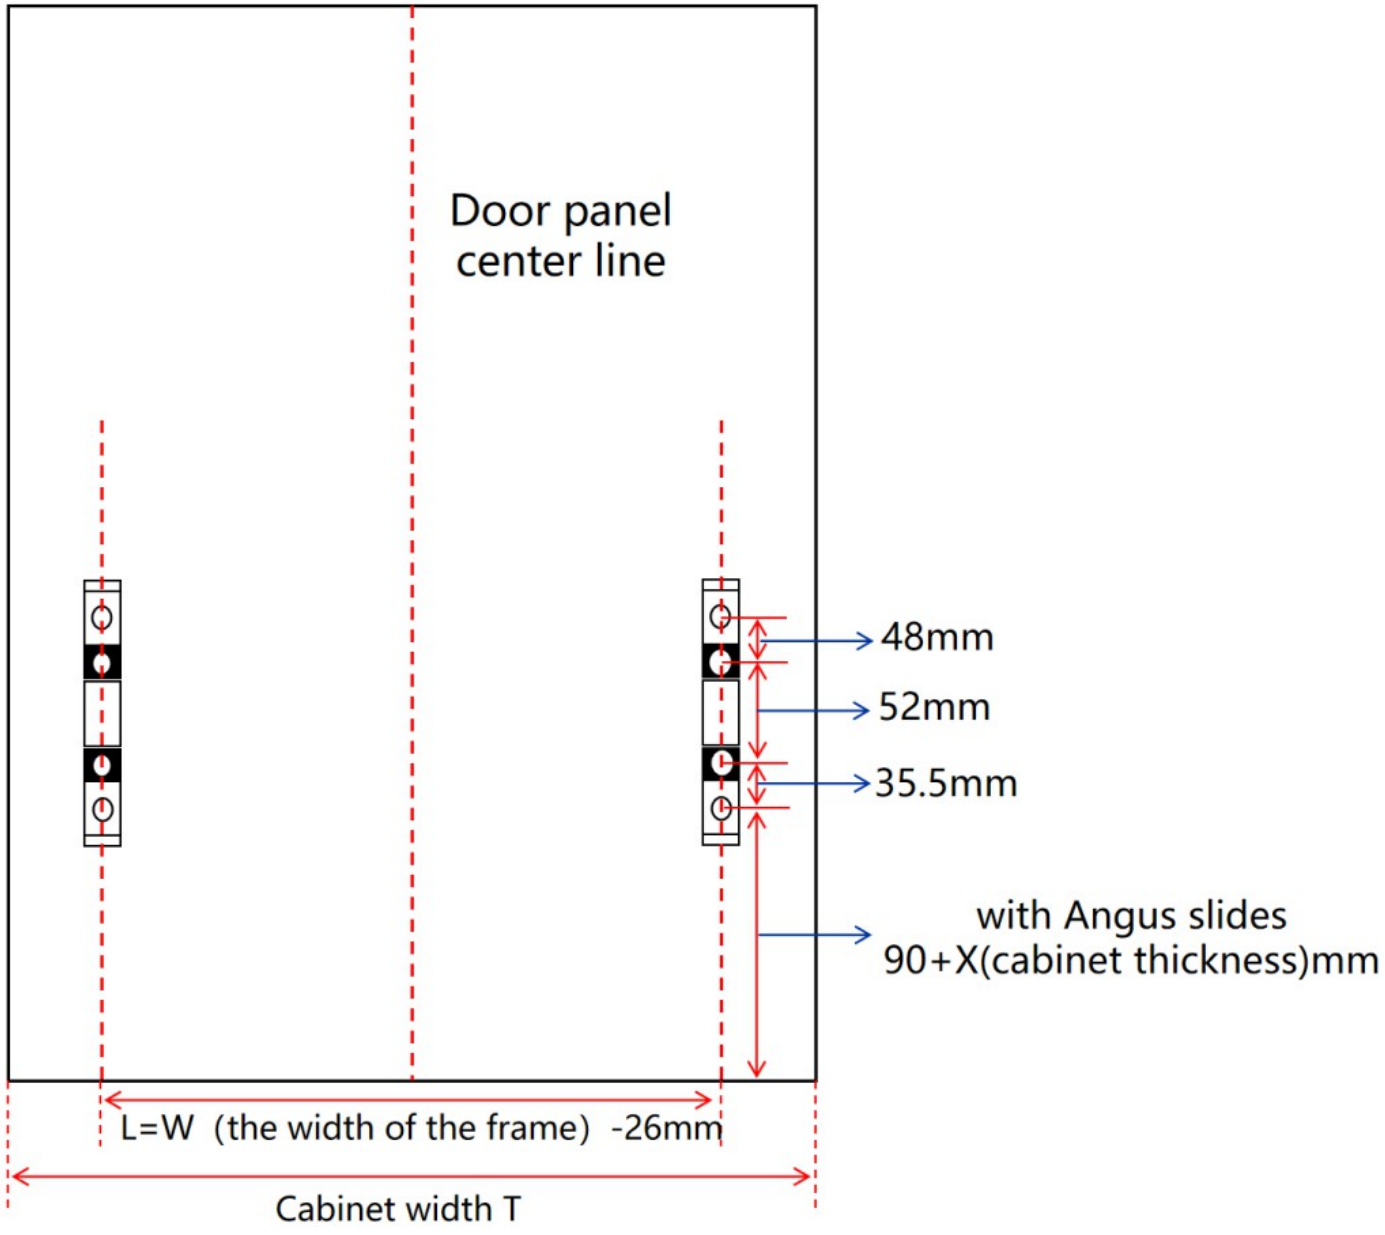

Door panel fixing hole size diagram.

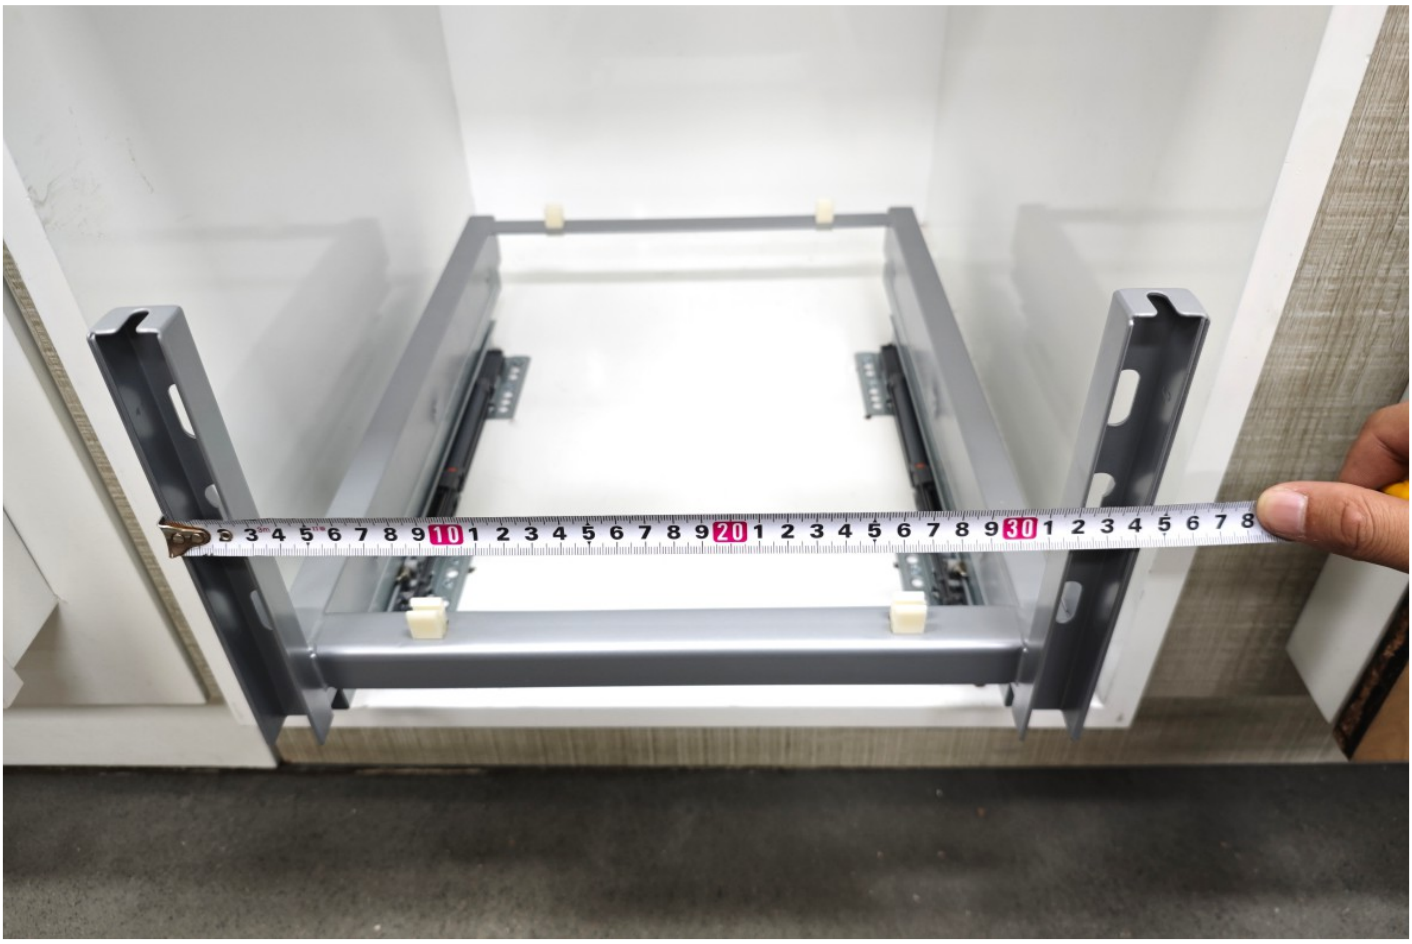

The measured width W of the 400 cabinet frame is 346mm. Please note that the width of each cabinet frame needs to be measured in practice.

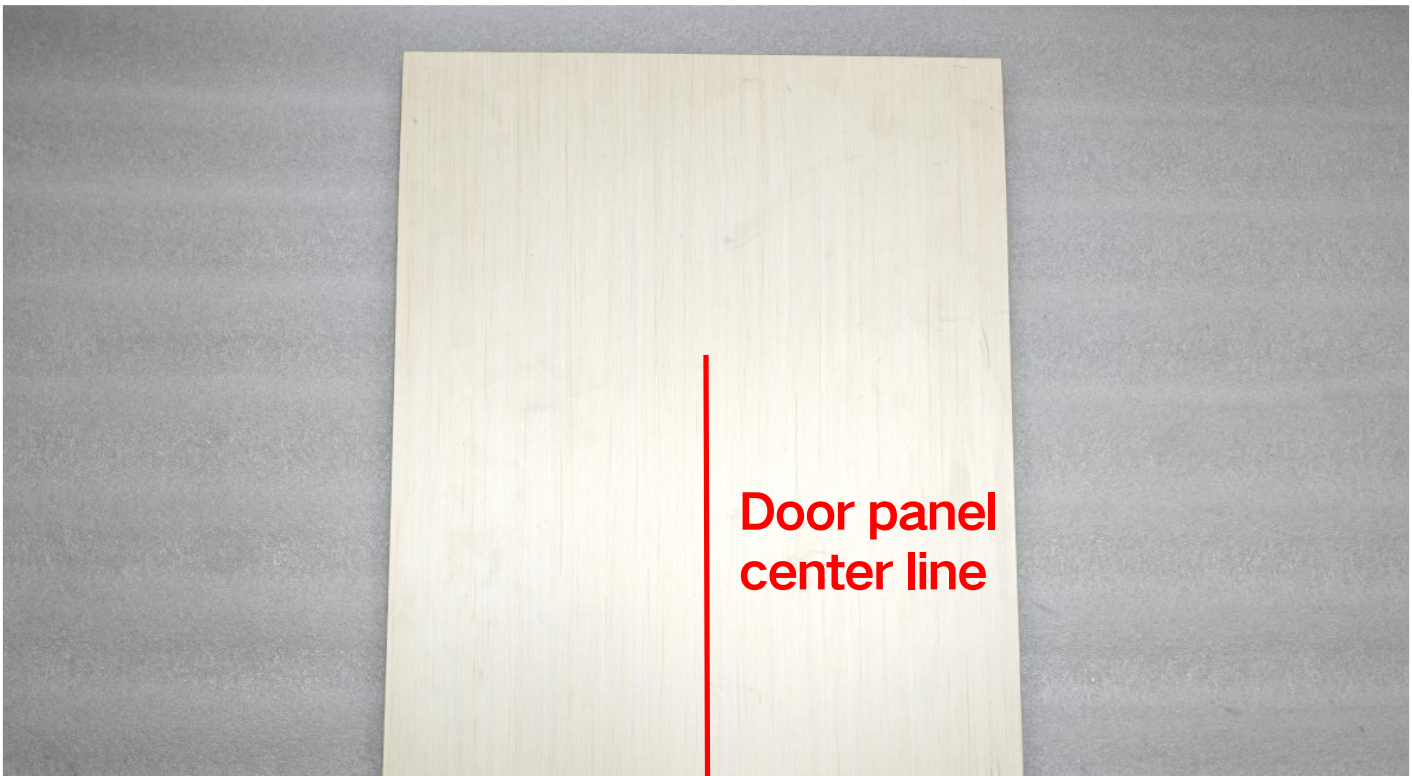

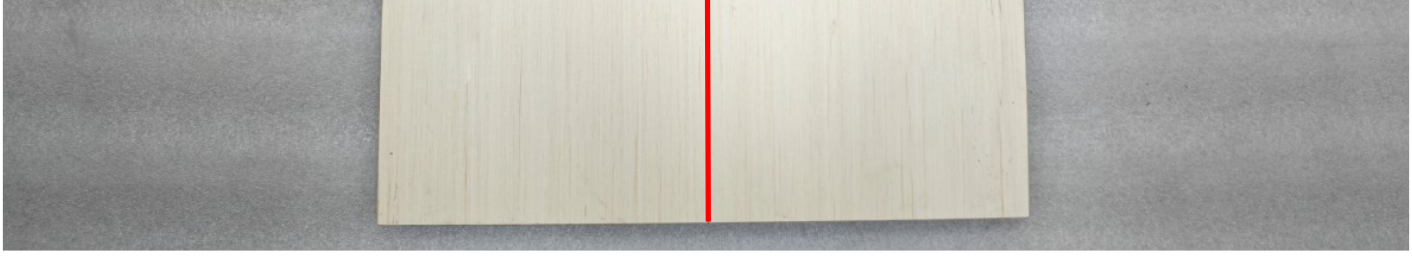

Measure and mark the center line of the door panel.

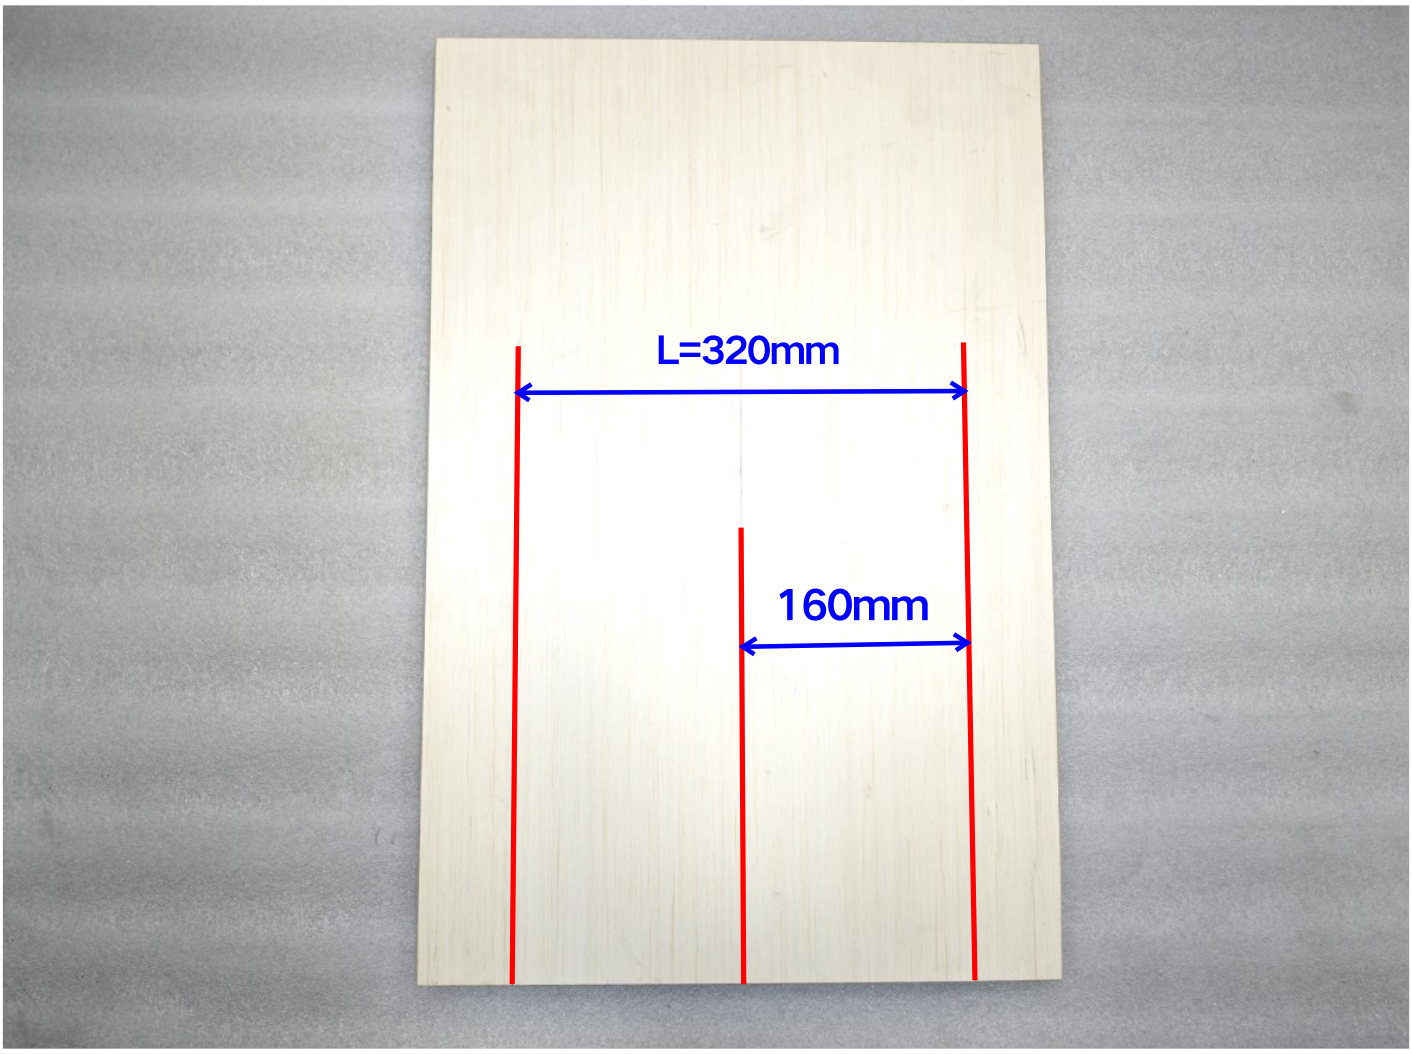

Calculate the distance between the two door panel fixings as 346-26=320mm, the distance from the center line of the door panel to the reference line of the door panel fixing is 320/2=160mm, measure and mark the reference lines of the left and right door panel fixings.

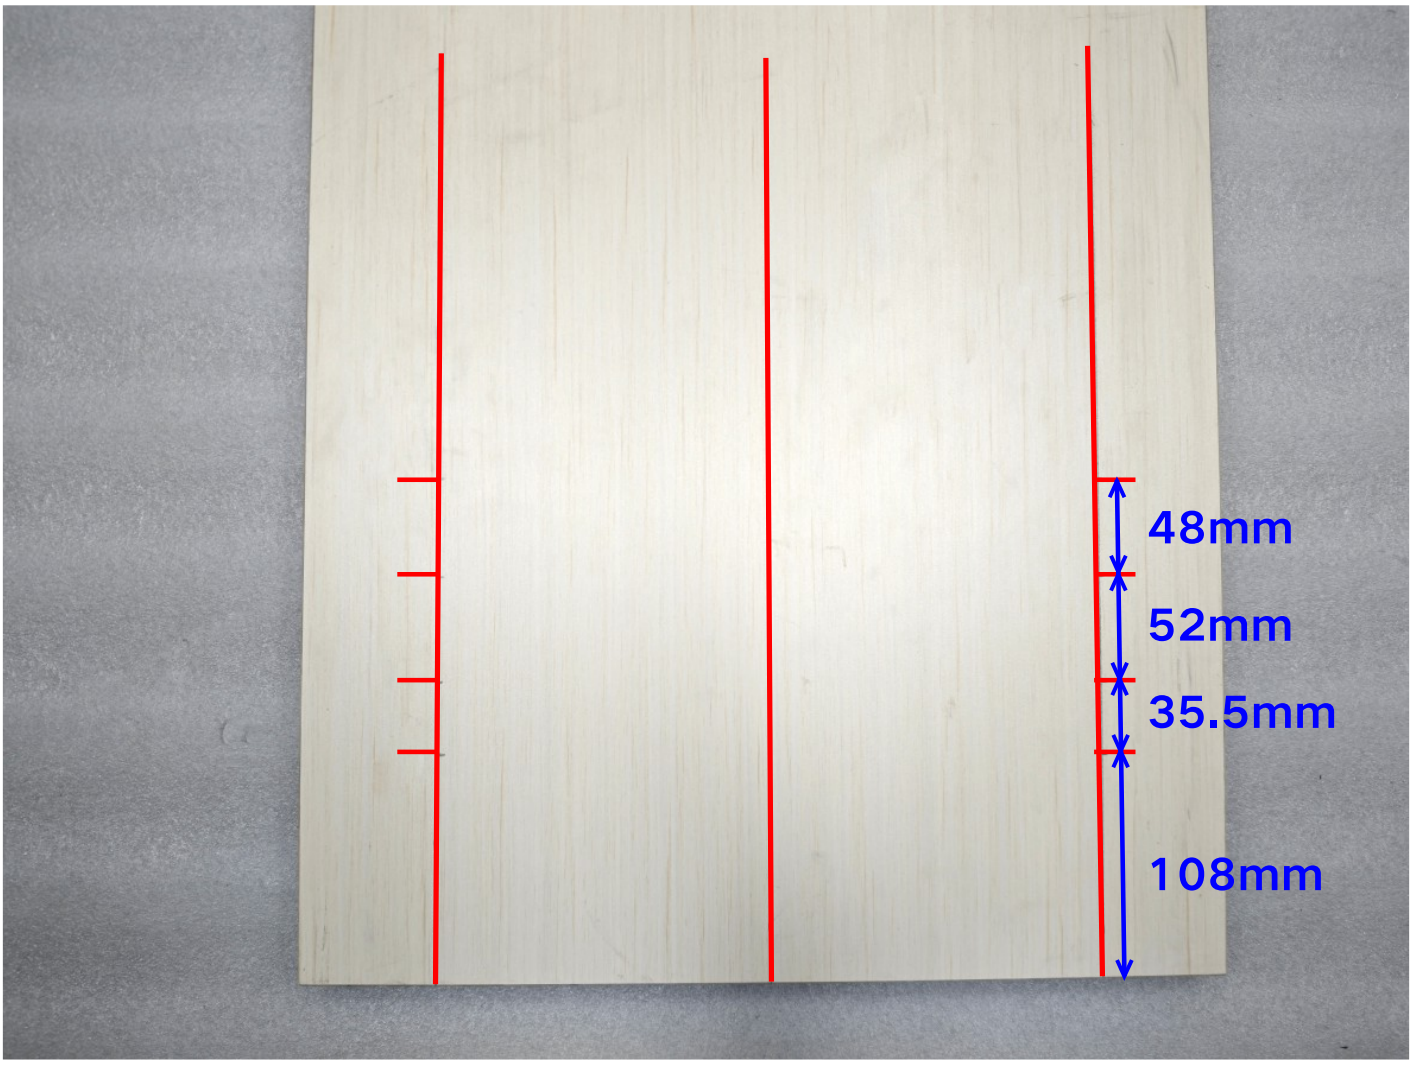

On the reference line of the door panel fixing, the first reference point is 90+18=108mm away from the bottom edge of the cabinet door (the cabinet board thickness is 18mm), the second reference point is 35.5mm away from the first reference point, the third reference point is 52mm away from the second reference point, and the fourth reference point is 48mm away from the third reference point. Measure and mark the four reference points (left/right).

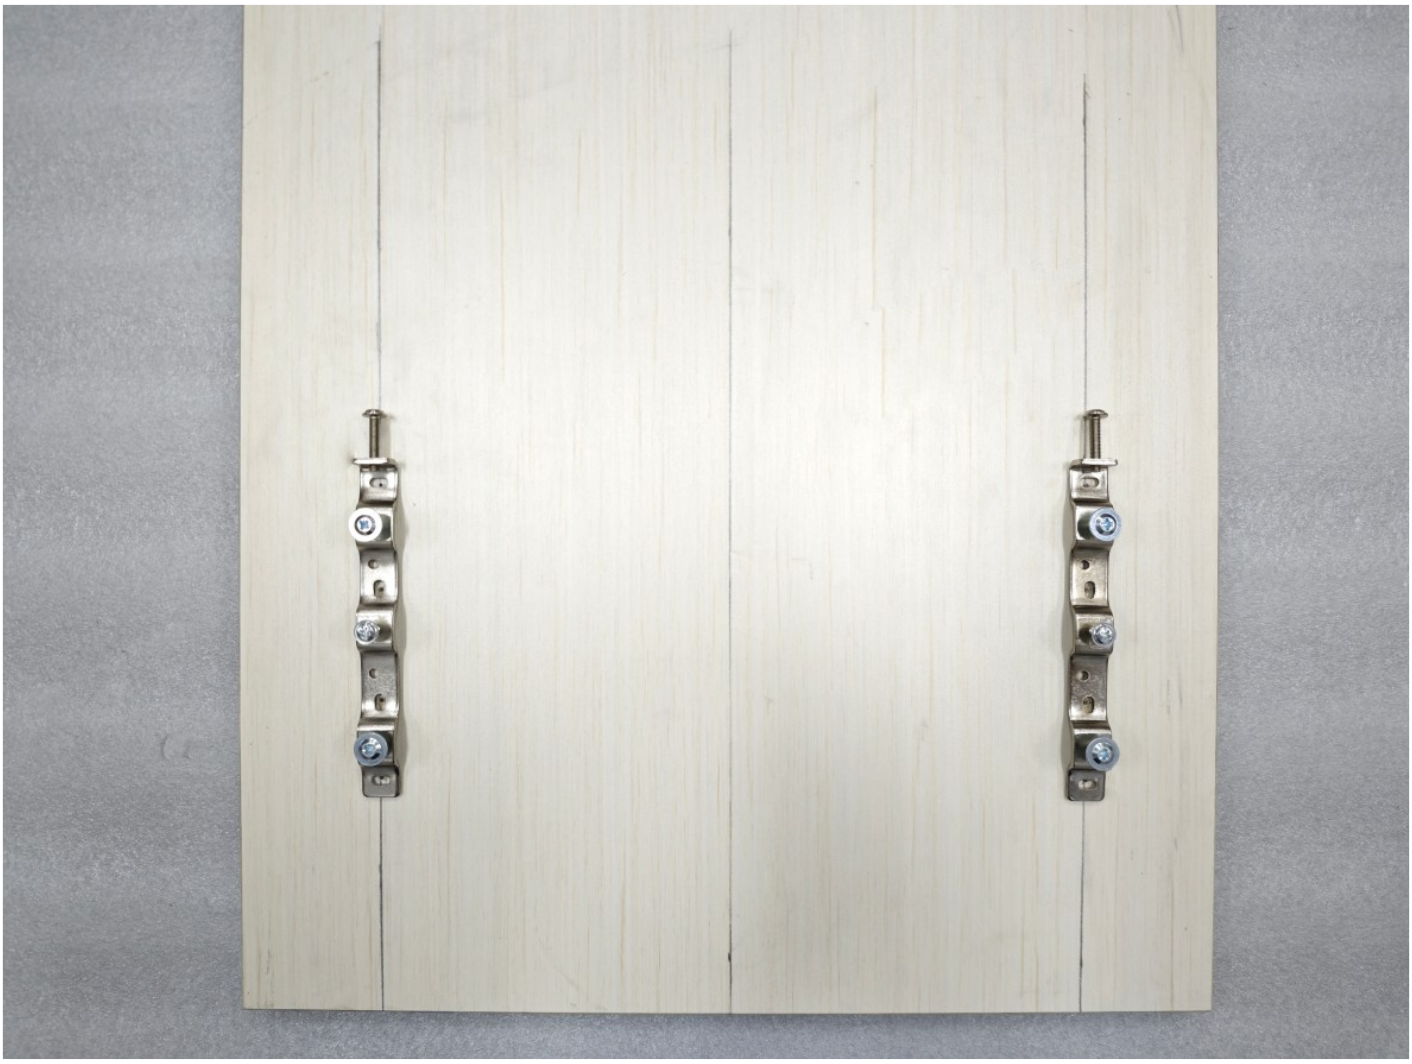

Align the two door panel fixing holes with the reference points on the left and right sides of the door panel.

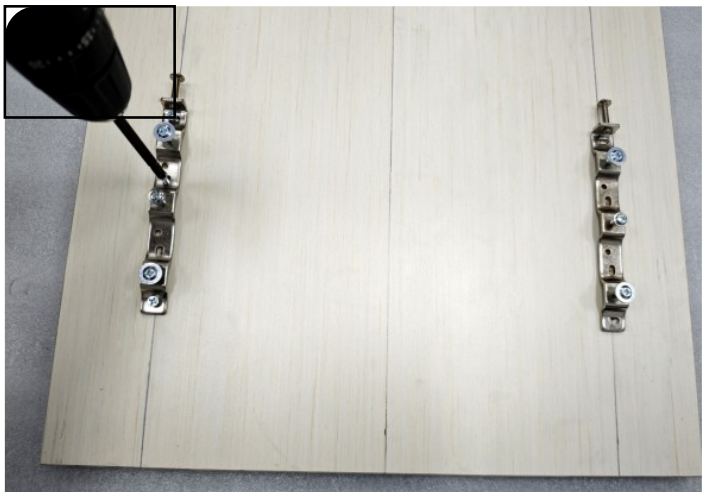

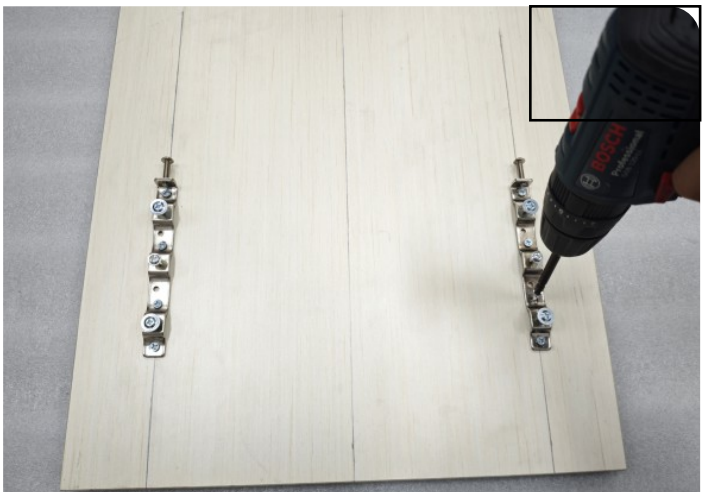

Use 8 ST4.0*16mm self-tapping screws to fix the two door panel fixings according to the reference point.

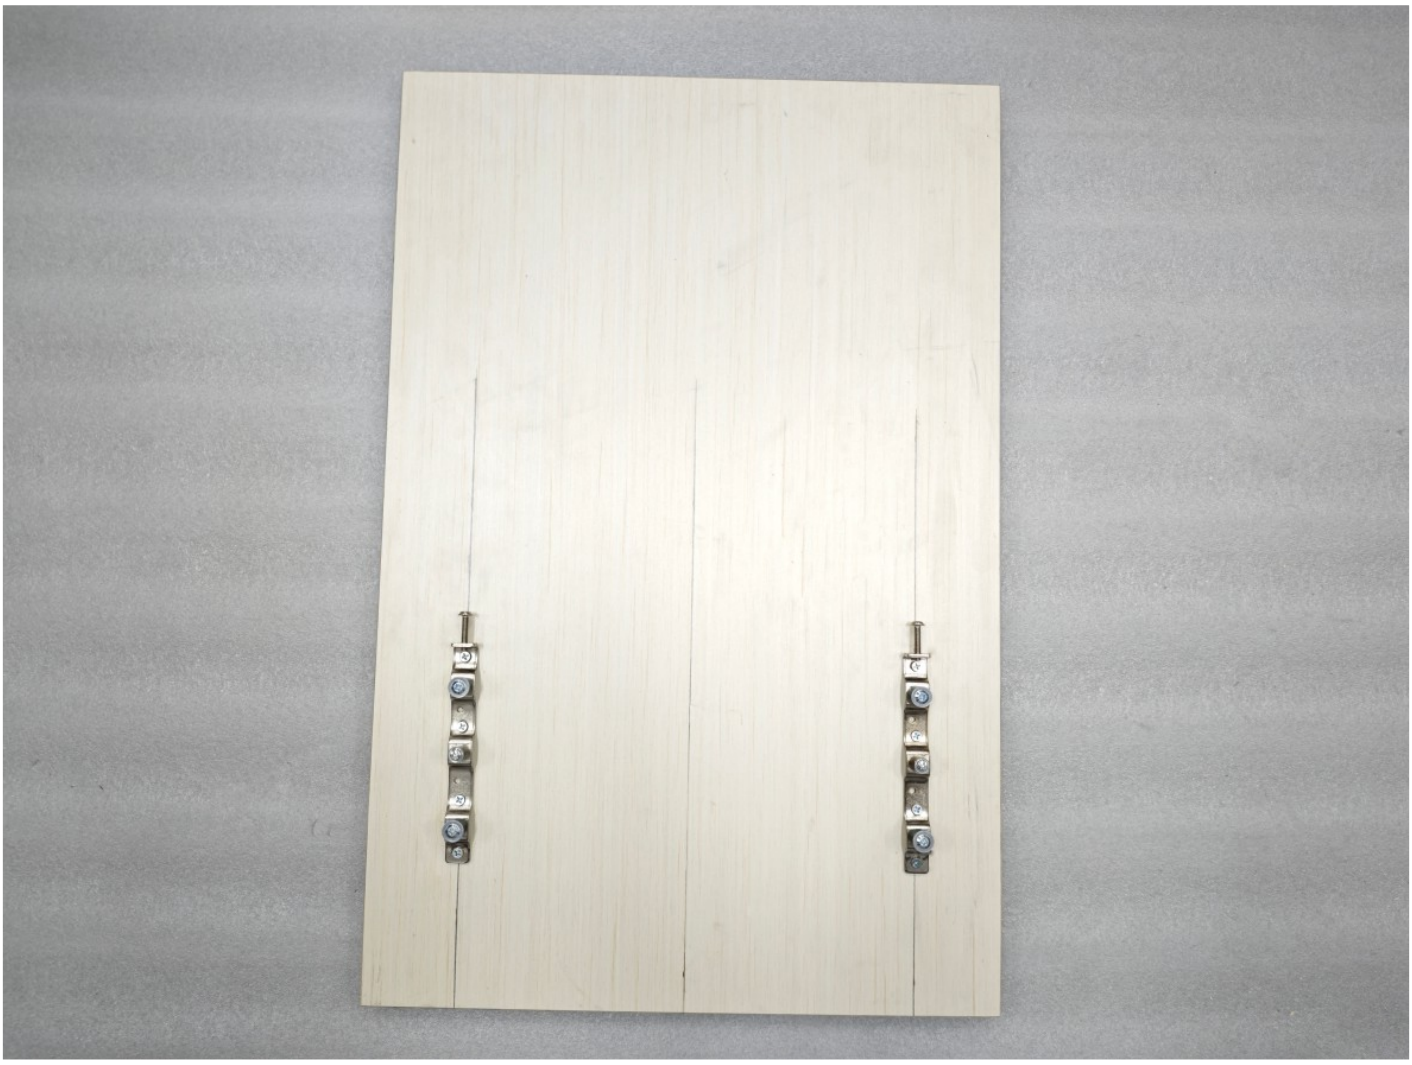

Erase the line drawing marks and complete the installation of the door panel fixings.

STEP
- 05 -

Door Panel Installation

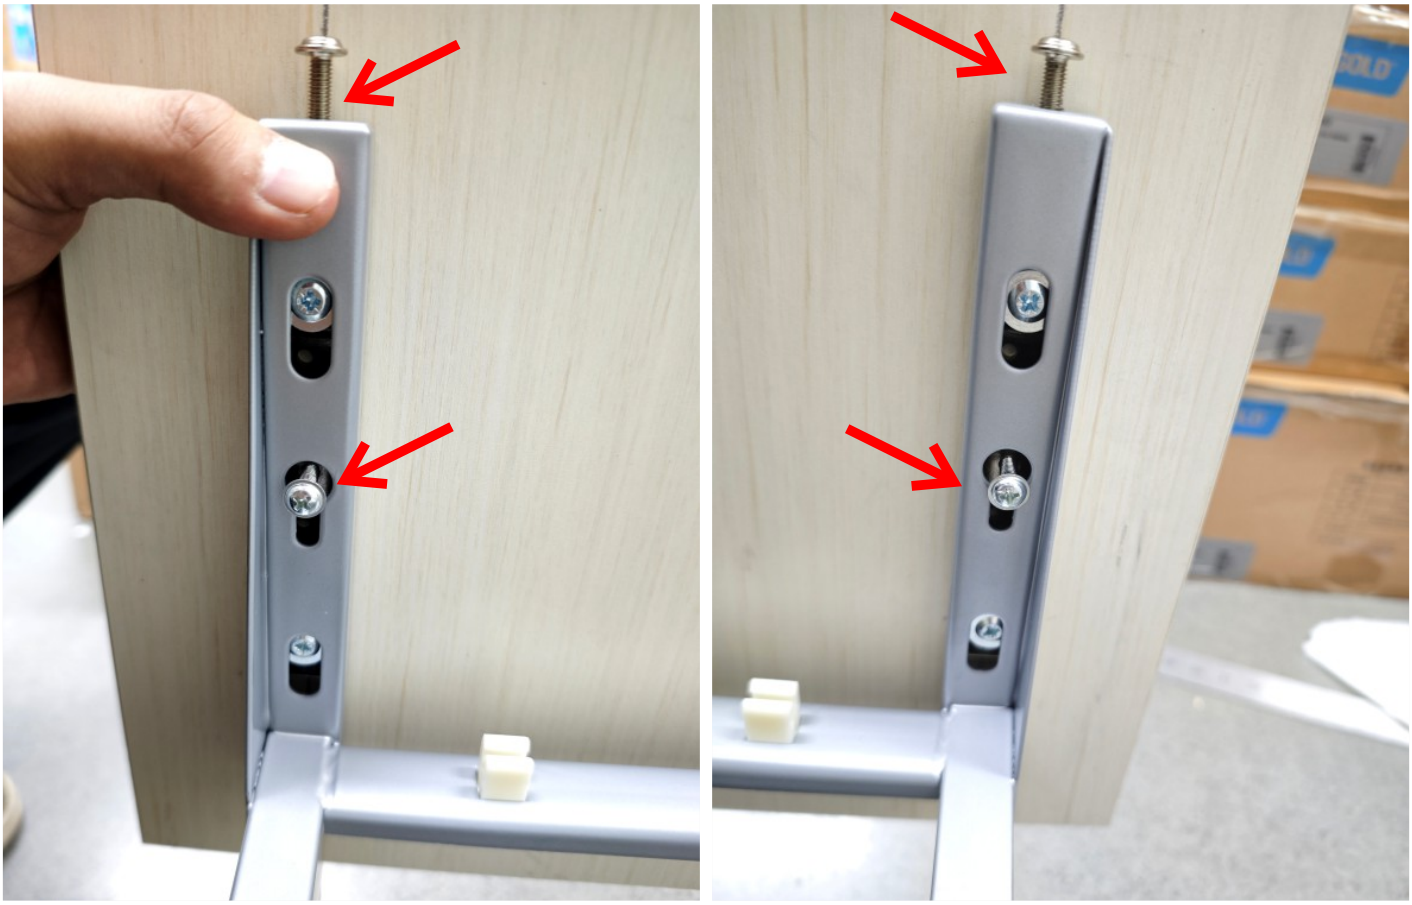

Adjust the position of the door panel fixings and hang the door panel into the frame holes (left/right).

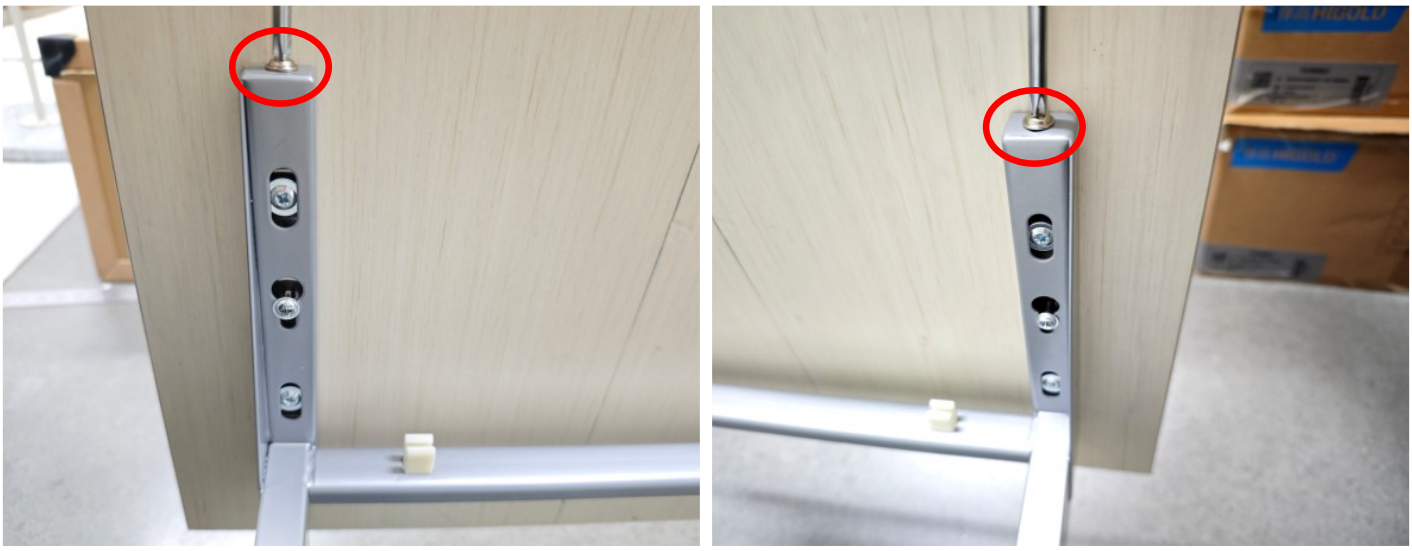

Adjust the left and right top screws to adjust the upper and lower height of the door panel.

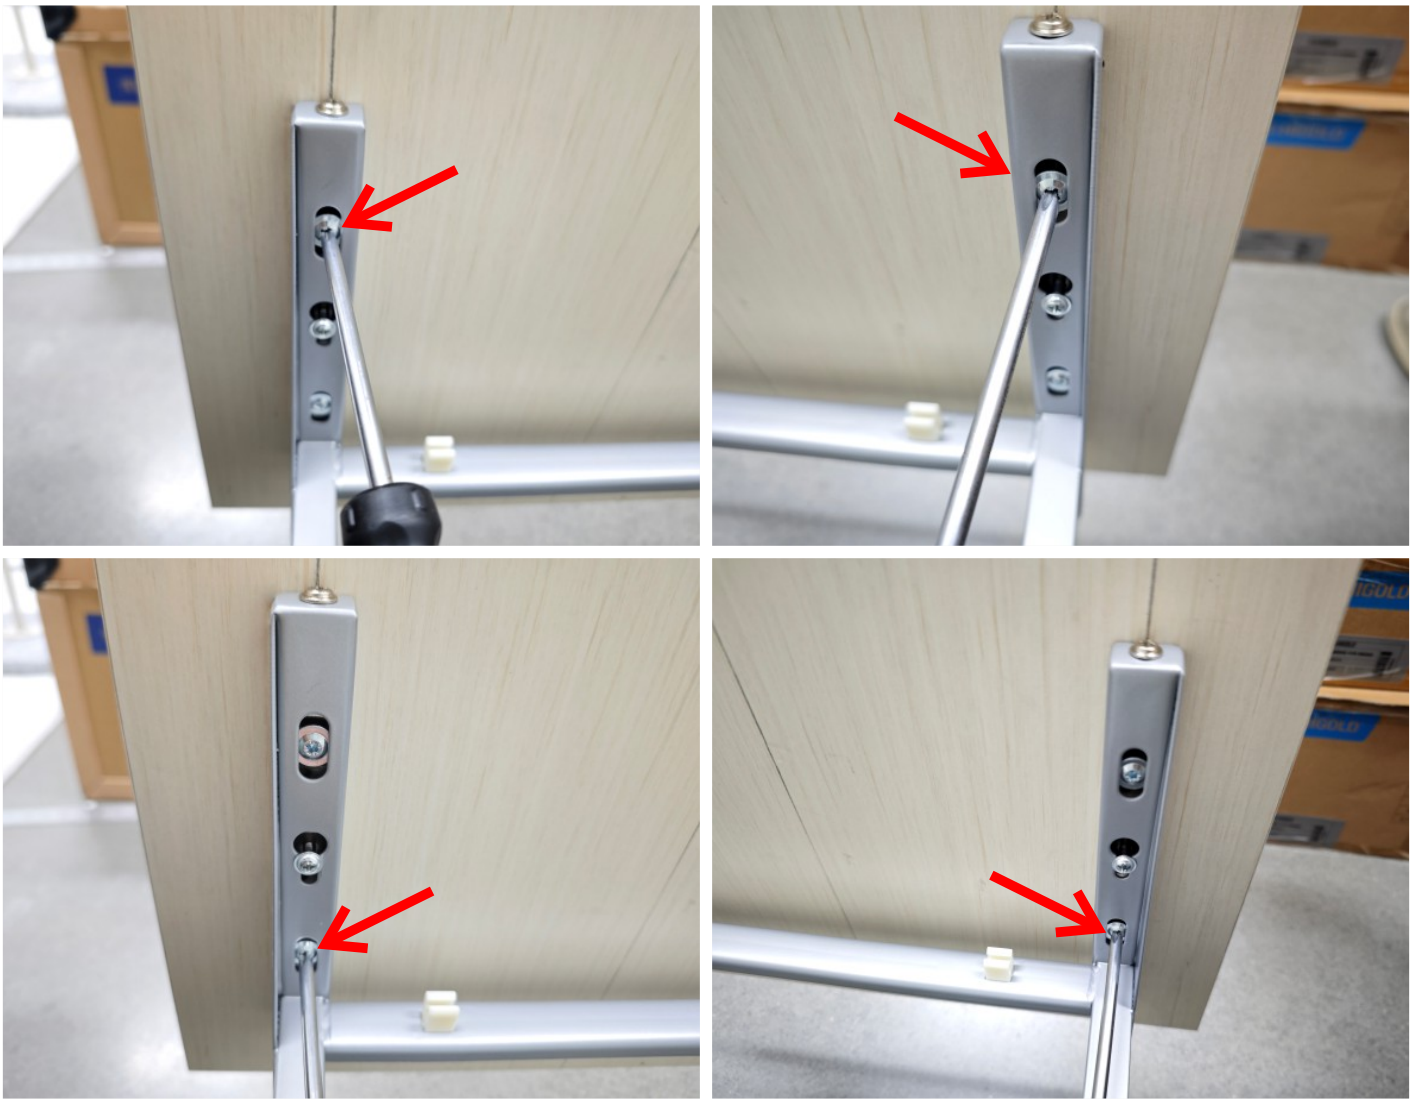

Adjust the screws in the four oval holes on the left and right to adjust the inclination angle of the door panel.

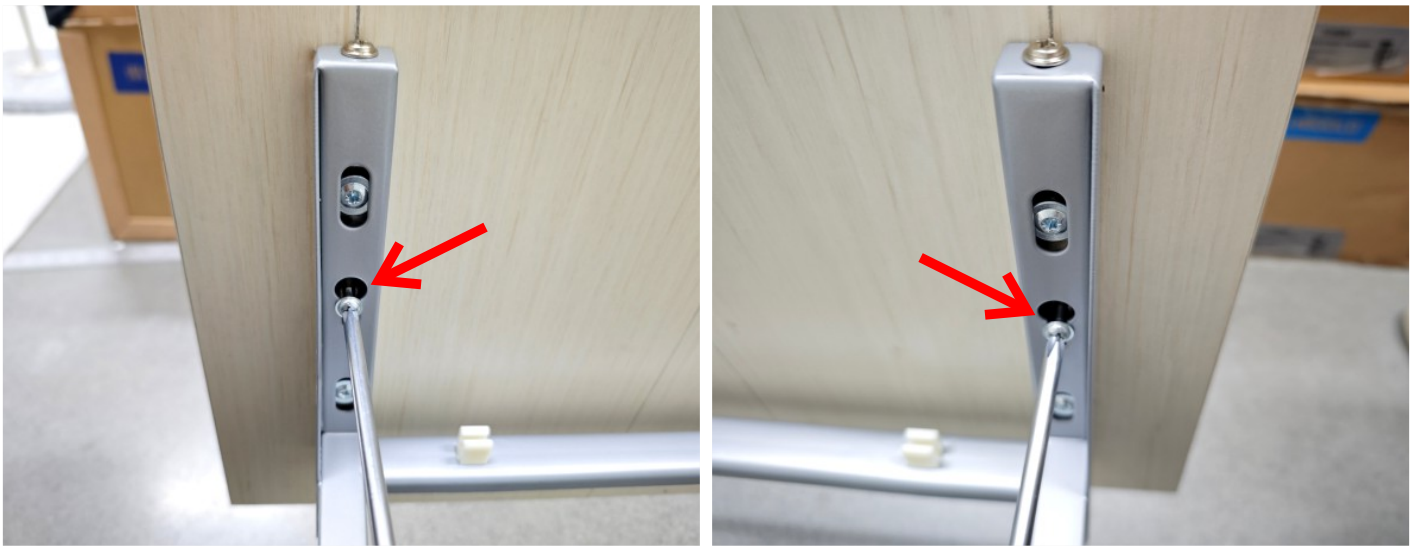

Adjust the door panel to fit tightly and flush with the cabinet body, and then tighten the two screws outside the left and right middle gourd holes to fix the door panel.

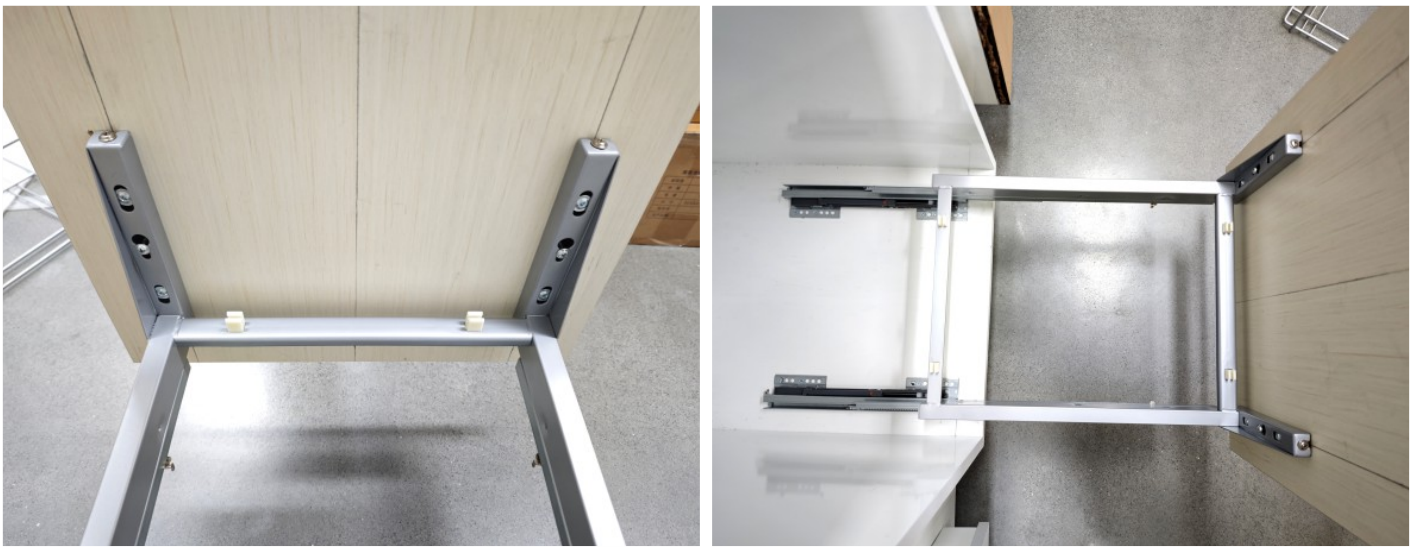

Door panel installation is completed.

STEP

- 06 -

Installation Of Basket Body And Accessories

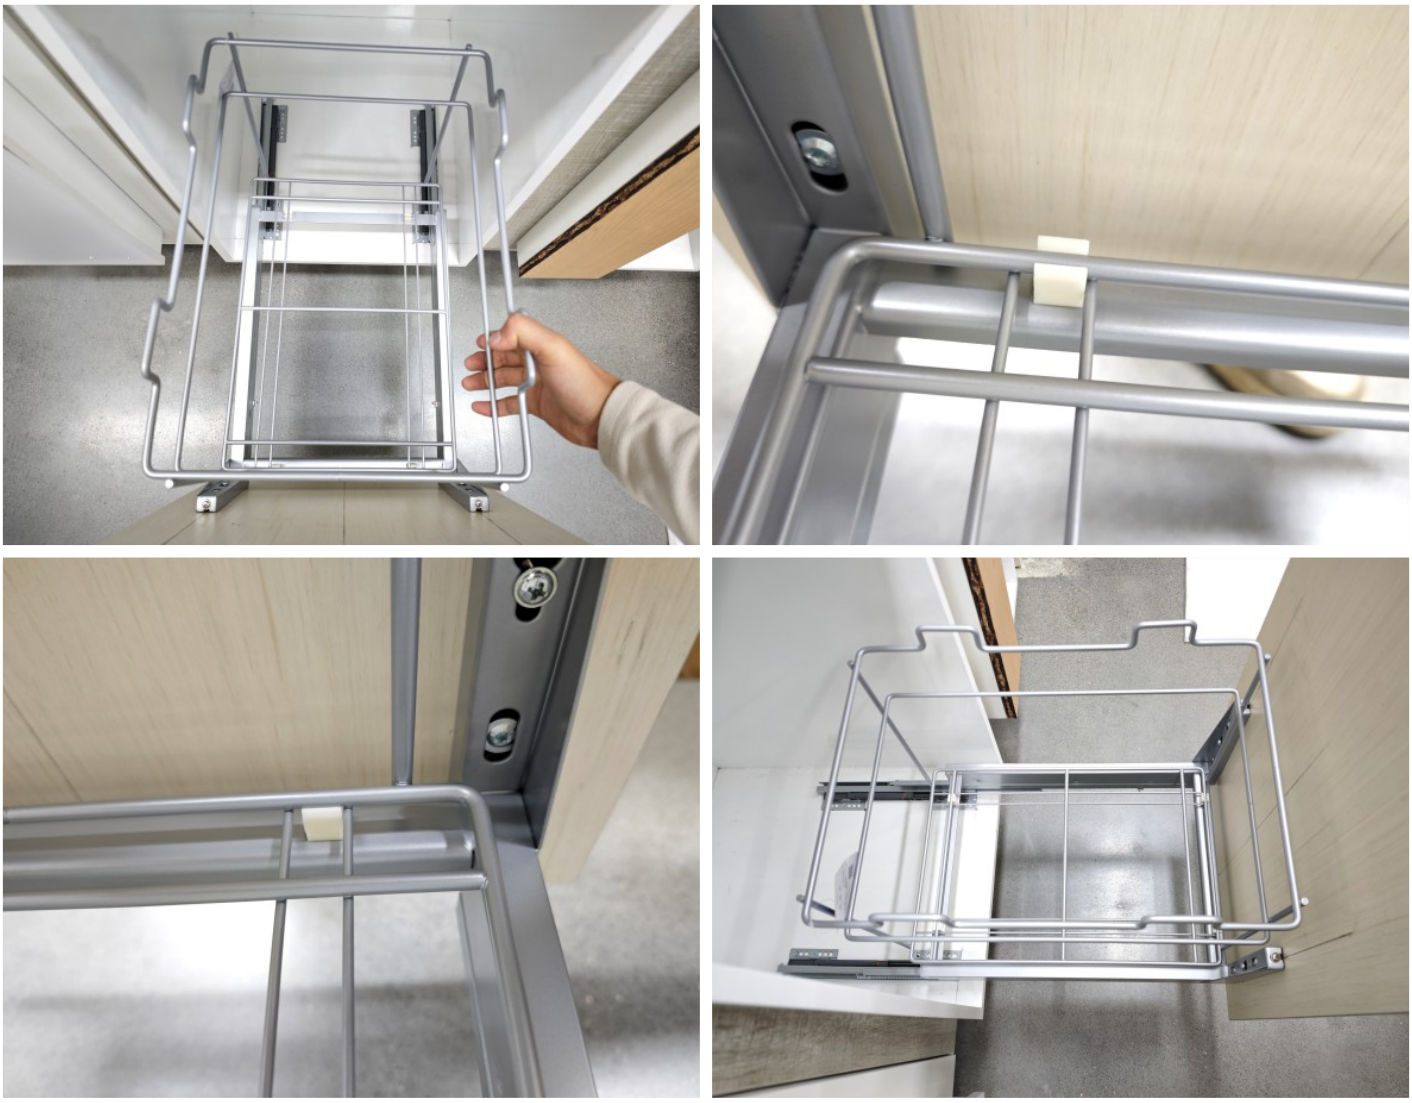

Align the basket with the four buckles at the bottom of the frame and snap it down to fix the basket.

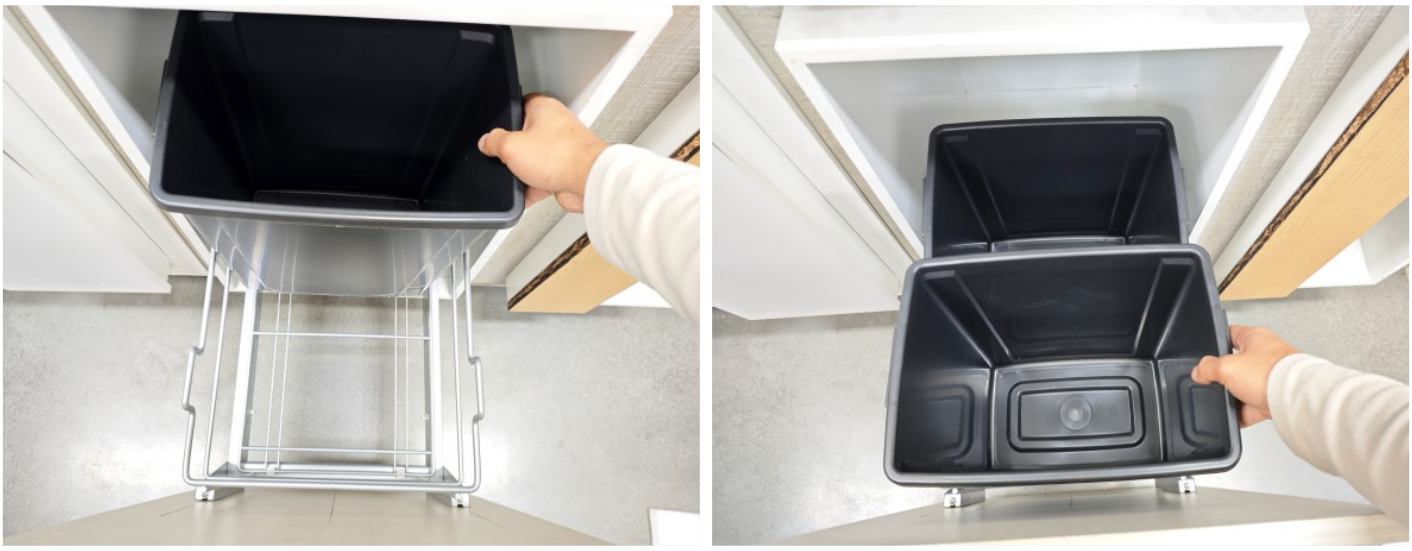

Place the wastebin.

The wastebin is installed.

HIGOLD®

Original Design & Quality

reddot award 2025 winner
reddot award 2025 winner
reddot award 2024 winner
reddot award 2024 winner
reddot award 2024 winner
reddot award 2023 winner
reddot award 2023 winner
reddot award 2022 winner
reddot award 2022 winner
reddot award 2021 winner
reddot award 2018 winner
reddot award 2017 winner
reddot award 2014 winner

2025 Design Award
2025 Design Award
Design Award 2025
Design Award 2025
Design Award 2025
Design Award 2024
Design Award 2024
Design Award 2024
Design Award 2023
Design Award 2023
Design Award 2023
Design Award 2022
Design Award 2022
Design Award 2022
Design Award 2021
Design Award 2021
Design Award 2020