The Parts of Sliding Wardrobe

A- 1pcs

F- 1pcs

K- 1pcs

B- 1pcs

G- 1pcs

L- 1pcs

C- 1pcs

H- 1pcs

M- 1pcs

D-- 1pcs

I- 1pcs

N- 1pcs

E- 1pcs

J- 1pcs

O- 1pcs

P- 2pcs

M5X10 self-tapping wire 30pcs

Installation Steps

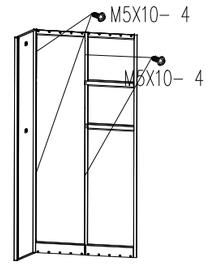

1 Put C and A, D and B, and C and D in terms of M5*10 self-tapping wire connection

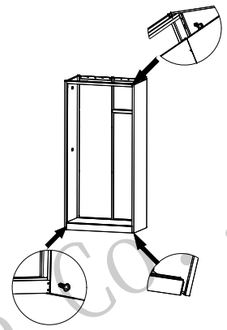

2 O and side connection, N and side connection, O on the hook aligned with the holes in A,B downward pressure connection, the back with M5 * 10 self-tapping screws to strengthen the

3

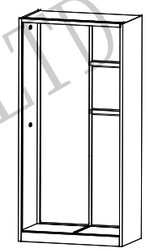

3 Attach E and F with M5*10 self-tapping screws.

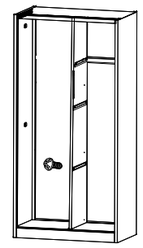

4 Attach G with M5*10 self-tapping screws.

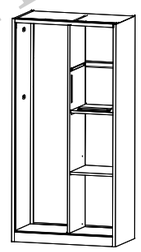

5 Attach I and K. K is fixed with M5*10 self-tapping wire.

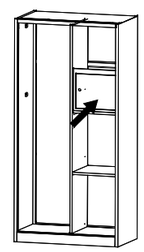

6 Push the J inward against the tab.

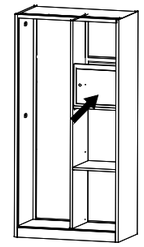

7 Push the inner frame inward against the tabs.

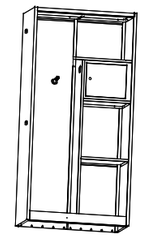

8 Attach H with M5*10 self-tapping screws.then assemble the P

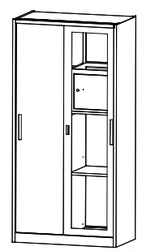

9 Install L first, then M. Installation should be done with the positioning block on the door aligned with the round hole in the top frame lifting upward, and the wheel below aligned with the chute.

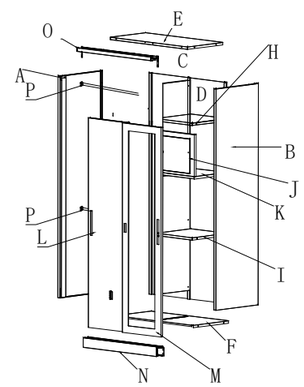

Zhangzhou Jianrong Furniture Co., LTD