

**HIGOLD®** 

Please note before installation

1. The minimum installation height required for

the Shearer 4.0 Tool Drawer is 120mm, and the

minimum internal depth is 460mm. The width is

2. The accessories for each cabinet vary slightly.

For the specific quantity of accessories, please

refer to the installation instructions. In this article,

the installation is demonstrated for a 900mm

selected according to the cabinet size.

cabinet.

**Accessory list** 



Divider-long\*1, Divider-medium\*6

Tool drawer basket\*1 pc, slides\*1SET



12 pcs ST4.0\*16 self-tapping screws,


installation template\*1

Baselin


panels.

Measure the same installation height

reference line of the left and right side

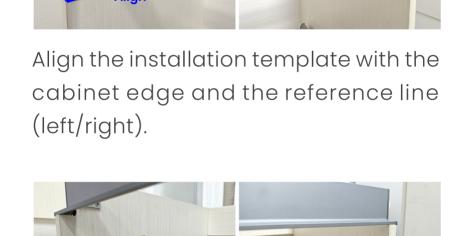

Use a carpenter's pencil to mark the rail fixing hole locations (left/right).

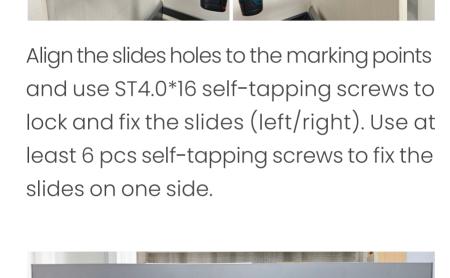

- 03 -**Basket installation** 

Before installation, loosen the fixing screws

of the front buckle of the basket (left/right).

The basket is aligned with the slides on

both sides and pushed backwards.

Slides installation completed.



Adjust the front buckle of the basket to align

with the front plastic part of the slides

After adjusting the alignment, tighten the


buckle fixing screws at the front end of the

(left/right).

basket (left/right).

Press the basket down so that the front buckle of the basket clamps the front plastic part of the slides.

Basket installation completed.

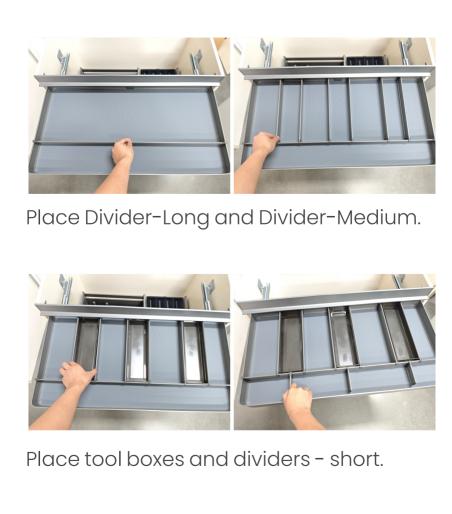

- 04 -

Accessory

Installation

Shearer 4.0 tool drawer installation

completed.