

BL6-U series elevator controller for home lift **User Guide**

Content

Content	I
FOREWORD	X
Chapter 1: SAFETY INFORMATION.....	1
1.1. LABEL DESCRIPTION	1
1.2. SAFETY PRECAUTIONS.....	1
1.3. Warning Labels on the Controller	4
Chapter 2: Introduction and Installation	2-6
2.1. Model Description.....	2-6
2.2. Nameplate Information	2-6
2.3. Specifications	2-7
2.4. Appearance and Exterior Dimension	2-9
2.4.1 Open type.....	2-9
2.4.2 Closed Type	2-11
2.5. Confirmation upon Delivery.....	2-12
2.6. Installation	2-12
2.6.1 Installation Site.....	2-12
2.6.2 Temperature Requirement	2-12
2.6.3 Protect the controller from Foreign Object	2-13
2.6.4 Removing and attaching the Terminal Cover.....	2-13
2.6.5 Installation Orientation and Space.....	2-14
2.7. Braking Resistance Configuration	2-14
2.8. Product Function.....	2-15
Chapter 3: Wiring	24
3.1. Elevator Integrated Controller Therminal Wiring Diagram.....	24
3.2. Wiring Main circuit Terminals.....	25



3.2.1 Main circuit structure.....	25
3.2.2 Terminal arrangements for Main circuit.....	25
3.2.3 Main circuit terminal summary and function instruction	25
3.2.4 Specifications for main circuit wiring	26
3.2.5 Main circuit wiring	26
3.3. Wiring Control Circuit Terminals.....	28
3.3.1 Control Circuit Terminal Arrangement.....	28
3.3.2 Terminal Connection for Control Circuit (Figure 3.1).....	29
3.3.3 Control Circuit Port definition and Function	29
3.3.4 Wire size for Control Circuit Terminals	31
3.3.5 Control Circuit I/O interface and wiring.....	31
3.4. PG Card Installation & Wiring	34
3.4.1 PG_V6 Interface Card.....	34
3.4.2 PG_V6X Interface Card.....	38
3.4.3 SPG_V6 Interface Card	40
3.5. Precautions with Wiring.....	43
Chapter 4: Digital Operator	44
4.1. Key, display and function of Digital Operator	44
4.1.1 Operator LED Display	44
4.1.2 Operator Keys	45
4.1.3 LCD Display.....	46
4.1.4 Function of Operator	46
4.1.5 Installation and Connection of Digital Operation	47
4.2. Structure and switch process of the Operator interface	47
4.3. Parameter Setting	49
4.4. Commissioning Parameters	50

4.5. Save Parameter	53
4.6. Hoistway Learning.....	53
4.7. Motor Auto-tuning.....	54
4.8. Motor Load Tuning.....	54
4.9. Time Setting	55
4.10. Fault Record Check.....	55
4.11. Environment Initialization.....	56
4.12. Parameter Copy	58
4.13. Restore to Factory Setting	58
4.14. Blue-Light Traction machine Parameter Input.....	59
Chapter 5: Parameters.....	60
5.1. Parameters Function Classifications	60
5.2. Parameters Hierarchical Structure.....	60
5.3. Monitoring Parameters.....	61
5.3.1 Hoistway Location (U0)	61
5.3.2 Monitoring Parameter for I/O Status, Cabin Signal & Interference Appraisal (U1-U5)	62
5.3.3 Drive Monitoring Parameters	64
5.4. Parameters setup Function Instruction	64
5.4.1 Building Setup Parameters (F0).....	64
5.4.2 Parameters for Running Setup (F1).....	65
5.4.3 Time Setup Parameters (F2).....	68
5.4.4 Input type setup Parameters (F3)	70
5.4.5 Service Setup Parameters (F4)	71
5.4.6 Motor Setup Parameters (F5-F6)	72
5.4.7 Multiple PI Setup Parameters (F7)	73
5.4.8 Encoder Setup Parameters (F8)	73

5.4.9 Control Setup Parameters (F9).....	74
5.4.10 No-load Compensation Setup Parameters (FA)	74
5.4.11 Special Parameters (FC)	75
5.4.12 Environment Setup Parameters (A)	75
Chapter 6: Parameters Setup	76
6.1. Elevator Running Speed Setup.....	76
6.1.1 Elevator Rated Speed, Motor Rated Speed, Encoder pulses Setup	76
6.1.2 Inspection Run Speed.....	76
6.1.3 Rescue Speed	77
6.1.4 Least Speed	77
6.2. Normal Running Speed Curve	77
6.3. Elevator Running Timing Diagram.....	78
6.3.1 Timing Diagram for Normal Running	78
6.3.2 Timing Diagram for Inspection Running.....	80
6.3.3 Timing Diagrams for Rescue Running	81
6.3.4 Timing Diagram for Recalibration Running	81
6.4. Door Control.....	82
6.4.1 Door Open/Close Control.....	82
6.4.2 Door Open Holding Time.....	83
6.4.3 Door Control in Attendant and Special use mode	84
6.4.4 Door Control in Inspection, Fire mode.....	84
6.5. Homing Function Setup.....	84
6.6. Parking Function Setup	84
6.7. Fireman Operation Function Setup.....	85
6.8. Rear Door Control Setup	86
6.8.1 Different Mode Selection	86

6.8.2 Rear Door Condition Setup	87
6.9. Input Type Setup	87
6.10. Service Floor Setup	89
6.11. Weighing Device Setup	89
6.12. Duplex Control Setup	89
6.13. Group Control Setup	90
6.14. Leveling Adjustment Setup	90
6.15. Floor Indication Setup	90
6.16. Special Function Selection	90
6.17. Motor Parameters Setup	93
6.18. Elevator Running Speed Setup	94
6.19. Speed Control Setup (PI Adjustment)	95
6.19.1 Speed Control Setup with Single PI Adjustment	95
6.19.2 Speed control Setup with Multi-Section PI Adjustment	95
6.20. Load-Compensation Torque Output Setup	97
6.21. Encoder Parameters Setup	98
6.22. Start without Load Compensation Setup	98
Chapter 7: Commissioning	101
7.1. Important Reminder	101
7.2. Inspections before Power On	101
7.3. Power On and Inspection	102
7.3.1 Things need to confirm before Power On	102
7.3.2 Inspection after Power On	103
7.4. Parameter Setup	104
7.5. Motor Parameters Tuning	104
7.5.1 Motor Rotation Tuning	104

7.5.2 Motor Static Tuning	105
7.6. Motor Initial Angle Tuning	106
7.6.1 Rotation Tuning Procedures.....	106
7.6.2 Static Tuning Procedures	107
7.7. Inspection Running	108
7.7.1 Inspection Running in Machine Room	108
7.7.2 Inspection Running on Car Top/Cabin	108
7.8. Hoistway Learning.....	108
7.9. Normal Speed Running	109
7.10. Elevator Comfort Level Adjustment.....	109
7.10.1 Adjustment for Start/Brake speed curve	110
7.10.2 Follow & Adjust Running Curve.....	111
7.10.3 Control Timing Adjustment.....	111
7.11. Leveling Precision Adjustment.....	112
7.11.1 Basic Conditions for Elevator Leveling	112
7.11.2 Leveling Parameter Adjustment	112
7.12. Terminal Switch Position.....	113
Chapter 8: Troubleshooting	114
8.1. Elevator System Faults	114
8.2. Hoistway Parameter Self-Learning Faults	116
8.3. Driver Faults	117
8.4. Motor Initial Angle Tuning Faults.....	119
8.5. Motor Parameters Tuning Faults	120
Chapter 9: Maintenance	122
9.1. Safety Precautions for Drive Maintenance & Storage	122
9.2. Daily Check.....	123

9.3. Routine Inspection	123
9.4. Quick Wear parts	124
9.5. Warranty	124
Chapter 10: Controller installation with EMC Standard.....	125
10.1. EMC Briefing.....	125
10.2. EMC Characteristics of Integrated Controller	125
10.3. EMC Installation Guide.....	125
10.3.1 Noise Control	125
10.3.2 Wiring.....	126
10.3.3 Ground Connection	126
10.3.4 Leakage Current	127
10.3.5 Power Line Filter	127
10.4. EMC standard satisfied by Integrated Controller.....	128
Chapter 11: Accessories	129
11.1. Elevator Car Communication Board (BL2000-CZB)	129
11.1.1 Function	129
11.1.2 Terminal Specification.....	129
11.1.3 Interface Circuit.....	130
11.1.4 Terminal Definition & Specification	130
11.2. Elevator Car Call Extension Board BL2000-CEB.....	132
11.2.1 Function	133
11.2.2 Terminal Specification.....	133
11.2.3 Interface circuit	133
11.2.4 Terminal Definition/Specification	133
11.3. Elevator Landing Call & Display Unit BL2000-Hxx	134
11.3.1 Function	134

11.3.2 Terminal Specification.....	135
11.3.3 Interface Circuit.....	135
11.3.4 Terminal Definition & Specification	135
11.3.5 Setting the Landing call/Display Address	136
11.3.6 Landing Call/Display Unit Shape and Dimension	136
11.3.7 Landing call/Display Unit Specification	139
11.4. Elevator Group Control Landing Call board BL2000-HQK	139
11.4.1 Function	1
11.4.2 Terminal Specification.....	140
11.4.3 Interface Circuit.....	140
11.4.4 Terminal Definition & Specification	140
11.5. Elevator Group Control Board BL2000-QKB-V1	141
11.5.1 Function	141
11.5.2 Application	141
11.5.3 Terminal Specification.....	142
11.5.4 Interface Circuit.....	142
11.5.5 Terminal Definition & Specification	142

Appex 1: Hoistway Switches Information (Partly)..... 144

F1.1 Leveling Switches & Flag Installation	144
F1.2 Up/Down Terminal Switches Installation.....	144
F1.3 Confirm the Terminal Switches Location	145

Appendix 2: Re-Leveling & Door Open in Advance..... 146

F2.1 Safety Control Board (SJT-ZPC-V2) Drawings	146
F2.2 Safety Control Board Terminal Definition	146
F2.3 Re-Leveling & Door Open in Advance Wiring Diagram	147
F2.4 Installation for Re-Leveling Door Zone Switches.....	147

F2.5 Main Control Board Parameters Setup	148
F2.5.1 Enable this function in Special function list	148
F2.5.2 Running Parameters Setup.....	148
Appendix 3: Parameters List	149
Appendix 4: Emergency Leveling Function.....	153
F4.1 Emergency Leveling Device Model.....	153
F4.2 Emergency Leveling Device Specification	153
F4.3 Caution	153
Appendix 5: KFX & KDY Contactor	154
Appendix 6: BL6-U Series Elevator Integrated Controller Intensive Serial Communication Resolution	155
Appendix 7: Menu operation processes with Digital tubes & operation keys	157

FOREWORD

Thank you for using BL6-U series elevator controller. BL6 series elevator integrated controller is the next generation elevator control system developed by Shenyang Bluelight Automatic Technology CO. LTD. It combines elevator intellectual logic control and high-performance VVVF drive control. With user friendly interface and advanced technology integrated together, the system not only has outstanding performance, but also shows strong reliability in practice.

- ◆ The system combines intellectual logic control and high-performance VVVF drive control.
- ◆ Adopts advanced vector control technology, demodulates motor with high precision, takes full advantage of motor capacity, improves elevator performance and comfort feel.
- ◆ Adopts advanced space vector PWM calculation method, compare with traditional sine/cosine PWM method, it improves elevator operation efficiency and saves more energy.
- ◆ Adopts full function of BL2000/3000 system, maximize the performance of elevator in different application.
- ◆ When using Bluelight Synchronous machine, controller could pre-define the machine type with the most optimized model, save machine parameter input and auto-tuning process, improves the commissioning efficiency and maximize the machine performance.
- ◆ Fuzzy logic control with non-load-compensation start-up. Excellent comfort feels without lift weighing device.
- ◆ Rotating or stopping auto-tuning to get motor parameters and initial angle.
- ◆ Suitable for both gearless PM Synchronous traction machine and asynchronous induction machine.
- ◆ Brake units are built in for the whole BL3-U series to reduce external component cost.
- ◆ Internal encoder and frequency dividing interface to match different PG signal.
- ◆ Advanced double 32 bit CPU and FPGA for complete elevator control, with high reliability on elevator safety.
- ◆ Redundancy design and full software-hardware protection to achieve elevator safety and reliability.
- ◆ Passed professional EMC test, suitable for complicated job site.
- ◆ Monitor the cutting current from controller to main motor every time elevator stops.
- ◆ Generate optimized speed curve based on target floor to enable lift stop directly with high efficiency.
- ◆ CAN BUS serial communication technology with high speed and reliability. Simplify system wiring/extension.
- ◆ Adopts wireless/LAN remote control interface, convenient for long distance commissioning, maintenance and elevator monitoring.
- ◆ Equips upper monitoring and software, convenient for parameter setting, commissioning and debugging.
- ◆ Data recorder to save integrated controller operation data, help for onsite maintenance /trouble shooting.
- ◆ Parameter upload, download and copy to help onsite maintenance.
- ◆ Support ARD function with only UPS unit.
- ◆ Match GB7588-2003 (equivalent to EN-81) safety standard.


This user guide has introduced on how to use BL6-U series elevator controller. Please read it carefully and understand safety items before use (installation, running maintenance). This user guide is for elevator designer, installation and maintenance technician. The installation, commissioning and maintenance must be performed by train technician.

The intellectual property of this user guide is owned by Shenyang Bluelight Group. Any information from this user guide should not be copied without permission.

Chapter 1: SAFETY INFORMATION


1.1. LABEL DESCRIPTION

The following conventions are used to indicate precautions in this user guide. Failure to notice the precautions provided in this user guide can result in serious or even fatal injury to damage to the products or to related equipment and systems.




WARNING

Indicates precautions that if not heeded could possibly result in loss of life or serious injury.



CAUTION

Indicates precautions that if not heeded could result in relatively serious or minor injury to the operator and damage to the product. Also, it should be noted that even for precautions, in certain situations could result in serious accident.




IMPORTANT


Indicate important information that should be memorized.

1.2. SAFETY PRECAUTIONS

◆ Confirmation upon Delivery




注意




CAUTION

✧ **Never install an integrated controller that is damaged or missing components.**
Doing so can result in injury.

◆ Installation



注意



CAUTION

✧ **Always hold the case when carrying the integrated controller**
Otherwise the integrated controller may drop and damage.

✧ **Please install the device to a metal surface or other non-flammable objects**
Otherwise there is a fire-hazard potential.

✧ **Please mount the device to an object that is strong enough.**
Otherwise the integrated controller may drop and damage.

✧ **Please install the device in a dry place where water or rain could not get into.**
Otherwise the integrated controller could get damaged.

✧ **For the same cabinet to install the integrated controller and brake resistor, install cooling fan or other cooling device and make sure the air temperature entering is below 45°C**
Overheat can result in fires or other accidents.


✧ **Do not install the device in the environment containing flammable, explosive gas or nearby.**
Otherwise there is risk of fire or explosion.

✧ **Do not leave any metallic objects inside the integrated controller**
Otherwise it may damage the device and has fire-hazard potential.

◆ Wiring



- ✧ **Always turn OFF the input power supply before wiring terminals.**
Otherwise, an electric shock or fire can occur.
- ✧ **Wiring must be performed by an authorized person qualified in electrical work.**
Otherwise, an electric shock or fire can occur.
- ✧ **Be sure to ground the ground terminal. (200 V Class: Ground to 100 Ω or less, 400 V Class: Ground to 10 Ω or less)**
Otherwise, an electric shock or fire can occur.
- ✧ **Always check the operation of any Emergency stop circuits after they are wired.**
Otherwise, there is the possibility of injury. (Wiring is the responsibility of the user.)
- ✧ **Never touch the output terminals directly with your hands or allow the output lines to come into contact with the Inverter case. Never short the output circuits.**
Otherwise, an electric shock or ground short can occur.




- ✧ **Check to be sure that the voltage of the main AC power supply satisfies the rated voltage of the Inverter.**
Injury or fire can occur if the voltage is not correct.
- ✧ **Do not perform voltage withstand tests on the Inverter.**
Otherwise, semiconductor elements and other devices can be damaged.
- ✧ **Connect braking resistors, Braking Resistor Units, and Braking Units as shown in the I/O wiring examples.**
Otherwise, a fire can occur and the Inverter, braking resistors, Braking Resistor Units, and Braking Units can be damaged.
- ✧ **Tighten all terminal screws to the specified tightening torque.**
Otherwise, a fire may occur.
- ✧ **Do not connect AC power to output terminals U, V, and W.**
The interior parts of the Inverter will be damaged if voltage is applied to the output terminals.
- ✧ **Do not connect phase-advancing capacitors or LC/RC noise filters to the output circuits.**
The Inverter can be damaged or interior parts burnt if these devices are connected.
- ✧ **When a magnetic contactor is connected to the output circuits, do not switch it ON and OFF while the Inverter is running.**
Surge current will cause the over current protection circuit inside the Inverter to operate.
- ✧ **Do not make terminal DC+/ P1 and DC-short link.**
Otherwise, a fire or explosion may occur.

◆ Trial Operation



- ✧ **Check to be sure that the front cover is attached before turning ON the power supply.**
Otherwise, an electric shock may occur.
- ✧ **Do not get close to machine and related objects when choosing the error auto reset function, as the drive will automatically restart after warning reset.**
Otherwise, an injury may occur.
- ✧ **Provide a separate fast stop switch; the Digital Operator STOP Key is valid only when its function is set.**
Otherwise, an Injury may occur.
- ✧ **Reset alarms only after confirming that the RUN signal is OFF.**
Otherwise, an Injury may occur.
- ✧ **Do not perform fault operation and signal checking while the drive is running.**
Otherwise an injury may occur and the drive may get damaged.



- ✧ **Do not touch the radiation fins (heat sink), braking resistor, or Braking Resistor Unit. These can become very hot.**
Otherwise, a burn injury may occur.
- ✧ **Do not touch the braking resistor.**
Doing so can result in electric shock.
- ✧ **Be careful when changing Inverter settings. The Inverter is factory set to suitable settings.**
Otherwise, the equipment may be damaged.

◆ Maintenance and Inspection



- ✧ **Do not touch the Inverter terminals. Some of the terminals carry high voltages and are extremely dangerous.**
Doing so can result in electric shock.
- ✧ **Always have the protective cover in place when power is being supplied to the Inverter.**
When attaching the cover, always turn OFF power to the Inverter through the MCCB.
Doing so can result in electric shock.
- ✧ **After turning OFF the main circuit power supply, wait for the time indicated on the front cover, and make sure the CHARGE indicator light has gone out, and then perform maintenance and inspection.**
The capacitor will remain charged and is dangerous.
- ✧ **Maintenance, inspection, and replacement of parts must be performed only by authorized personnel. Remove all metal objects, such as watches and rings, before starting work. Always use grounded tools.**
Failure to heed these warning can result in electric shock.
- ✧ **Do not change the wiring, or remove connectors or terminal, during power on period.**
Otherwise, an electric shock may occur.



◇ A CMOS IC is used in the control board. Handle the control board and CMOS IC carefully. The CMOS IC can be destroyed by static electricity if touched directly.

◆ Other



◇ Do not attempt to modify or alter the Inverter. Doing so can result in electrical shock or injury.

1.3. Warning Labels on the Controller

Read and follow all warning labels on the controller before installation.

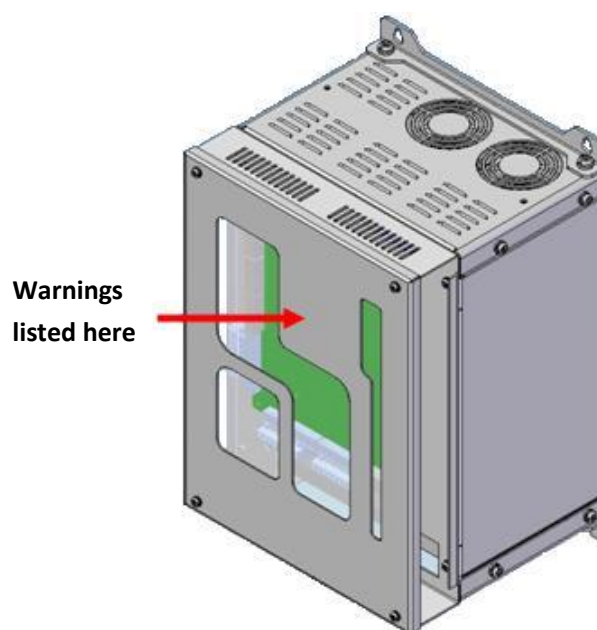
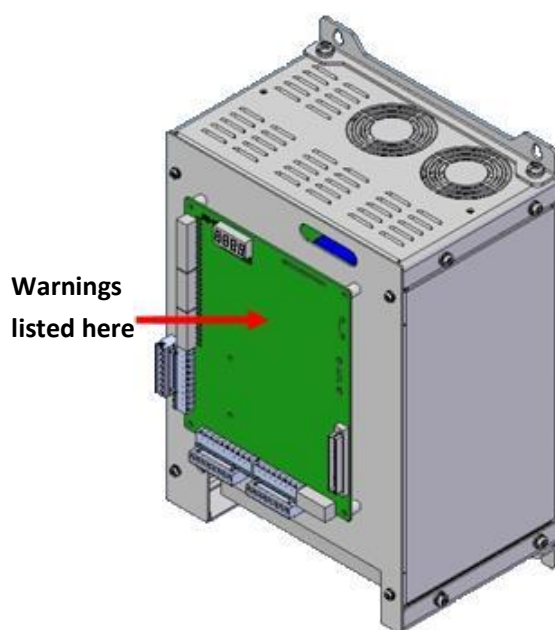


FIGURE 1.1 OPEN TYPE FIGURE 1.2 CLOSE TYPE

Text on Warning Labels

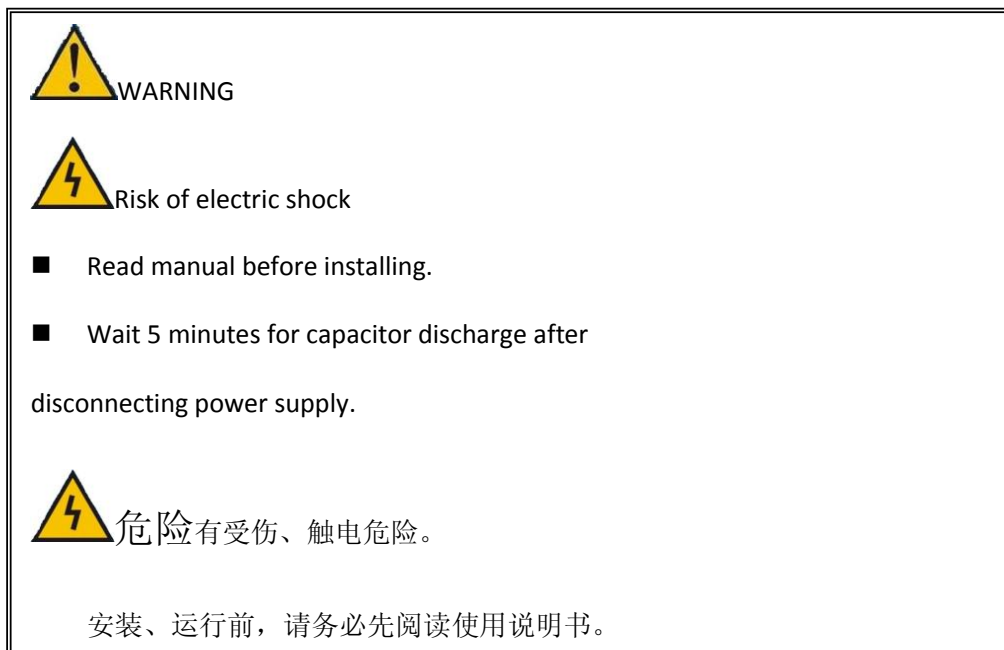


FIGURE 1.3 WARNING LABEL CONTENT

Chapter 2: Introduction and Installation

This chapter introduces models, specifications, product appearance, size, and product function of the BL6-U series elevator integrated controller, and describes the checks required upon receiving or installing an Inverter.

2.1. Model Description

The model of the elevator integrated controller on the nameplate indicates the specification, voltage level, and maximum motor capacity of the controller in alphanumeric codes. Refer to figure 2.1 for example (22kw).

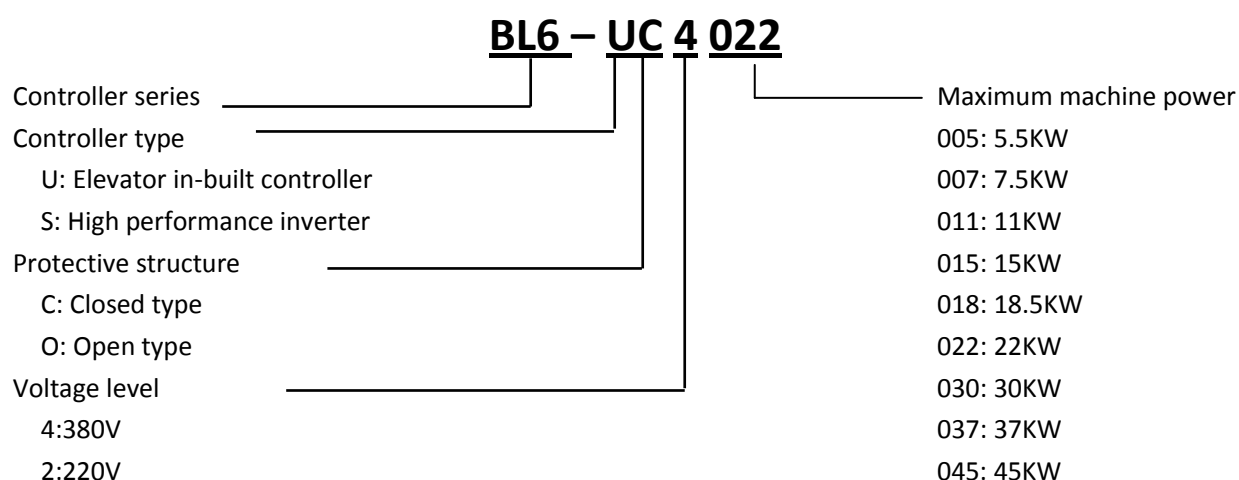


FIGURE 2.1 MODEL DESCRIPTION DIAGRAM

2.2. Nameplate Information

Nameplate information is shown in figure 2.2 below.

Nameplate attached to the right side of BL6-U series elevator controller describes the model, power, input, output, serial number, and other information about the controller.

Example: A standard nameplate for BL6-U series elevator controller: 3-phase, 400 VAC, 22KW.

MODEL: BL6-UC4022	POWER:22KW
INPUT: AC3PH 380V/400V 50/60 Hz 58A	
OUTPUT: AC3PH 0-380V 0-50Hz 48A	
S/N: 12345678901234567	MASS: 20Kg
(Bar code)	

FIGURE 2.2 NAMEPLATE INFORMATION

2.3. Specifications

Specifications of BL6-U series elevator integrated controller in chart 2.1.

CHART 2.1 SPECIFICATIONS

MODEL BL6-U□40□□		4002	4003	4005	4007	4011	4015	4018	4022	4030	4037	4045
MAX MOTOR POWER(KW)		2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45
RATED OUTPUT	RATED OUTPUT CAPACITY(KVA)	4.5	6.8	9	12	18	22	27	32	43	53	63
	RATED OUTPUT CURRENT(A)	5.5	9	14	18	27	34	41	48	65	80	96
	MAX OUTPUT VOLTAGE(V)	3-PHASE,AC380 (CORRESPONDING TO THE INPUT VOLTAGE)										
	RATED FREQUENCY(Hz)	50										
	MAX OUTPUT FREQUENCY(Hz)	120										
INPUT POWER	RATED VOLTAGE (V)	3-PHASE,AC380										
	RATED FREQUENCY (Hz)	50										
	RATED INPUT CURRENT (A)	6.5	11	17	22	32	41	49	58	78	96	115
	ALLOWABLE VOLTAGE FLUCTUATION	±15%										
	ALLOWABLE FREQ FLUCTUATION	±5%										
MODEL BL6-U□20□□		2002	2003	2005	2007	2011	2015	2018	2022			
MAX MOTOR POWER(KW)		2.2	3.7	5.5	7.5	11	15	18.5	22			
RATED OUTPUT	RATED OUTPUT CAPACITY (KVA)	4.5	7	10	14	20	27	30	37			
	RATED OUTPUT CURRENT(A)	11	17.5	25	33	49	66	80	92			
	MAX OUTPUT VOLTAGE(V)	3-PHASE, AC220 (CORRESPONDING TO THE INPUT VOLTAGE)										
	RATED FREQUENCY(Hz)	50										
	MAX OUTPUT FREQUENCY(Hz)	120										
INPUT POWER	RATED VOLTAGE (V)	3-PHASE,AC220										
	RATED FREQUENCY (Hz)	50										
	RATED INPUT CURRENT (A)	12.5	21	27	40	52	68	85	96			
	ALLOWABLE VOLTAGE FLUCTUATION	±15%										
	ALLOWABLE FREQ FLUCTUATION	±5%										
BASIC FEATURES	ELEVATOR CONTROL MODE	SIMPLEX COLLECTIVE, DUPLEX COLLECTIVE, 3~8 UNITS GROUP CONTROL										
	ELEVATOR SPEED RANGE	0.5~4M/s										
	APPLICABLE HIGHEST FLOOR	64										
	APPLICABLE ELEVATOR TYPE	PASSENGER, HOSPITAL, PANORAMIC, GOODS, VILLA ELEVATOR										
	APPLICABLE MOTOR	GEAR TRACTION MACHINE, GEARLESS TRACTION MACHINE										
	COMMUNICATION MODE	CAN BUS SERIAL COMMUNICATION										
	LEVELING ACCURACY	≤3MM										
DRIVE FEATURES	CONTROL MODE	SPACE VECTOR PWM(SVPWM) CLOSED LOOP VECTOR CONTROL										
	CARRIER FREQUENCY	8KHZ (6~15KHZ ADJUSTABLE)										
	SPEED CONTROL RANGE	1:1000										
	SPEED CONTROL ACCURACY	±0.05%(25C±10C)										
	SPEED RESPONSE	30Hz										
	TORQUE LIMIT	YES (SET BY PARAMETER)										

CHART2.1 SPECIFICATIONS (CONT'D)

DRIVE FEATURES	TORQUE ACCURACY	±5%
	FREQUENCY CONTROL RANGE	0~120Hz
	FREQUENCY ACCURACY	DIGITAL REF: ±0.01%(-10C ~+40C)
	FREQUENCY REF RESOLUTION	DIGITAL REF: 0.01Hz
	OUTPUT FREQ RESOLUTION	0.01Hz
	OVERLOAD CAPACITY	150% RATED CURRENT 60s; 180% RATED CURRENT 10s
	START UP TORQUE	180% RATED CURRENT 0Hz
	ACCEL/DECCEL TIME	0.001~600s
	MAIN CONTROL FUNCTION	START WITHOUT LOAD COMPENSATION, BATTERY OPERATION, AUTO TUNNING, LOAD COMPENSATION, COOLING FAN CONTROL, BASE BLOCK, TORQUE LIMIT, CAN COMMUNICATION REF, ACCELERATION/ DECELERATION TIME, S CURVE ACCELERATION/ DECELERATION, MONITOR OF MAIN MACHINE FOR WHICH ELECTRIC CURRENT CAN BE EFFECTIVELY INTERDICT OR NOT WHEN THE CAR STOP, INTERNAL BRAKE, PG FREQ DIVIDING OUTPUT, AUTOMATIC FAULT RETRY, AUTOMATIC FAULT RESET, PARAMETER COPY
CONTROL INPUT/OUTPUT	OC INPUT CONTROL POWER	ISOLATED EXTERNAL DC24V
	RELAY OUTPUT POWER	ISOLATED INTERNAL DC24V
	LOW OPTO-ISOLATED INPUTS	26-CHANNEL SWITCHES: RATED LOAD: 7mA/DC24V, UPPER FREQ 100Hz
	HIGH OPTO-ISOLATED INPUTS	3-CHANNEL SWITCHES: RATED LOAD: 8mA/AC110V, UPPER FREQ 100Hz
	PROGRAMMABLE RELAY OUTPUT	12-CHANNEL SWITCHES: 9 CHANNELS: 1NO, CONTACTOR CAPACITY: 5A/30VDC, 5A/250VAC 3 CHANNELS: 1NO, CONTACTOR CAPACITY: 8A/30VDC, 10A/250VAC
	CAN COMMUNICATION INTERFACE	2 CHANNELS: DUPLEX/ GROUP CONTROL, HOP/COP, REMOTE WIRELESS MONITORING
	RS-232 COMMUNICATION INTERFACE	1 CHANNEL: DIGITAL OPERATOR/ PC MONITORING/ PROGRAMMABLE INTERFACE
DISPLAY	DIGITAL OPERATOR	LCD DISPLAY IN CHINESE/ENGLISH
	MONITORING SOFTWARE INTERFACE	DISPLAY PARAMETERS, ELEVATOR RUNNING STATUS, DIGITAL WAVE
MAIN PROTECTION FUNCTION	OVER CURRENT	STOP WHEN CURRENT EXCEED 200% RATED OUTPUT CURRENT
	FUSE	STOP AT FUSE BRAKE AT MAIN CIRCUIT
	OVERLOAD PROTECTION	STOP AT 150% RATED CURRENT 60s/180% RATED CURRENT 10s
	OVERVOLTAGE PROTECTION	STOPS AT DC BUS VOLTAGE OVER 780V(FOR 400V DRIVE)
	UNDERVOLTAGE PROTECTION	STOPS AT DC BUS VOLTAGE UNDER 380V(FOR 400V DRIVE)
	HEATSINK OVERHEAT PROTECTION	PROTECT BY THERMISTORS
	IPM INTERNAL PROTECTION	IPM OVER CURRENT/ OVERHEAT/ SHORT CIRCUIT/ UNDERVOLTAGE PROTECTION
	MOTOR PROTECTION	PROTECT BY ELECTRIC THERMAL DEVICES
	IMPACT RESTRAINING CIRCUIT	PROTECT BY CONTACTOR FEEDBACK
	OVERSPEED PROTECTION	PROTECT AT SPEED EXCEED THE MAXIMUM ALLOWABLE SETTING
	SPEED DEVIATION PROTECTION	PROTECT AT SPEED DEVIATION EXCEEDS ALLOWABLE VALUE
	PG FAULT PROTECTION	PROTECT AT PG DISCONNECTION/ PHASE ERROR
	AUTO-TUNING PROTECTION	PROTECT AT AUTO-TUNNING FAULT.
	OPEN-PHASE PROTECTION	PROTECT AT INPUT/OUTPUT PHASE LOST

CHART2.1 SPECIFICATIONS (CONT'D)

MAIN PROTECTION FUNCTION	DOOR INTERLOCK FAULT	PROTECT AT DOOR INTERLOCK CIRCUIT OPEN WHEN RUNNING
	SAFETY CIRCUIT FAULT	PROTECT AT SAFETY CIRCUIT OPEN WHEN RUNNING
	BRAKE CIRCUIT FAULT	NO BRAKE OPEN FEEDBACK SIGNAL AFTER OUTPUT BRAKE OPEN COMMAND
	LEVELING ZONE FAULT	PROTECT AT LEVELING ZONE SIGNAL FAULT
	OUTPUT CONTACTOR FAULT	PROTECT AT OUTPUT CONTACTOR FAULT
	RUNNING TIME PROTECTION	PROTECT AT SIGNAL RUNNING TIME EXCEEDS LIMIT
	FLOOR COUNTING FAULT	PROTECT AT FLOOR COUNTER FAULT
	COMMUNICATION INTERFERENCE FAULT	PROTECT AT COMMUNICATION INTERFERENCE FAULT
	HOISTWAY PARAMETER LEARNING FAULT	HOISTWAY PARAMETER LEARNING FAULT PROTECTION
STRUCTURE	PROTECTION DEGREE	C: CLOSED IP20; O: OPENIP00
	COOLING	FORCED AIR COOLING
	INSTALLATION	HANGING INSTALLATION
USING AMBIENCE	AMBIENT TEMPERATURE	-10C~+40C
	HUMIDITY	5~95%RH, NON-CONDENSING
	STORAGE TEMPERATURE	-20C ~+60C
	APPLICATION SITUATION	IN DOORS, WITHOUT DIRECT SUNLIGHT, DUST, CORROSIVE/EXPLOSIVE GASES, OIL FOG, VAPOR, WATER DRIPPING, OR SALTY SUBSTANCES
	ALTITUDE	<1000M
	VIBRATION	10~20Hz,<9.8M/S ² ;20~50Hz,<2M/S ²

2.4. Appearance and Exterior Dimension

BL6-U series elevator controller has open type and closed type .Different from BL3-U series elevator controller, BL6-U can be installed only by hanging method.Refer to figure 2.3-2.6 and chart 2.2-2.3 for appearance and exterior dimension of BL6-U series elevator controller.

2.4.1 Open type

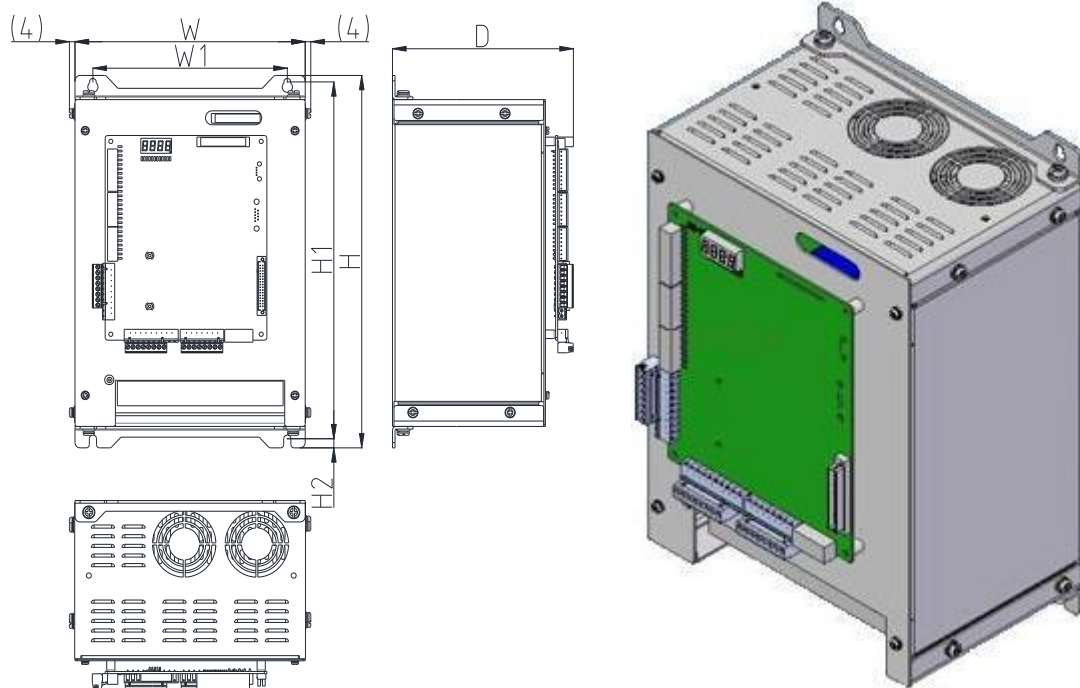


FIGURE 2.3 OPEN TYPE EXTERIOR DIMENTIONFIGURE 2.4 OPEN TYPEAPPERANCE

CHART 2.2 OPEN TYPE EXTERIOR DIMENSION

Voltage level	Max Motor Power (KW)	ControllerModel	Figure	Exterior Dimension						Weight kg
				W	H	D	W1	H1	H2	
400V 3-phase	2.2	BL6-UO4002	Figure 2.3	200	290	178	170	275	8	5.6
	3.7	BL6-UO4003								
	5.5	BL6-UO4005-S								
		BL6-UO4005		225	348	193	190	333	8.5	6.5
	7.5	BL6-UO4007								7
	11	BL6-UO4011								8
	15	BL6-UO4015								8.5
	18.5	BL6-UO4018								13
	22	BL6-UO4022		280	418	203	230	403		13
	30	BL6-UO4030		320	480	228	270	460	10	19
200V 3-phase	37	BL6-UO4037	Figure 2.3	441	645	324	310	626	10.5	46
	45	BL6-UO4045								
	2.2	BL6-UO2002		200	290	178	170	275	8	5.6
	3.7	BL6-UO2003								
	5.5	BL6-UO2005								
	7.5	BL6-UO2007		225	348	193	190	333	8.5	7
	11	BL6-UO2011								8
	15	BL6-UO2015		320	480	228	270	460	10	8.5
	18.5	BL6-UO2018								13
	22	BL6-UO2022		441	645	324	310	626	10.5	19
										45

2.4.2 Closed Type

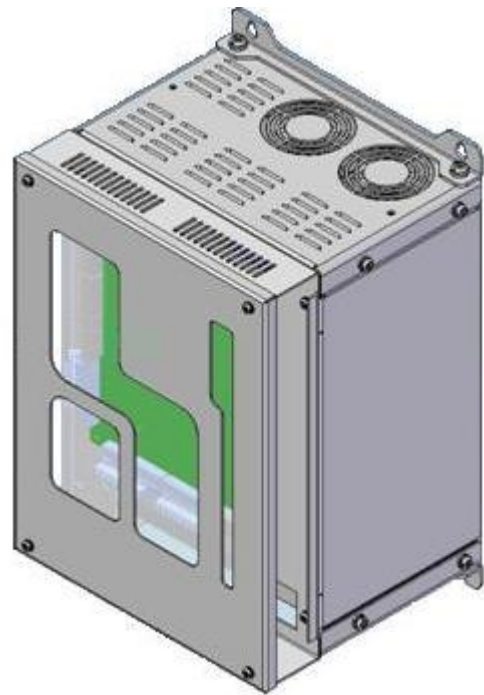
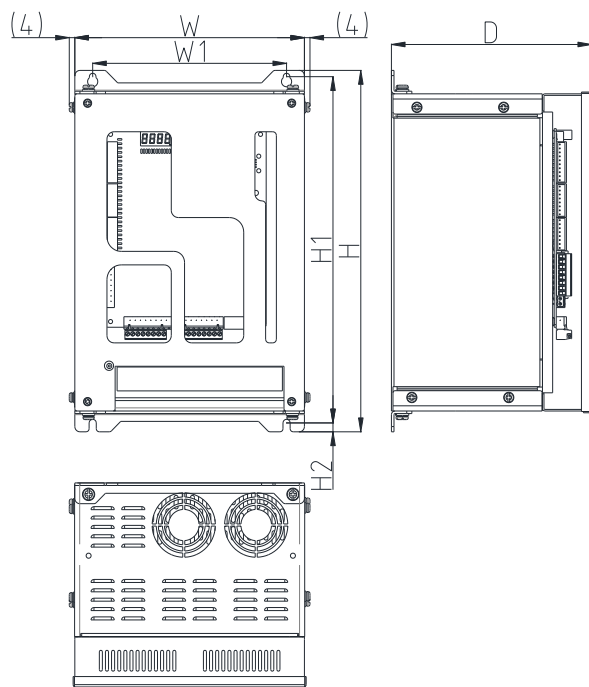


FIGURE 2.5 CLOSED TYPE EXTERIOR DIMENSION FIGURE 2.6 CLOSE TYPE APPERANCE

CHART 2.3 CLOSE TYPE INVERTER EXTERIOR DIMENSION

Voltage Level	Max Motor Power (KW)	ControllererModel	Figure	Exterior Dimension						Weight Kg
				W	H	D	W1	H1	H2	
400V 3-phase	5.5	BL6-UC4005	Figer2.5	225	348	200	190	333	8.5	6.5
	7.5	BL6-UC4007								7
	11	BL6-UC4011								8
	15	BL6-UC4015								8.5
	18.5	BL6-UC4018		280	418	210	230	403	10	13
	22	BL6-UC4022								13
	30	BL6-UC4030								19
	37	BL6-UC4037		390	650	300	340	600	10.5	46
	45	BL6-UC4045								46
200V 3-phase	3.7	BL6-UC2003	Figer2.5	225	348	200	190	333	8.5	7
	5.5	BL6-UC2005								8
	7.5	BL6-UC2007								8.5
	11	BL6-UC2011		320	480	235	270	460	10	13
	15	BL6-UC2015								19

2.5. Confirmation upon Delivery

Check below items when receiving the products.

CHART 2.4 THINGS TO CHECK UPON DELIVERY

NOTES	METHOD
Check if product model is correct.	Check the model on the nameplate.
Check if product is broken.	Check exterior for any damage caused by shipment.
Check if mounting structure is loose.	Check mounting structure. Tighten the loose components with a screwdriver, if required.
Check if main control board is loose.	Remove the front cover, and check mounting structure. Tighten the loose components with a screwdriver, if required.

With any abnormalities above, please contact the company or regional office.

2.6. Installation

2.6.1 Installation Site

Install BL6-U series elevator controller in an area that meets the requirements listed in chart 2.5

CHART 2.5 INSTALLATION ENVIRONMENT REQUIREMENTS

Type	Ambient Temperature	Ambient Humidity
Open	-10 °C ~ +45 °C	5~95%RH (No condensation)
Close	-10 °C ~ +40 °C	5~95%RH (No condensation)

Installation of controller should note the following:

1. Install the controller in a clean location which is free from oil mist and dust, or in a fully closed control cabinet which is completely shielded from floating dust.
2. Install the controller in a place which metal powder, oil, water, and other foreign bodies can not enter.
3. Do not install the controller in or nearby wood and other combustibles.
4. Install the controller in a place without radioactive substances.
5. Install the controller in a place without harmful gas and liquid.
6. Install the controller in a place without vibration.
7. Install the controller in a place without chlorides.
8. Install the controller in a place without direct sunlight.

2.6.2 Temperature Requirement

To enhance the reliability, the controller should be installed in an environment temperature is not easy to rise. When installed in a cabinet, cooling fans or air conditioner are required to keep air temperature in the cabinet below 45°C.

2.6.3 Protect the controller from Foreign Object

Place a cover over the controller during installation to shield it from metal powder produced by drilling. Be sure to remove the cover from the controller after the completion of installation. Otherwise, ventilation will be reduced, causing the controller to overheat.

2.6.4 Removing and attaching the Terminal Cover

Refer to figure 2.7-2.8. Note the open type BL6-U integrated controller terminal cover need not remove or attach.

◆ Remove terminal Cover

Release the screw at the terminal cover (arrow), raise the cover according to arrow direction to remove the cover for wiring.

◆ Install front cover

Complete wiring, and tighten the front cover in reverse order of removing terminal cover.

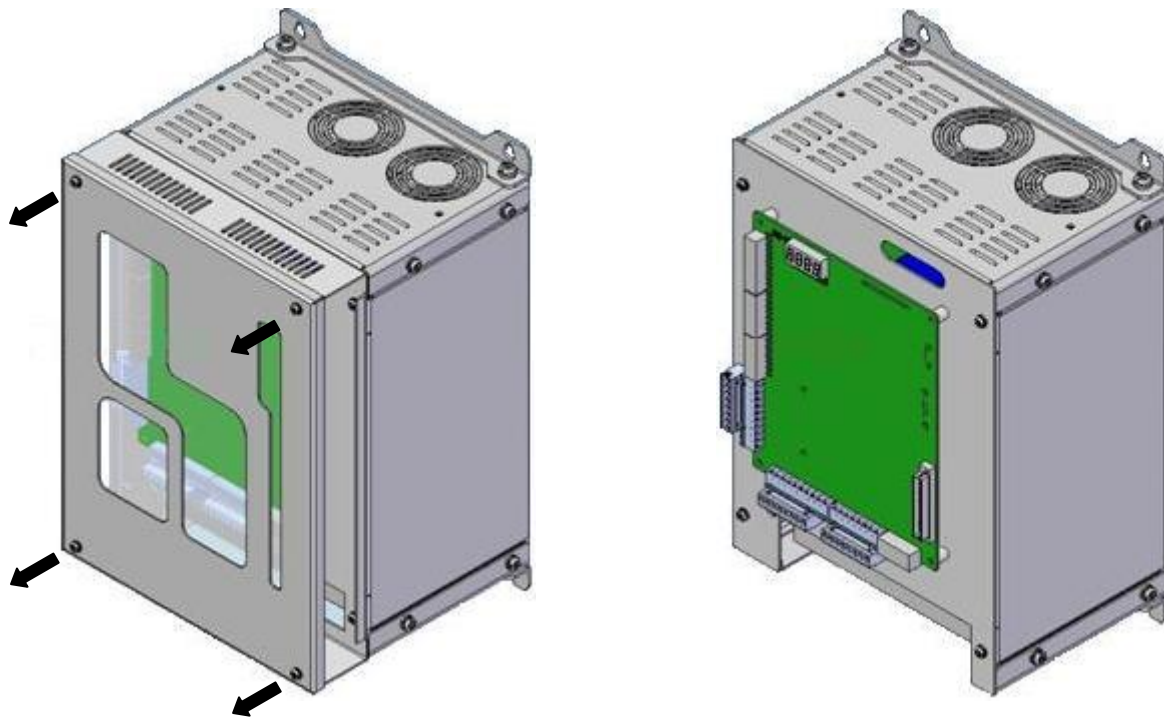


Figure 2.7 Remove terminal cover on close type Figure 2.8 Open type elevator controller

2.6.5 Installation Orientation and Space

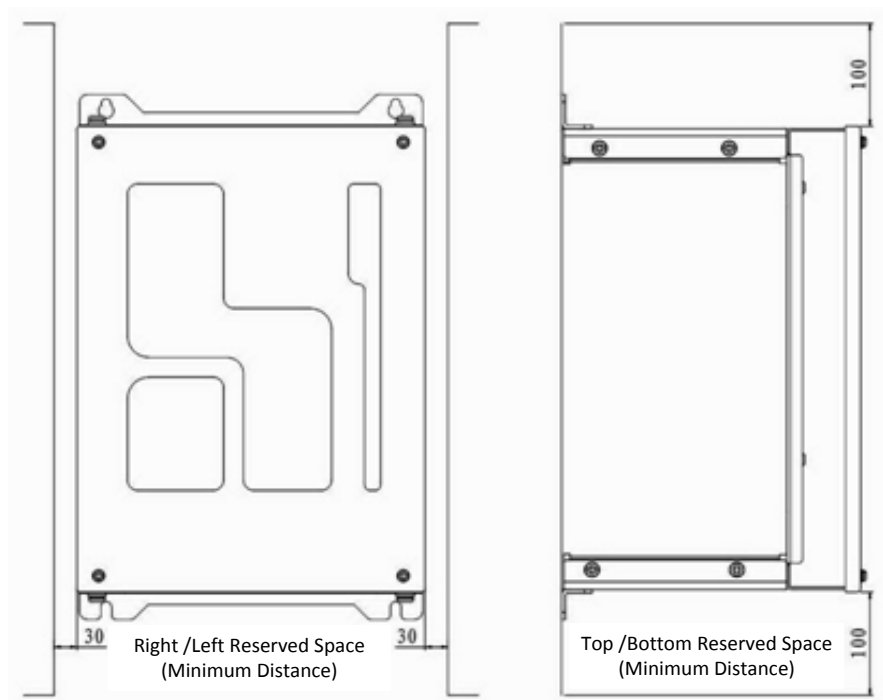


Figure 2.9 Driver Installation Orientations and Space

Install the controller vertically to avoid reducing the cooling effect. When installing the controller, please make sure that installation space is greater than that shown in figure 2.9, in order to ensure that the BL6-U series elevator integrated controller normal working and cooling.

2.7. Braking Resistance Configuration

Elevator is a typically potential energy load type device. When the elevator is in brake mode, the electricity feedback of motor will make the DC bus voltage increase. Some additional brake component should be applied to release the energy. Otherwise, over-voltage protection will be activated. BL6-U series elevator controller has internal brake unit, customers just need to equip appropriate braking resistor. The numerical value of resistance and power depend on the motor capacity.

Refer to chart 2.6 for braking resistance configuration specific.

CHART 2.6 BRAKING RESISTOR VALUE LIST

Model	Motor Power (kW)	Braking Resistor value (Ω)			Braking Resistor Total Power value (W)	
		Min	Typ.	Max	Synchronous	Induction
400V (VoltageRange: 85%≤380V 3-phase ≤120%)						
BL6-U□4002	2.2	90	100	200	600	500
BL6-U□4003	3.7	70	80	110	1100	800
BL6-U□4005	5.5	56	75	90	1600	1200
BL6-U□4007	7.5	46	65	70	2200	1600
BL6-U□4011	11	28	40	45	3500	2500
BL6-U□4015	15	28	30	35	4500	3500
BL6-U□4018	18.5	17	25	29	5500	4500
BL6-U□4022	22	17	20	24	6500	5000
BL6-U□4030	30	11	16	20	9000	7000
BL6-U□4037	37	9	12	16	11000	9000
BL6-U□4045	45	9	10	14	13500	10000
200V (VoltageRange: 85%≤ 220V 3-phase ≤120%)						
BL6-U□2002	2.2	45	50	56	600	500
BL6-U□2003	3.7	28	30	37	1100	800
BL6-U□2005	5.5	20	24	27	1600	1200
BL6-U□2007	7.5	15	20	21	2200	1600
BL6-U□2011	11	10	12	14	3500	2500
BL6-U□2015	15	8	10	11	4500	3500
BL6-U□2018	18.5	7	8	9	5500	4500
BL6-U□2022	22	5	8	8	6500	5000

2.8. Product Function

Functions list shown in chart 2.7-2.10.

CHART 2.7 BASIC FUNCTION LIST

No.	Name	Purpose	Description	Note
1	Automatic Run		1.Door auto open at stop; 2.Door auto close in delay time; 3.Door close at close button pushed; 4.Car call register, auto cancel wrong call; 5.Landing call stop car in same direction 6. Car service opposite direction landing call at top/bottom floor	1. Turn all inspection switch to normal state; 2. Turn Auto/Attendant switch to Auto state; 3. The other two Auto/Inspection switch at Auto state;

CHART2.7 BASIC FUNCTION LIST (CONT'D)

No.	Name	Purpose	Description	Note
2	Attendant Run		1.Door auto open at stop; 2.Door close at close button pushed; 3.Car call auto register/ cancel wrong call; 4.Landing call stop car in same direction;	1. Turn all inspection switch to normal state; 2. Turn Auto/Attendant switch to Attendant state; 3. The other two Auto/Inspection switch at Auto state;
3	Inspection Run	Used at System Commissioning; Maintenance	When push up/down button in inspection mode, car runs up/down at inspection speed. Car stop once button released.	Auto/Inspection switch at car top, car and control cabinet, priority from high to low.
4	Auto door open at power on	Auto door open	If car at leveling zone at power on, door open automatically.	
5	Auto door close in delay time	Door keep opening	After door complete opened, it keep open and will auto close after delay time.	1.Delay time is set through open door holding time parameter (T) 2.T-2s with only landing call 3.T+2s with both landing call and car call.
6	Door OP at current floor landing call	Door open for landing call	If landing call on the same floor at door closing or door closed but car not running, door will open automatically.	Delay time is set by open door holding time.
7	Safety Plate/light curtain	Close door safely	If safety plate touched/light curtain covered, door will open and close again.	Door safety plate/light curtain reset, door automatically close again.
8	Overload door keep open	Wait for load reduction	Door open at overload, with overload light on, buzzer sounds, CZ display on COP. Car not running.	Elevator back to normal state when overload is cleared.
9	Full-load drive by pass	Run to nearest registered floor	At full load, car only respond to car call, not to landing call.	Elevator back to normal state when overload is cleared.
10	Attendant control by pass	VIP Run	At attendant run, press pass over button, elevator only responds to car call.	
11	Operation mode display	Adjust/Maintenance	Elevator Running mode, direction, floor, door mode, load and fault information display on integrated controller LCD.	
12	Auto control light	Energy Saving	Car box light turned off if elevator is not used for 15minutes. Turned on after receiving any call.	

CART 2.7 BASIC FUNCTION LIST (CONT'D)

No.	Name	Purpose	Description	Note
13	Fire-Service Mode		<p>System enters fire-service mode when fire switch is closed:</p> <ol style="list-style-type: none"> 1.Clears up all landing/car call; 2.Auto return to fire floor 3.Door keep opens 4.Output fire linkage signal after return to fire floor. 5.If elevator runs in opposite direction, stop at nearest floor, do not open door, run directly to fire floor, door keep opens. 	<p>Two fire-service modes for option:</p> <p>Fire mode 1: Elevator stop running after returning to fire floor.</p> <p>Fire mode 0:</p> <ol style="list-style-type: none"> a) Landing call disabled; b) Door keep opens at fire floor; c) To run elevator, fireman should first choose the target floor, press and hold the close door button till door close, elevator run; if close door button is released before door closed, door open again. d) Arriving target floor, press and hold open door button till door opens, otherwise door close again. e) Can only set one floor every running.
14	Auto stop at elevator fault	Free passengers	When car stop outside landing zone at elevator fault, it will auto crawl to leveling zone in middle floor direction and open door.	Only if safety circuit and inverter are both working normal.
15	Parking	Stop Running	<p>Elevator enters parking mode at electric lock closed.</p> <ol style="list-style-type: none"> 1.Elevator does not respond to landing call, service all car call and return to parking floor (adjustable); 2. If no car call, elevator directly return to parking floor; 3. After return to parking floor: <ol style="list-style-type: none"> a. HOP and COP display parking sign "ZT"; b. Do not respond to car/landing call; c. After 10s, door close, car box light and HOP/COP display turn off. d. Press any COP/Open, close door button, car box light turn on; e. Press Open/Close door button, car door close again and cut car box light after 10s. 	<ol style="list-style-type: none"> 1. If elevator at inspection mode when close electric lock, car cannot auto return to parking floor. Other functions remain. 2. Integrated controller in working state when elevator at parking mode. Once open electric lock, elevator will run normally.

CHART 2.7 BASIC FUNCTION LIST (CONT'D)

No.	Name	Purpose	Description	Note
16	Duplex Control	Two elevator optimized control	1. At landing call, both elevator answers based on their running state and location, and only one elevator respond to increase the running frequency. 2. When both elevators at waiting state, one return to waiting floor (normally G floor), the other one stays at current location.	To achieve duplex, connect two integrated controllers with the cable provided and set duplex parameter accordingly.
17	Group Control	Multi-Elevator	Control up to 8 elevators together	

CHART 2.8 SPECIAL FUNCTION LIST

No.	Name	Purpose	Description	Note
1	Hoistway Learning	Measure, store hoistway data.	In inspection mode, from bottom terminal switch to top terminal switch, measure and store the landing zone and hoistway switch position.	Hoistway learning may be terminated in unusual condition and system will give error code accordingly. Please follow Table 8.2 for detail error codes. ▲ Note: When hoistway learning stops, only when “ Success ” is displayed on the operator means hoistway learning success.
2	Double press Cancellation	Cancel car call	Press car call button again could cancel such call. (Button answer light off)	Such function is also achievable when elevator is not running.
3	Anti-mischief	Cancel car call at terminal	1. When elevator reaches terminal switch, clear all car call. 2. For elevator with weighing device, only last 3 car calls are registered at light load.	
4	Landing call button stuck diagnose	Repair indication	If one landing call button is pressed for more than 20s, it is considered stuck (cannot reset), such call is not registered, button answer light flashes.	Exit such state when button is reset.
5	Repeat close door		At close door command, if door interlock circuit not connected in set time, door open and close again.	If repeat 5 times and door interlock circuit still not close, elevator stops for service, display error code accordingly.

CHART 2.8 SPECIAL FUNCTION LIST (CONT'D)

No.	Name	Purpose	Description	Note
6	Machine room floor selection	Maintenance	Use hand operator to input car call	
7	Machine room floor open/close door	Maintenance	Use hand operator to input open/close door command	
8	Non-Stop Floor		User can set any floor not to stop	
9	Homing floor set	Wait at homing floor	In auto mode, with no landing/car call for certain time, car goes to homing floor.	Can only set one homing floor.
10	Display character set	Change display of certain floor	Display character on any floor can be set through hand operator. (Character or figure)	
11	Attendant Direction Set	VIP Mode	Choose elevator direction through up/down button before running	Only available in Attendant mode.
12	Auto Start/Stop Elevator Service	Automatic start/stop elevator service	User may set elevator on/off time by practical requirement.	1. Time is set by 24hrs 2. Cancel this function by setting both on/off time to 00. 3. This function is only available with electric lock open, otherwise elevator in parking mode. 4. To enable elevator service in off time: a. Close electric lock, wait for 1s, reopen electric lock to enter force on mode, elevator could use normally. b. Close electric lock after use, wait for 1s, reopen electric lock to exit force on mode, elevator in off time.
13	Special Running	Special Passenger Service	Landing call is invalid, elevator controlled by attendant. Door control mode is attendant mode.	Only available with special buttons.
14	Door open time delay set	Delay the door open time	Press this button before car door fully closed, door open time will be delayed to set time.	1. Must have door open delay button 2. Only available in Auto Mode 3. Normally used in bed elevator system
15	Rear door control	Elevator with two door	Control rear door operation on each floor	Follow section 6.8 for rear door mode setting.

CHART2.8 SPECIAL FUNCTION LIST (CONT'D)

No.	Name	Purpose	Description	Note
16	Trouble Shooting	Automatic find and record fault data.	1. When fault happens, system diagnoses fault condition and display error code on LCD. 2. System record the last 30 fault data (fault time/class/floor) in error report menu for further reference.	For trouble shooting error code please follow Chart 8.1 Trouble shooting for Elevator
17	Interference evaluation	Inspect site interference condition	Evaluate the site shielding condition, including control cabinet/hoistway connection to ground, help to increase resistance to interference.	This function is only available after elevator commissioning and testing.
18	Encoder Evaluation	Inspect encoder output signal	Analyze the evaluate encoder output signal, help service team on site maintenance to eliminate elevator shock and leveling issue.	Provide direct evidence on encoder quality and interference condition.
19	Emergency Auto Leveling	After power cut, elevator powered by emergency leveling device, level to nearby landing zone.	After power cut, elevator powered by emergency leveling device and level to nearby landing zone to free the passenger. Such function must meet certain requirements: 1. After power cut, elevator powered by emergency leveling device. (integrated controller I/O board terminal X18 enable); 2. Elevator NOT in inspection mode; 3. Elevator NOT at landing zone; 4. Elevator can run normally; 5. Safety/Door inter-lock circuit close; Elevator emergency leveling procedures when not at landing zone: 1. Determine run direction based on load condition (need weighing device); 2. After leveling to nearby floor, door keep open, and emergency leveling device cuts off power. 3. After power recovery, if system record a history of emergency leveling action, elevator return to bottom floor to re-calibrate hoistway data. When at landing zone , emergency leveling device supply power, elevator door open (integrated controller I/O board terminal X18 must enable).	Because the power of emergency automatic leveling running is supplied by elevator emergency automatic leveling controller device, drawings of controller system is different from standard drawing. When you need this function, please ask technique department for drawings accordingly. Use SYT-YY series elevator emergency automatic leveling controller of our company, reference to: <use description of 11.6—STJ-YY series elevator emergency automatic leveling controller >.

CHART2.8 SPECIAL FUNCTION LIST(CONT'D)

No.	Name	Purpose	Description	Note
20	Input port evaluation	Inspect input signal interference	System evaluates and displays the input signal quality, help service team to increase the hoistway cable resistance to interference and eliminate elevator COP/HOP display fault information and leveling issue.	Provide direct evidence on input signal interference.
21	Elevator for handicapped	Special COP/HOP for handicapped	<p>1.start elevator for handicapped function through parameter setting;</p> <p>2. COP: Car call function & door open/close button.</p> <p>3. HOP: Recognize for handicapped calling through different floor;</p> <p>4. Principle: When leveling, opening time will keep longer if handicapped is on this floor(the opening time can be changed); When press cop opening button, opening time will keep longer.</p>	<p>1.Set HOPaddress: When use elevator for the handicapped (FU14=ON) , HOP set as below: 1~32for normal floor,1for bottomfloor, 2for second floor, with total 32 floors. 33~64for handicapped floor. 33 for bottom floor, 34for second floor, up to64, with total32 floors. If building has only one HOP button, keep the other address empty.</p> <p>2.Link Car call button: 1~N floor internal select button link to car box1~N floor internal select joint as normal internal select. N+1~N+Nas handicapped cop 1~N floor internal select. COPDoor open 2,Door close 2 input as handicapped door control input (Caution: Elevator for the handicapped cannot use together with rear door function.)</p>
22	Door open in advance	When run at low speed, door open beforehand to improve running efficiency.	<p>Elevator reduce speed when approaching target landing zone, if elevator meets the condition below, door open in advance:</p> <p>1. Elevator run normally, reaching target landing zone;</p> <p>2. Two leveling sensors enable;</p> <p>3. Car speed lower than the set protection speed;</p> <p>4. Controller low speed output enable;</p> <p>5. Safety board output enable;</p>	<p>In special function select parameter FU20=ON to enable opening in advance;</p> <p>For opening in advance/re-leveling function principle/wiring diagram please seeAppendix 2- opening in advance/re-leveling function description.</p>

CHART2.8 SPECIAL FUNCTION LIST (CONT'D)

No.	Name	Purpose	Description	Note
23	Re-leveling Function	To achieve re-leveling	<p>Elevator stops at one floor, when passengers move in/out, steel rope will have elastic deformation, and car may move out of landing zone. This function enables elevator move in low speed back to leveling zone with door open.</p> <p>Condition of re-leveling:</p> <ol style="list-style-type: none"> 1. Elevator stops and leave landing zone; 2. Two leveling sensors enable; 3. Elevator speed slower than set value; 4. Controller low speed output enable; 5. Safety electric board output enable; 	<p>In special function select parameter FU19=ON to enable re-leveling function;</p> <p>For opening in advance/re-leveling function principle/wiring diagram please see Appendix 2- opening in advance/re-leveling function description.</p>

CHART 2.9 MAIN SAFETY PROTECTION FUNCTION

No.	Name	Elevator Description
1	Safety Circuit	Safety circuit open, entire system stops immediately.
2	Door interlock	Elevator can only run with all door interlock closed, otherwise entire system stops immediately.
3	Operation Contactor	System check operation contactor constantly, if found any abnormality, system stop immediately.
4	Brake checking protection	The detection switch of brake arm makes a real-time inspection of opening/closing of the brake. If the brake fails to open as per requirements, the system will prevent the elevator from start.
5	Terminal speed-change&correct floor display	If the elevator detects a terminal switch during running, it will be forced to decelerate and meanwhile automatically correct the floor display.
6	Position-limit protection	If the elevator detects a limit switch, the entire system stops immediately.
7	Limit protection	If the elevator runs to trigger a limit switch, the entire system stops immediately.
8	Instantaneous over-current protection	If detects over 200% rated output current system stops immediately.
9	Fuse blowing protection	When fuse blow, the entire system stops immediately.
10	Overload protection	If detects over 150%/180% rated current, system will stop after 60s/10S.
11	Over-voltage protection	Main DC bus voltage higher than 780V, system stop (400V)
12	Under-voltage protection	Main DC bus voltage lower than 380V, system stop (400V)
13	Radiator overheated protection	Thermal resistor protection
14	IPM interior protection	IPM over current、overheated、short circuit、under-voltage protection
15	Electric motor protection	Electric thermal protection

CHART 2.9 MAIN SAFETY PROTECTION FUNCTION (CONT'D)

No.	Name	Elevator Description
16	Impact restrain loop failure protection	Through contactor joint to feedback protection
17	Over speed protection	Protect when the speed is faster than allowed
18	Over deviation protection	Protect when speed deviation is larger than allowed.
19	PG fault protection	Protect when PG braking or phase stagger.
20	Self-study protection	Protect when self-study of motor parameter unusual.
21	Phase lack protection	Protect when lack of in/output phase
22	Door drive signal	Protect when door signal unusual.
23	Running time protection	Protect when once run time is longer than limited time.
24	Counter of floor protection	Protect when floor counter is wrong.
25	Trouble of communication immunity	Protect when communicate interrupt.
26	Hoistway learning error	Protect when have trouble in hoistway learning

CHART2.10 OPTIONAL FUNCTION LIST

No.	Name	Elevator Description
1	Remote Monitoring	Monitor elevator running status in monitor current through wire/wireless network;
2	Arrival Gong	Clock announce;
3	Voice Synthesizer	Voice announce;
4	Identity Control	ID/IC Car control;
5	Weighing device	Weighing device for elevator;

Chapter 3: Wiring

This chapter describes the terminals and wiring specifications for main circuit, control circuit and PG card of the integrated controller.

3.1. Elevator Integrated Controller Thermal Wiring Diagram

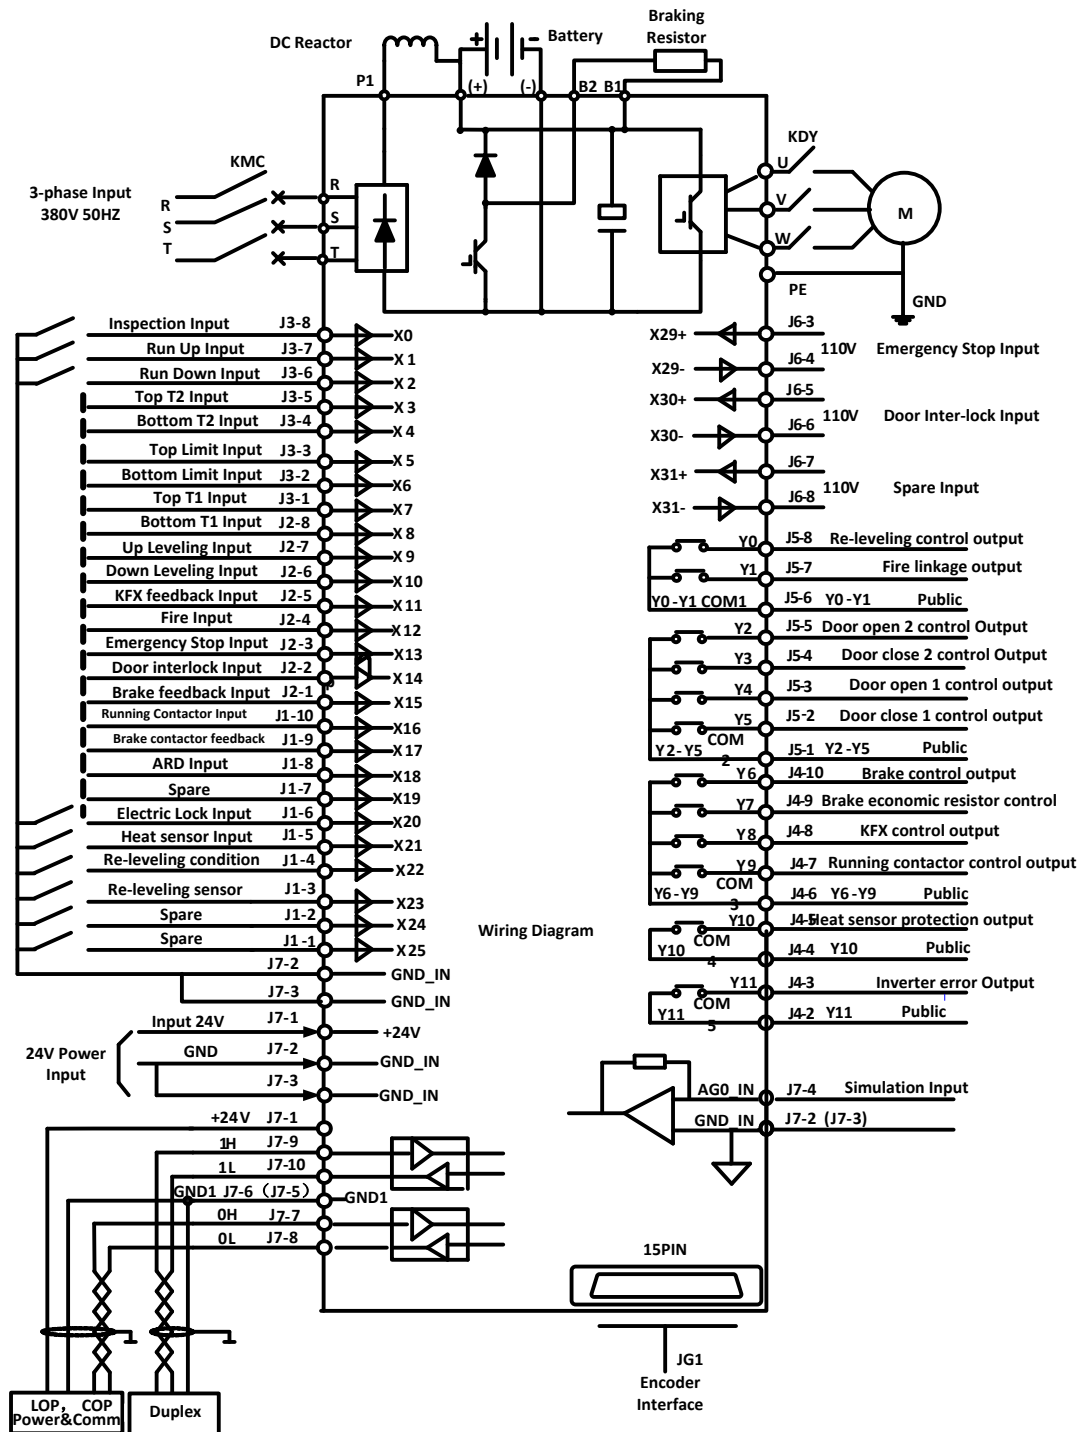


Figure 3.1 Thermal wiringDiagram for Elevator integrated controller

3.2. Wiring Main circuit Terminals

3.2.1 Main circuit structure

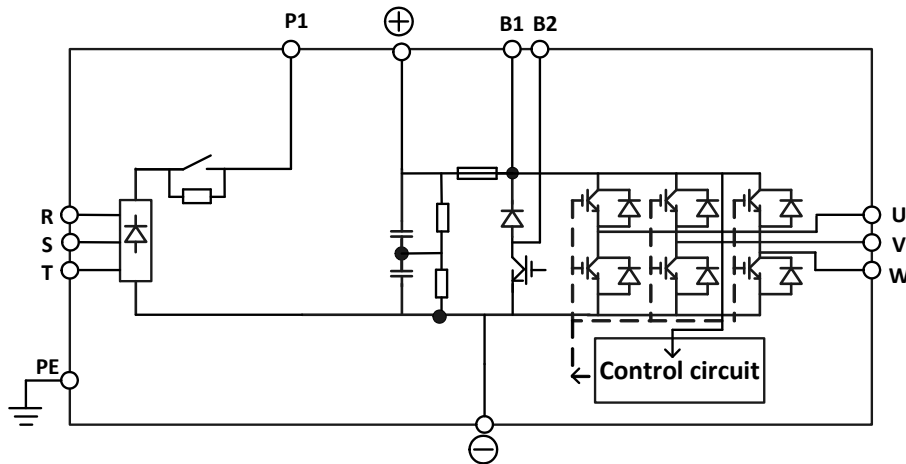


Figure 3.2 Main circuit Structure

3.2.2 Terminal arrangements for Main circuit

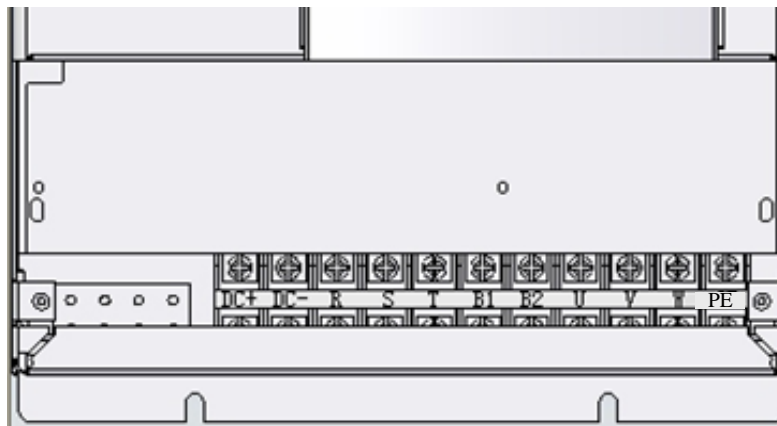


Figure 3.3 Terminal arrangements for main circuit

3.2.3 Main circuit terminal summary and function instruction

CHART3.1 MAIN CIRCUIT TERMINAL DEFINITION & FUNCTION

Terminal Symbol	Function Instruction
R,S,T	Main circuit power input (380V/50Hz, 3 ϕ)
DC+	DC BUS output +
DC-	DC BUS output -
B1,B2	External Braking resistor terminal connection
U,V,W	Controller output terminal, connect with motor
DC+,DC-	Connect with battery device when system has ARD function
PE	Terminal connect to ground

3.2.4 Specifications for main circuit wiring

CHART3.2 WIRE SIZE AND CLAMPING TORQUE FOR MAIN CIRCUIT WIRING

Controller Model	Terminal Symbol	Screws	Clamping Torque N·m	Wire size (min) mm ²	Wire size (Rec) mm ²	Wire type
BL6-U□4005	DC+,DC-,R,S,T,B1,B2,U,V,W	M4	1.2~1.5	4	4	Use power cable (e.g 600V vinyl power cable)
	PE			2.5~4	2.5	
BL6-U□4007	DC+,DC-,R,S,T,B1,B2,U,V,W	M4	1.2~1.5	4	4	
	PE			4	4	
BL6-U□4011	DC+,DC-,R,S,T,B1,B2,U,V,W	M6	4~5	6~10	6	
	PE			6~10	6	
BL6-U□4015	DC+,DC-,R,S,T,B1,B2,U,V,W	M6	4~5	6~10	6	
	PE			6~10	6	
BL6-U□4018	DC+,DC-,R,S,T,B1,B2,U,V,W	M6	4~5	8~10	10	
	PE			8~10	10	
BL6-U□4022	DC+,DC-,R,S,T,B1,B2,U,V,W	M6	4~5	10~16	10	
	PE			10~16	16	
BL6-U□4030	DC+,DC-,R,S,T,B1,B2,U,V,W	M6	4~5	10~16	16	
	PE			10~16	16	
BL6-U□4037	DC+,DC-,R,S,T,B1,B2,U,V,W	M8	9~10	25~50	35	
	PE			25~50	35	
BL6-U□4045	DC+,DC-,R,S,T,B1,B2,U,V,W	M8	9~10	35~50	35	
	PE			35~50	35	

3.2.5 Main circuit wiring

3.2.5.1 Wiring main circuit input

When wiring the main circuit, please pay attention to the following matters.

1. Molded-case Circuit Breaker (MCCB) Installing

Connect the power input terminals(R,S,T)and power supply via a molded-case circuit breaker(MCCB) suitable for the controller. The capacity of MCCB should be about 1.8 to 2 times of the controller's rated current. For MCCB's timing characteristics, be sure to consider the controller's overload protection (60s at 150% of the rated output current, 10s at 180% of the rated output current).

2. Residual Current Circuit-breaker Installing

As the Controller outputs switch frequently, high-frequency leakage current is generated. A residual current circuit breaker should be applied to the controller input side to eliminate high-frequency leakage current which is harmful to human body. Choosing a special-purpose residual current circuit breaker, its current sensitivity should be up to 30mA or more per controller. When using a general-purpose residual current circuit breaker, its current sensitivity should be up to 200mA or more per controller and with an operating time of 0.1s or more.

3. Magnetic Contactor Installing

Power input terminals(R, S, T)can be connected or disconnectto the power supplythrough a magnetic contactor (KMC).Magnetic contactor capacity depends on the rated current of the controller.Ensure that the capacity of magnetic contactor is greater than the rated current of the controller.

4. TerminalsWiring

If there is no phase sequence requirements, the input power supply can be connected with any one terminal (R, S, T) the phase sequence of input power supply does not necessary corespondto the terminal sequence.

5. Installing Surge Absorber

Ensure using a surge absorber for each inductive load (including magnetic contactor, electromagnetic relays and magnetic brakes, and so on) near the controller. Inductive loads.

3.2.5.2 Wiring the output side of main circuit

1. Connect the controller to Motor

Please connect the motor(input) wires to the output terminals U, V, W. Check that the motor rotates anticlockwise with the forward run command while running, otherwise, exchange the output terminal V and W.

2. Never connect a power supply to output terminals

Never connect a power supply to output terminals U, V, W. If voltage is applied to the output terminals, thecontroller internal circuit will be damaged.

3. Never short or GNDoutput terminals

Do not allowthe output terminals groundor short; Do not allow theoutput lineshort circuit orcontactcontrollershell; Do not tutchthe controller with bare hands. Otherwise, therewill be a risk of electric shock or short circuit.

4. Never use capacity, surge absorber, power factor regulator and noise filter.

Never connect capacity, surge absorber, power factor regulator and noise filter to output circuit. The high-frequency components of the controller output may result in overheating or damage to these parts or may result in damage to the controller

5. Use of magnetic contactor

Don't connect a magnetic contactor between the controller and the motor and turn it ON or OFF during operation. Otherwise, a large inrush current will be created and the overcurrent protection in the controller will operate. Before shut off the contactor, please stop the controller output first, after a while delay, then shut off.。

3.2.5.3 WIRING EARTH TERMINALS

1. Ensure thatearthprotection terminal PEconnectstoground (Groundingresistance less than 10Ω).
2. Do not share the GND with other devicessuch as welding machines or power tools.
3. GNDwire should be as short as possible and should be as thick as possible.
4. Connect to earth at one point.

3.2.5.4 CONNECT BRAKE RESISTOR

1. There isan internal brake unit in the controller, but must equip an external resistor to absorb the feedback energy during brake.Refer to chart 2.6for the configurations of the brake resistance.
2. Connect brake resistorto terminal B1, B2.

3. It is recommended to apply heatproof wire with appropriate specification and minimum length to connect brake resistor.
4. The installation of the braking resistor should consider the need of cooling. If necessary, Fans and protection cover can be applied to ensure ventilation and away from burn, electric shock and fire.
5. Do not touch terminals B1 and B2 with bare hands.

3.3. Wiring Control Circuit Terminals

3.3.1 Control Circuit Terminal Arrangement

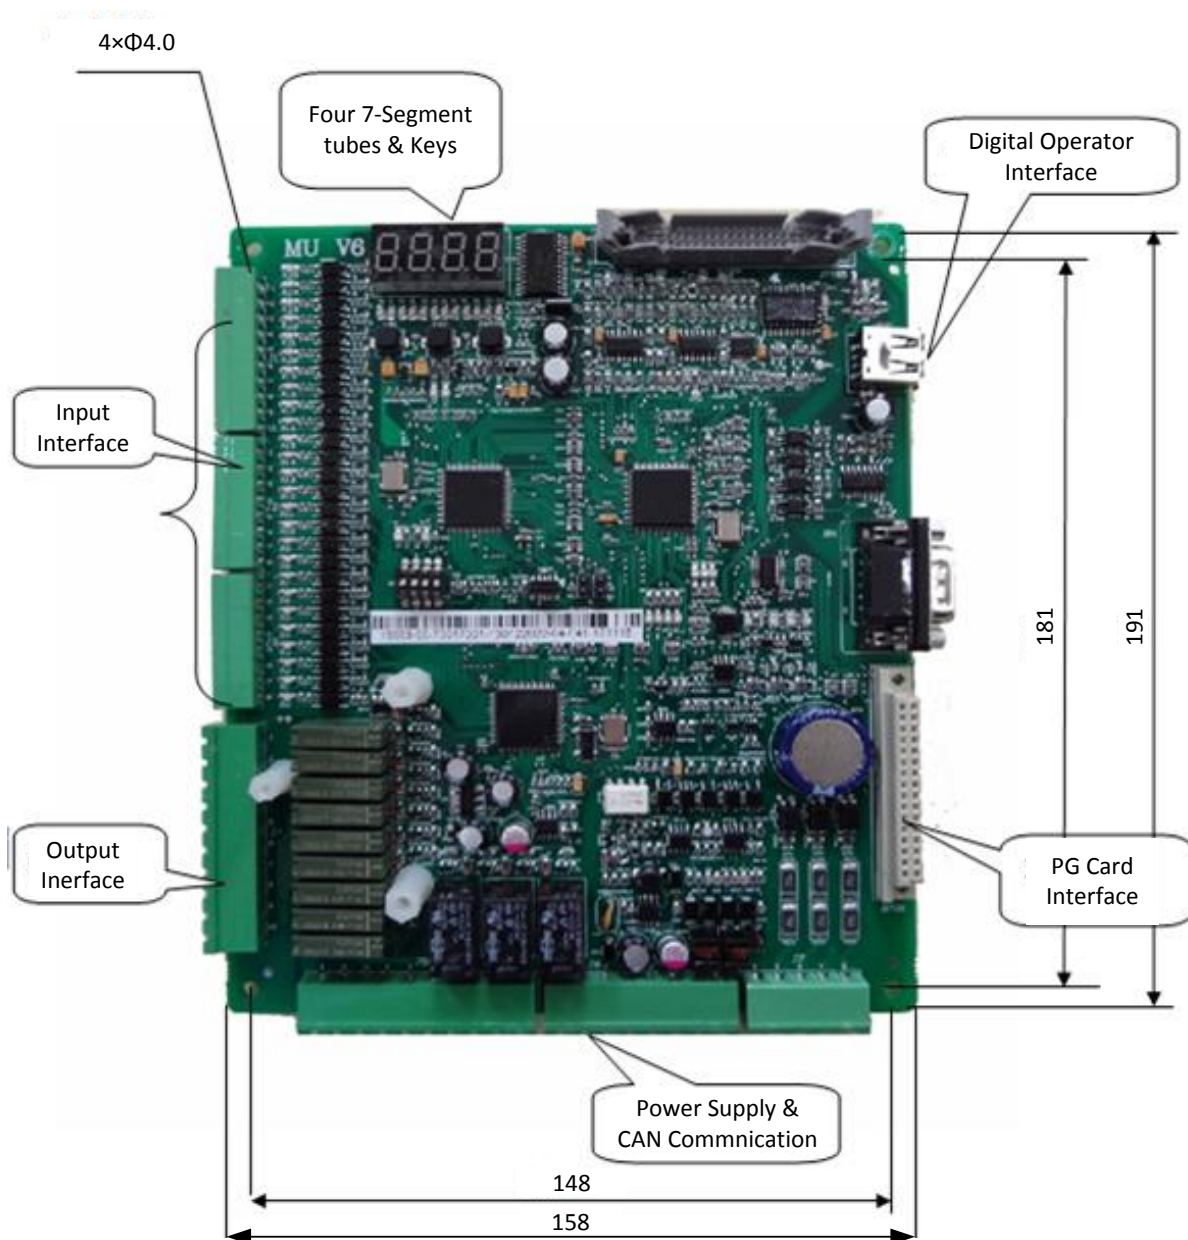


FIGURE 3.4 TERMINAL ARRANGEMENTS FOR CONTROL CIRCUIT

Control circuit includes integrated control board, PG card,digital operator and so on. PG card and digital operator will be introduced separately in **Chapter 4**. As elevator floor varies, the input, output of the controller and CAN communication interface is separate with the other parts of the controller, so the I/O interface of the controller should be connected with DC 24V power supply. Besides, DC 24V can also be used with HOP and COP. So the power supply should be equipped with suitable capacity according with the floor.

3.3.2 Terminal Connection for Control Circuit (Figure 3.1)

3.3.3 Control Circuit Port definition and Function

CHART3.3 CONTROL CIRCUIT PORT DEFINITION AND FUNCTION LIST

Port No.	Terminal Symbol	Location	Definition	Usage	Interface Tech Spec			
					Interface Type	Rated Capacity	On/off Time	Max Speed
J1	X25	J1-1	Spare	Input	OC	DC24V/7mA	10mS	100Hz
	X24	J1-2	Spare					
	X23	J1-3	Re-leveling sensor input					
	X22	J1-4	Re-leveling condition input					
	X21	J1-5	Thermoswitch input/ seismic signal input					
	X20	J1-6	electric lock input					
	X19	J1-7	Right brake feedback input					
	X18	J1-8	Emergency leveling running input					
	X17	J1-9	Brake contactor feedback input					
	X16	J1-10	Running contactor input					
J2	X15	J2-1	Left brake feedback input	Input	OC	DC24V7mA	10mS	100Hz
	X14	J2-2	Door inter-lock input					
	X13	J2-3	Emergency stop input					
	X12	J2-4	Fireman input					
	X11	J2-5	SC contactor feedback					
	X10	J2-6	Down-leveling input					
	X9	J2-7	Up-leveling input					
	X8	J2-8	Bottom terminal 1 input					
J3	X7	J3-1	Top terminal 1 input	Input	OC	DC24V7mA	10mS	100Hz
	X6	J3-2	Down limit input					
	X5	J3-3	Up limit input					
	X4	J3-4	Bottom terminal 2 input					
	X3	J3-5	Top terminal 2 input					
	X2	J3-6	Down running input					
	X1	J3-7	Up running input					
	X0	J3-8	Inspection input					

CHART 3.3 CONTROL CIRCUIT PORT DEFINITION AND FUNCTION LIST (CONT'D)

Port No.	Terminal Symbol	Location	Definition	Usage	Interface Tech Spec			
					Interface Type	Rated Capacity	On/off Time	Max Speed
J4	COM1	J4-1	Y0~Y1 common terminal	Output	Relay	DC 10A30V AC 10A250V	5/10mS	20cpm
	Y0	J4-2	Re-leveling control output					
	Y1	J4-3	Fire fighting output					
	COM2	J4-4	Y2~Y5 common terminal					
	Y2	J4-5	Cut main contactor output					
	Y3	J4-6	Y6~Y9 common terminal					
	Y4	J4-7	Door open 1 control output					
	Y5	J4-8	Door close 1 control output					
	COM4	J4-9	Y10 common terminal					
	Y10	J4-10	Cut main contactor output					
J5	COM5	J5-1	Y11 common terminal	Output	Relay	DC 10A30V AC 10A250V	5/10ms	20cpm
	Y11	J5-2	UPS power cut-off/Standby output					
		J5-3						
		J5-4						
		J5-5						
	COM3	J5-6	Y6~Y9 common terminal					
	Y6	J5-7	Brake economy resistor control output					
	Y7	J5-8	Brake control output					
	Y8	J5-9	(SC contactor control output)					
	Y9	J5-10	Running contactor control output					
J6	+24V	J6-1	Input power supply	Power	Power	DC24V10A	--	--
	GND_IN	J6-2	Input ground					
	AG0_IN	J6-3	Analog input	Input	analog	-10V~+10V		
	GND_IN	J6-4	Input ground	Power ground	Power ground			
	0L	J6-5	HOP/COP communications -	COMM Interface	CAN	80mA		25KHz
	0H	J6-6	HOP/COP communications +					
	1L	J6-7	Duplex/Group control communications -	COMM Interface	CAN	80mA		25KHz
	1H	J6-8	Duplex/Group control communications+					

*Function of X11 and Y8 need to enable by setting special function F4-06-29.

CHART3.3 CONTROL CIRCUIT PORT DEFINITION AND FUNCTION LIST (CONT'D)

Port No.	Terminal Symbol	Location	Definition	Usage	Interface Tech Spec			
					Interface Type	Rated Capacity	On/off Time	Max Speed
J7	X30-	J7-1	Door inter-lock input- / standby -				10ms	100Hz
	X31+	J7-2	Standby +/ car door +					
	X30+	J7-3	Door inter-lock input+					
	X29-	J7-4	Emergency stop input-					
	X29+	J7-5	Emergency stop input+					

In addition to the terminals above, there are some debugging interfaces on the main control board.

CHART 3.4 DEBUGGING INTERFACES DEFINATION AND FUNCTION LIST

No.	Terminal Symbol	Function	Interface Type	Note
1	USB1	Digital operator interface	RS-232	Communication with OP-VX
2	JP1	Security dog interface	RS-232	Communication with SL security dog
3	JPGR	PG card interface		Link to PG-V6, PG-V6x, SPG-V6
4	JTTR0	Bottom shell drive interface		Link to drive board in bottom shell

Dial switch function definition:

In normal condition, 4 dial switches are arranged on the OFF, the rest states for manufacturers to reserve.

3.3.4 Wire size for Control Circuit Terminals

600V plastic insulated wire should be used. Choose appropriate wire model based on terminal function and Refer to Chart 3.5.

CHART3.5 WIRE SIZE FOR CONTROL CIRCUIT TERMINALS

Terminal Function	Acceptable Wire size (mm ²)	Recommended wire size (mm ²)	Clamping Torque N.m	Special Requirement
Input/Output	0.5~1	0.75	0.5~0.6	
PG Car I/O	0.15~0.5	0.3	0.5~0.6	Twisted pair shield
CAN COMM	0.75~1.5	0.75 (≤10 floors) 1.5 (>10 floors)	0.5~0.6	Twisted pair shield

3.3.5 Control Circuit I/O interface and wiring

3.3.5.1 Digital value Input Interface

The common terminal of board for digital value input interface is +24V, so it should be contactor input or common emitter input (0V common terminal) as shown in Fig 3.5 and Fig 3.6.

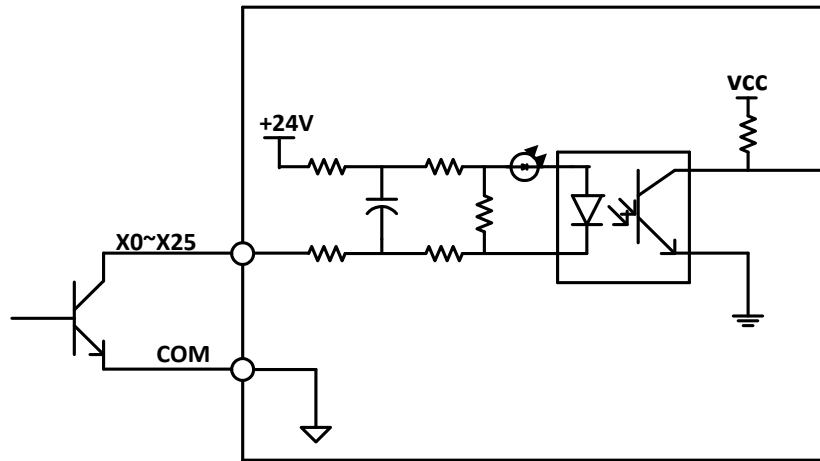


FIGURE 3.5 COMMON EMITTER INPUT

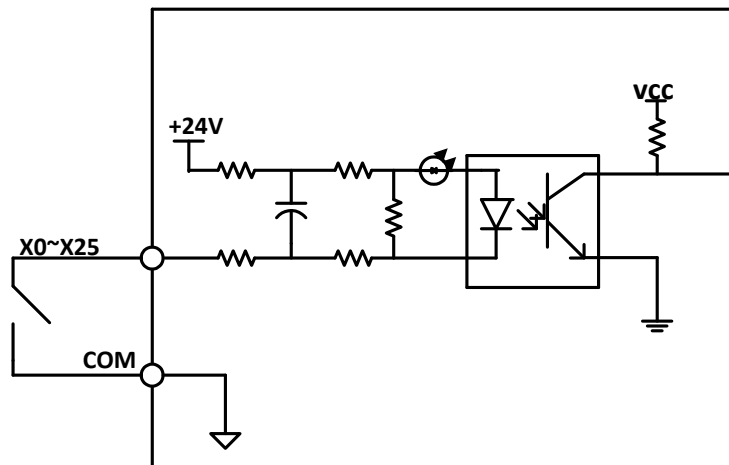


FIGURE 3.6 CONTACTOR SWITCH INPUT

3.3.5.2 CAN COMM INTERFACE

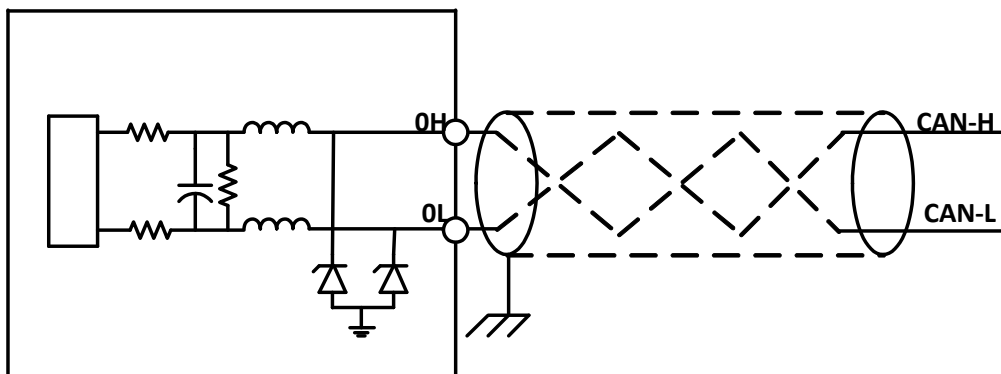


FIGURE 3.7 CAN COMM INTERFACE AND CONNECTION

The controller, COP and HOP are connected through CAN bus. The reliability of CAN BUS communication is directly related to cable wiring. It is specifically required that shaft cable and traveling cable should be **twisted-pair shield cable**. The twisted-pair can stop the differential mode interference of the long wire while shield can isolate the

electromagnetic interference caused during elevator running. The function and connection of the CAN communication interface is shown in the Fig 3.7.

3.3.5.3 ANALOG INPUT INTERFACE

The voltage range of analog input interface is $-10\sim+10\text{V}$, for selecting the load information provided by weighing device. As analog signal is easy to get interference, the wire of analog input terminal should be TWISTED-PAIR SHIELD CABLE. Its input and connection is shown in Fig 3.8.

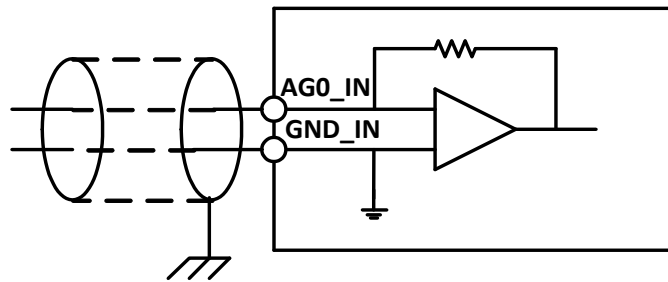


FIGURE 3.8 ANALOG INPUT & CONNECTION

3.3.5.4 AC 100V INPUT INTERFACE

AC 110V input interface is for testing of Emergency stop/Door Drive. Its interface/connection is shown in Fig 3.9

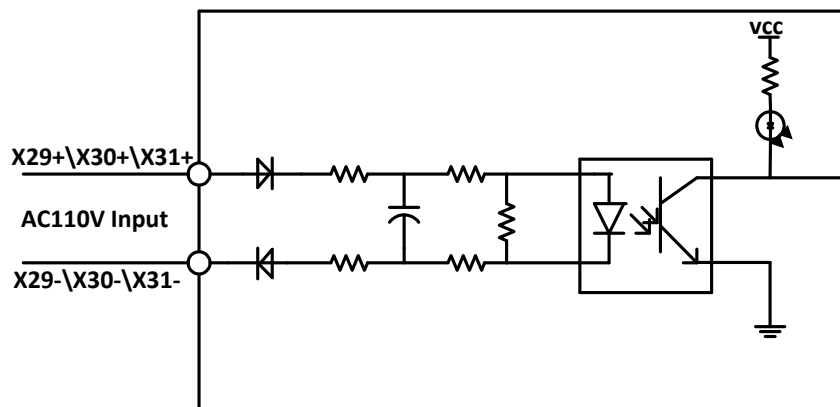


FIGURE 3.9 AC110V INPUT INTERFACE & CONNECTIONS

3.3.5.5 POWER SUPPLY INPUT INTERFACE

Power supply interface and connections are shown in fig.3.10.

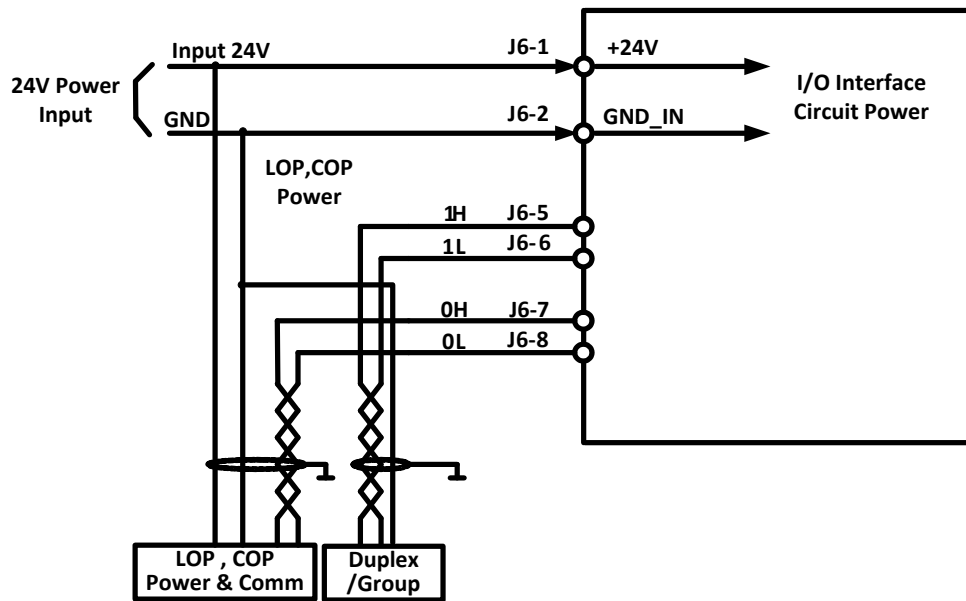


FIGURE 3.10 POWER SUPPLY INTERFACE & CONNECTIONS

3.4. PG Card Installation & Wiring

3.4.1 PG_V6 Interface Card

3.4.1.1 PG_V6 Interface card diagram

PG-V6 interface card is sync/async machine universal pulse encoder speed feedback and frequency dividing output card. PG_V6 is in supporting use of 5V line driver output type encoder. Encoder for async machine: A/B, and encoder for sync machine: A/B/Z/U/V/W. Refer to Fig 3.11 below for detail.



FIGURE 3.11 PG_V6 CARD

3.4.1.2 PG_V6 Installation and Remove

When installing PG-V6 card, first cut off the controller power supply, ensure that charge indicator LED in the controller is out. Then remove the digital operator and the front cover and install the PG-V6 card.

Installation procedures: first match the connector of the PG-V6 card (welding parts) towards the JPGR connector of the main control board. Match the other two installation hole toward the corresponded two nylon tube (pre-installed). Then keep the PG-V6 card horizontal and fix the nylon screws to location holes by screwdriver.

Removing procedures: first cut off the controller power supply, ensure that the charge indicator LED in the controller is out. Then remove the digital operator and front cover, remove the terminal connection of PG-V6 card. Removed wire should be treated carefully, not contact with other charged objects. Then remove the nylon screws by screwdriver, then remove the PG card.

Pay attention to following points for installing and removing.

1. Don't touch the chip with bare hand directly to avoid the static charge damage the chip.
2. Choose suitable tool, such as screwdriver, needle point pliers and else.
3. Never damage the components of the card.
4. Never damage the components of the main control board.
5. While recovering the connection, please connect as per wire number and the requirements; make sure that the connections are correct.

3.4.1.3 PG_V6 Terminal Definition & Function List

CHART3.6 PG-V6 CARD TERMINAL DEFINITION & FUNCTION

Terminal Name	Terminal Mark	Location	Definition	Usage	Interface Technical Specification			
					Interface Type	Rated Capacity	On/Off Time	Max Speed
JENDATA(short for JEN)	+12V	JEN-1	OC/ push-pull type power	12V Power supply	Power output	+150mA/12V±5%		
	A+	JEN-2	Frequency signal differential output A	synchronization frequency division	Differential output	±50mA		500KHz
	B+	JEN-3	Frequency signal differential output B	synchronization frequency division	Differential output	±50mA		500KHz
	0V	JEN-4	Power supply Ground	Power supply Ground	Power supply Ground	--		
	PE	JEN-5	Shield Ground	Shield Ground	Differential output	--		
	PE	JEN-6	Shield Ground	Shield Ground	Power supply GND	--		

Terminal	Terminal	Location	Definition	Usage	Interface Technical Specification
----------	----------	----------	------------	-------	-----------------------------------

Name	Mark				Interface Type	Rated Capacity	On/Off Time	Max Speed
JG1	+5V	JG1-1	+5V	5V power supply	Power output	+400mA/5V±5%		
	U+	JG1-2	U+	Differential signal U+	Differential input	±20mA/3.1-5V		500KHz
	Z+	JG1-3	Z+	Differential signal Z+	Differential input	±20mA/3.1-5V		500KHz
	B+	JG1-4	B+	Differential signal B+	Differential input	±20mA/3.1-5V		500KHz
	A+	JG1-5	A+	Differential signal A+	Differential input	±20mA/3.1-5V		500KHz
	GND	JG1-6	GND	5V GND	Power supply GND	--		
	U-	JG1-7	U-	Differential signal U-	Differential input	±20mA/3.1-5V		500KHz
	Z-	JG1-8	Z-	Differential signal Z-	Differential input	±20mA/3.1-5V		500KHz
	B-	JG1-9	B-	Differential signal B-	Differential input	±20mA/3.1-5V		500KHz
	A-	JG1-10	A-	Differential signal A-	Differential input	±20mA/3.1-5V		500KHz
	GND	JG1-11	GND	5V Ground	Power supply GND	--		
	V+	JG1-12	V+	Differential signal V+	Differential input	±20mA/3.1-5V		500KHz
	V-	JG1-13	V-	Differential signal V-	Differential input	±20mA/3.1-5V		500KHz
	W+	JG1-14	W+	Differential signal W+	Differential input	±20mA/3.1-5V		500KHz
	W-	JG1-15	W-	Differential signal W-	Differential input	±20mA/3.1-5V		500KHz

The parameters above are for PG-V6 interface card work in the environment temperature of 0°C-70°C, if the temperature exceeds the range, PG interface card may not work normally or even damage.



3.4.1.4 PG_V6 Connection for 5V long line drive output encoder (for Asynchronous Machine)

Connection of PG-V6 card and 5V long line driver output encoder (for asynchronous machine) is shown in Fig 3.12



Connect the 5V/B+/A+/B-/A-/0V on the encoder to the PG card D-type connector JG1 (standard 3-line 15-pin D-type connector hole socket) terminal+5V/B+/A+/B-/A-/GND, that is the D-type connector pin socket terminal corresponding 1/4/5/9/10/6 of JG1. Ensure that the wiring correct, then plug and lock well.

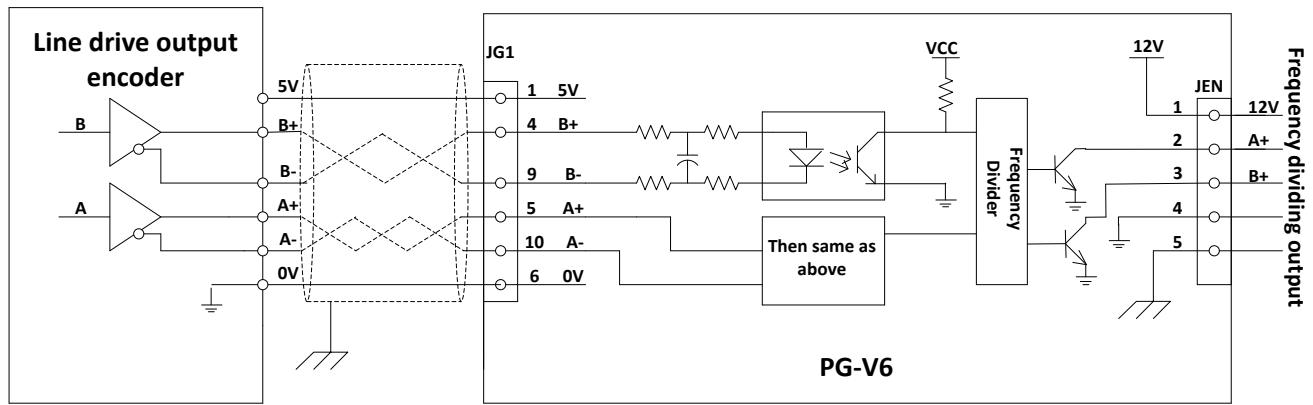


FIGURE 3.12 PG_V6CARD CONNECTION TO 5V LONG LINE DRIVE OUTPUT ENCODER (FOR ASYNCHRONOUS MACHINE)

3.4.1.5 PG_V6card connection with 5V long cable drive output encoder (for Synchronous Machine)

The connection of PG-V6card and 5V long line drive output encoder (for synchronous machine) is shown in Fig 3.13



Connect the 5V/0V/A+/A-/B+/B-/Z+/Z-/U+/U-/V+/V-/W+/W- of encoder to the +5V/GND/A+/A-/B+/B-/Z+/Z-/U+/U-/V+/V-/W+/W- of the D-type connection on terminal JG1(the related pin of 1/6/5/10/4/9/3/8/2/7/12/13/14/15 of JG1 for D-type connection part). Ensure that the wiring connection is correct, then plug and lock well.

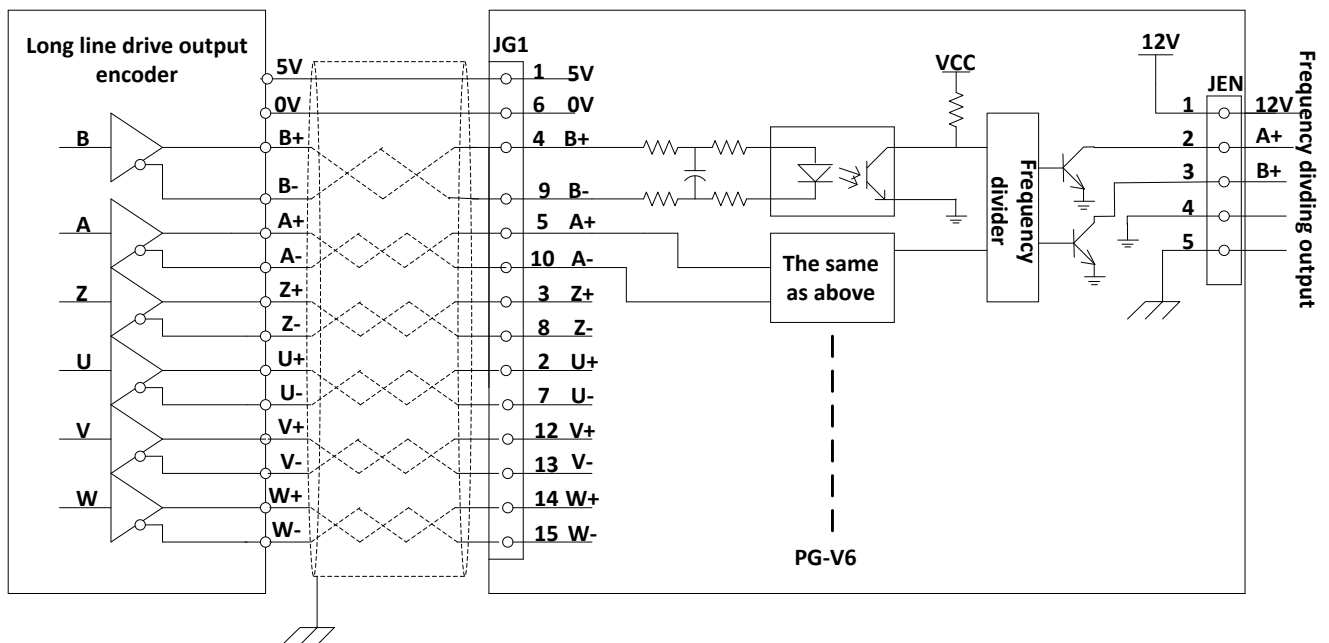


Figure 3.13PG_V6 connection with 5V long line drive output encoder (for synchronous machine)

3.4.1.6 Precautions for using PG_V6 card

For the 15-pin differential output encoder interface of the PG-V6 card, the input pulse signal frequency is required to be no more than 500 KHz, the parameter of the input and output signal current and voltage cannot exceed the range given in the chart 3.6 above.

If the parameter of the input and output signal current and voltage exceed the given range, the PG interface card may not work normally, even PG card and encoder get damaged.

Manufacturer suggests that if the external circuit working condition is not well, please do not power other circuits except the encoder by using the PG-V6 interface card +5V power supply to avoid PG card being interfered or damaged.

3.4.2 PG_V6X Interface Card

3.4.2.1 PG_V6X Interface card diagram

PG-V6X interface card is an async machine universal pulse encoder speed feedback and frequency dividing output card. PG_V6X is supporting use of 12V OC output type, and push-pull output pulse encoder. Encoder for async machine: A/B. Diagram is shown in Fig 3.14 below.

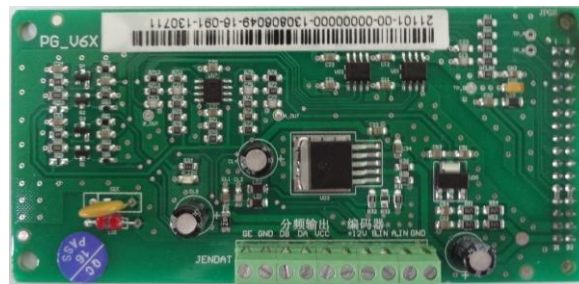


FIGURE 3.14 PG_V6X CARD

3.4.2.2 PG_V6X Interface Card Installation and Remove

When installing PG-V6X card, first cut off the controller power supply, ensure that the charge indicator LED in the controller is out (Remove the front cover first for closed type controller). Then remove the digital operator and the front cover and install the PG-V6X card.

Installation procedures: first match the connector of the PG-V6X card (welding parts) towards the JPGR connector of the main control board. Match the other two installation holes toward the corresponded two nylon tube (pre-installed). Then keep the PG-V6X card horizontal and fix the nylon screws to location holes by screwdriver.

Removing procedures: first cut off the controller power supply, ensure that the charge indicator LED in the controller is out. Then remove the digital operator and front cover, remove the terminal connection of PG-V6 card. Removed wire should be treated carefully, not contact with other charged objects. Then remove the nylon screws by screwdriver, then remove the PG card.

Pay attention to following points for installing and removing.

1. Don't touch the chip with bare hand directly to avoid the static charge damage the chip.

2. Choose suitable tool, such as screwdriver, needle point pliers and else.
3. Never damage the components of the card.
4. Never damage the components of the main control board.
5. While recovering the connection, please connect as per wire number and the requirements; make sure that the connections are correct.

3.4.2.3 PG_V6X Terminal Definition & Function List

CHART 3.7 PG-V6X CARD TERMINALS DEFINITION & FUNCTION

Terminal Name	Terminal Mark	Location	Definition	Usage	Interface Technical Specification			
					Interface Type	Rated Capacity	On/Off Time	Max Speed
JENDATA(short for JEN)	0V	JEN-1	Power supply Ground	Power supply Ground	Power supply Ground	--		
	IA	JEN-2	OC/Push-pull type input A	synchronization frequency division	Differential output	+10mA/12V-15V		500KHz
	IB	JEN-3	OC/Push-pull type input B	synchronization frequency division	Differential output	+10mA/12V-15V		500KHz
	+12V	JEN-4	OC/push-pull power supply	12V Power supply	Power supply output	+150mA/12V±5%		
	+12V	JEN-5	OC/push-pull power supply	12V Power supply	Power supply output	+150mA/12V±5%		
	A+	JEN-6	Frequency signal OC output A	synchronization frequency division	OC/push-pull output	±50mA		500KHz
	B+	JEN-7	Frequency signal OC output B	synchronization frequency division	OC/push-pull output	±50mA		500KHz
	0V	JEN-8	Power supply Ground	Power supply Ground	Power supply Ground	--		
	PE	JEN-9	Shield Ground	Shield Ground		--		
	PE	JEN-10	Shield Ground	Shield Ground		--		




The parameters above are for PG-V6X interface card work in the environment temperature of 0°C-70°C, if the temperature exceeds the range, PG interface card may not work normally or even damage.

3.4.2.4 PG_V6X card connection with 12V push-pull /OC drive output encoder (for Asynchronous Machine)

The connection of PG-V6X card and 12V push-pull/OC output encoder (for asynchronous machine) is shown in Fig 3.15



Connect the 12V/B/A/0V of encoder to the +12V/IB/IA/0V of the terminal JEN (the related pin of 4/2/1 of JEN).

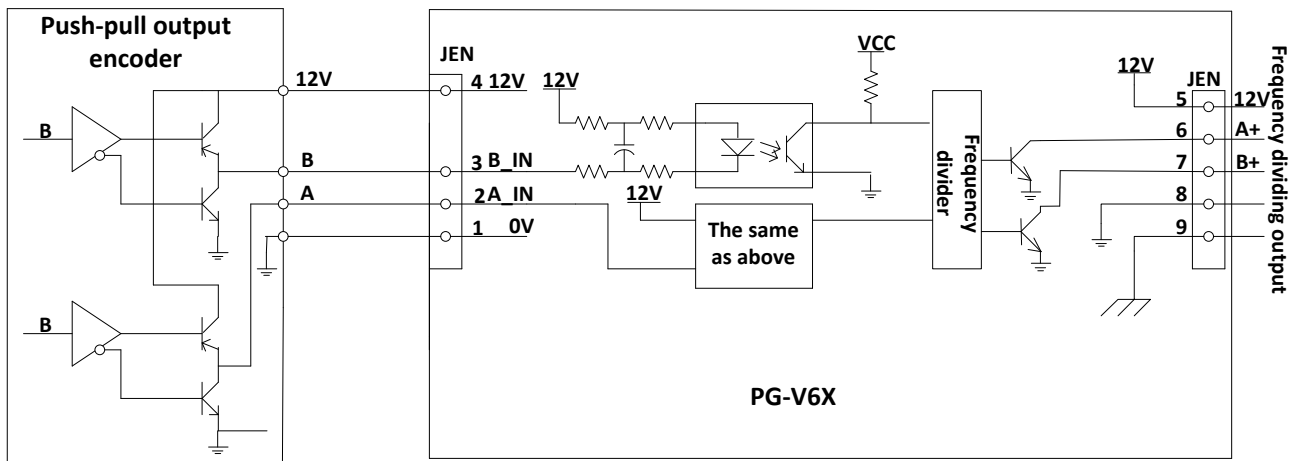

FIGUER 3.15 PG_V6X CONNECTION WITH 12V PUSH-PULL/OC DRIVE OUTPUT ENCODER

3.4.2.5 Precautions for using PG_V6 card

For the push-pull/OC output encoder interface of the PG-V6X card, the input pulse signal frequency is required to be nomore than 500 KHz, the parameter of the input and output signal current and voltagecannot exceed the range given in the chart 3.7 above.

If the parameter of the input and output signal current and voltage exceed the given range, the PG interface cardmay not worknormally, even PG cardand encoderget damaged.

Manufacturer suggests that if the external circuit working condition is not well, please do not power other circuits except the encoder by using the PG-V6Xinterface card +5V power supply to avoid PG card being interfered or damaged.

Please note that user will take responsibility for the consequence caused by the reasons above.

3.4.3 SPG_V6 Interface Card

3.4.3.1 SPG-V6 interface card diagram

SPG-V6interface card is shown in the Fig 3.16

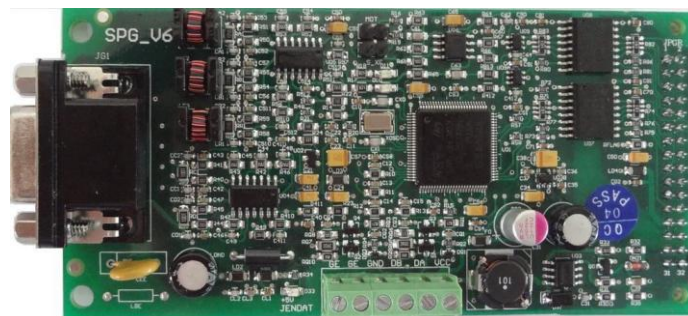


FIGURE 3.16 SPG_V6 CARD

3.4.3.2 SPG_V6 Interface Card Terminal Definition and Function List

CHART3.8 SPG_V6 TERMINAL DEFINITION & FUNCTION (D-INPUT/OUTPUT REFERS TO DIFFERENTIAL INPUT/OUTPUT)

Terminal Name	Terminal Mark	Location	Definition	Usage	Interface Technical Specification			
					Interface Type	Rated Capacity	On/Off Time	Max Speed
JENDAT (For frequency dividing signal)	+12V	JEN -1	OC / push-push Power Supply	12Vpower supply	Power output	+500mA/12V±5%		
	A+	JEN -2	Frequency signal OC output A+	Sync-frequency division	OC/ push-pull output	±50mA		500KHZ
	B+	JEN -3	Frequency signal OC output B+	Sync-frequency division	OC/ push-pull output	±50mA		500KHZ
	0V	JEN -4	Power supply ground	Power ground	Power ground	--		
	PE	JEN -5	Shield ground	Shield ground	D-output	--		
	PE	JEN -6	Shield ground	Shield ground	PGND	--		
JG1	B-	JG1-1	B-	Differential signal B-	Differential input			40KHz
	*	JG1-2	--	--	--			
	R+	JG1-3	R+	Differential signal R+	D-input			40KHz
	R-	JG1-4	R-	Differential signal R-	D-input			40KHz
	A+	JG1-5	A+	Differential signal A+	D-input			40KHz
	A-	JG1-6	A-	Differential signal A-	D-input			40KHz
	0V	JG1-7	GND	5V Ground	PGND			
	B+	JG1-8	B+	Differential signal B+	D-input			40KHz
	5V	JG1-9	+5V	5Vpower	Power output	+500mA/5V±2.5% Voltage ripple<50mV		
	C-	JG1-10	C-	Differential signal C-	D-input			40KHz
	C+	JG1-11	C+	Differential signal C+	D-input			40KHz
	D+	JG1-12	D+	Differential signal D+	D-input			40KHz
	D-	JG1-13	D-	Differential signal D-	D-input			40KHz
	*	JG1-14	--	--	--			
	*	JG1-15	--	--	--			

3.4.3.3 SPG_V6 Interface Card Circuit

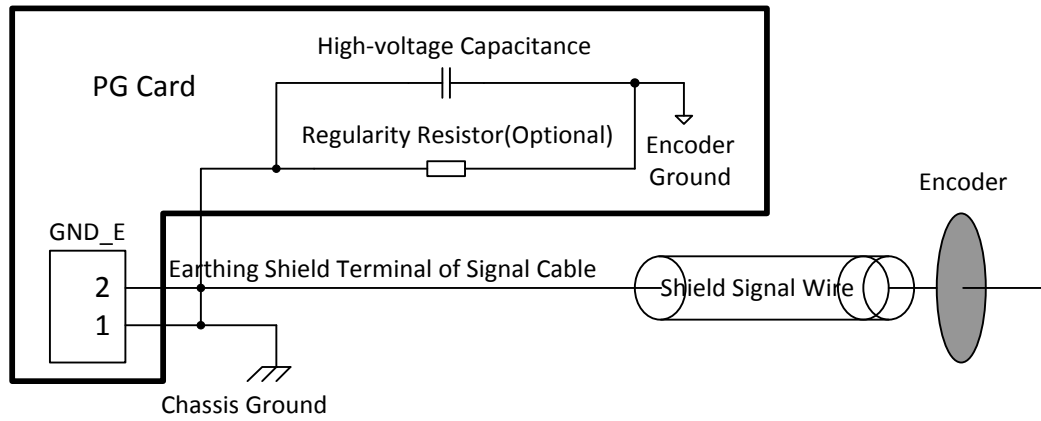


FIGURE 3.17 SPG_V6 CARD



The resistor for ground terminal GND_E is not an essential component. There might be different requirements between different versions.

3.4.3.4 Precautions for using SPG_V6

1. Sine/cosine PG card can provide power output of $5V \pm 2.5\%$ /500mA for encoder. If the current required exceeds the PG card rated value, it may damage the PG card or encoder.
2. The cut-off frequency of the analog input signal is requested to be lower than 40KHz. This is decided by filter circuit. If the input signal bandwidth exceeds this range, PG card cannot guarantee to analyze the signal correctly and the driver may not work properly.
3. If use the frequency output function that PG card provided, make sure that the current in frequency dividing interface is within rated level to avoid any unwanted circuit protection mechanism. Also, the maximum frequency dividing output rate is 250KB/S; beyond such limit of the speed rate may cause frequency dividing signal not output properly.
4. The two ground terminal of GND_E is connected inside. At site, one terminal is required to connect to the system GND wires, and the GND resistance should be minimized with independent ground connection point. The other terminal is connected to the shielding layer of the signal cable for the sine/cosine encoder. For the shielding layer of the signal cable, it is suggested that two terminals are grounded at both sides or at the end terminal of GND_E side. As the output signal of the sine/cosine encoder is small analog signal which is easier to get interference, it is better to use the recommended signal cable with complete shield layer, lower transfer impedance and wire twin twisted. Inappropriate ground connection or use unsuitable signal transfer cable may result in system not working properly.
5. Jumper S_XF is kept for future adjustments, please keep it disconnected.

3.5. Precautions with Wiring

1. Before connection, please pay attention to the precautions mentioned in chapter 1.2, especially the “warning” and “caution” part.
2. Before connection, make sure that the power supply is off, and the charge indicator LED is out.
3. Please ask professional engineers with training and authorization for the wiring.
4. The wire size and clamping torque should follow the regulation of Chart 3.2 and chart 3.4
5. To increase wiring convenience and reliability, it is better to use round crimp type terminal (for main circuit) and club-shaped terminal (for control circuit).
6. Wire the control circuit/main circuit/power supply separately.
7. CAN communication cable、 encoder cable、 encoder frequency output cable and analog input cable should use TWISTED-PAIR SHIELD CABLE.
8. Please ground the cable shield wire correctly, and maximize the contact area.
9. Make sure the signal cable for PG/encoder is less than 30m in length, and as short as possible.
10. Make sure the cable between controller and machine is less than 100m, and as short as possible.
11. Make sure the brake resistor is connected between B1 and B2.
12. Make sure the connection of ground terminal PE is secure, do not share the ground cable with other devices such as welding machines or power tools. Minimize length and dimension of ground cable and ground at one point.
13. After wiring, make sure check the following:
 - 1) Correctness and reliability of connection.
 - 2) Whether there is leftover, such as wire, screw and metal filing
 - 3) Whether the connection of the screw, the terminals and the connection parts is loose.
 - 4) Whether the bare conductor of terminals is connected with other terminals.

Chapter 4: Digital Operator

BL6-U series elevator integrated controller is equipped with LCD digital operator OP-V6. It is a tool for commissioning and maintenance of control system. It provides a nice and easy human-machine interface with both Chinese and English on display.

4.1. Key, display and function of Digital Operator

The digital operator OP-V6 has the main LCD screen with resolution of 128×64 LCD, 5 LED and 11 function buttons. Refer to figure 4.1 below for detail.



FIGURE 4.1 DIGITAL OPERATOR

4.1.1 Operator LED Display












5 leds on the top of the operator display controller current state simply and directly. The definition and display function of each LED, as shown in chart 4.2.

CHART4.2 LED DEFINITION & DISPLAY FUNCTION

Name	Function
DRV	When the controller is in operation, the led light.
FWD	When the controller is in forwardrunning operation, the led light.
REV	When the controller is in reversal running operation, the led light.
COM	When the controllercommunication is normal, the led light.
ERR	When the controller is in fault, the led light.

4.1.2 Operator Keys

CHART4.2 OPERATOR KEYS NAMES AND FUNCTIONS

Keys	Name	Function Description
	[RUN] Key	Run the controller in keypad control mode; button is disabled in program control mode. Enable/disable is set through parameters.
	[STOP] Key	Stop the controller in keypad control mode; button is disabled in program control mode. Enable/disable is set through parameters.
	[MENU] Key	Return to main menu on any screen.
	[SHIFT] key	Enable the 2 nd function of other keys.
	[RESET] Key	Enter the digit setting option for certain parameters.
	[UP] Key	Scroll up menu options or edit figures in certain setting page.
	[DOWN] Key	Scroll down menu options or edit figures in certain setting page.
	[LEFT] Key	For parameter setting, choose the left digit for editing.
	[RIGHT] Key	For parameter setting, choose the right digit for editing.
	[ENTER] Key	Enter the next level sub-menu on main screen; Input set value on parameter setting; Give command; Check fault/warning information.
	[ESC] Key	Return the previous level menu.

4.1.3 LCD Display

Controller enters the main interface after power on. The main interface is shown in Fig 4.2

The main interface displays the main information of the elevator in present status, including floor number, elevator speed, running direction, door lock status, running model, fault code and else. On the main interface, the above information is live updated.

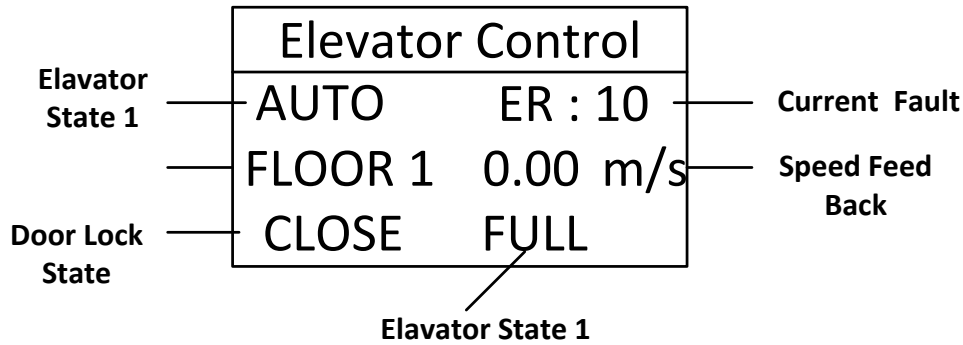


FIGURE 4.2 MAIN INTERFACE ON DIGITAL OPERATOR

The instructions for the information shown in the Digital operator LCD display interface are as following:

1. The status of the elevator display1:

INSP	MANU	AUTO
FIRE	STOP	USER

2. Present floor display:

Display the floor number that the elevator is at.

3. Door lock status:

CLOSE/OPEN: Door inter-lock circuit closed/opened.

4. The status of the elevator display 2:

FULL:	Full load
OVER:	Overload
GROUP:	Group control
TWINS:	Duplex control

5. Present error:

ERR: XX Display the present Error code.

4.1.4 Function of Operator

The function of digital operator is as follows:

1. LCD display with English and Chinese

- 2.Setting log in level and corresponded password.
- 3.Adjusting the settings of quick menu
- 4.Monitor the status of the elevator and the controller.
- 5.Parameter check, setting and save.
- 6.Hoistway learning
- 7.Motor parameter learning
- 8.Weighing data learning
- 9.System clock setting
- 10.Error history log record and check.
- 11.Parameter copy, upload and download.
- 12.Restore to factory setting.

4.1.5 Installation and Connection of Digital Operation

The connection for the digital operator of the opening controller is as follows: remove the front cover of the controller, connect one side of the special communication cable to digital operator, and connect the other side to the J232_T connection on the main board. Make sure the connection is securely; install the front cover of the controller.



IMPORTANT

1. The installation, dismantle, insert and remove of the digital operator can be carried out when the controller is power-on. That is to say, hot plug is accepted by the digital controller.
2. Please install, dismantle, insert and remove the digital operator carefully to avoid unwanted damage of the digital operator.
3. Please save the removed digital operator and communication cable well, DO NOT press, damage the operator or put it in extreme environment.
4. Please DO NOT use the self-made (> 3m) communication cable.

4.2. Structure and Switch process of the Operator Interface

The structure and interface switch process of the digital operator, as shown in fig.4.3.

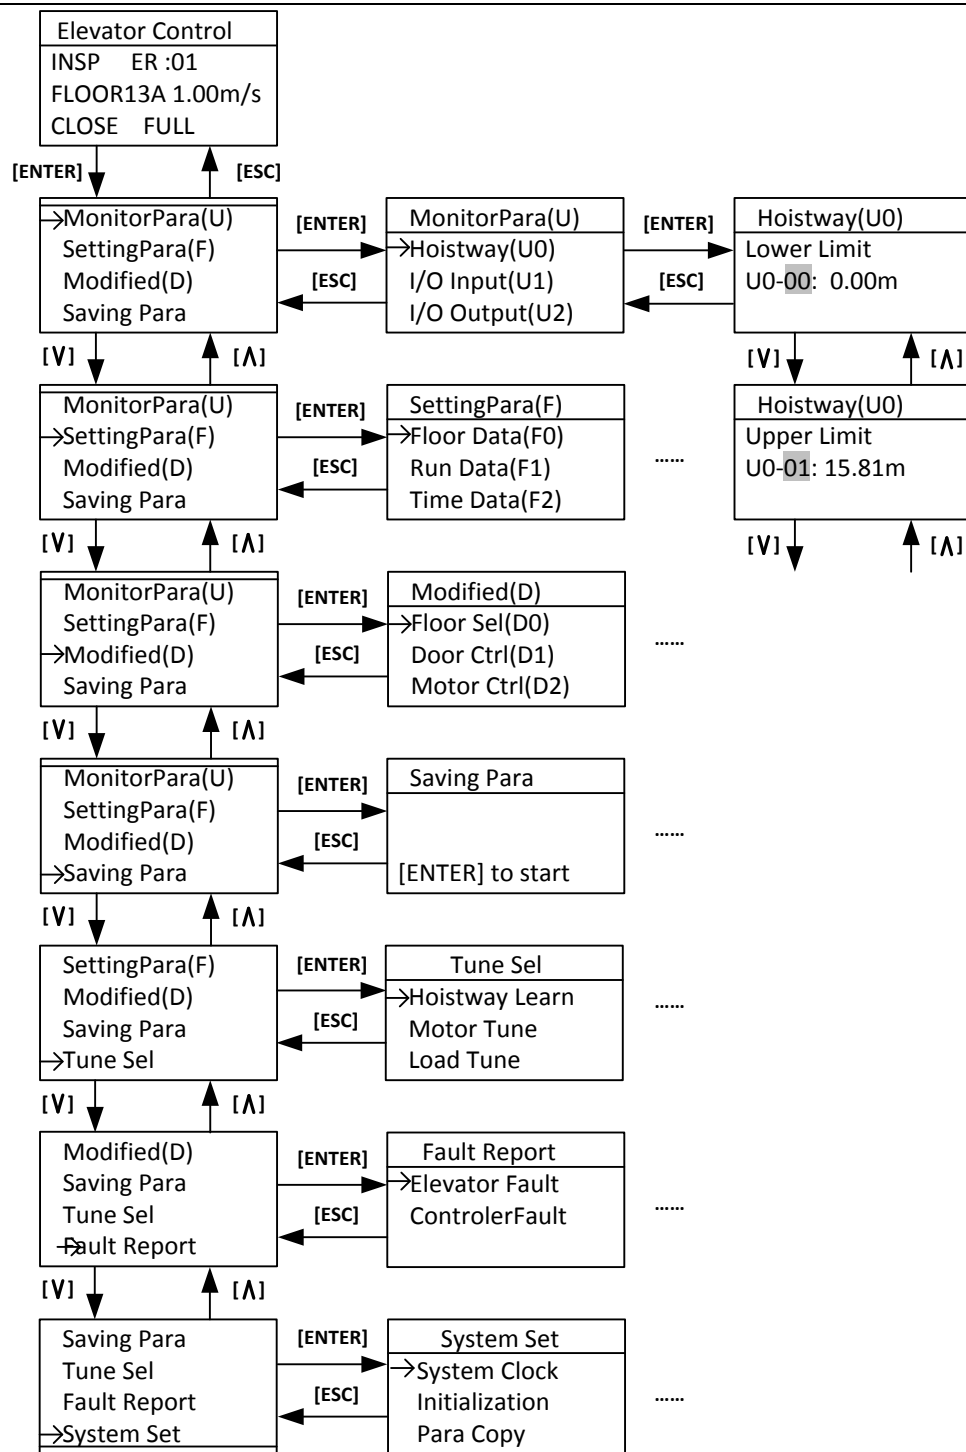


FIGURE 4.3 STRUCTURE FLOWCHART OF OPERATOR MENU

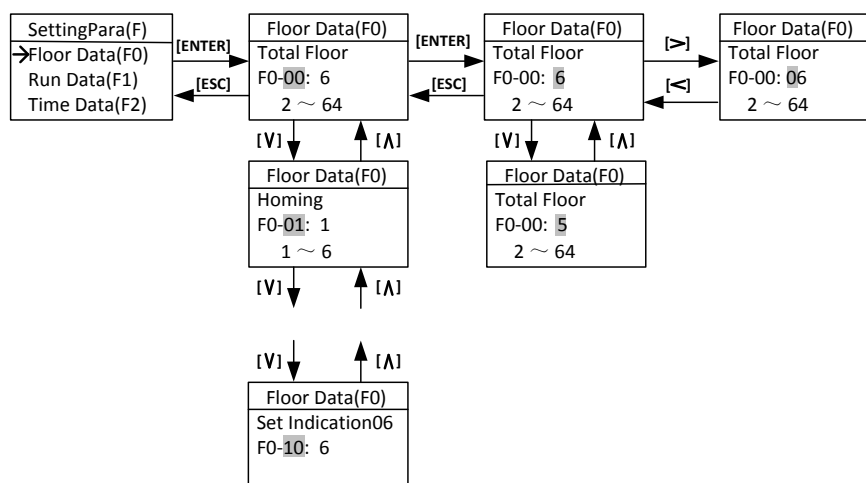


FIGURE 4.4 PARAMETER SETTING

In the interface of parameter menu: Press [ENTER] key to enter the interface. (First, it should input the correct user password in the environment setting menu, otherwise, pressing the [ENTER] key will enter the interface of user password setting. So please pay attention to distinguish the factory password and user password. If you want to input the factory password, please press the [ESC] key, returning to previous menu, then press the [DOWN] key to change the prompt to “input the factory password”, after that press the [ENTER] key, entering to the interface of the inputting factory password). Press the [UP] or [DOWN] key to check all the parameters. Please press the [ENTER] key to enter the interface of parameter menu. Please press [LEFT] or [RIGHT] key to move the arrow to left or right. Press the [UP] or [DOWN] to increase or decrease the value that the arrow point at. After setting the value, please press the [ENTER] key to save the parameter.

Some parameter values are combination values of the status. Their setting cannot follow the above flowchart directly and should follow the ToolTip in the parameter changing interface. Press [RES] key to enter the bit parameter setting interface to set the status value as per the bit. After enter the bit parameter setting interface, press [UP] or [DOWN] key to check the status of the present bit. When the status of the present bit need to be changed, press [ENTER] key to enter the status change interface. In the status change interface, press [UP] or [DOWN] key to check the status of the present bit, press the [ENTER] key to save the status of the present bit, press [ESC] key to return the Previous Menu

The process of bit parameter setting is shown in Fig 4.5

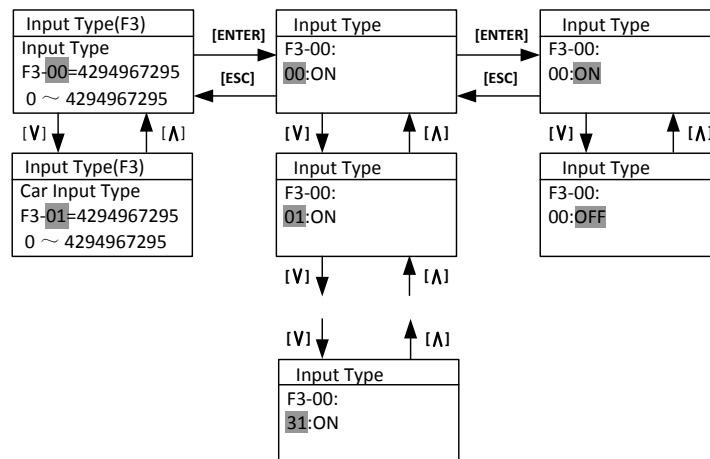


FIGURE 4.5 SETTING BIT PARAMETERS

4.4. Commissioning Parameters

In commissioning interface: Move the arrow by pressing [UP] key or [DOWN] key to carry out the operation, press [ENTER] to enter the selected interface.

In floor selection interface: Press [UP] key or [DOWN] key to check the car call status in present floor. If need to set car call on current floor, press [ENTER] key in the interface to save the car call information. In the interface, the information follow "F:" is the present floor the elevator car at.

Floor selection flowchart is shown in Fig 4.6

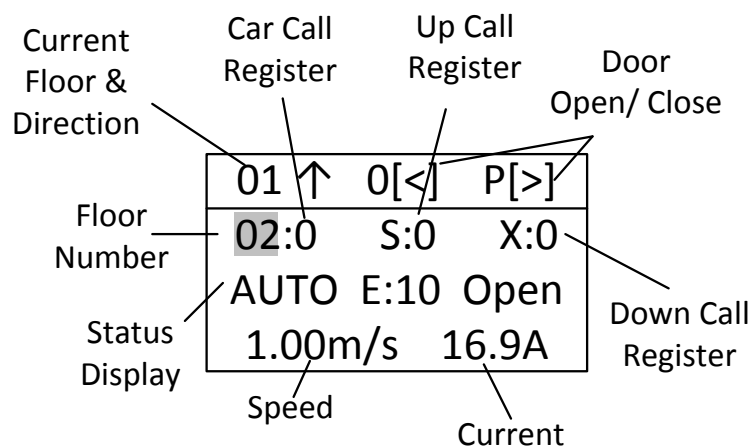


FIGURE 4.6 FLOOR SELECTION

In the interface of door control: Press [LEFT] key in the interface to carry out the command "opening front door". Press [RIGHT] key to carry out the command "close front door". Press [UP] key to carry out the command "open rear door". Press [DOWN] key to carry out the command "close rear door", Press [RES] key to cancel all the commands.

Door open and close flowchart is shown in Fig 4.7

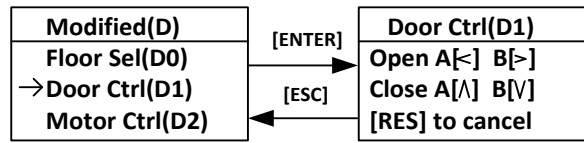


FIGURE 4.7 DOOR CONTROL INTERFACE

In Motor Control interface: Press [UP]/ [DOWN] key to select the running mode is continuous running or JOG. In continuous running mode, press [RUN] key to start motor first, press [UP]/ [DOWN] key to increase/decrease the motor given speed. The motor given speed can be negative (negative speed means motor reverse run), press [ENTER] key to save the given speed. Press [STOP] key to stop the motor. In the mode of JOG, press [UP]/ [DOWN] key to increase/decrease the JOG operation frequency, after press the [ENTER] to save the setting, and then press the [RUN] key to start, and press the [STOP] to stop the operation.

The process of operator to control the motor running is shown below in the Fig 4.8.

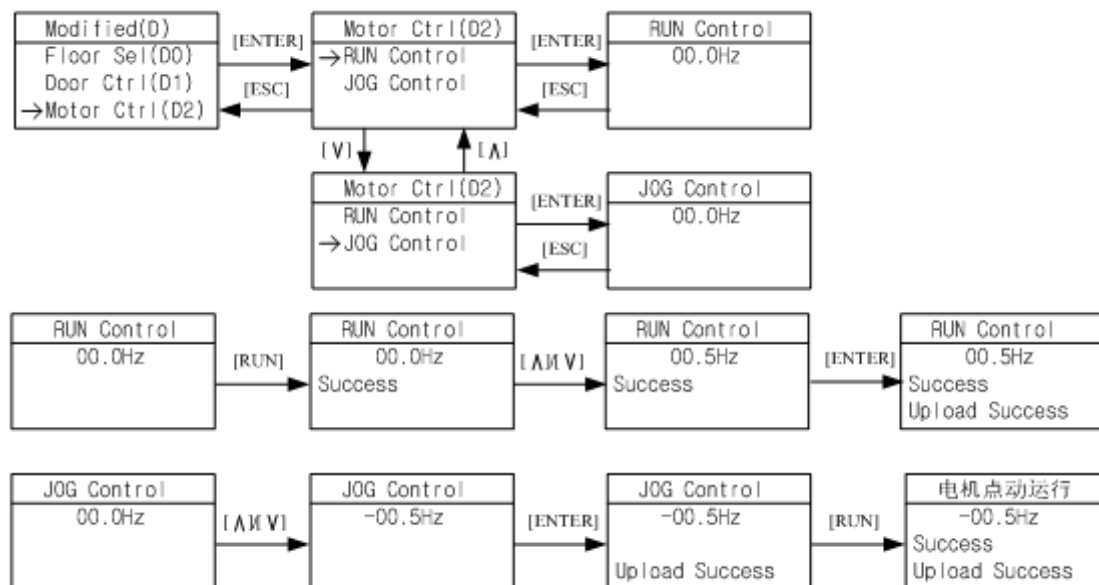


FIGURE 4.8 FLOWCHART FOR OPERATOR TO CONTROL MOTOR RUNNING

In interface of call testing: Press [UP]/ [DOWN] key to check the connections for all floors. Normally, it displays running success, otherwise it shows fails. Press [ESC] key to return to the Previous Menu.

The flowchart for call testing is shown in Fig 4.9

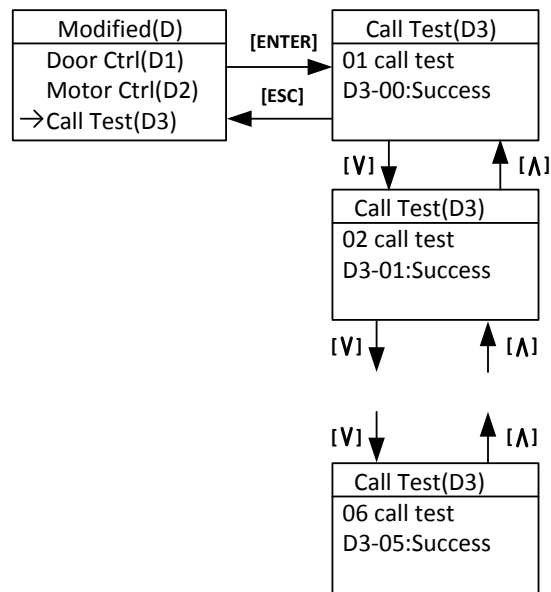


FIGURE 4.9 ELEVATOR CALL TESTING INTERFACE

The interface of communication testing is shown in the Fig 4.10

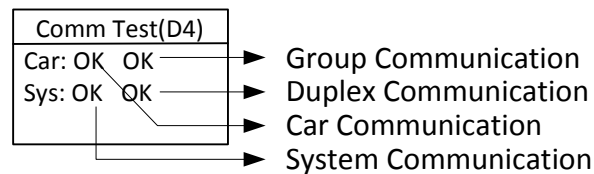


FIGURE 4.10 COMMUNICATION TESTING INTERFACE

The display of the CarControl Communication is as follows:

OK Communication normal

ER Controller receiving data error (please check communication connection & car control board), when there appears a numerical value, it refers to the times of error on car control board communication.

System communication display

OK communication good

ET the controller sending data error (please check landing call communication connection), when there appears a figure, it refers to the times of error on system communication.

Group control communication

OK Group control system communication normal

ER Group control system communication abnormal (When choose this option)

Duplex control communication

- OK Duplex control system communication good
- ET/ER Duplex control system communication abnormal (When choose this option)

4.5. Save Parameter

In the interface of saving parameter, press the [ENTER] to save all the parameters in the F menu. During saving process, LCD will display “Waiting”; after saving, it will display “Success” or “Failure”.The flowchart of saving parameter is shown in the Fig 4.11

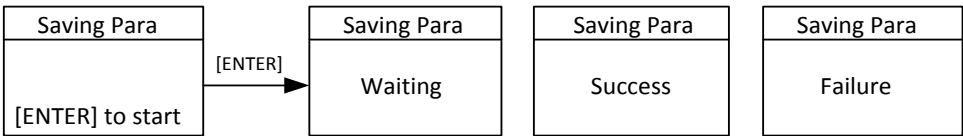


FIGURE 4.11 SAVING PARAMETER

4.6. Hoistway Learning

In hoistway learning interface:when status display “ToDown limit”, the hoistway learning cannot startdirectly. The elevator should manual run to the down limit position first, and “To Down limit” status disappear, the screen will display “[ENTER] to start”, press the [ENTER] key to start hoistway learning. During the learning process, the interface will display the current learning floor and display the status of “Waiting”, when the hoistway learning is completed, the status will display “Success”, when there are errors during the hoistway learning, the status will display “ERR” and display error code. Press [ESC] key to return the Previous Menu.

The flowchart of the hoistway learning is shown in the Fig 4.12.

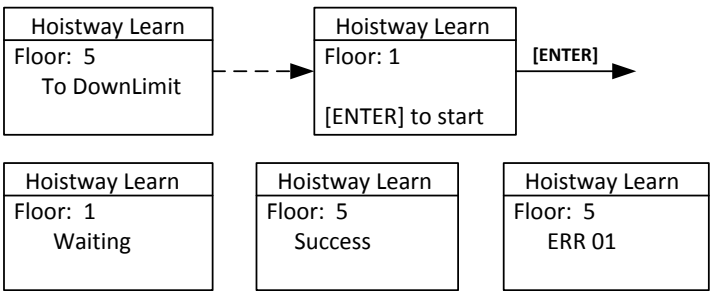


FIGURE 4.12 HOISTWAY LEARNING

4.7. Motor Auto-tuning

Motor Auto-tuning includes two parts: Motor angle tuning and motor parameter tuning. In the interface of Motor Tune: Press [UP] or [DOWN] key to move the arrow to select related tuning information; Press [ENTER] key to enter the pointed tuning interface.

In the interface of Motor Angle Tuning and Motor Parameter Tuning, press [ENTER] to start turning. During tuning, the operator display “waiting”; after tuning, it will display “success”. During tuning, if there is error, the tuning process will be terminated, and LCD will display “Tune End”, and the status is “error”, with error code followed.



IMPORTANT

Before auto-tuning process, make sure to set the parameters in the F5 menu first.

Make sure motor has no load, first carry out motor parameter tuning, then carry out the motor angle tuning. Press [ESC] key to return to the previous menu. The flowchart of the motor learning is shown in Fig 4.13

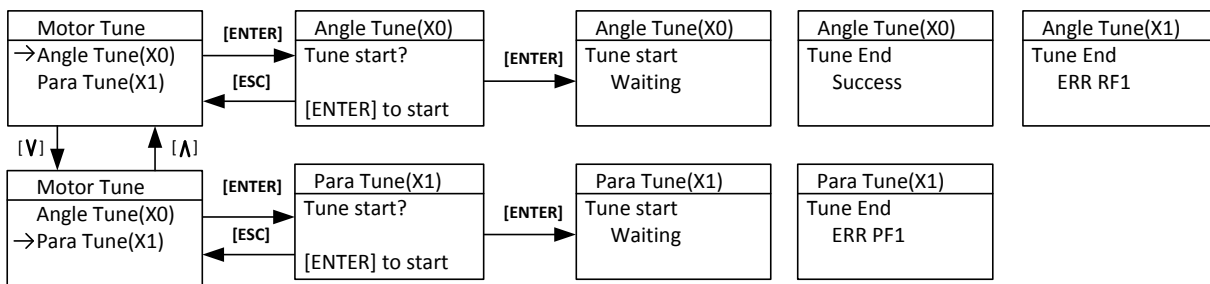


FIGURE 4.13 MOTOR AUTO-TUNING PROCESS

4.8. Motor Load Tuning

Motor Load Tuning also includes two parts: Light loaded tuning and Full-loaded tuning.

In the interface of load tuning: Press [UP] or [DOWN] move the arrow to select related tuning information; press [ENTER] key to enter the pointed tuning interface.

In light-loaded tuning or full-loaded tuning interface: Press [ENTER] to start tuning process, the operator display the present status. Press [ESC] key to return to the Previous Menu.

The load tuning process is shown in Fig.4.14.

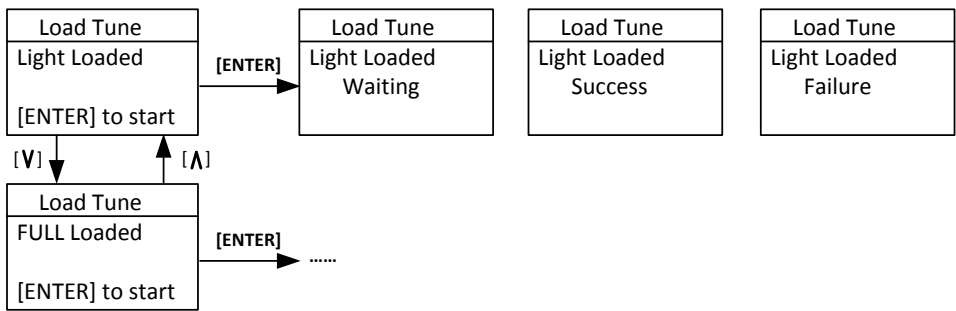


FIGURE 4.14 MOTOR LOAD TUNING PROCESS

4.9. Time Setting

In the interface of time setting, the last two digit of “Year”, “month”, “day”, “hour”, “Minute” and “second” are editable, press [LEFT] or [RIGHT] to move the arrow to the right place. Press [UP] or [DOWN] key to change the pointed value. After setting: Press the [ENTER] key to save. Press [ESC] key to return the Previous Menu.

The flowchart of time setting is shown in the Fig 4.15

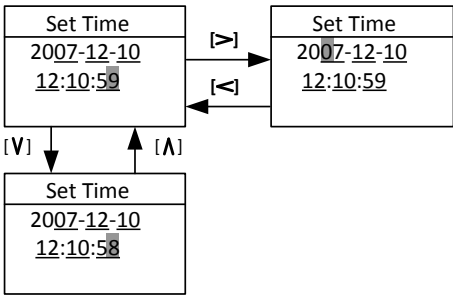


FIGURE 4.15 TIME SETTING

4.10. Fault Record Check

In the interface of FaultRecord: Press [UP] or [DOWN] key to check the elevator and controller fault record. Press [ENTER] to enter the selected fault record, press [UP] or [DOWN] key to check the latest 30 fault history record.

Each elevator fault record includes error code, time, elevator status at fault (Floor number, running direction, running speed, I/O state), and related information. This helps to find the root cause of the elevator fault and guide the elevator maintenance.

Each controller fault record includes error code, time, elevator status at fault and other important data (Running speed, line/BUS voltage and current). This helps to find the root cause of the controller fault and guide the elevator maintenance.

The flowchart of the fault record check is shown in the Fig 4.16

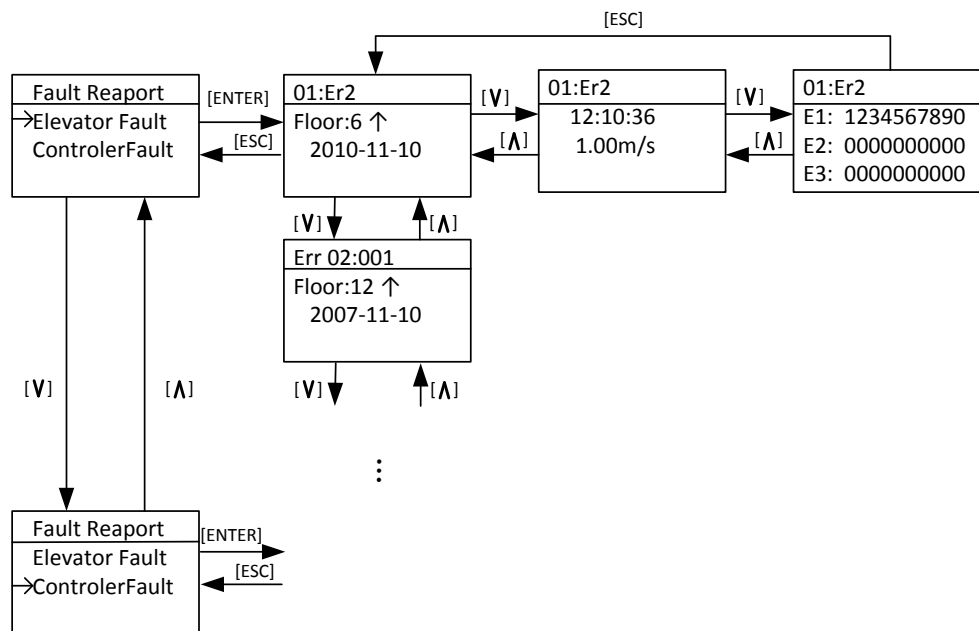


FIGURE 4.16 FAULT RECORD

Press [ESC] key to return to the Previous Menu.

4.11. Environment Initialization

In environment initialization interface, the display language, the parameter visit grade, input password and the shortcut menu of the operator can be set.

The flowchart for environment initialization is shown in the Fig 4.17.

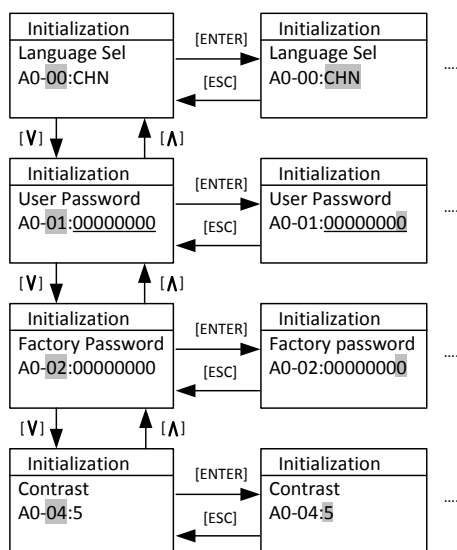


FIGURE 4.17 ENVIRONMENT INITIALIZATION

Language Selection

The flowchart for the language selection is shown in the Fig 4.18.

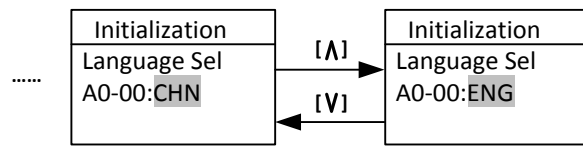


FIGURE 4.18 LANGUAGE SELECTION

Press [UP] or [DOWN] to select language, and press [ENTER] key to save the selection.

User password input and setting

In the interface of password, press the [LEFT] or [RIGHT] key to move the arrow to the pointed position, press [UP] or [DOWN] key to increase or decrease the pointed value, press the [ENTER] key to input the password. When password input is incorrect, “invalid password” will be displayed, and the password cannot be changed at this time. When the password input is correct, “Password OK” will be displayed, next press [ENTER] first then press [RES] key to enter the password setting interface and reset the password. Resetting password is similar to input password. Finally press the [ENTER] key to save the new password.

The flowchart of the password input and change is shown in the Fig 4.19.

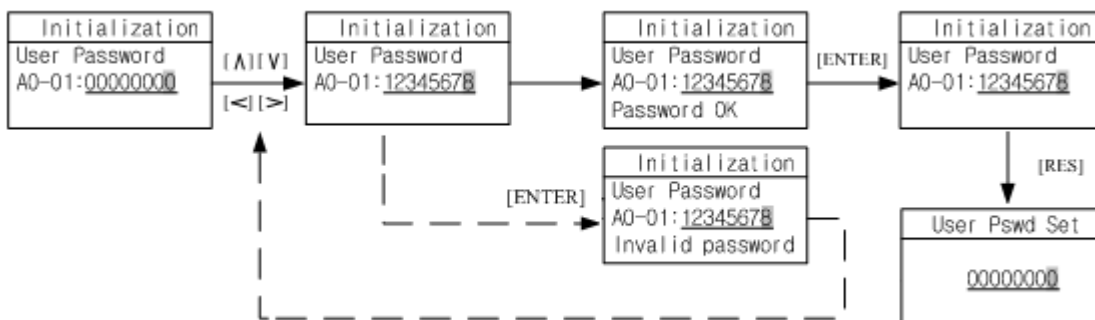


FIGURE 4.19 USER LEVEL PASSWORD INPUT/CHANGE

Factory level password Input and Setting

The process of the factory level password input and setting refers to the user level password input and setting.

Contrast setting

Set the LCD display grayscale. Press [UP] or [DOWN] key to change the display grayscale.

4.12. Parameter Copy

The function parameter copy is to simplify the parameter setting and commissioning process, especially for multiple elevators with same configurations. After finishing the parameter setting and commissioning of one elevator, this function can copy all the parameters (Saved in the digital operator memory), take the digital operator and connect to other elevators, copy all the parameters to the controller, check parameters, and the elevator can run normally.

In the interface of parameter copy: Press [UP] or [DOWN] key to move the arrow to carry on the necessary operation, press the [ENTER] key to start operation.

The flowchart of parameter copy is shown in Fig 4.21.

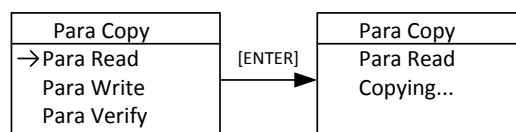


FIGURE 4.21 PARAMETER COPY

After copy operation, LCD display is shown below in Fig 4.22.

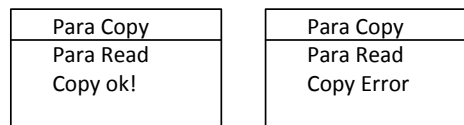


FIGURE 4.22 PARAMETER COPY FINISH

Press [ESC] key to return to the previous menu.

4.13. Restore to Factory Setting

If necessary, the controller can be restored to the factory (default) setting. Press the [ENTER] key to restore the factory setting, the interface will display the status and the result.

The flowchart of restore the factory setting is shown in the Fig 4.23.

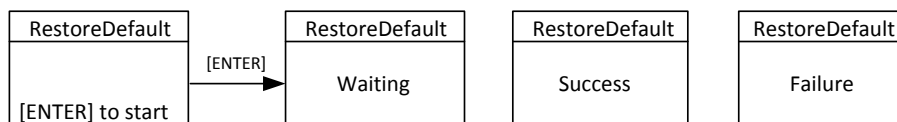


FIGURE 4.23 RESTORE TO FACTORY SETTING

Press [ESC] key to return the previous menu.

When using Blue-Light Integrated Controller, if the traction machine is also made by Blue-Light, you only need to input the machine model number and encoder information on the machine name plate to finish the parameter setting of the machine.

Figure 1: Example of a motor configuration. (a) shows a motor configuration table with columns for SL Motor Type and PG Type. (b) shows a motor configuration table with columns for SL Motor Type, Encoder PPR, and Motor Model. The table in (b) is filled with values: S1.0 D-2.0, 2048ppr, and 8192ppr.

content of the pointed area, then press the **ENTER** key.
If the area is not set, the cursor will not move.
e.g. S1.0D- as the last number is empty

The diagram illustrates a sequence of 12 screenshots showing the interaction with the SL Motor Type screen. The sequence starts with a screen showing 'SL Motor Type' and 'S0.0 --.0.0'. A '[^]/[V]' key press leads to the next screen, which shows 'SL Motor Type' and 'S0.0 --.0.0'. An '[ENTER]' key press leads to the third screen, which shows 'SL Motor Type' and 'S0.0 --.0.0'. A '[^]/[V]' key press leads to the fourth screen, which shows 'SL Motor Type' and 'S0.75 --.0.0'. An '[ENTER]' key press leads to the fifth screen, which shows 'SL Motor Type' and 'S0.75D-.0.0'. An '[ENTER]' key press leads to the sixth screen, which shows 'SL Motor Type' and 'S0.75D-.0.0'. An '[ENTER]' key press leads to the seventh screen, which shows 'SL Motor Type' and 'S0.75D-.0.0'. An '[ENTER]' key press leads to the eighth screen, which shows 'SL Motor Type' and 'S0.75D-.0.0'. An '[ENTER]' key press leads to the ninth screen, which shows 'SL Motor Type' and 'S0.75D-.2.0'. An '[ENTER]' key press leads to the tenth screen, which shows 'SL Motor Type' and 'S0.75D-.2.0'. An '[ENTER]' key press leads to the eleventh screen, which shows 'SL Motor Type' and 'S0.75D-.2.0'. An '[ENTER]' key press leads to the final screen, which shows 'SL Motor Type' and 'S0.75 D-.2.0 Success'.

Chapter 5: Parameters

5.1. Parameters Function Classifications

According to different function, parameters are divided into groups as shown in chart 5.1.

CHART5.1 PARAMETER FUNCTIONS LIST

Function Symbol	Function Name
U	Monitoring Parameters
F	Setup Parameters
A	Environment Initialization
D	Commissioning Parameters

5.2. Parameters Hierarchical Structure

The hierarchy structure of parameters as shown in fig.5.1.

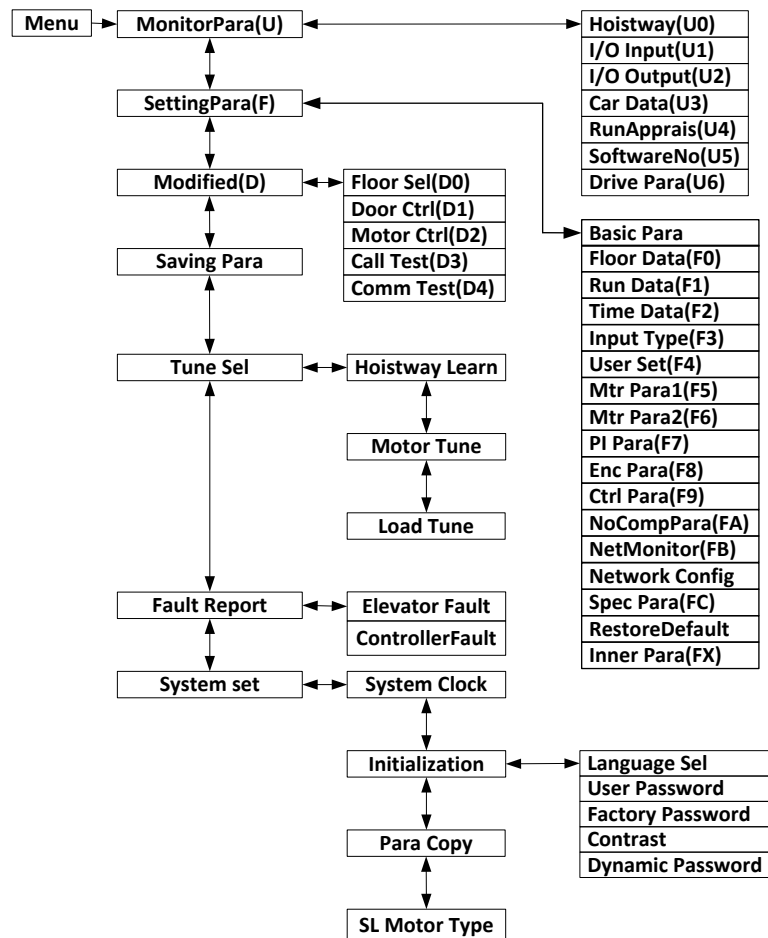


FIGURE 5.1 CONTROLLER PARAMETERS HIERARCHICAL STRUCTURE

5.3. Monitoring Parameters

5.3.1 Hoistway Location (U0)

Hoistway location parameters refer to the hoistway switches (top/bottom terminal/limit switches) position data on each floor recorded in the controller after hoistway learning process, and the unit is m (meter). If need to calculate the distance between two floors, simply minus the calibration data on these two floors.

After hoistway learning, please check the floor calibration, if the calibration value is higher than expected, it is possible that elevator's rated speed setup is higher than the actual value or elevator encoder pulse setup is smaller than the actual pulse. If the calibration value is too low, it is possible that elevator rated speed setup is lower than the actual value or its encoder pulse setup is larger than the actual pulse.

Hoistway location parameter's number, description and content are shown in chart 5.2

TABLE 5.2 U0 MONITORING PARAMETER LIST

Para No.	Display (In Chinese)	Content	Range	Unit	Ref Page
	Display (In English)				
U0-00	下限位刻度	The location of bottom limit in hoistway. Data will be recorded after finishing hoistway learning	--	m	--
	Lower Limit				
U0-01	上限位刻度	The location of top limit in hoistway. Data will be recorded after finishing hoistway learning。	--	m	--
	Upper Limit				
U0-02	下端站 1 刻度	Location of bottom terminal switch 1 in hoistway. Data will be recorded after finishing hoistway learning	--	m	--
	Lower Slowdown 1				
U0-03	下端站 2 刻度	Location of bottom terminal switch 2 in hoistway. Data will be recorded after finishing hoistway learning	--	m	--
	Lower Slowdown 2				
U0-04	上端站 1 刻度	Location of top terminal switch 1 in hoistway. Data will be recorded after finishing hoistway learning	--	m	--
	Upper Slowdown 1				
U0-05	上端站 2 刻度	Location of top terminal switch 2 in hoistway. Data will be recorded after finishing hoistway learning	--	m	--
	Upper Slowdown 2				
U0-06	1 层刻度 ... 64 层刻度	The location of floor 1-64 switches in hoistway. Data will be recorded after finishing hoistway learning	--	m	--
... U0-69	Floor Data 1...64				

5.3.2 Monitoring Parameter for I/O Status, Cabin Signal & Interference Appraisal (U1-U5)

CHART5.3 U1~U5 MONITORING PARAMETER LIST

Para No.	Display (In Chinese)	Content	Range	Unit	Ref Page
	Display (In English)				
U1-00	输入状态	Controller input data show in decimal type. It will be turned into binary type to show the logical status of the input port.	--	--	29
	Input Data				
U1-01	输入状态指示	Input port data show in binary type .Each data correspond to logical status of one input port.	--	--	
	Input Bin				
U1-02	输入状态评价	Each line correspond to one input port,"On/Off" states the current port status, the following "n" value states the signal appraisal to input level. Value from "10" to "0" refers to interference condition from good (less interference) to bad (large interference)	--	--	
	Input App				
U2-00	输出状态	Display the output port Y0-Y15 current status. The valid output port has the corresponded indication.Port without output (invalid) will be hidden.	--	--	30
	Output Data				
U3-00	轿厢信号	Display car input signal status. The valid input port has the corresponded indication.Port without input (invalid) will be hidden.	--	--	63
	Car Input Data				
U4-00	运行次数	Show the elevator accumulated running times. Adopts 10 digital decimal figures as indication	--	Times	--
	Run Times				
U4-01	运行时间	Show the elevator accumulated running hour. Adopts 10 digital decimal figures as indication.	--	Hour	--
	Run Hours				
U4-04	并联通讯 1	Signal send appraisal for Duplex and group control. Large number means communication send more mistakes.	--	--	--
	SendApp1				
U4-05	并联通讯 2	Signal receive appraisal for Duplex and group control. Large number means communication receive more mistakes.	--	--	--
	ReceiveApp2				
U4-06	电磁干扰评价	Appraise the value of interference strength at site. The big value refers to strong interference,"0" states no interference and good GND condition.	--	--	--
	InterferApprais				
U4-07	编码器评价	The interference degree of encoder	--	--	--

	Encoder Apprais	signal.When elevator runs steady, large value states the encoder signal weak with heavy interference.			
--	-----------------	---	--	--	--

CHART5.3 U1~U5 MONITORING PARAMETERS LIST (CONT'D)

Para No.	Display (In Chinese)	Content	Range	Unit	Ref Page
	Display (In English)				
U4-09	锁梯计数	The current elevator stop timer	--	--	--
	Lock Timer				
U5-00	控制软件版本	Show the elevator control software information. Provide the current software version for factory maintenance and software upgrading.	--	--	--
	CtrlSoftWare NO				
U5-01	驱动软件版本	Show the drive control software information. Provide the current software version for factory maintenance and software upgrading.	--	--	--
	DriveCodeVer				
U5-02	底层驱动版本	Show base drive control software information. Provide the current software version for factory maintenance and software upgrading.	--	--	--
	CpldEdition				



For the meaning of input status U1-01 AND output status U2-00, please refer to the control terminal definition chart 3.3. (Page 29)

IMPORTANT Cabin signal symbol definition and content is shown in chart 5.4. (Page 63).

CHART 5.4 U3-00 CABIN SIGNAL CONTENT & DEFINITION

Cabin signal	Symbol signal	Cabin terminal No.	Content
C00	IGM1	J3-4	door close 1 input
C01	IKM1	J2-4	door open 1 input
C02	IGM2	J5-4	door close 2 input
C03	IKM2	J4-4	door open 2 input
C04	GMV2	J10-6	door close limit 2 input
C05	KMV2	J10-5	door open limit 2 input
C06	GMV1	J9-3	door close limit 1 input
C07	KMV1	J9-2	door open limit 1 input
C08	SZY	J10-1	Special Use Input
C09	IGMYS	J6-4	door open delay input
C10	SZH	J9-10	Attendant input
C11	--	--	Empty (for Backup use)
C12	SZS	J10-2	Bypass drive input
C13	MZ	J9-6	Full-load input
C14	QZ	J9-8	Light-load input
C15	CZ	J9-5	Over-load input
C16	KZ(50%)	J9-9	50% Full-load (No-load) input

C17	KAB2	J9-7	Door safety plate 2
C18	KAB1	J9-4	Door safety plate 1

5.3.3 Drive Monitoring Parameters

TABLE 5.5 U6 DRIVE MONITORING PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Unit	Ref Page
	Display (In English)				
U6-00	功率等级	Rated power class	--	kW	--
	Power				
U6-01	给定转速	Reference Speed	--	RPM	--
	Ref Speed				
U6-02	反馈转速	Feedback Speed	--	RPM	--
	Feedback Speed				
U6-03	称重值	The current load in % of full load	--	%	--
	Load				
U6-04	直流母线电压	DC BUS voltage	--	V	--
	DC Voltage				
U6-05	输出电流	Output Current	--	A	--
	Output Current				
U6-06	变频器内部温度	Drive internal temperature	--	°C	--
	Temperature				
U6-07	输出转矩	Output Torque	--	N·M	--
	Output Torque				

5.4. Parameters setup Function Instruction

5.4.1 Building Setup Parameters (F0)

CHART 5.8 BUILDING SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Change	Ref Page
	Display (In English)						
F0-00	总楼层	Total floor number (same as door zone plate number)	2~64	6	--	N	--
	Total Floor						
F0-01	基站层	Without landing/car call elevator will return this floor.	1~Total floor	1	--	N	84
	Homing Floor						
F0-02	消防层	At fire-linkage circuit close,elevator enter fire mode and return to this floor automatically.	1~Total floor	1	--	N	85
	Fire Floor						
F0-03	锁梯层	When close electric lock in the process of running,elevator return to this floor and stop.	1~Total floor	1	--	N	84
	Parking Floor						
F0-04	VIP 楼层	VIP floor setup	1~Total floor	1	--	N	--

	VIP Floor						
F0-05	1~64 层显示设置	Set indication 1-64, customized character/figure display available	---	1	--	N	6-13
...	Set Indication			...			
F0-68	1~64			64			



“N” states the parameter cannot be changed in the process of running.”Y”states the parameter can be changed in the process of running. It has same meaning in the following table.

IMPORTANT

5.4.2 Parameters for Running Setup (F1)

CHART5.9 RUNNING SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
F1-00	电梯额定速度	Elevator speed at motor rated speed. Calculate through motor rated rev,traction ratio, deceleration ratio and traction sheave diameter.	0~4.0	1.6	m/s	N	76
	Car Speed						
F1-01	折算转速	Motor speed at elevator rated speed (Calculated)	1~9999	1450	RPM	N	76
	Motor Speed						
F1-03	检修运行速度	Car running speed at inspection cannot exceed 0.6m/s basedon relevant standards and regulations	0~0.6	0.3	m/s	Y	76
	Insp Speed						
F1-04	启动平滑速度	For large resistance at motor start,the starting speed can have smooth increase. The start smooth speed is invalid if set to “0”.	0~0.2	0.00	m/s	Y	--
	Start Speed						
F1-05	自救运行速度	When elevator park outside door zone due to fault,if satisfy running condition,the elevator can level to door zone with this speed.	0.01 ~ 0.6	0.3	m/s	Y	76
	Leveling Speed						
F1-06	单层运行速度	Steady speed on the lowest speed curve.	0~1.0	0.5	m/s	N	77
	Least Speed						
F1-07	提前开门速度	Car speed when elevator open door in advance is allowed.	0~0.3	0.15	m/s	N	Appendix 2
	Open Door Speed						
F1-08	再平层保护速度	The speed limit for re-leveling. If speed exceeds such value in re-leveling process, the re-leveling will stop with #03 protections.	0~0.3	0.3	m/s	N	Appendix 2
	Relevelst Speed						
F1-09	再平层运行速度	Elevator running speed at re-leveling.	0~0.10	0.05	m/s	N	Appendix 21
	Relevelrun Speed						



When elevator rated speed/Single floor running speed is lower than 0.5m/sec,please properly decrease the acceleration B1,deceleration B2;otherwise it will affect the system calculation of current speed.When user modifies the two speed value out of limit,system will reset to the data before modification.

IMPORTANT

CHART5.9 RUNNING SETUP PARAMETERS LIST (CONT'D)

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
F1-10	加速斜率 B1	B1 refers to the acceleration speed curve changing rate, smaller value means elevator start with smooth and gentle increase of speed.	0.1~1.0	0.7	m/s ²	N	77
	Acceleration B1						
F1-11	减速斜率 B2	B2 refers to the deceleration speed curve changing rate, smaller value means elevator brake with smooth and gentle decrease of speed.	0.1~1.0	0.7	m/s ²	N	77
	Deceleration B2						
F1-12	S 曲线 P1	P1: Acceleration speed increase rate at beginning of elevator start; smaller value means beginning of elevator start with slow and steady movement.	0.1~1.0	0.6	m/s ³	N	77
	S Curve P1						
F1-13	S 曲线 P2	P2: Acceleration speed decrease rate at end of elevator start; smaller value means end of elevator start with slow and steady movement.	0.1~1.0	0.6	m/s ³	N	77
	S Curve P2						
F1-14	S 曲线 P3	P3: Deceleration speed increase rate at beginning of elevator brake; smaller value means beginning of elevator brake with slow and steady movement.	0.1~1.0	0.6	m/s ³	N	77
	S Curve P3						
F1-15	S 曲线 P4	P4: Deceleration speed decrease rate at end of elevator brake; smaller value means end of elevator brake with slow and steady movement.	0.1~1.0	0.6	m/s ³	N	77
	S Curve P4						
F1-16	零速阈值	Motor speed less than set value, system considers elevator speed as zero and output brake signal.	0~10	1	RPM	Y	81
	Zero Speed						
F1-17	平层调整	Adjust differences of up/down leveling	0~100	50	mm	N	6-13
	Leveling Adj						
F1-18	称重调整	Normally used in synchronous machine system, compensate elevator load based on steel rope weight difference on each floor.	0~20	0	--	Y	6-12
	Load Adj						

**IMPORTANT**

Acceleration B1, deceleration B2, S curve P1, P2, P3, P4 work together to determine the final speed curve and its trend. These parameters have internal relation with each other and are not allow to change at will. When the modified value is out of limit, the value will recover to the previous data.

CHART5.9 RUNNING SETUP PARAMETERS LIST (CONT'D)

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
F1-21	驱动模式	Selection of driving mode ,when setting "1", attendant/VIP mode close door manually;when setting "3", elevator automatically do test run ,other value is invalid.	0~9	0	--	N	--
	Drive Mode						
F1-22	贯通门方式	Setup rear door mode, based on customer requirements,set from mode"0" to"5".	0~5	0	--	N	86/87
	Two Door Mode						
F1-23	消防方式	Three Fire modes: 1.Mode"0": Elevator run fire-mode after returning to fire floor; 2.Mode "1": Elevator stop running after returning to fire floor; 3. Mode "2": After elevator return to fire floor, depend on fire switch to run/stop in fire mode.	0~2	0	--	N	85
	Fire Mode						
F1-24	并联梯号	Set "YES" in duplex enable. Set elevator number 0-1 in duplex; 0-7 in group control.	0~7	0	--	N	89
	Parallel No.						
F1-25	并联使能	Elevator duplex control: 1: On 0:OFF	0/1	0	--	Y	89
	Twins Control						
F1-26	群控使能	Elevator group control: 1:ON 0:OFF	0/1	0	--	Y	89
	Group Control						
F1-27	远程监控使能	Remote Monitoring System: 1: On 0: Off	0/1	0	--	Y	--
	Far Monitor						
F1-28	自动开关梯使能	Auto parking: 1:ON 0:OFF	0/1	0	--	Y	84
	Auto Parking						
F1-29	称重使能	Load Weighing: 1:ON 0: OFF	0/1	0	--	Y	89
	Load Enable						
F1-30	开门延长使能	Door open/close delay: 1:ON 0:OFF	0/1	0	--	Y	83
	Open Delay Able						
F1-31	闸臂反馈使能	Test brake feedback signal: 1: open 2: close	0/1	0	--	Y	79
	Brake Feedback						
F1-32	解梯密码	Password to release elevator stop.	0~9999	0	--	N	--
	Rerun Password						

5.4.3 Time Setup Parameters (F2)

CHART5.10 TIME SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
F2-00	提前开闸时间	Brake open first then run elevator speed curve. This is to improve the elevator start comfort and match control system with different machine brake on time.	0.00~9.99	0.50	s	Y	79
	BrakeON Time						
F2-01	抱闸时间	Brake close first then disable elevator run. This is to improve elevator stop comfort and avoid slip at elevator stop.	0.00~9.99	0.50	s	Y	79
	Brake OFF Time						
F2-02	检修抱闸时间	The time delay in inspection mode before brake close.	0.00~9.99	0.05	s	Y	79
	Insp Brake Time						
F2-04	零速时间	The time delay when system detects elevator stop. Adjust this parameter to close brake after elevator reach 0 speed completely, increase elevator stop comfort.	0~9.99	0.30	s	Y	80
	Zero Time						
F2-05	开门保持时间	In Auto mode, elevator automatically open door when stopping at one floor, door will automatically close after set time.	0~999	3	s	Y	83
	Open Door Time						
F2-06	开门延长时间	Enable door open delay function, press open delay button, door open time will be delayed.	0~999	30	s	Y	83
	Open Delay Time						
F2-07	返基站时间	The waiting time before elevator return to homing floor without landing/car call, Set value to "0" to disable this function.	0~999	60	s	Y	84
	Homing Time						
F2-08	开关门保持时间	1. Door open/close command run time; 2. Door open/close relay run time for door drive without open/close limit switch. 3. For door drive with open/close limit switch, this run time should be 1s longer than the door actual open/close time.	0~999	5	s	Y	83
	Door Run Time						
F2-09	到站信号延时	After elevator change speed to target floor, landing signal is delayed by set time, arrival gong/voice synthesizers are also delayed by set time.	0.00~9.99	0.15	s	Y	--
	Beep Delay Time						

F2-10	使能延时	Drive enable signal given/drop is delayed by set time after drive direction signal is given/drop. During this time, drive output current is decreased to reduce current noise.	0.00~9.99	0	s	Y	79
	Enable Delay						

CHART5.10 TIME SETUP PARAMETERS LIST (CONT'D)

Para No.	Display (In Chinese) Display (In English)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
F2-11	关照明延时	In Auto mode, if have no car/landing call during set time, system will cut car light power from COP.	0~999	15	min	Y	--
	Lamp Off Time						
F2-12	运行超时时间	To prevent wire rope slipping or elevator car stuck, time from elevator running to stop is limited to set value. If elevator is running longer than set value, system stops immediately and enter protection mode. Need to re-start the system in order to exit from such mode.	0~999	45	s	Y	--
	Over Time						
F2-13	启动平滑时间	The time to keep elevator start smooth.	0.00~9.99	0	s	Y	79
	SmoothStart Time						
F2-14	自动开梯时间	System will automatically start the elevator (Electric lock: ON) at set time.	00:00 ... 23:59	00:00	Hour: minute	Y	89
F2-15	Start Time						
F2-16	自动关梯时间	System will automatically stop the elevator (Electric lock: OFF) at set time. This function is disabled if same start/stop time.	00:00 ... 23:59	00:00	Hour: minute	Y	89
F2-17	Stop Time						
F2-18	不停层开时间	System will run bypass the set floorstart from this time.	00:00 ... 23:59	00:00	Hour: minute	Y	
F2-19	Start Time1						
F2-20	不停层关时间	System will run bypass the set floorstart until this time.	00:00 ... 23:59	00:00	Hour: minute	Y	
F2-21	Stop Time1						



The elevator automatic switch: F2-14, F2-15 F2-16, F2-17 were set separately as per hours and minutes. Please follow the operator indication for this setting.

5.4.4 Input type setup Parameters (F3)

TABLE 5.11 INPUT TYPE SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Live Chang	Ref Page
	Display (In English)					
F3-00	主板输入类型	Setting the input type on main control panel. Each bit corresponds to one terminal. Set default level of mainboard input port. ON: Close enable, OFF: Open enable.	0 ~ 4294967295	3974102631	N	87/88
	Input Type					
F3-01	轿厢输入类型	Setting the input type of cabin.Each bit corresponds to one terminal. ON: Close enable, OFF: Open enable.	0 ~ 4294967295	4294573839	N	87
	Car Input Type					
F3-02	输入功能 1	X19 Input Function Selection	0~32	19	N	
	Input select 1					
F3-03	输入功能 2	X22 Input Function Selection	0~32	22	N	
	Input select 2					
F3-04	输入功能 3	X23 Input Function Selection	0~32	23	N	
	Input select 3					
F3-05	输入功能 4	X24 Input Function Selection	0~32	24	N	
	Input select 4					
F3-06	输入功能 5	X25 Input Function Selection	0~32	25	N	
	Input select 5					
F3-07	输出功能 1	Y0 Output Function Selection	0~32	0	N	
	output select 1					
F3-08	输出功能 2	Y11 Output Function Selection	0~32	11	N	
	output select 2					
F3-09	输出功能 3	Backup Output Function Selection	0~32	12	N	
	output select 3					



When using X22 and X23 as multifunctional input port, please make sure the re-leveling device is NOT used

5.4.5 Service Setup Parameters (F4)

CHART5.12 SERVICE SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Live Chang	Ref Page
	Display (In English)					
F4-00	不停层设置 1	Set elevator stop/bypass at floor corresponds to each bit. (1-32 floors)	0 ~ 4294967295	4294967295	Y	89
	Set Stop Floor1					
F4-01	不停层设置 2	Set elevator stop/bypass at floor corresponds to each bit. (33-64floors)	0 ~ 4294967295	4294967295	Y	89
	Set Stop Floor2					
F4-02	分时不停层 1	Set elevator stop/bypass at floor corresponds to each bit at the set time. (1-32floors)	0 ~ 4294967295	0	Y	89
	TIM Stop Floor1					
F4-03	分时不停层 2	Set elevator stop/bypass at floor corresponds to each bit at the set time. (33-64 floor)	0~ 4294967295	0	Y	89
	TIM Stop Floor2					
F4-04	前门设置 1	Set elevator front door enable /disable at floor corresponds to each bit (ON/OFF: Front door enable /disable at this floor)	0~ 4294967295	4294967295 (1~32)	Y	87
	Door Select A1					
F4-05	后门设置 1	Set elevator rear door enable /disable at floor corresponds to each bit (ON/OFF: Rear door enable /disable at this floor)	0~ 4294967295	4294967295 (1~32)	Y	87
	Door Select B1					
F4-06	特殊功能选择	Set elevator functions enable /disable at floor corresponds to each bit. (ON: Enable, OFF: Disable)	0~ 4294967295	4	Y	91/ 92
	Function Select					
F4-07	特殊功能选择 2	Set elevator functions enable /disable at floor corresponds to each bit. (ON: Enable, OFF: Disable)	0 ~ 4294967295	0	Y	92/ 93
	Function Select 2					

5.4.6 Motor Setup Parameters (F5-F6)

CHART5.13 MOTOR SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
F5-00	电机类型	Set motor type (0:sync- outer rotor, 1:async machine, 2:sync-inner rotor)	0~2	0	--	N	93
	Motor Type						
F5-01	电机极数	Moto poles (Nameplate)	1~99	20	--	N	93
	Poles						
F5-02	电机同步频率	Motor synchronous frequency (Nameplate)	0.001~99.999	16	Hz	N	93
	Sync Freq						
F5-03	电机额定功率	Motor rated power (Nameplate)	1~50	6.7	kW	N	93
	Rated Power						
F5-04	电机额定转速	Motor rated speed (Nameplate)	1~1999	96	RPM	N	94
	Rated Speed						
F5-05	反电动势	Motor counter-EMF (Nameplate)	1~380	280	V	N	94
	V IN						
F5-06	电机相电感	Motor phase inductance set. (Auto-tuning/ manual input)	Auto-tuning/ Nameplate		mH	N	94
	L_phase						
F5-07	电机相电阻	Motor phase resistance set. (Auto-tuning/ manual input)	Auto-tuning/ Nameplate		Ω	N	94
	R_phase						
F5-08	电机额定电流	Motor rated current. (Nameplate)	0~99.999		A	N	94
	Rated FLA						
F5-09	空载电流	For asynchronous machine, no-load excitation current.	0.1~50	0	A	N	94
	NO-Load Current						
F5-10	滑差	For asynchronous machine rated slip. (Nameplate)	0.1~10	1.3	HZ	N	94
	Rated Slip						
F6-00	载波频率	Set controller carrier frequency.	6~15	8	kHz	N	--
	Carrier Freq						
F6-02	速度压缩比	Speed Zoom (Reduce elevator actual running speed)	0~100	100	%	Y	94
	SpeedZoom						
F6-03	运行方向选择	Select motor running direction (0/1:Motor rotates anti-clockwise, car move down/up).	0/1	0	--	--	94
	DirSel						
F6-04	速度环比例	Speed loop proportional gain. (Valid for complete curve if not used in multiple PI.)	0~65535	700	--	--	95
	Kp						
F6-05	速度环积分	Speed loop integral gain. (Valid for the complete curve if not used in multiple PI.)	0~65535	260	--	--	95
	KI						

5.4.7 Multiple PI Setup Parameters (F7)

CHART5.14 MULTIPLE PI SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
F7-00	多段 PI 使能	Multiple PI parameters 1: Enable; 0: Disable	0/1	0	--	N	95 96
	PIMulEnable						
F7-01	PI 作用范围 1	PI available range 1 (Start-middle speed running PI switch frequency)	0~ Rated freq	0	Hz	Y	95 96
	PI1 Range						
F7-02	PI 作用范围 2	PI available range 2 (middle -high speed running PI switch frequency)	0~ Rated freq	0	Hz	Y	95 96
	PI2 Range						
F7-04	PI 作用范围 4	PI available range 4	0~ Rated freq	0	Hz	Y	95 96
	PI3 Range						
F7-05	比例增益 1	PI available range 1 proportional gain	0~2000	700	--	Y	95 96
	Kp1						
F7-06	积分增益 1	PI available range 1 integral gain	0~2000	260	--	Y	95 96
	Kx1						
F7-07	比例增益 2	PI available range 2 proportional gain	0~2000	0	--	Y	95 96
	Kp2						
F7-08	积分增益 2	PI available range 2 integral gain	0~2000	0	--	Y	95 96
	Kx2						
F7-11	减速段比例	PI available range 4 proportional gain	0~2000	700	--	Y	95 96
	Kp3						
F7-12	减速段积分	PI available range 4 integral gain	0~2000	260	--	Y	95 96
	Kx3						

5.4.8 Encoder Setup Parameters (F8)

CHART5.15 ENCODER SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
F8-00	编码器线数	The encoder pulse count per-revolution.	100~8192	8192	--	N	6-18
	Encoder PPR						
F8-02	PG 类型	PG card type (0: Incremental encoder, 1: Sine/Cosine encoder)	0/1	0	--	N	6-18
	PGType						

5.4.9 Control Setup Parameters (F9)

CHART5.16 CONTROL SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
F9-00	最大补偿力矩	Maximum torque compensation (torque required to compensate at no load, 100% correspond to machine rated torque.)	0 ~ 100%	0	%	N	89
	Max Torq Comp						
F9-01	速度来源选择	Speed given source selection: 0: Simulation; 1: Multi-segment 2: Internal; 3: Operator	0~3	2		N	--
	SPDSOURCESEL						
F9-03	超差范围设定	Speed DeviationSet(100% correspond to machine rated speed.)	0~100	5	%	Y	--
	Spderr Set						
F9-11	补偿使能	Load Compensation: 1 enable; 0 Unable	0/1	1	--	N	99
	Load Comp Enable						
F9-13	称重来源	Weighing source(0:SJT weighing,1:-10-10V weighing,2:0-10V weighing)	0/1/2	0	--	N	99
	Load Source Sel						
F9-19	顺时针补偿偏置	Up direction (clockwise) Compensation Bias	-100~100	0	--	Y	--
	UP Comp Bias						
F9-20	逆时针补偿偏置	Downdirection (anti-clockwise) Compensation Bias	-100~100	0	--	Y	--
	DOWN Comp Bias						
F9-21	满载补偿比例	Full load compensation proportion	0~200	100	--	Y	--
	FULL Comp Pro						

5.4.10 No-load Compensation Setup Parameters (FA)

CHART5.17 NO-LOAD COMPENSATION SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
FA-00	启动段比例增益	Start-up proportional gainwith no compensation.	0~50000	30	--	N	98
	StratKP						
FA-01	启动段积分增益	Start-up integral gain with no compensation	0~50000	750	--	N	98
	StratKI						
FA-08	无补偿比例 1	No compensation effect proportional gain 1	1~6500	3600	--	N	99
	PLKP1						
FA-09	无补偿作用时间	No compensation effect time	1~1000	900	ms	N	99
	PLTime						
FA-11	无补偿比例 2	No compensation effect proportional gain 2	0~50000	800	--	N	99
	PLKP2						
FA-12	无补偿比例系数	No compensation effect proportional factor	0~50000	125	--	N	99
	PLKPMOD						

5.4.11 Special Parameters (FC)

Special parameters (FC) are mapping a part of factory parameters (FX) in customer level; users can access this part information by user level password. In these parameters, FC-00~FC-06 can only be viewed but not editable, while other parameters can be changed. Special parameters (FC) number,description and content are shown below in Chart 5.18.

CHART5.18 SPECIAL PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
FC-00	Z 脉冲数	Result of motor angle tuning, same as FX-00.	0~3277	--	--	N	--
	Zpulse_Init						
FC-07	电流环比例	Current ring proportional (FX-07), MODIFY WITH CAUTION!	0~65535	2000	--	N	--
	Kplreg						
FC-08	电流环积分	Current ring integral (FX-08), MODIFY WITH CAUTION!	0~65535	500	--	N	--
	Kxlreg						
FC-13	自学习方式选择	Sine/Cosine PG card auto- tuning selection (FX-20): 0:Rotation; 1:Stationary;	0/1	0	--	N	--
	AutoTuneModeSel						
FC-14	负温度报警使能	Negative temperature alarm (FX-21) 1: Alarm enable at -15C; 0: Alarm disable at -15C.	0/1	1	--	N	--
	N Temp Alarm Ena						
FC-15	初始定位使能	When using Sine/Cosine PG card, whether need CD signal for position at power up 0:Yes.1:No (Can only set to 0 for SPG-V33 and above) Set to 0 can avoid electric noise at first power up.	0/1	0		N	FX-24
	InitTuneEnable						
FC-16	CD 信号方向选择	FC15 is available if set to 1. Set to 0 if AB & CD signal in same phase, otherwise set to 1. (Auto selected at motor angle tuning.)	0/1	0		N	FX-25
	CD DirSel						

5.4.12 Environment Setup Parameters (A)

CHART 5.20 ENVIRONMENT SETUP PARAMETERS LIST

Para No.	Display (In Chinese)	Content	Range	Factory Setting	Unit	Live Chang	Ref Page
	Display (In English)						
A0-00	显示语言	Language selection	--	CHINESE	--	Y	--
	Language Sel						
A0-01	用户密码	Input/Setting user level password	000000~999999	000000	--	Y	--
	User Password						
A0-02	厂家密码	Input/setting factory level password	000000~999999	000000	--	Y	--
	Factory Password						
A0-04	对比度	Setting the LCD contrast level	0~10	5	--	N	--
	Contrast						

Chapter 6: Parameters Setup

6.1. Elevator Running Speed Setup

6.1.1 Elevator Rated Speed, Motor Rated Speed, Encoder pulses Setup

1. Elevator rated speed (F1-00) can be calculated through motor RPM, traction ratio, reduction ratio and traction sheave diameter.



Elevator rated speed is used for calculating the ratio between motor rated speed and elevator speed, modifying this parameter cannot change the actual running speed of elevator; if need to change elevator running speed, please modify parameter F6-02 (Speed Zoom)

2. Motor rated speed (F1-01) is the speed of traction machine (RPM) under elevator rated speed.
3. Encoder Pulse (F1-02) is the pulse number of encoder for hoistway counting at elevator running.
4. Motor rated speed and elevator rated speed must follow the condition below:

$$\text{Elevator rated speed} = \frac{\text{Motor RPM} \times \text{traction sheave diameter} \times 3.14 \times \text{speed reduction ratio}}{60 \times 1000 \times \text{traction ratio}}$$

For example: Motor rated speed is 1370 rev/min., traction sheave diameter 590mm, speed reduction ratio: 2/53, traction ratio 1/1, then:

$$\text{Elevator rated speed} = \frac{1370 \times 590 \times 3.14 \times 2}{60 \times 1000 \times 1 \times 53} = 1. \frac{6m}{s}$$

After setting elevator rated speed, motor rated speed, encoder pulse number, system record the relationships between traction ratio, speed reduction ratio, traction sheave diameter and relationships between shaft counting pulse and running distance. If the setting is incorrect, the following problems may happen:

- 1) The elevator running speed on digital operator or software is different with the elevator actual running speed.

For example, if encoder pulse or motor rated speed is set to a smaller value, speed indicated on the display will be higher than actual speed, after hoistway learning, floor height learned by the system will be larger than actual height.

- 2) As the floor height learned by the system is higher, the elevator deceleration curve will be steeper than the setting. This could result elevator cannot leveling sometimes (running out of leveling zone with sudden brake).

6.1.2 Inspection Run Speed

In inspection mode, elevator runs in slow inspection speed (F1-03), based on international standard, such speed should be no more than 0.6m/s. After elevator reaches top or bottom terminal, the running speed will be reduced to half of the inspection speed.

If bottom/top terminal (X8/X7) is valid, elevator slow down to 1/2 inspection speed to prevent exceeding the limit.

When up/down jogging is cancelled, speed given will be instantly 0 without deceleration curves.

6.1.3 Rescue Speed

In both case the elevator will run in rescue speed (F1-05):

1. Due to fault or other reasons, elevator stops outside leveling zone, after elevator restores, it runs in rescue speed to the nearest floor and open door to release passengers;
2. When there is a hoistway counting error (ER14, Er18), elevator will run at rescue speed to the bottom floor for recalibration; After elevator reaches the bottom terminal, elevator will run at 1/2 of rescue speed to the bottom leveling position.

6.1.4 Least Speed

Least speed curve (F1-06) limits the lowest speed generated in the system. System will choose the elevator speed based on running distance, but the lowest speed is limited here. For certain site with very small floor distance, reduce this value could achieve normal running on this floor. Otherwise elevator cannot park at small distance floor, it will stop at the next floor.

6.2. Normal Running Speed Curve

Elevator can generate several optimal running curves based on rated speed setting to suit for different speed/distance running. But not the lowest running speed curve is limited by F1-06.

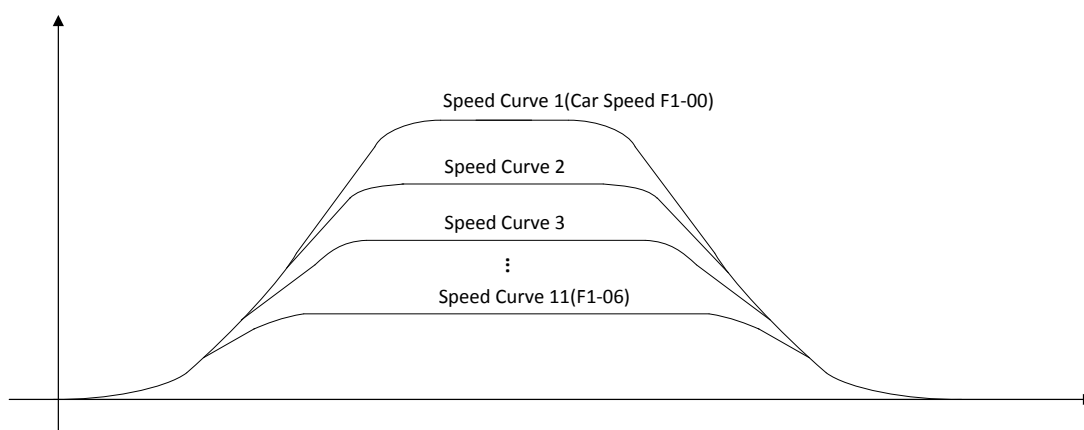


FIGURE 6.1 ELEVATOR RUNNING SPEED CURVE

Acceleration, deceleration for normal running curve and Acc/Dec for S curve are set by the following parameters:

1. F1-10 (Acceleration B1)
2. F1-11 (Deceleration B2)
3. F1-12 (S curve P1)
4. F1-13 (S curve P2)

5. F1-14 (S curve P3)
6. F1-15 (S curve P4)

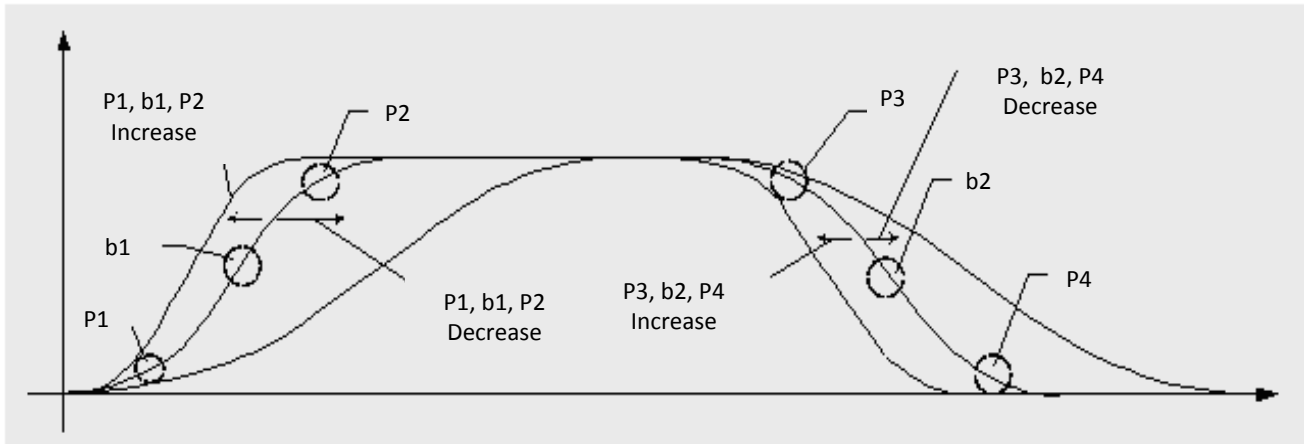


FIGURE 6.2 PARAMETERS ADJUSTMENTS FOR SPEED CURVE

- ✧ Elevator running comfort level can be set through the above 6 parameters. (Comfortlevel is also related to the drive control parameters.)The relationship between **b1, b2, P1, P2, P3, P4** and running curve are shown in Fig. 6.2.
- ✧ Increase parameters value, the corresponded curve will be steeper. While decreasing value will smooth the corresponded curve. Adjusting the above six parameters properly can reach good comfort level at elevator running, and meet the related standard.

6.3. Elevator Running Timing Diagram

6.3.1 Timing Diagram for Normal Running

The timing diagram for normal running is shown below in Fig. 6.3

If smooth start running speed (F1-04) is set to "0", smooth start running function will be disabled; smooth start time (F2-13) will be disabled too.

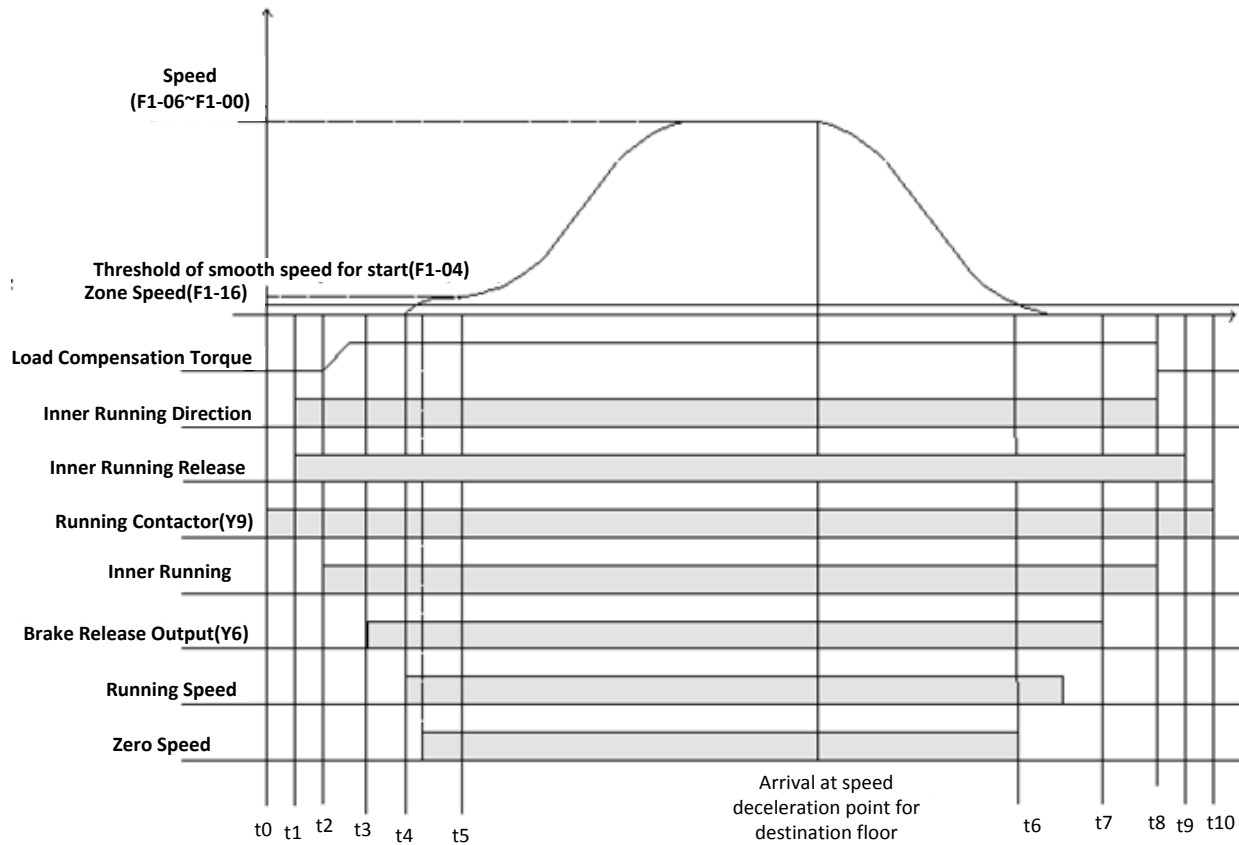


FIGURE 6.3 ELEVATOR TIMING DIAGRAM FOR NORMAL RUNNING

Detail explanation of timing diagram for elevator normal running is explained below in Chart 6.1

CHART6.1 TIMING DEFINITION FOR ELEVATOR NORMAL RUNNING

Time	Definition and Setup Instruction
t0~t1	Control system will first output running contactor (Y9) command; check for feedback time, if valid then system will give running direction and enable driving control based on the given direction.
t1~t2	Driving module output torque.
t2~t3	Waiting time for internal running signal (F2-03): In this period, driving module complete motor excitation or finish load compensation torque output.
t3~t4	Brake advance release time (F2-00): System output brake release command (Y6), brake release and brake arm feedback valid (e.g. F1-31=1), waiting for brake advance release time (F2-00), and then running speed is given. Two functions for brake advance release time (F2-00): 1. Brake has enough time to release completely; this can avoid elevator startup with brake. 2. After brake release, traction sheave may rotate due to the load, with enough time traction sheave can be steady at zero speed then start in order to achieve comfort feeling at start. Based on the brake condition, set 0.8-1.5s for synchronous machine, and 0.3-0.5s for asynchronous machine.
t4~t5	Smooth start time (F2-13): Elevator runs in start smooth speed (F1-04) for a period at start up, this is to overcome part of the elevator static friction. This is normally set as 0.2s-0.4s, setting it too long may reduce the elevator start efficiency.
t6~t7	Zero speed time (F2-04): When elevator runs to the destination floor and speed is lower than

	the zero speed limit (F1-16), after zero speed time (F2-04), brake release output is disabled. If zero speed time is set too short, brake may close before elevator completely stop. Normally this value is set to 0.2s-0.4s.
t7~t8	Braking time (F2-01): After brake close, due to the subsequent flow and demagnetization, brake cannot lock on the traction sheave immediately and torque output is kept in the mean time. After braking time, system drop internal direction command and torque output. This time can prevent the elevator slip due to braking lag. Based on the brake condition, set 0.8-1.5s for synchronous machine, and 0.3-0.5s for asynchronous machine.
t8~t9	After system drop internal direction command, stop output current immediately may generate large current noise. Time delay (F2-10) can be set to decrease output current gradually, finally stop the elevator after dropping the internal direction command.
t9~t10	Time delay for running contactor open is 0.4s to prevent electric arc when contactor opens with current. But braking, emergency stop, door lock protection donot have time delay, they act immediately.

6.3.2 Timing Diagram for Inspection Running

Timing diagram for elevator inspection running can be seen below in Fig. 6.4

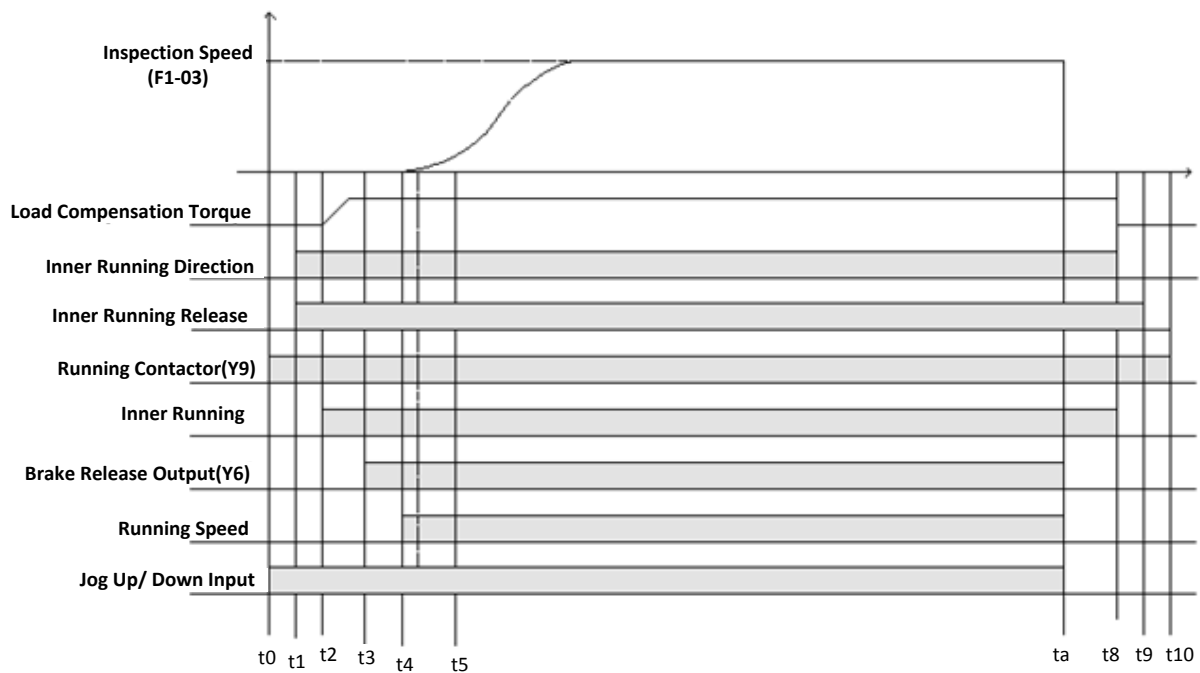



FIGURE 6.4 TIMING DIAGRAM FOR ELEVATOR INSPECTION RUNNING

Definitions and instructions for timing diagram above are shown below in Chart 6.2.

CHART6.2 TIMING DEFINITION FOR ELEVATOR INSPECTION RUNNING

Time	Definition and Setup Instruction
t0~t9	Definition for t0~t9 are the same with elevator normal running
ta~t8	Inspection braking time (F2-02): At inspection running stop, system will not wait for elevator zero speed to close brake. When jogging up/down instruction is dropped, brake will close at once (with speed). For some asynchronous traction machines, holding time for torque output too long will result system trigger over-current protection. In this case decreasing the braking time can eliminate such protection. For synchronous machine control, this value should be same under normal running and set as 0.8s-1.5s, for asynchronous machine control, this value should be set as 0.1s-0.3s.

6.3.3 Timing Diagrams for Rescue Running

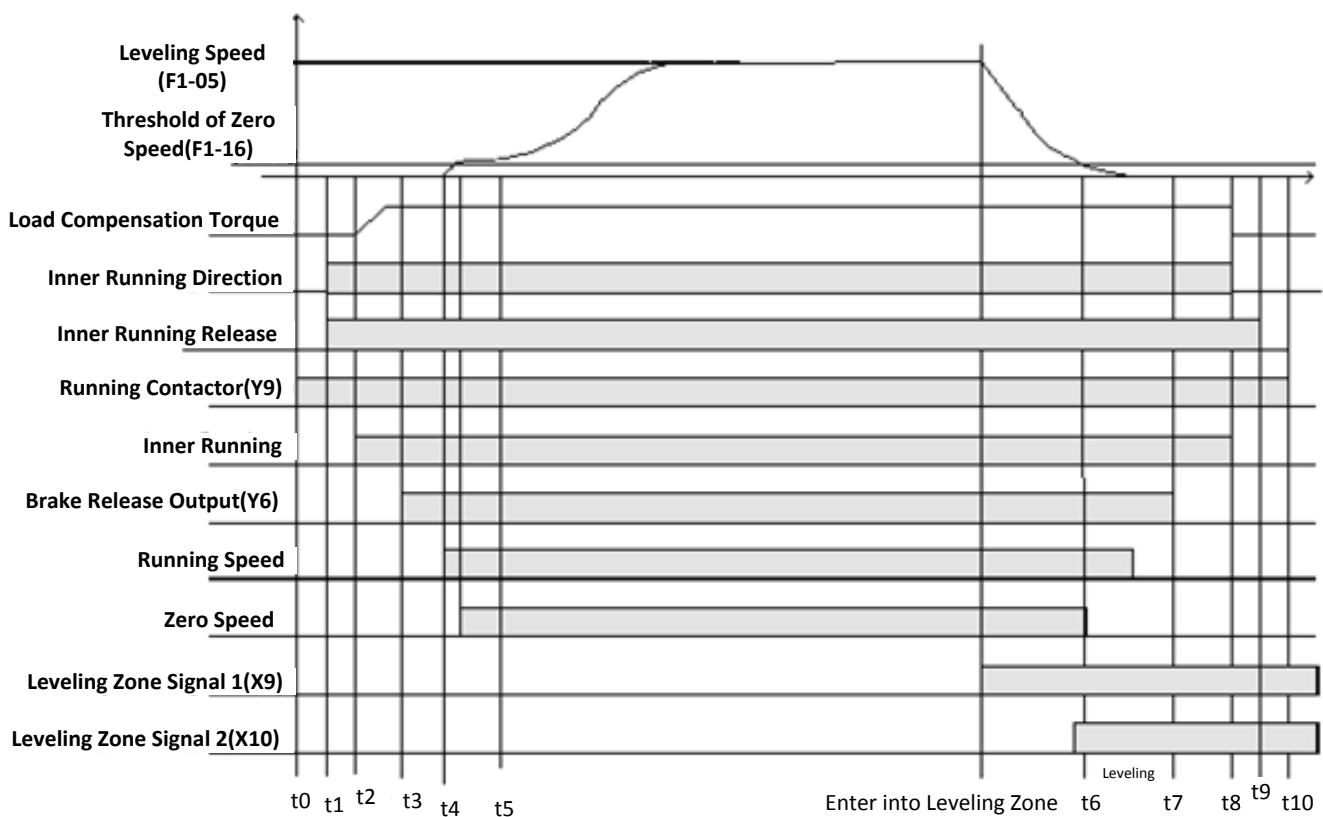**FIGURE 6.5 TIMING DIAGRAMS FOR RESCUE RUNNING (SAME DEFINITION & SETTING WITH NORMAL RUNNING)**

6.3.4 Timing Diagram for Recalibration Running

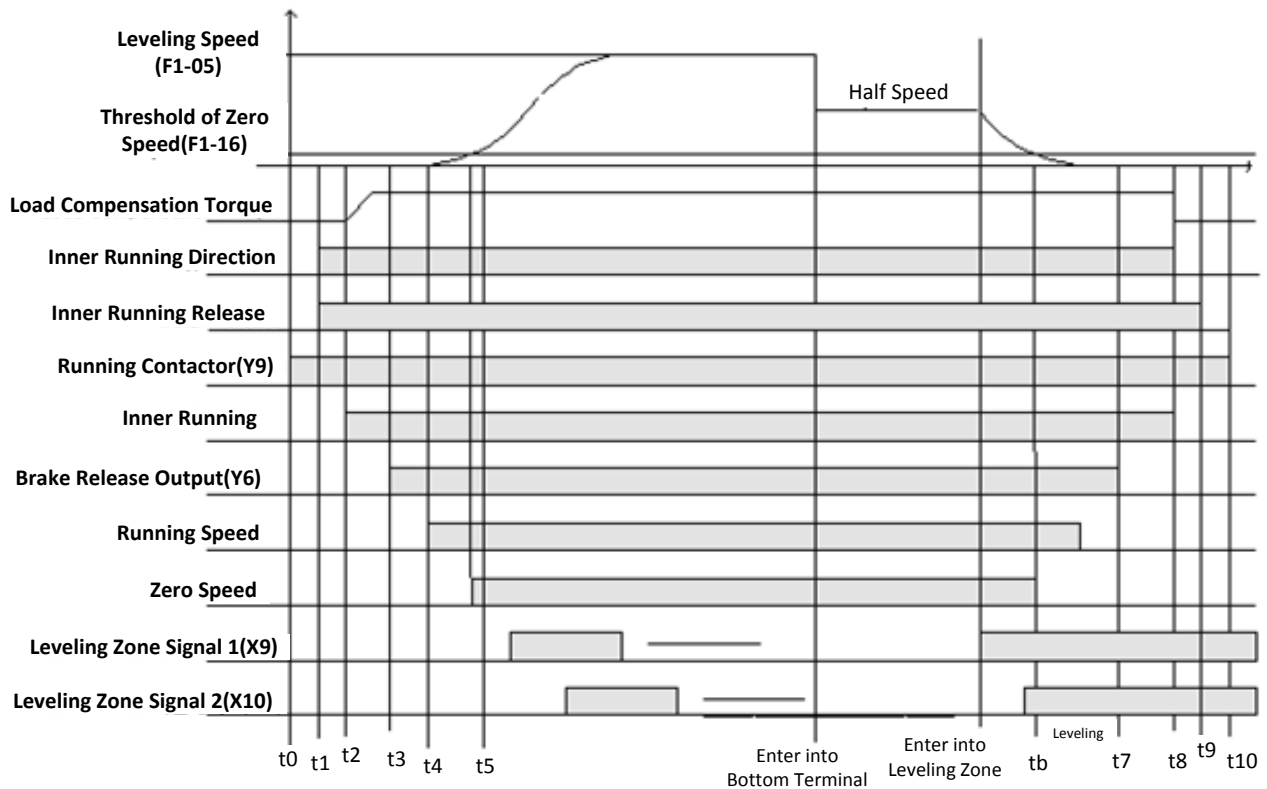


FIGURE 6.6 TIMING DIAGRAMS FOR RECALIBRATION RUNNING (SAME DEFINITION & SETTING WITH NORMAL RUNNING)

6.4. Door Control

6.4.1 Door Open/Close Control

For door control, door open and close time is the related parameter; door limit is the related signal. Timing diagram for door open and close can be seen below in Fig. 6.7 and Fig. 6.8.

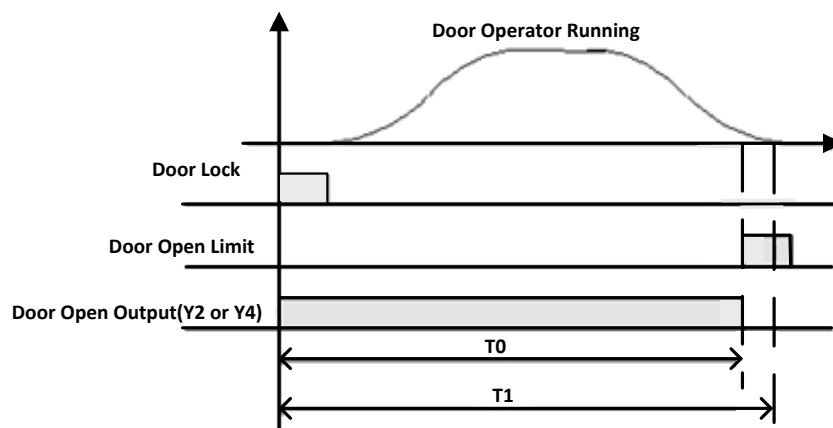


FIGURE 6.7 TIMING DIAGRAM FOR DOOR OPEN

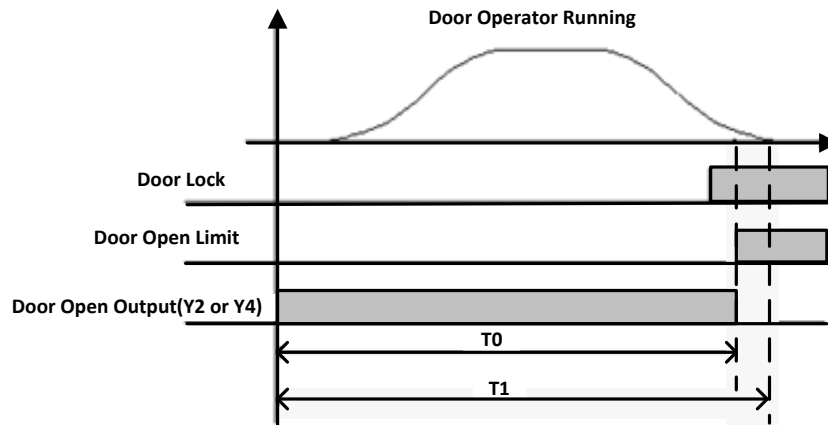


FIGURE 6.8 TIMING DIAGRAM FOR DOOR CLOSE

T0: The actual door-drive running time for door to open or close completely;

T1: Door open or close time (F2-08).

T1 should be 1s more than T0 to ensure the door normal open/close action, otherwise:

1. After system output door close signal, but door does not close completely after T1 door close time (F2-08), elevator will open the door again, and door cannot be closed.
2. After system output door open signal, but door does not open completely after T1 door open time (F2-08), elevator stops the door open action, and door cannot reach the self-lock position.

Door close limit should be fixed in the position where it is only valid after door is completely closed, otherwise:

1. Door cannot close in inspection mode.
2. Door close limit valid, system stops output door close signal, door cannot close, system open the door again.
3. Door close limit is valid, system will open door after set time in F2-08. Door can still be closed under the holding force of door drive, but system will show a door close error, and elevator can run normally.

If the door open/close limit switches cannot be valid after installation, elevator will control door open/close based on time set in F2-08. If door open/close limit signals are normal; the control of door open and close will be based on door open/close limit signals.

6.4.2 Door Open Holding Time

Elevator run in auto mode, after landing, door open, and door will hold for following time:

1. After landing, door open, if elevator has no landing/car call, waiting time is door open holding time (F2-05).
2. After landing, door open, if elevator has only landing call, waiting time is door open holding time (F2-05) minus 2s.
3. After landing, door open, if elevator has both landing/car calls, waiting time is twice of door open holding time (F2-05) minus 2s.
4. If door open delay time (F1-30) is valid (Set as 1), and after door open, door open delay button is pushed, waiting time will be door open delay time (F2-06). After the delay time or press door close button to close door in advance and then reopen door again, door open delay function will be cancelled, unless push door open delay button again after door is open.
5. When elevator enables disabled function, if there are disabled landing/car calls on current floor, waiting time will be door open delay time (F2-06).

6.4.3 Door Control in Attendant and Special use mode

In attendant/special use mode, door must be closed manually. If door driving mode (F1-21) is set to 1, door close will be jog mode, if set to 0, door will close completely after pushing door close button, no need to push the button continuously.

6.4.4 Door Control in Inspection, Fire mode

In inspection mode, door open and close are both jog mode based on international standard.

Door control in fire-mode:

1. In fire mode, if elevator is running, elevator will land to the nearest floor but does not open door, then elevator return to fireman floor.
2. In fire mode, if elevator stops at other floor, door will not open after fully closed, then elevator return to the fireman floor. If door is open, door will close at once, but before the door is completely closed, the door can be opened again by pushing the door open button.
3. If elevator is at the fireman floor, it will open door and hold.
4. In fire mode, except on fireman floor, on all other floors door can only be controlled in jog mode.

6.5. Homing Function Setup

Elevator in auto mode (no duplex/group control), if there are no landing/car calls in set time, elevator will return to homing floor.

1. Set homing floor (F0-01)
2. Set homing time (F2-07), this function is disabled if set homing time to 0.

6.6. Parking Function Setup

Normal elevator lock input:

1. Electric lock input (X20) invalid, elevator in auto mode, it will return to parking floor (F0-03) after finishing all car calls.
2. Electric lock input (X20) invalid, elevator in attendant/special use mode, as door cannot close automatically, after finishing all car calls, door must be closed manually, elevator will then return to parking floor.
3. Electric lock input (X20) invalid, elevator in inspection mode, it will be locked at once.

Automatic Start/Stop:

1. Electric lock input (X20) valid, set auto parking (F1-28) as 1, automatic start time (F2-14), automatic stop time (F2-15) to correspond value to enable this function.
2. Electric lock input (X20) invalid, elevator will enter parking state; cannot set auto start/stop function.

3. In elevator auto stop time and elevator need to run temporarily, turn the electric lock to invalid and restore to valid, elevator will run. After the running, operate the electric lock in same procedures, elevator will re-enter lock mode, until reach auto-start time, then it starts running again.

6.7. Fireman Operation Function Setup

Controller has three kinds of fireman operation mode; fireman mode (F1-23) can be set as “0, 1, and 2”:

0: Normal fireman mode: When fireman input is valid, elevator lands to the nearest floor but doesn't open door, then it returns to the fireman floor (F0-02), it opens door and stops, meanwhile it enters into the fireman mode, elevator can run in fireman standard.

1: Fire emergency stop mode: When fireman input is valid, elevator lands to the nearest floor but doesn't open door, then it return to the fireman floor (F0-02), it opens door and stops. Meanwhile elevator stops running, until fireman input is eliminated.

2: Fireman control mode: It includes two steps, step 1 is fire emergency return, and step 2 is fireman operation. Only after elevator returns to the fireman floor could step 2 be operated.

- 1) Fireman input switch has two states (ON/OFF); it is connected to X12 on main control board. Fireman operation switch has three states (ON/START/OFF), ON is connected to fireman input (by-pass input) on COP, START is connected to the door close input in parallel (For fireman to close door, when fireman turns the key to the START position, point ON is still valid, after releasing switch will automatically return to ON.)

Step1: Fireman input X12 is valid, if elevator is running, it will cancel all car call and landing call and stop at the nearest floor, but doesn't open door and then return to the fireman floor; if elevator is under stop and door open state, elevator will close door at once and return to the fireman floor. After elevator returns to the fireman floor, it opens door and stop running.

Step 2: Elevator in fire mode, return to fireman floor then stop running; At this time fireman operation running can be activated by fireman operator switch, switch to ON/STAR, elevator will run under fireman operation (Only serve one car call, door open and close follow fireman operation function). After switch to ON/STAR and elevator finished serving fireman operation, if elevator already leave the fireman floor, and switch is turned to OFF, at this time elevator will keep running. Only when elevator returns to the fireman floor again then it will stop running.

- 2) After elevator enters fire mode, light curtain input will be invalid. Elevator will exit from fire mode only when fireman input switch, fireman operation switch are both in OFF state.

6.8. Rear Door Control Setup

6.8.1 Different Mode Selection

On the same floor, both front/rear doors can be opened; there are different modes (0-n) available based on customer requirements.

Parameters setup for rear door mode is F1-22.

n=0: single doormode.

n=1: Rear door mode 1, only one door acts at every floor.

n=2: Rear door mode 2, two doors can open on some floors, but they cannot open at the same time, if one door needs to be opened, the other door must be closed first. (Two sets of COPs are needed for both front and rear door.)

n=3: Rear door mode 3, two doors can open at some floors, after landing on these floors, two doors open at the same time. (Only one set of COP is needed, HOP calling address is same for both doors.)

n=4: Rear door mode 4, two doors can open at some floors, after landing on these floors, two doors open at the same time. (Two sets of COPs are needed for both front and rear door.)

n=5: Rear door mode 5, two doors can act at some floors, when elevator runs to such floors, door will open as per requirement, for example: front/rear door will open on front/back car call and landing call. Both doors will open on both sides car/landing call. (Two sets of COPs are needed for both front and rear door.)

According to the rear door mode, HOP address setting and COP wiring are different too:

1. HOP address setting

- 1) When rear door mode on controller is set as **0, 1, 3**, HOP address is same as usual;
- 2) When rear door mode on controller is set as **2, 4, 5**, HOP address is set as below:
 - a) **1~32** is the absolute floor number at front door side:
1 is the bottom floor, **2** is second to bottom floor, maximum number is **32**, total **32** floors.
 - b) **33~64** is absolute floor number at rear door side:
33 is the bottom floor, **34** is second to bottom floor, maximum number is **64**, total **32** floors.
 - c) If there is only one door on some floors, then the HOP address for the other door is empty.

Example 1: Elevator has one basement floor with both front and rear doors, on this floor HOP address is 1 for front door and 33 for rear door.

Example 2: Elevator has one basement floor with only front door, and one ground floor with both front and rear doors, on the basement floor HOP address is 1 for front door and empty for rear door. On the ground floor HOP address is 2 for front door and 34 for rear door.

2. C.O.P button wiring:

- 1) When rear door mode on controller is set as **0, 1**: **1~N** floor buttons are connected to the COP terminal as usual.
- 2) When rear door mode on controller is set as **2, 4, 5**: set total floor no. **N**, then the **1~N** car call ports correspond to **1~N** floor car call buttons at front door, **1** is the bottom floor, **N** is the top floor. **N+1~2N** floor car call ports correspond to the **1~N** floor car call buttons at rear door, **N+1** is the bottom floor, **2N** is the top floor.

For example: Elevator has 6 floors (1~6), no basement, 3rd floor has double entrance; other floors have only front entrance. Then car call buttons **1~6** at front door should be connected to **1~6** car call ports, car call button **3** at rear door should be connected to **N+3=6+3=9** car call port.



When rear door mode is **1, 2, 3, 4, 5**, need to install two sets of door open/close buttons, this is to open front and rear door separately in inspection running.



If rear door mode is 1, and there is one set of door open/close buttons, please set parameter FU18 to “ON”. In other mode, if there is only one set of door open and close buttons, in inspection running, only front door can be opened by door open button, rear door cannot be opened by the button.

6.8.2 Rear Door Condition Setup

Front door setting parameter (F4-04) and rear door setting parameter (F4-05) are required to set front or rear door open on certain floors. In single door mode, these two parameters are invalid. In rear door mode, if set F4-04 to “ON” for some floors, front door can open on these floors, if set F4-04 to “OFF”, front door cannot open on these floors. This is same for rear door setup. Please set both doors condition based on actual situation to avoid door open mistake.

6.9. Input Type Setup

Input type on main control board (F3-00) and COP board (F3-01) can be changed based on actual ON/OFF state. When switch is at valid position/state and switch is closed, then its input type is ON. When switch is at valid position/state and switch is open, then its input type is OFF. Input type setup on main control board and COP board can be seen below in Chart 6.3

CHART 6.3 INPUT TYPE SETUP

Name	Port	Position	Definition	Parameters	Default Input Level	Output Switch Default State	Indicator Default State
Main Control Board	X0	J3-8	Inspection Input	F3-00-00	ON	OPEN	OFF
	X1	J3-7	Run up Input	F3-00-01	ON	OPEN	OFF
	X2	J3-6	Run Down Input	F3-00-02	ON	OPEN	OFF
	X3	J3-5	Top Terminal 2 Input	F3-00-03	OFF	CLOSE	ON
	X4	J3-4	Bottom Terminal 2 Input	F3-00-04	OFF	CLOSE	ON
	X5	J3-3	▲ Top Limit Input	F3-00-05	ON	CLOSE	ON
	X6	J3-2	▲ Bottom Limit Input	F3-00-06	ON	CLOSE	ON
F3-00 Main Control Board	X7	J3-1	Top Terminal 1 Input	F3-00-07	OFF	CLOSE	ON
	X8	J2-8	Bottom Terminal 1 Input	F3-00-08	OFF	CLOSE	ON
	X9	J2-7	Up Leveling Input	F3-00-09	ON	OPEN	OFF
	X10	J2-6	Down Leveling Input	F3-00-10	ON	OPEN	OFF
	X11	J2-5	Motor internal SC contactor feedback	F3-00-11	ON	OPEN	OFF
	X12	J2-4	Fire Input	F3-00-12	ON	OPEN	OFF
	X13	J2-3	Emergency Stop Input	F3-00-13	ON	OPEN	OFF

CHART6.3 INPUT TYPE SETUP (CONT'D)

Name	Port	Position	Definition	Parameters	Default Input Level	Output Switch Default State	Indicator Default State
Main Control Board F3-00	X14	J2-2	Door Interlock Input	F3-00-14	ON	OPEN	OFF
	X15	J2-1	Brake Feedback/ Main Contactor Input	F3-00-15	ON	OPEN	OFF
	X16	J1-10	Assist contactor feedback Input	F3-00-16	ON	OPEN	OFF
	X17	J1-9	Brake Contactor Feedback Input	F3-00-17	ON	OPEN	OFF
	X18	J1-8	ARD function Input	F3-00-18	ON	OPEN	OFF
	X19	J1-7	Spare	F3-00-19	ON	OPEN	OFF
	X20	J1-6	Electric Lock Input	F3-00-20	ON	OPEN	OFF
	X21	J1-5	Thermal Switch Input	F3-00-21	OFF	OPEN	OFF
	X22	J1-4	Re-leveling condition Input	F3-00-22	ON	OPEN	OFF
	X23	J1-3	Re-leveling sensor Signal Input	F3-00-23	ON	OPEN	OFF
	X24	J1-2	Spare	F3-00-24	ON	OPEN	OFF
	X25	J1-1	Spare	F3-00-25	ON	OPEN	OFF
	X29+	J6-3	Emergency Stop Input +	F3-00-29	ON	OPEN	OFF
	X29-	J6-4	Emergency Stop Input -				
	X30+	J6-5	Door Interlock Input +	F3-00-30	ON	OPEN	OFF
	X30-	J6-6	Door Interlock Input -				
	X31+	J6-7	Spare +	F3-00-31	ON	OPEN	OFF
	X31-	J6-8	Spare -				
Car Control Board F3-01	KMV1	J9-2	Door open limit 1 Input	F3-01-07	OFF	CLOSE	
	GMV1	J9-3	Door close limit 1 Input	F3-01-06	OFF	CLOSE	
	KMV2	J10-5	Door open limit 2 Input	F3-01-05	OFF	CLOSE	
	GMV2	J10-6	Door close limit 2 Input	F3-01-04	OFF	CLOSE	
	KAB1	J9-4	Safety Plate 1 Input	F3-01-18	OFF	CLOSE	
	KAB2	J9-7	Safety Plate 2 Input	F3-01-17	OFF	CLOSE	
	CZ	J9-5	Over load Input	F3-01-15	ON	OPEN	
	MZ	J9-6	Full load Input	F3-01-13	ON	OPEN	
	QZ	J9-8	Light load Input	F3-01-14	ON	OPEN	
	KZ(50%)	J9-9	50% Load Input	N/A		OPEN	
	SZH	J9-10	Attendant Input	N/A		OPEN	
	SZY	J10-1	Special Use Input	N/A		OPEN	
	SZS	J10-2	Drive by-pass Input	N/A		OPEN	
	ZHS	J10-3	Attendant Up	N/A		OPEN	
	ZHX	J10-4	Attendant Down	N/A		OPEN	



IMPORTANT

If the top/bottom limit circuit is closed in normal state, default input level shows "ON".

If the top/bottom limit circuit is open in normal state, default input level shows "OFF".

6.10. Service Floor Setup

Non-stop floors in the system can be set through F4-00 and F4-01. For the floors elevator can land, set "ON", for the floors elevator cannot land, set "OFF". After setting F4-00, F4-01, elevator cannot land to the set floors in any case. Based on this function (refer to the function selection table), non-stop on certain floor in set time function is available too. Between the non-stop beginning time (F2-14/15) and ending time (F2-16/17), if elevator cannot land on some floors, please set the non-stop floors by setting F4-02 and F4-03 "OFF".

6.11. Weighing Device Setup

When using SJT-150 or SJT-300 weighing device, load detection is available through communication with main control board on CAN BUS. See below for setup procedures:

1. Enable weighing device F1-29=1, F9-11=1;
2. Perform light load and full load self-learning procedures;
3. According to the compensation condition, adjust the compensation coefficient F9-00.
4. For elevator with no compensation chain, adjust F1-18 based on actual condition on top and bottom floor:
 - a) Adjust the simulated load compensation gain in inverter until elevator runs down from top floor with no sliding;
 - b) Move the empty elevator to bottom floor, increase load compensation adjustment parameter until elevator runs up from bottom floor with no sliding;
 - c) The adjustment range for this parameter should be 0-12.

6.12. Duplex Control Setup

Controller has internal integrated duplex module, two elevators are connected through CAN1 in parallel, corresponded parameters need to be set to achieve duplex control.

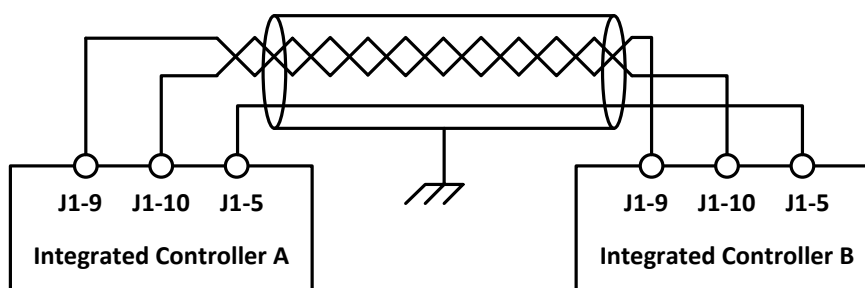


FIGURE 6.9 CONNECTION FOR DUPLEX CONTROL

Setup procedures:

1. Enable duplex control, F1-25=1

2. Set duplex elevator number F1-24, elevator A is set to 0, elevator B is set to 1.
3. Both elevators must have same fireman floor. (Otherwise call registers will be mixed up)
4. Call address should be set the same with single elevator.

After setup please save the parameters, reset the power and updating the communication address.

6.13. Group Control Setup

Main control board and group control board are connected through CAN1 port. (See group control board manual), corresponded parameters need to be set to achieve group control.

Setup procedures:

1. Enable group control, F1-26=1;
2. Set elevator number in F1-24, the number should be 0-7 for elevator A-H.
3. All elevators must have same fireman floor. (Otherwise call registers will be mixed up)
4. Call address should be set the same as single elevator.

After setup please save the parameters, reset the power and updating the communication address.

6.14. Leveling Adjustment Setup

After elevator landing, if elevator speed curve has no problem (i.e. there is no sudden stop and overrun leveling zone at elevator landing) and elevator runs outside leveling zone (it stops higher than leveling zone in up-running, lower than leveling zone in down-running), need to decrease leveling adjustment parameter F1-17 (default 50); if elevator cannot reach leveling position (it stops lower in up running, higher in down running), increase leveling adjustment parameter F1-17, general range for adjustment is 40-60, if the adjustment is big, please adjust driving parameter PI, or speed curve shape (F1-10~F1-15).

6.15. Floor Indication Setup

In parameter F0-05~F0-69, we can set third bit display, first two bit can be figure, characters or “-”, third bit can only be the following capital characters: ABCDEFGHIJKLMNOP. If only need two bits, set the first two bits only and third bit is empty. (Third bit indication should be supported by the HOP board, otherwise it cannot display normally.)

6.16. Special Function Selection

To meet certain special requirements from customers, this control system has included some customized functions (F4-06).

CHART6.4 SPECIAL FUNCTION LIST

Number	Instruction
F4-06-00	After elevator stops, based on current floor, if there is no landing/car call ahead of the current floor in previous running direction, system will cancel all the car calls.
F4-06-02	While ER14 occurs, levels the car first to evacuate passengers on the nearest floor in the first place then return to the base floor.
F4-06-03	ON: Disable ER29 fault; OFF: If communication interference is severe then report ER29 fault.
F4-06-04	ON: Two elevators in duplex control and not in service, when the same floor has both up/down landing call registered, both elevator serve this call. OFF: Only one elevator serve this call.
F4-06-05	ON: Elevator disable cabin overload signal, this is used in elevator 125% load test. OFF: Overload signal enable.
F4-06-06	ON: When the elevator cannot open door in current floor (Open Door fault in controller), it will automatically go to the next floor and open door.
F4-06-07	ON: Floor number display change after elevator enter landing zone; OFF: Floor number display change after elevator change speed;
F4-06-08	ON: When elevator stops in inspection mode, brake will close after receiving zero speed signals to reduce impact.
F4-06-09	ON: Elevator can cancel registered car call while running (If all registered call canceled, elevator stop in nearby floor)
F4-06-10	Only for internal test. Remain the default OFF state.
F4-06-11	Ignore the X13 signal,treat X29 as emergent-stop safty circuit.
F4-06-12	Define the X30 as the hall-door safe circuit and the X31 as the car-door safe circuit. OFF: The hall-door and the car-door are connected together in series to X30.
F4-06-13	Ignore the X14 signal,treat X30 as door safty circuit.
F4-06-14	ON: Enable elevator function for disabled people. OFF: Disable elevator function for disabled people.
F4-06-15	ON: In Fire mode when elevator leaves fire floor then disable fire linkage output, when elevator return to fire floor then restore fire linkage output.
F4-06-16	ON: When door lock is closed, door close limit must be valid too. OFF: Door lock state is not related to door close limit.
F4-06-17	ON: When elevator stops in inspection mode, inverter direction given and brake are released together. OFF: When elevator stops in inspection mode, inverter direction given drop is 0.5s later than brake close.
F4-06-18	ON: In two-door mode, elevator only installs one set of door open& close buttons. OFF: In two-door mode, elevator installs two sets of door open & close buttons.
F4-06-19	ON: Enable re-levelling with door open function (Need to use SJT-ZPC-V2 re-levelling control board) OFF: Disable re-levelling with door open function
F4-06-20	ON: Enable door open in advance function (Need to use SJT-ZPC-V2 re-levelling control board) OFF: Disable door open in advance function

CHART 6.4 SPECIAL FUNCTION LIST(CNT'D)

Number	Instruction
F4-06-21	ON: In inspection mode, door cannot open outside levelling zone. OFF: In inspection mode, door can open at any position.
F4-06-22	ON: 3-phase 380V 50Hz power supply (with back-up generator) OFF: Battery power supply (disable DC-BUS under voltage fault)
F4-06-23	ON: Use SJT-300 weighing device through CAN BUS OFF: Use SJT-150 weighing device through RS485
F4-06-24	ON: secondary-terminal switch is adopted for elevator speed <2m/s (it is generally used in 1.75m/s elevator for two steps forced deceleration.) OFF: Secondary-terminal switch is not adopted for elevator speed below 2m/s.
F4-06-25	ON: In inspection mode door open/close switch in car is invalid ; OFF: In inspection mode door open/close switch in car is valid ;
F4-06-26	ON:passengers can input more than three car calls in light-load mode ; OFF: passengers cannot input more than three car calls in light-load mode ;
F4-06-27	Reserved.
F4-06-28	ON: Use light curtains/safety plates separately, the attendant up/down input terminal is used as front/rear door safety plates input. OFF: Light curtains and safety plates have serial connection (Blue-light default Setting)
F4-06-29	ON: Motor operation & internal SC contactor are used separately, X11 as Internal SC contactor feedback terminal, Y8 as Internal SC contactor output control (See wiring diagram for detail) OFF: Operation contactor has internal short-circuit function (Blue-light default Settings)
F4-06-30	ON: Integrated controller LED has reverse display. This is used for Blue-light G-series cabinet in roomless elevator (where control board is placed reversely) OFF: Integrated controller LED has normal display. (Blue-light default Settings)
F4-07-00	ON: When ARD function is active, system will open brake for 1s (when sliding speed >0.1m/s, brake will close again), it will then find the heavy load direction based on the sliding direction, use battery to land the cabin on heavy load direction and reduce leveling energy cost.
F4-07-01	ON: Enable elevator data recorder. Together with PC debugging software, after-sales/service team can provide fault diagnosis
F4-07-02	ON: Disable top/bottom limit signal, use another mechanism to detect limit signal: a. Top terminal/down door zone valid + up door zone invalid = Top limit b. Bottom terminal/up door zone valid + down door zone invalid = bottom limit
F4-07-03	ON: Enable serial connected electric lock
F4-07-04	ON: Take negative for serial connected electric lock
F4-07-05	ON: Enable serial connected fire-linkage signal
F4-07-06	ON: Take negative for serial connected fire-linkage signal
F4-07-07	ON: Enforce the hitting ceiling and touching ground protection. If car speed inside leveling zone is still faster than rescue speed, then the car will be forced to stop in leveling zone by leveling zone correction. OFF: Running according to default tuning position curve.
F4-07-08	ON: Main board X25 input is used as over load signal input. OFF: X25 is used as standby input.
F4-07-09	ON: Main board X24 input is used as full load signal input.

OFF: X24 is used as standby input.

CHART6.4 SPECIAL FUNCTION LIST (CONT'D)

Number	Instruction
F4-07-10	Note: When brake feedback is enabled, X19 is right brake feedback switch. When brake feedback function is disabled, below function is valid. ON: Main board input is used as light load input signal. OFF: X19 is standby input.
F4-07-11	On: disable the car arrival-bell to avoid disturbing during 22: 00~7: 00am.
F4-07-12	ON: In Auto(normal) mode, car stops three times answering car call without light-curtain action, the car call registration will be cleared.
F4-07-13	ON: Enable door-squeezing function to avoid door lock circuits open frequently in auto running mode which is caused by door operator lacking self locking force.
F4-07-14	Only for internal test. Default :OFF.
F4-07-15	On: During self-rescue levelling in emergency and self-save levelling outside door zone, The beeper on the COP keep alarming(the interval is 1 second)while the car is moving.
F4-07-16	On: The elevator can run between ultrashort floor spacing (less than 80cm& more than 25cm) .
F4-07-17	ON: In UPS running mode,elevator will arrive into levling zone, open the door, close the Y11 relay in 30 seconds,and cut off the UPS circuit to avoid a deep discharge of the UPS battery pack.
F4-07-18	ON: The car waits at homing floor with door open.
F4-07-19	ON: In UPS running mode, the elevator will return to homing floor directly.
F4-07-20	ON: Enable TIM Stop Floor function. Stop floor time set1 Start time:F2-18 & 19; End time:F2-20 & 21 TIM stop floor time set1 corresponds Set Stop Floor parameter is: F4-00 Set Stop Floor1, F4-01 SetStop Floor2. Stop floor time set2 Start time: F2-14&15; End time: F2-16 & 17(multiplexing start time/stop timesetting). TIM stop floor time set2 corresponds Set Stop Floor parameter is: F4-02 Set Stop Floor1, F4-03 SetStop Floor2.
F4-07-21	ON: With one and only one door zone signal, the elevator will still level while it turns from inspection to auto or from error to normal, or runs in ARD mode. It will avoid that the car door vane cannot drive the hall door when it is too short.
F4-07-22	Reserved.
F4-07-23	Enter manually operated door control mode, without door control logic.
F4-07-24	ON: Elevator return to homing floor to proofreading level number when power on for the first time.
F4-07-29	ON: Levelling adjustment can be adjusted in layers, Add adjustment value of 1~64 layer in parameters, all the Default values are 50mm.

6.17. Motor Parameters Setup

First, please set the motor parameters based on actual machine.

F5-00: motor type. 0: synchronous outer rotor machine; 1: asynchronous machine, 2: synchronous inner rotor machine.

Please make sure the machine type is set correctly, as system will perform motor auto-tuning and vector control based on motor type.

Also, please input following motor parameters based on the machine nameplate or user manual to ensure the accuracy of system generated motor digital model and vector control coupling.

1. F5-01: Motor poles
2. F5-02: Motor rated frequency
3. F5-03: Motor rated power
4. F5-04: Motor rated speed (RPM)
5. F5-05: Motor back-EMF(this parameter is only valid for asynchronous machine)
6. F5-06: Motor phase inductance (this parameter can be acquired from motor auto-tuning)
7. F5-07: Motor phase resistance (this parameter can be acquired from motor auto-tuning)
8. F5-08: Motor rated current
9. F5-09: No-load current (this parameter is only valid for asynchronous machine, it can be acquired from motor self-learning)
10. F5-10: Motor rated Slip (this parameter is only valid for asynchronous machine)

Beside above, when some parameters are not accurate, please perform motor parameter auto-tuning.

For the drive versions above 0007, parameter auto-tuning is not necessary.


6.18. Elevator Running Speed Setup

Elevator rated speed (F1-00) and motor rated speed (RPM) (F1-01) are used to calculate the ratio between elevator rated running speed and motor RPM. Also, with encoder pulse number per cycle (F1-03), we can get the relationship between each pulse and traveling distance in hoistway, and this achieves the distance detection of elevator running. Therefore changing F1-00, F1-01 will only change their ratio, but not elevator actual running speed.

When F1-03 for hoistway counting is from inner pulse source, pulse number in one cycle (F1-03) = pulse number of motor encoder (F8-00) / PG frequency division ratio (F8-01). Rated speed of traction machine (F1-01) = Motor rated speed (F5-04).

If F1-03 for hoistway counting is from outer pulse source (i.e. speed limiter encoder, must adopt special PG card), F1-03 should be set as pulse number in one cycle from outer pulse source, Rated speed of traction machine (F1-01) = Outer pulse source speed (i.e. speed limiter speed).

Speed given instruction can be seen below in fig. 6.10.

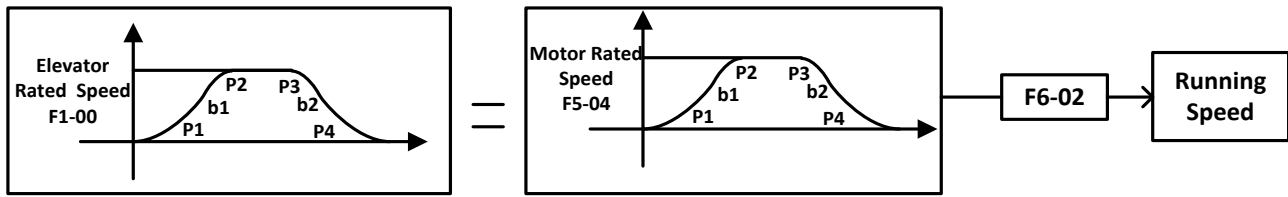

FIGU

RE 6.10 SPEED GIVEN INSTRUCTION

If need to reduce the elevator actual speed, please change the value of speed ratio (F6-02), when F6-02=100%, elevator runs in rated speed; reduce F6-02 elevator actual speed will decrease in corresponded ratio.

6.19. Speed Control Setup (PI Adjustment)

6.19.1 Speed Control Setup with Single PI Adjustment

For speed control under vector control, there are two ways, F7-00: when multi-section PI enable is set 0, PI does not change with speed given change. Instead, it is a fixed value for the whole elevator speed range, which simplifies setup procedures.

This is the most used method, the flow diagram can be seen below in fig. 6.11.

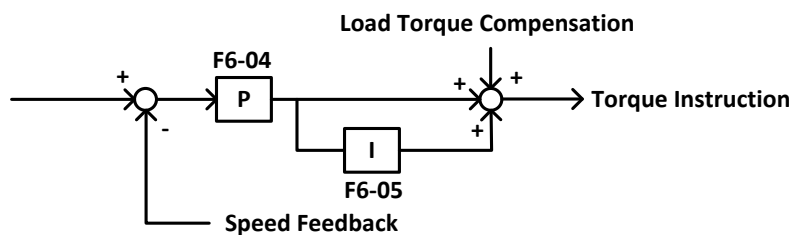


FIGURE 6.11 SPEED ADJUSTMENTS 1

6.19.2 Speed control Setup with Multi-Section PI Adjustment

For speed control under vector control, F7-00: multi-section PI enable is set 1, speed control function can be performed by PI changed in multi-section. In this control mechanism, parameters in F6-04 and F6-05 will not take effect all the time, instead, 4 groups of PI value F7-05~F7-12 are used to perform speed control.

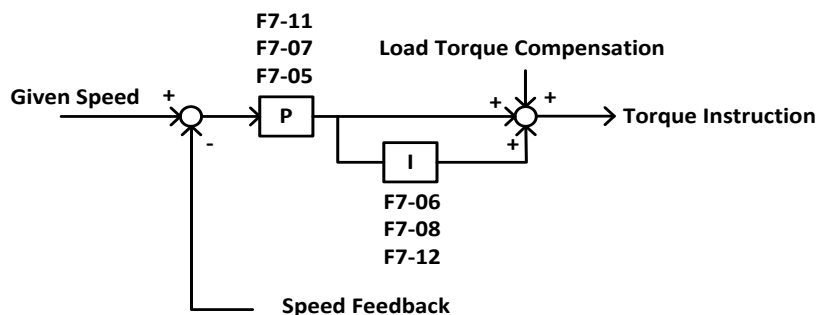


FIGURE 6.12 SPEED ADJUSTMENTS 2

F7-05, F7-06: Group 1 PI; it is generally adopted in low speed period at motor start.

F7-07, F7-08: Group 2 PI; it is generally adopted in middle speed section at acceleration period or steady-speed section at low speed period.

F7-11, F7-12: Group 4 PI; it is generally adopted in deceleration period.

Switching frequency for the above groups of PI parameter are set in F7-01~F7-04: frequency setting of PI effective range.

Group 1 PI effective range:

When motor starts from zero speed or in acceleration period, if the current frequency given is smaller than F7-01, system will adopt F7-05, F7-06 of group 1 PI to adjust the speed. To enable elevator quick stable at zero speed when brake release and follow the speed curve quickly in initial acceleration, F7-05 and F7-06 can be set slight bigger.

Group 2 PI effective range:

After motor starts, when speed (acceleration) is larger than the set frequency in F7-01 and smaller than F7-02, system will adopts F7-07, F7-08 of group 2 PI to adjust the speed. When motor running speed is larger than the set frequency in F7-02, system will adopts F6-04 and F6-05.

Group 3 PI effective range:

When motor speed is smaller than the set frequency in F7-03 (deceleration), system will adopts F7-11, F7-12 of group 3 PI to adjust the speed. This group of PI parameters is used for adjustment in deceleration to stop period. If F7-03 is 0, system will adopt the last group of PI parameters before deceleration.

For different groups of PI effective range please see fig. 6.13 below.

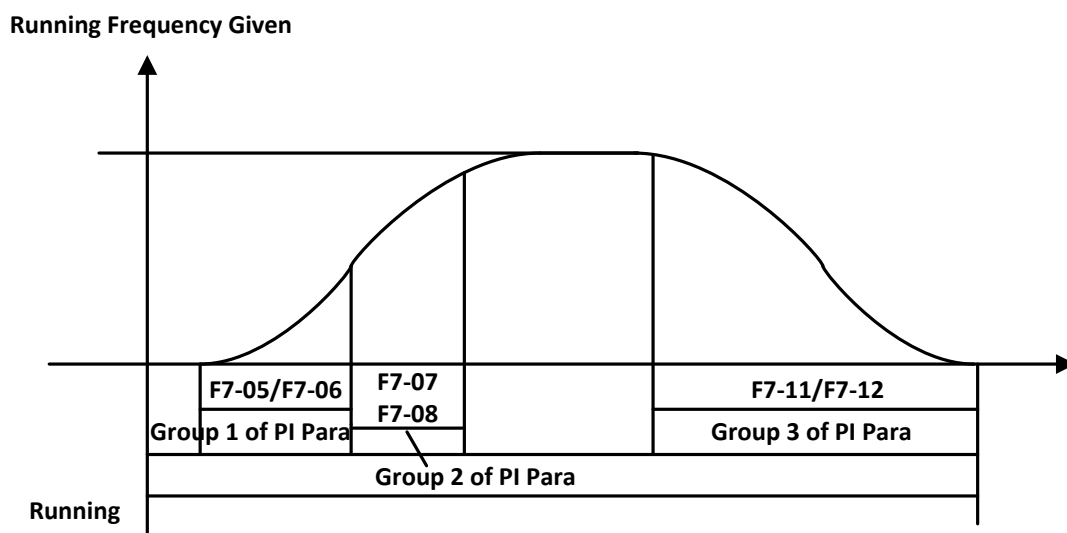


FIGURE 6.13 EFFECTIVE RANGES FOR DIFFERENT GROUPS OF PI

6.20. Load-Compensation Torque Output Setup

Parameters related to load compensation torque output control:

- The parameters related when using of weighing device from Blue-light:
 - F1-29: Weighing device enable (1: enable, 0: disable)
 - U6-03: weighing value, the current load situation
 - F1-18: weighing adjustment, adjust the compensation according to floor number, it is suitable for elevator without compensation chain.
- Load simulative input, input range +10V~-10V or 0V~+10V, this input cannot be changed.
- Load compensation source selection F9-13,
 - 0: Internal serial signal, it can only be used with Blue-light weighing device;
 - 1: External simulative input +10V~-10V;
 - 2: External simulative input 0V~+10V.
- Maximum torque compensation F9-00; if set to 60%, the maximum output torque compensation at full load will be 60% of the rated torque.
- Torque control output enable F9-11; if set to "1", system will output torque based on the source of F9-13 and multiply by F9-00; if set to "0", load compensation is disabled.

Output control diagram of load compensation torque can be seen below in figure 6.14.

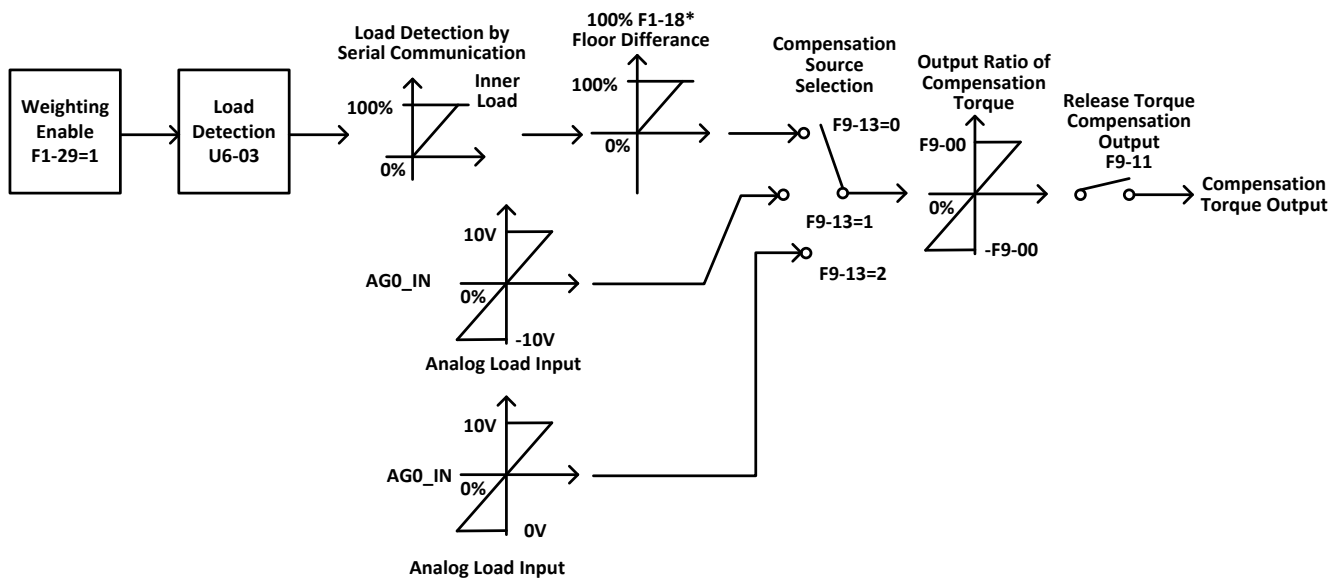


FIGURE 6.14 LOAD COMPENSATION TORQUE OUTPUT CONTROL

- In synchronous machine control, as there is no compensation chain for low building, Blue -light weighing device can only measure the load in cabin and cannot detect the rope weight variation on different floor. In this case load compensation adjustment (F1-18) need to be used.

Adjustment Procedures:

- 1) Perform no-load, full-load learning;
- 2) Run the no-load elevator to top floor;

- 3) Adjust simulative load compensation gain in inverter until elevator does not slide when runs down from top floor.
- 4) Run the no-load elevator to bottom floor, increase the load compensation adjustment parameter (F1-18) until elevator does not slide when runs up from bottom floor.

6.21. Encoder Parameters Setup

Set F8-00 based on encoder pulse number. Encoder pulse usages can be seen below in Fig.6.15

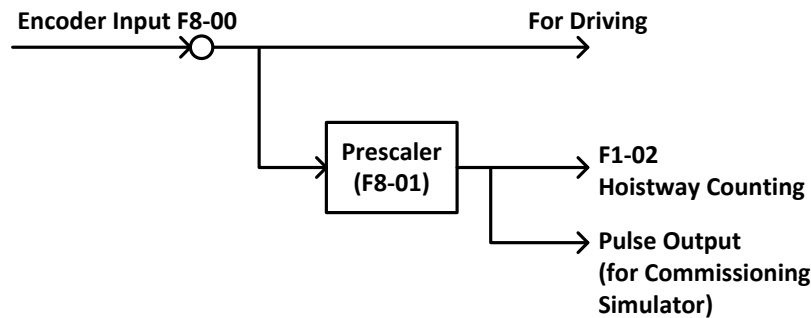


FIGURE 6.15 ENCODER PULSE USAGES

6.22. Start without Load Compensation Setup

When using BL6 series integrated controller with Sine/Cosine PG card, it is possible to achieve comfort start without load compensation by proper setup in FA group parameters. (It means elevator can reach the same effect of load compensation even without weighing device.)

1. Note for starting without load compensation:
 - 1) PG card type, F8-02 is set to "1" (Sine/Cosine PG card)
 - 2) Weighing compensation invalid, confirms F9-11 is set to "0" to disable weighing compensation and enable FA group parameters.
 - 3) Drive software version, confirm version is 0005 or above.
2. Adjustment method for elevator starting without load compensation:
 - 1) Principles: As can be seen in figure 6.16 below, when brake open, based on the position feedback from Sine/Cosine PG card, system can calculates the necessary torque required for motor to remain the steady position under current load, and it gives corresponded torque at once to minimize the traction sheave movement and to achieve comfortable start.

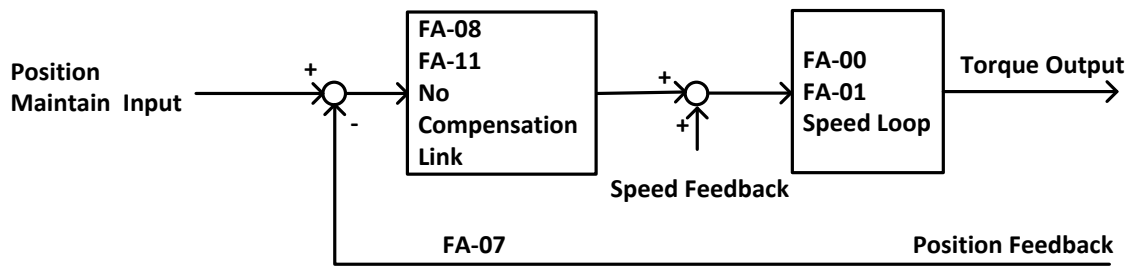


FIGURE 6.16: FLOWCHART FOR ELEVATOR STARTING WITHOUT LOAD COMPENSATION

2) Parameters: Parameters related to function can be seen below in chart 6.5.

CHART6.5: ELEVATOR START WITHOUT LOAD COMPENSATION PARAMETERS LIST

Para No.	Display in Chinese	Factory Setting	Fast Brake Recommendation	Slow Brake Recommendation
	Display in English			
FA-00	启动段比例增益	30	KEEP	KEEP
	StratKP			
FA-01	启动段积分增益	750	KEEP	KEEP
	StratKI			
FA-08	无负载比例 1	3600	4800	3600
	PLKP1			
FA-09	无负载作用时间	900	700	KEEP
	PLTime			
FA-11	无负载比例 1	800	KEEP	KEEP
	PLKP2			
FA-12	无负载比例系数	125	KEEP	KEEP
	PLKPMOD			
F2-00	提前开闸时间	0.5	0.9	1
	BrakeON Time			
F9-00	最大补偿力矩	0	KEEP	KEEP
	Max Torq Comp			
F9-11	补偿使能	1	0	0
	Load Comp Enable			

3) Adjustment method: Main parameters used are FA-08, FA-09 and FA-11.

FA-09

This parameter is the working time for starting without load compensation after brake opens, it must be set according to the actual brake opening time, if the time is too short, elevator will slip as this action will be over before brake fully opened; Also the value of F2-00 (brake opening time before running) must be 100ms longer than the value of FA-09, so that this action can finish before speed curve start.

FA-08 and FA-11

Two gain parameters for the starting without load compensation action, these two parameters can be adjusted according to the elevator slipping condition and comfort level, if the slipping is too much please increase the value of FA-08; if the traction machine gets vibration, please reduce this value; during the period of torque keeping, if there is slight slipping or small back-and-forth movement on traction sheave, please increase the value of FA-11, if there is vibration, please reduce this value.



1. During commissioning, besides the mentioned 3 parameters, other FA group parameters can be kept with factory setting.



2. For different versions of program, the name of FA group parameters might be different, but their positions remain the same. As a result, only adjust FA-08, FA-09, FA-11 despite the operator version.



3. The setting value of above parameters is just for reference, as the PG card is not same in different job side; please adjust above parameters based on site condition.



4. F9-00 is the pre-set torque when the starting without load compensation function is enabled. Generally there is no need to change its value, please keep it with factory setting (0)

Chapter 7: Commissioning

7.1. Important Reminder


1. Thanks for purchasing our product, please read this manual and related instruction thoroughly before processing with installation, connection (wiring), operation, maintenance and inspection. To avoid any damage/loss of the products or accident to people, please make sure you have sound knowledge of the device and familiar with all safety information/precautions before processing to operate the control system.
2. Before commissioning and running the product, please read the manual carefully and refer to this manual during commissioning and running.
3. Make sure that all the mechanical devices are installed properly beforehand, especially the devices in hoistway (the devices that should be set in the machine room depends on the situation of the machine room).
4. Make sure that the installation and commissioning for the devices, which should be finished before commissioning of the control system, have been completed.
5. Before commissioning, it is necessary to get signature confirmation from a person responsible for mechanical installation and commissioning.
6. Make sure that all the mechanical devices and other devices which are related to the system commissioning are installed and tested properly.
7. Make sure that there are no unsafe factors which could cause injuries and damages to personnel and devices.
8. Commissioning should be carried out by qualified personnel.
9. Site should meet the conditions for commissioning and running.
10. When doing commissioning for both electric and mechanical parts, technicians for both parts should collaborate.
11. If this manual could not meet your requirement, please contact our company at once to acquire help and to avoid accident and loss.
12. Before system commissioning, make sure all the conditions are sufficiently prepared.

7.2. Inspections before Power On

After electric system is installed, please check the electric system carefully and pay attention to the following items:


1. Compare with the manual and electric diagram, check if the connections are all correct.

2. Check if there is interference between high voltage part and low voltage part. Use a multi-meter to measure the resistor in different circuit, resistor to earth must be infinity big.
3. Please check if wiring from power supply to the control cabinet and traction machine is correct, this is to avoid damaging the controller after powering on.
4. Check wiring between encoder and controller, coaxial degree of encoder and traction machine shaft, wiring between encoder and traction machine.
 - 1) Check if the enclosure of the controller and motor, cabin, landing door are reliably earthed to ensure the safety to personnel.



Controller enclosure and motor enclosure should be earthed to one point.

- 2) Make sure correct wiring of the terminal block **J1** on control board to avoid any damage to the main control board.



Controller has special digital operator, it should be connected to the socket J232 on main control board by a special cable before commissioning. USB serial communication cable is also available; connect it to the port USB0 on main control board to computer, then do commissioning with special software. (please refer to commissioning software manual)

- 3) Make elevator stop at the middle floor.
- 4) Turn electric lock to position "ON".

7.3. Power On and Inspection

7.3.1 Things need to confirm before Power On

1. Confirm all the air switches in control cabinet are open.
2. Confirm mode switch on the controller is at "inspection", emergency stop button is pressed.
3. Confirm inspection switches on car top and cabin are both in "normal" positions.
4. Confirm terminal resistor for bottom HOP is connected
5. Check voltage on the main power supply:: 3 phase voltage is $380 \pm 15\%$ VAC, phase-phase voltage difference is smaller than 15VAC, Phase-N voltage is $220 \pm 7\%$ VAC.
6. Confirm the wire specification and main switch capacity match the design requirement.

7.3.2 Inspection after Power On

1. Close main power switch Q1, if phase relay KXX green LED on, it means the phase sequence is correct, otherwise red LED on, means phase sequence is incorrect, in this case please switch off the main power switch, exchange any two phase, and repeat the above inspection.
2. Inspect the terminal voltage on transformer **TC1**, the values should be in the range of $\pm 7\%$ of the indicated value, if voltage exceeds this range, find out the problem and correct it.
3. if the above inspections are normal, then do the following process:
 - a. Switch on F4: Voltage between terminal 100-101 should be $110 \pm 7\% \text{VAC}$

Voltage between terminal 103-102 should be $110 \pm 7\% \text{VDC}$

- b. Switch on F5: Voltage between terminal 200-201 should be $220 \pm 7\% \text{VAC}$
- c. **(Note: Connect digital operator before power on)** After power on, first see if the main menu display is correct on LCD indicator. For example: elevator state, fault state, door lock state, current floor, running speed and else. In this way we can tell if the controller is working properly and whether 24V power supply is normal. Interface on digital operator LCD screen can be seen below in fig. 7.1

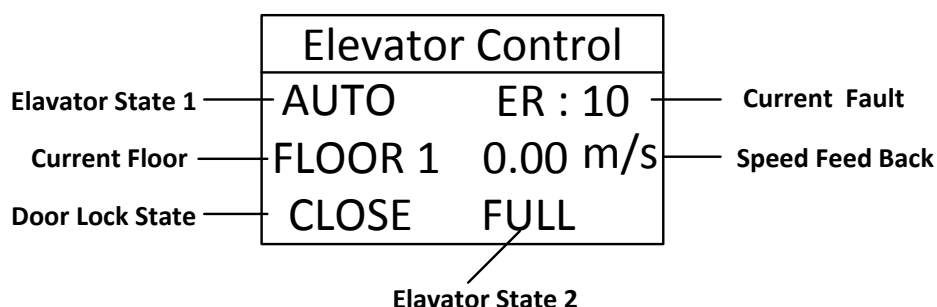


FIGURE 7.1 DIGITAL OPERATOR LCD SCREEN INTERFACE

- d. Terminal voltage of switch power supply unit:

CHART 7.1 TERMINAL VOLTAGE FOR SWITCH POWER SUPPLY UNIT

Terminal	L~ N	24V~ G
Voltage	$220 \pm 7\% \text{VAC}$	$24.0 \pm 0.3 \text{VDC}$

- e. After above inspections, do the following inspections:
 - 1) Check door lock circuit.
 - 2) Check leveling zone signal, top/bottom limit signal.
 - 3) Check electric lock, set the elevator auto-start/off time to "0", set electric lock switch to "ON", LCD screen will then display elevator state as "INSP", if set electric lock switch to "OFF", LCD screen will show "STOP".

4) Check door open/close system, do corresponded adjustment if necessary.

7.4. Parameter Setup

It is very important to set Parameters based on actual site condition, as this is the foundation for controller or control system to maximize its performance. For parameter setups please refer to chapter 4-6. When setting parameters, please pay attention to the following points:

1. Set the motor basic parameters from motor nameplate namely motor parameter 1 content (F5 group). For example, motor type, pole numbers, rated frequency, rated power, rated RPM, rated current, Back-EMF (only for synchronous machine), no-load current (only for asynchronous machine), phase inductance, phase resistance and else. Amount which phase inductance, phase resistance and other parameters that are unknown can be acquired from motor -tuning; if system moment of inertia is unknown, leave it as default.
2. Set encoder parameter correctly (F8 group), for example encoder pulse, PG frequency division coefficient.
3. Set elevator running parameters correctly, such as motor rated RPM, encoder pulse (after frequency division.)
4. Set input type correctly, they should match the actual contactors, relays and hoistway contacts and switches.

7.5. Motor Parameters Tuning

Controller has motor parameter tuning function. Base on the input basic motor parameters, system automatically performs control, detecting, calculation, and recognize the unknown motor parameters required. For example, phase inductance, phase resistance, no-load current (only for asynchronous machine) and else.

Unless all the necessary motor parameters are known (F5 group), for example phase inductance (F5-06), phase resistance (F5-07) and all other parameters, please set the parameters directly and there is no need to run the motor parameter tuning. Otherwise motor parameter tuning is necessary.

Note: For BL6 series elevator integrated controller, parameter tuning is not nesseray.

7.5.1 Motor Rotation Tuning

Motor rotation tuning process is shown below:

PG Type (F8-02) should be set correctly, and AutoTuneModeSel (FC-13) should be set to 0.

1. Make motor (traction machine) with no load (do not attach the steel rope);
2. Short circuit running contactor output Y9 (J5-10) and COM3 (J5-6), make running contactor closed;
3. Short circuit brake output Y7(J5-8) and COM3 (J5-6), close braking contactor and release the brake;

With the digital operator, perform the motor tuning command according to Fig. 7.2

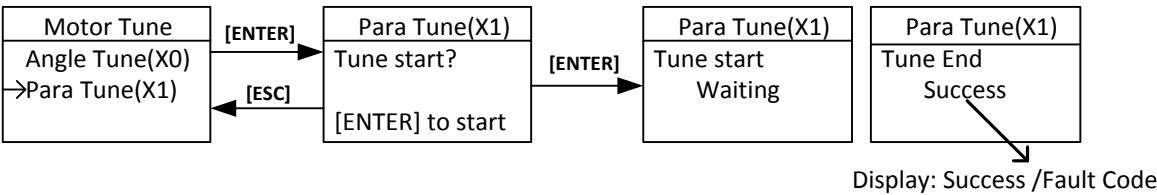


FIGURE 7.2 MOTOR PARAMETER TUNING WORKFLOW

After press the “Enter” button, motor parameters tuning start. Motor will remain static after a short vibration, system continues to supply current and motor generates current noise. The whole process takes about 5 seconds.

If tuning success, return to parameter setting menu, check motor phase inductance (F5-06), and motor phase resistance (F5-07). They should all be adjusted to the correct value. Generally, one successful tuning is enough. However, if want to acquire more accurate results, one can record the results of this tuning, then repeat the process, and take the average value from tuning results.

If self-learning fails, operator will indicate the error code, please refer to the troubleshooting table in chapter 8, find out the reason and solve the problems, then start motor parameter tuning again.

7.5.2 Motor Static Tuning

Motor static tuning process is as follows.

1. Closebrake.
- 2.Select tuning method parameter FX-20 to “1” on digital operator.
- 3.Shortcircuit running contactor output Y9 (J5-10) and COM3 (J5-6) to make it close; (If the system has a separate star short circuited contactor, close it as well).

With the digital operator, perform the motor tuning according to Fig. 7.2

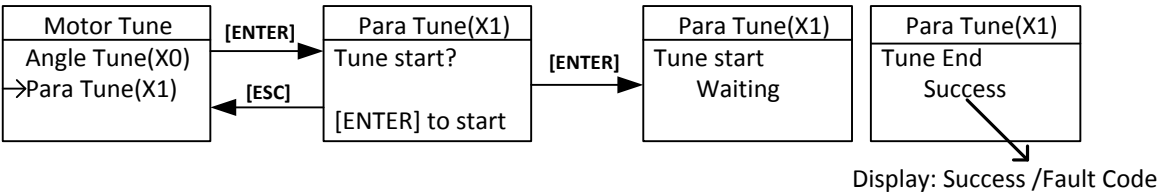


FIGURE 7.2MOTOR PARAMETER TUNING FLOWCHART

If tuning success, return to parameter setting menu, check motor phase inductance (F5-06), and motor phase resistance (F5-07). They should all be adjusted to the correct value. Generally, one successful tuning is enough. However, if want to acquire more accurate results, one can record the results of this tuning, then repeat the process, and take the average value from tuning results.

If tuning fails, operator will indicate the error code, please refer to the troubleshooting table in chapter 8, find out the reason and solve the problems, then start motor parameter tuning again.

7.6. Motor Initial Angle Tuning

For synchronous motor, besides the above parameter tuning, it is also necessary to perform motor initial angle tuning. Otherwise the machine cannot run normally, or even sever slip. Therefore, tuning initial angle is very important for synchronous machine. Before proceed to load run, synchronous machine must first perform initial angle tuning successful and no load running successful. For the tuning procedures, please refer to figure 7.3.

7.6.1 Rotation Tuning Procedures

BL6 series elevator integrated controller no longer distinguishes encoder types. This angle tuning mode requires that the motor is no-load and the brakes are open.

The preparations before tuning are as follows:

1. Synchronous motor (traction machine) must not have any load (don't hang on steel ropes);
2. Short circuit running contactor output Y 9 (J5-10) and COM3 (J5-6) to make it close;
3. Short circuit brake contactor output Y7 (J5-8) and COM3 (J5-6) to make it close and open brake;

With digital operator, AutoTuneModeSel (FC-13) should be set to 0 (0: Rotation tuning; 1: Static tuning). With the motor parameters (F5) and encoder parameters (F8) are set correctly, perform the initial angle rotation tuning as follows.

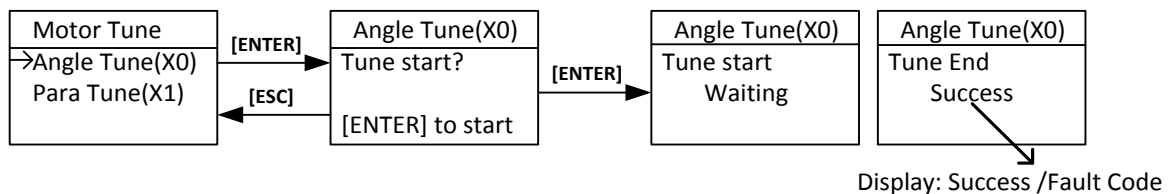


FIGURE 7.3 MOTOR INITIAL ANGLE ROTATION TUNING

After pressing "Enter", tuning starts. At first, Motor will immediately rotate to a certain position, then rotate forward at a certain speed (facing to traction sheave, anticlockwise rotation is forward direction), the speed is depended on motor pole number and initial position. Motor will stop after at most 2 turns, and will be rotated again to a certain position to stop for 2 seconds, then tuning stops and the operator display "success". The whole tuning procedure lasts around 30s.

After tuning successful, perform a trial run according to chapter 4 "4.4 Parameter commissioning in Digital Operator". Make traction machine accelerate forward from zero speed to rated speed, run it in constant speed for a while and observe the running condition; make motor run in opposite direction in same way.

After trial run with digital operator, please remove the short circuit on “running contactor output” and “brake control output”. Press jog up button on control cabinet to perform inspection running, observe motor running condition; Then press jog down button on control cabinet to perform inspection running, observe motor running condition.

When jog up (down), if the real running direction of cabin is down (up), please set F6-03 to correct it. 0: anticlockwise rotation is down, 1: anticlockwise rotation is up, set based on actual site condition.

After the above trial running is finished, attach the steel rope and run motor with load.

7.6.2 Static Tuning Procedures

For this tuning method, tuning can be carried out with steel rope attached, but please make sure the following procedures are finished correctly before tuning:

1. Wiring in control cabinet is completely correct, and system under inspection state;
2. Running parameter (F1), motor parameter (F5) and encoder parameter (F8) are set correctly ;
3. All mechanical faults in hoistway have been eliminated; cabin and counterweight locate at center of the hoistway.

Set AutoTuneModeSel FC-13 (FX-20) to “1” on digital operator (0: rotation tuning, 1: static tuning), perform motor initial angle tuning according to the following procedures shown in Fig.7.4:

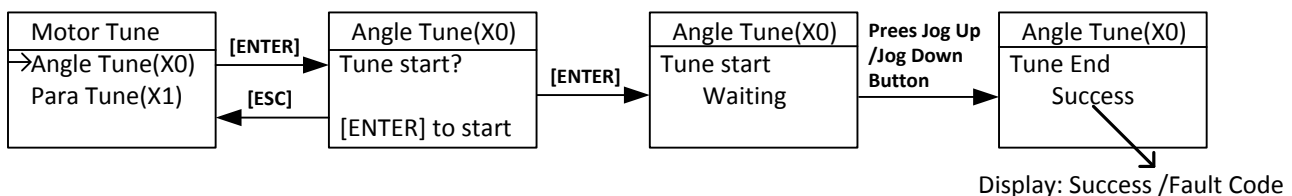


FIGURE 7.4 MOTOR INITIAL ANGLE STATIC TUNING

After pressing “Enter”, tuning starts. When digital operator indicates “Waiting”, press jog up or down button, contactor KDY closes, motor will vibrate a little and give a noise, the duration depends on motor rated power and rated current, but no longer than 5s, this is static tuning period. (Make sure jog up or down button is pressed constantly, DO NOT release the button during this period.) Motor will then start and run in inspection speed, jog up or down, until digital operator indicates success, this is test running period. Finally, release the jog up or down button and finish the tuning procedure.

Please note the following items at motor static tuning:

1. To ensure safety, during tuning process, people is strictly forbidden to stay in car or hoistway;
2. Press up or down jogging button can base on the current cabin position;
3. The whole tuning procedures can be divided into two steps: static tuning and motor trial running, make sure there is no interruption between two steps. If no fault happens, before digital operator indicates success, press the jog up or down button constantly;

4. To achieve optimal control effect, it is recommended to repeat above tuning procedures 5 times, if the deflection of the results is small, take the average value.

If fault occurs in tuning, please refer to chapter 8 troubleshooting chart, locate the fault and solve it accordingly, then repeat tuning procedures.

7.7. Inspection Running

7.7.1 Inspection Running in Machine Room

1. Things to check before inspection running in machine room.

- 1) Inspection switch in control cabinet is at "Inspection" position, inspection switch on car top and cabin should be in "Normal" position.
- 2) Safety circuit and door interlock circuit work normal, DO NOT short door interlock circuit.
- 3) After power on, **KJT** emergency stop contactor, **KMB** door interlock contactor, and **KMC power** contactor in control cabinet are closed, check if the controller works normal and parameter setting is correct, in LCD indicator, elevator state is "**INSP**".
- 4) Connect the brake wiring to control cabinet properly.

2. Inspection running in machine room

When the inspection running requirements in machine room are satisfied, press the Jog Up/Down button on the control cabinet, elevator will run up/down in set inspection speed.

Note: For integrated controller with ARD function, the inspection switch is called "Emergency Run Mode Switch"

7.7.2 Inspection Running on Car Top/Cabin

If inspection running in machine room works normal, then inspection running on car top and cabin can be performed. If the up or down direction of the buttons of inspection running on car top and cabin are opposite with the actual running direction, please inspect its buttons' wiring, do not change the wiring in control cabinet.

7.8. Hoistway Learning

Hoistway parameter self-learning means elevator runs at a self-learning speed and measures every floor height and record the position of every switch in the hoistway. As the floor position is the foundation for elevator normal running, braking and floor display. Therefore, before normal running, hoistway parameter self-learning must be performed. Before hoistway parameter self-learning, inspection running in full trip must be performed too; elevator must be able to run normally from bottom limit to top limit.

Hoistway parameter self-learning procedure is as follows:

1. Make sure elevator meets the conditions for safety running;
2. Make sure all the switches in hoistway are installed and connected correctly, traveling cable and hoistway cable are connected correctly, and finish setting the HOP/display address;

3. Elevator in inspection mode, jog elevator down to the bottom limit (bottom limit is valid);
4. Enter elevator hoistway self-learning menu through digital operator, follow the learning procedures shown below in Figure 7.4

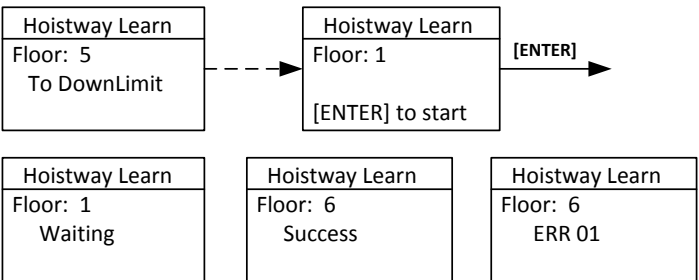


FIGURE 7.5HOISTWAY PARAMETER SELF-LEARNING PROCEDURES

5. The results of learning can be seen from hoistway position parameter U00-U69 under monitor menu with unit of meter, please check the switches position after hoistway learning.
6. In self-learning process, if control system detects any abnormal phenomenon, self-learning will be terminated and give fault code, please refer to troubleshooting table in chapter 8, find out the reason and solve it accordingly, then start hoistway parameter self-learning again.



When self-learning process stops, only when LCD indicator shows “success” on digital operator, self-learning is completed successfully.

7.9. Normal Speed Running

After hoistway parameter self-learning is completed successfully, normal speed running can be carried out. Procedure as follows:

1. Switch elevator to attendant mode (Manual)
2. In floor selection parameter D0 through digital operator, target floor can be set (details refer to chapter 4.5 **Commissioning Parameters Setup**).Then it is possible to perform single floor traveling, double floor traveling, multi-floor traveling and full trip traveling test. Through D1 parameter interface, input door open and close instruction to control the door.
3. Make sure elevator can start, accelerate, decelerate and leveling normally in normal speed running.
4. If running is abnormal, please check for parameters setting.

7.10. Elevator Comfort Level Adjustment

If comfort level and leveling accuracy of elevator running are not perfect, please follow procedures blow.First, check the mechanical system condition (Such as clearance of guide shoes, lubricating, steel rope, position of the rope hitch plate and else.)which might influence the comfort of elevator running. After checking all the mechanical parts, then do adjustment in controller.

As the controller control the motor running according to the given starting/braking speed curve, therefore shape of the given speed curve, motor feedback speed to controller and the timing logic of controller signals directly influence the comfort level of elevator running.

7.10.1 Adjustment for Start/Brake speed curve

Elevator running speed curve is shown below in Fig.7.6.

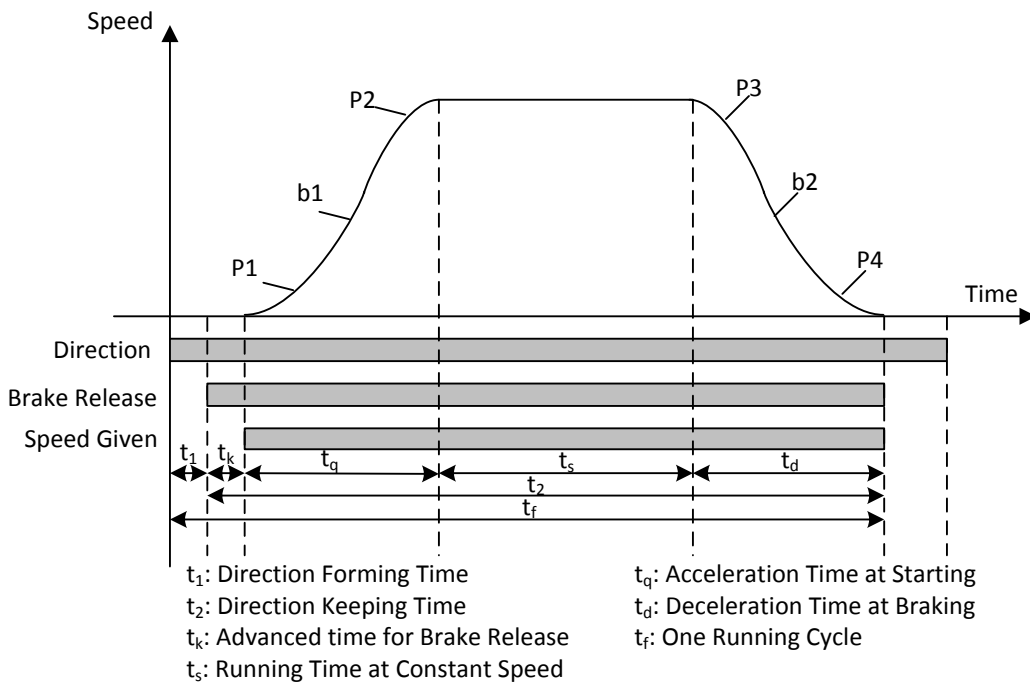


FIGURE 7.6 ELEVATOR RUNNING SPEED CURVE

1. Three parameters adjustment for motor starting S curve:

- 1) **P1**: Acceleration increase in starting section, it means the rate of elevator acceleration change. Smaller value means the slower starting section, the smoother running period and the lower the efficiency. On the other hand, faster at acceleration starting section means higher efficiency for elevator running.
- 2) **b1**: Acceleration in starting section, it means the rate of elevator speed change. Smaller value means the slower starting section, the smoother running period and the lower efficiency. On the other hand, faster at acceleration section means higher efficiency for elevator running.
- 3) **P2**: Acceleration decrease at end of starting section, it means the rate of elevator acceleration change. Smaller value means slower at end of starting section, the smoother running period and the lower efficiency. On the other hand, faster at acceleration ending section means higher efficiency for elevator running.

2. Three parameters adjustment for motor braking S curve:

1) P3: Deceleration increase at start of braking section, it means the rate of deceleration change, smaller value means slower at start of braking section is, smoother running period and lower efficiency. On the other hand, faster at brake starting section means higher efficiency for elevator running.

2) b2: Deceleration in braking section, it means the rate of elevator speed change. Smaller value means the slower braking section, the smoother running period and the lower efficiency. On the other hand, faster at braking section means higher efficiency for elevator running.

3) P4: Deceleration decrease at end of braking section, it means the rate of deceleration change. Smaller value means slower at end of braking section, smoother running period and the lower efficiency. On the other hand, faster at brake ending section means higher efficiency for elevator running.



IMPORTANT

Commissioning at jobsite need to first guarantee the elevator running efficiency, then adjust the above 6 parameters to achieve optimal elevator running curve.

7.10.2 Follow & Adjust Running Curve

To achieve the maximum level of comfort, integrated controller must control the motor and make feedback speed strictly following the change of running curve.

As the controller establishes the mathematic motor module based on the motor parameters input by customers, and controller perform decoupling control by this module on motor starting/braking. Therefore, customer should input the motor parameters correctly. (When motor parameter is not precise or not confirmed, we suggest customer perform motor parameter tuning.)

Proportional gain on the speed circle **F6-04** and integral gain **F6-05 or F7-05~F7-12** for PI section parameters also influence the motor tracking ability to speed curve. Generally, increasing the proportion gain will improve the reaction of the system and promote the tracking speed. However, if proportion gain is set too big, it will cause system vibration with high frequency and large motor noise. Increasing integral gain can improve the system anti-interference/tracking ability and improve the leveling precision, but set integral gain too big will make system vibration, speed over adjustment and wave vibration.

Generally, it is recommended to first adjust the proportion gain, increase it right before system vibration threshold. Then adjust the integral gain, enable system with quick reaction and no over adjustment.

If system performance is not perfect at start or stop period (low speed period), try to control in multi-section PI, detail can be seen in 6.19.2 in Chapter 6.

7.10.3 Control Timing Adjustment

The control timing of this system can be seen Section 6.3 in Chapter 6, customer can adjust timing parameters and zero speed setting.

1. Timing adjustment: Refer to **section 6.3** Timing diagram under different state in Chapter 6.

2. Zero speed setting: This parameter is the threshold of zero speed. Main control board determines braking time by this value. If this value is too big, elevator will stop with speed, if too small it will delay door open after elevator stop.

Generally, for asynchronous motor, it is 5 RPM, for synchronous motor, it is 1RPM.

7.11. Leveling Precision Adjustment

Leveling precision adjustment should be performed after comfort level adjustment is satisfied.

7.11.1 Basic Conditions for Elevator Leveling

1. Make sure the leveling switches and leveling inductor plates are installed in the right position.
2. Length of leveling inductor plates on every floor must be the same.
3. Leveling inductor plates must be installed vertically.
4. The position of leveling inductor plates should be precise. When elevator is at the leveling position, the center of the plate and center of two inductors should match together (refer to appendix), otherwise elevator leveling will have deflection, which means in up or down running, elevator stops higher or lower than leveling position.
5. If magnetic inductors are adopted, please make sure the inductor plates insert into the inductor sufficiently, otherwise it will influence the reaction time of inductor, in that way elevator will overrun the leveling position.
6. To ensure precise leveling, system requires elevator to crawl for a certain distance before stop.
7. In practice, first make adjustment for a middle floor, until leveling is precise. Then, adjust the other floors on the basis of these parameters.

After adjusting curve selection, ratio and integral gain in the above context, please make sure every time elevator runs up or down, when stop at middle floor, its leveling positions are the same (each deflection of stop position $\leq \pm 2 \sim 3 \text{mm}$).

7.11.2 Leveling Parameter Adjustment

If elevator still cannot achieve desired leveling condition with adjustment based on instructions in section 7.9.1 in Chapter 7, further adjustments can be done by parameters. After elevator stops in normal running, if running speed curve has no problem (for example, no sudden stop or overrun beyond leveling zone), if elevator overruns the leveling position (it stops higher in up-running, lower in down-running), please decrease leveling adjustment parameter F1-17 (default: 50). If elevator cannot reach the leveling position (it stops lower in up running, higher in down running), increase leveling adjustment parameter F1-17, generally the range of this parameter is 40~60, if the adjustment is too big, please adjust driving parameter PI, or the shape of speed curve (F1-10~F1-15).

7.12. Terminal Switch Position

Top and bottom terminal switch signal is used for elevator force deceleration and floor position calibration, it should be installed in the position where it is triggered when elevator is 2.5m ahead of top (bottom) leveling position(for **1.6m/s lift**). The position should be determined as follows:

1. Switch elevator to inspection mode.
2. Set the inspection speed to 0.3m/s, jog run up(down).
3. Stop elevator when top(bottom) switch is triggered.
4. Distance between car sill and landing door sill should be 2.5 ± 0.1 m.

For the positions of terminal switches under other speed elevator, please refer to the appendix.

Chapter 8: Troubleshooting

This chapter explains in detail the fault display of integrated controller, the reasons behind and possible solution. The fault display on integrated controller may come from elevator system errors, Hoistway learning errors, driver errors, motor parameters setting and Encoder phasing errors.

8.1. Elevator System Faults

CHART 8.1 ELEVATOR SYSTEM FAULT LIST

Error Code	Definition	Possible Solution
Er2	Door inter-lock faults: Door inter-lock circuit open at elevator running	Check the work condition of door vane and door interlock circuit. Roller should have enough space at both side of the vane.
Er3	Driver faults	Check driver fault code, find the cause of fault, and resolve it.
Er4	Elevator running in opposite direction with command	1. Exchange phase "V" and "W" on motor 2. Exchange phase "A" and "B", on encoder terminal block or change in parameter setup.
Er5	System does not receive brake open feedback signal after output brake open command: 1. No X17/X15 feedback after Y7 output 0.5/2s. 2. X17/X15 enable when Y7 has no output.	1. Check the traction machine brake detection switch and wiring; 2. If no feedback switch, should set feedback enable to OFF
Er6	During elevator running, leveling zone input signal X9, X10 is always on.	Check leveling zone signal circuit and induction switch
Er7	Encoder pulse not enough at elevator running.	Check the wiring from encoder to controller.
Er9	Contactor KDY output not matching feedback signal: 1. After Y9 output, X16 has no feedback in 0.4s. 2. X16 is enabled when Y9 has no output.	Check the contactor KDY coil and output/feedback circuit wiring.
Er10	Safety circuit open, X13, X29 input are invalid.	Check safety circuits.
Er11	Leveling switch signal missing: Elevator is running pass the floor, but there is not input at X9 /X10.	Check the leveling switches and its wiring.
Er12	Elevator pass top limit switch (X5 is invalid)	Check the encoder, top limit switch including its position and wiring.
Er13	Elevator pass bottom limit switch (X6 is invalid)	Check the encoder, bottom limit switch including its position and wiring.
Er14	Floor counter error from encoder deviation accumulation: after this error, elevator will return to bottom floor in inspection speed for recalibration.	1. Check encoder wiring and related circuits; 2. Check the leveling switch and related circuits; 3. Possible reason: traction rope slip /door drive shake at start.

CHART 8.1 ELEVATOR SYSTEM FAULT LIST (CONT'D)

Error Code	Definition	Possible Solution
Er17	No drive output after running command.	Check parameters in controller or contact supplier.
Er18	Floor number error:after this error, elevator will return to bottom floor in inspection speed for recalibration.	Possible due to sudden power drop & elevator slip. Check the encoder and its wiring.
Er19	The deceleration distance for target floor is not enough. Elevator did not perform hoistway parameter learning after changing terminal switch location.	1. Decrease "Least Speed" in user menu; 2. Do hoistway parameter learning again.
Er20	When elevator reaches top/bottom floor and get deceleration instruction, but elevator doesn't slow down; elevator did not perform hoistway parameter learning after changing terminal switch location.	1. Increase controller PI gain parameters; Check the braking resistor specification 2. Make elevator running curve more smooth. 3. Do hoistway parameter learning again.
Er21	Single running time is over set time	1. Check the traction rope for slip or car jam. 2. Check related parameters in drive; 3. Check value of parameter "Over Time".
Er22	Elevator has inspection signal input (X10 invalid) at elevator normal running.	Check inspection switch and related circuits.
Er23	One of two leveling switch (X9, X10) is invalid at elevator normal running.	Check leveling switches and wirings.
Er25	Heat sensor protection: Braking resistor or motor is over heat (X21 invalid).	Check heat sensor circuit. If this error cannot reset in 90s, Y10 relay on controller will output KMC contactor open signal.
Er26	Door inter-Lock contactor working state does not match to its coil (X14, X30 input different)	Check door interlock contactor terminal & coil and their related terminal on controller.
Er27	Emergency stop contactor working state does not match its coil state.(X13, X29 input different)	Check emergency stop contactor terminal & coil and their related terminal on controller.
Er28	Top/bottom terminal (1st or 2nd) switch fault. (X7 or X8 valid when elevator outside their floor)	Check for terminal switches location and their wirings.
Er29	Communication interference too much (In system or in duplex communication).	1. Check system ground condition. 2. Check COP/LOP for possible damage that may influence CAN BUS communication.
Er30	Door open fault (car cannot open door)	1. Run elevator in inspection mode, give door open command and check Y4 for output signal. 2. If Y4 has no output, need to check door open, close limit switch and related signal.

CHART 8.1 ELEVATOR SYSTEM FAULT LIST (CONT'D)

Error Code	Definition	Possible Solution
Er31	Door close fault (car cannot close door)	Normally due to door not installed properly and short circuit door interlock circuit. Check if door close and door interlock circuit are output at same time.
Er32	Floor number counting error.	A sudden power break may affect terminal/limit switches and cause floor number error. Elevator will then return to bottom floor for recalibration.
Er33	Motor star short circuited contactor fault	KDY fault: KDY command not match feedback signal: 1. Y8 output,X11 has no feedback in 0.4s 2.Y8 has notoutput, X11 is valid

8.2. Hoistway Parameter Self-Learning Faults

CHART 8.2 HOISTWAY PARAMETER SELF-LEARNING FAULT LIST

Error Code	Definition	Possible Solution
LER=0	System running error	Press "ESC" to exit learning, check fault record shown in table 8.1
LER=1	Pulse input phase reverse	Exchange phase A and phase B in encoder.
LER=2	Bottom terminal 1 switch input repeat.	Bottom terminal 1 switch installation error, causing multiple terminal switch input or bottom terminal 1 switch signal shake. Check related switches.
LER=3	Bottom terminal 1 switch signal lost (elevator >2.0m/s)	Bottom terminal 2 switch enable before bottom terminal 1 switch or bottom terminal 1 switch signal lost. Check related switches.
LER=4	Bottom terminal 2 switch signal repeat. (elevator >2.0m/s)	Bottom terminal 2 switch installation error, causing multiple terminal switch input or bottom terminal 2 switch signal shake. Check related switches.
LER=5	Bottom terminal 2 switch signal lost (elevator >2.0m/s)	Top terminal 2 switch enable before bottom terminal 2 switch or bottom terminal 2 switch signal lost.
LER=6	Top terminal 2 switch signal repeat. (elevator >2.0m/s)	Top terminal 2 switch installation error, causing multiple terminal switch input or top terminal 2 switch signal shake. Check related switches.
LER=8	Top terminal 2 switch signal lost (elevator >2.0m/s)	Top terminal 1 switch enable before top terminal 2 switch or top terminal 2 switch signal lost.
LER=9	Bottom terminal 1 switch signal lost	Top terminal 1 switch enable before bottom terminal 1 switch or bottom terminal 1 switch signal lost.
LER=10	Top terminal 1 switch signal repeat	Top terminal 1 switch installation error, causing multiple terminal switch input or top terminal 1 switch signal shake. Check related switches.
LER=11	Top terminal 1 switch signal lost	Top limit switch enable before top terminal 1 switch or top terminal 1 switch signal lost.

CHART 8.2 HOISTWAY PARAMETER SELF-LEARNING FAULT LIST (CONT'D)

Error Code	Definition	Possible Solution
LER=12	Total floor setting error	Check total floor number match actual floor number. Check leveling inductor plates on every floor.
LER=14	Two leveling inductors cannot trigger together	Leveling inductor plate on this floor cannot cover both inductors or missing one leveling inductors.
LER=15	Press "ESC" in the middle of hoistway parameter learning process.	Cancel the learning by pressing "ESC".
LER=17	Up/Down leveling switch enable at same time	Wiring of two switches is parallel connection by mistake, or bottom limit switch is installed close to 1st floor leveling position.
LER=18	Hoistway data saving error	▲ Please contact supplier at once.
LER=19	Both leveling switch signal enable together when arrive at top limit switch.	Move up top limit switch.
LER=20	Bottom limit switch too high	Lower the bottom limit switch.
LER=21	When elevator reaches top limit switch, bottom terminal 1/2 switch is valid.	Check the switches position and their wirings.
LER=22	When elevator start from bottom limit switch, top terminal 1/2 switch is valid.	Check the switches position and their wirings.

Note: System has 2 top and 2 bottom terminal switches for elevator speed >2.0m/s.

8.3. Driver Faults

CHART8.3 DRIVER FAULT LIST

Error Code	Display	Definition	Possible Causes	Possible Solution
DF1	UV	DC bus under voltage (for 400V drive, 380V at UV protection)	1. Phase lost on input supply; 2. Instantaneous power lost; 3. Excessive input voltage fluctuation; 4. Loose terminals at input.	1. Check input power supply; 2. Check input power cable terminals.
DF2	OV	DC bus over voltage (for 400V drive, 760V at OV protection)	1. Too short deceleration time, 2. Excessive motor regenerated energy; 3. Supply voltage too high 4. No connection to braking resistor.	1. Increase deceleration time; 2. Connect brake resistor; 3. Check power supply.
DF3	OH	Heatsink overheated	1. Excessively ambient temperature; 2. Damaged cooling fan; 3. Existence of heat source around.	1. Reduce ambient temperature; 2. Remove heat source around; 3. Check the fan and wiring.
DF4	IF	IPM fault	1. IPM over current/short circuit; 2. IPM over heat; 3. Abnormal IPM control power (UV)	1. Check output short circuit; 2. Check motor short circuit; 3. Contact supplier.

CHART8.3 DRIVER FAULT LIST (CONT'D)

Error Code	Display	Definition	Possible Causes	Possible Solution
DF5	OC	Overcurrent	1. Inverter output short circuit; 2. Machine over-load; 3. Accel/decel time too short.	1. Check motor short circuit; 2. Check accel/decel time, slow down if needed.
DF6	CF	CUP faults		Too much interference.
DF7	OS	Elevator overspeed. The speed feedback exceeds the speed limit and last longer than set time.	1. Max speed /last time set incorrect; 2. Speed over-tuning; 3. Encoder feedback incorrect.	1. Check speed limit setting; 2. Check the P/I parameter; 3. Check encoder
DF8	OE	Speed over deviation. The speed deviation exceeds the allowable range and last longer than set time.	1. System overload; 2. Accel/decel time short; 3. Parameter setting wrong; 4. Encoder cannot work properly.	1. reduce system load; 2. Increase accel/decel time; 3. Check the parameters; 4. Check the encoder.
DF9	PGO	PG disconnect, did not receive encoder signal at operation.	1. Encoder wiring break, loose or wrong connection; 2. Encoder damaged.	1. check encoder wiring; 2. Check encoder.
DF10	FF	Flash memory fault	Data fault at saving parameters.	Please contact supplier.
DF11	BF	Baseblock circuit error	1. Wiring for baseblock at X14 is incorrect; 2. Setting electric level for baseblock at X14 is incorrect	1. Check the wiring at X14; 2. Modify the parameters.
DF12	OL	Motor overload, current output exceed 150% (200%) rated value for 60s (10s).	1. System load too heavy; 2. System power rating too low.	1. Reduce system load; 2. Change a more suitable controller.
DF13	MC	Controller main contactor MC does not close after given close command for set time.	1. Wrong wiring for MC contactor; 2. MC contactor damaged.	Try to reset the power, if this error come again, contact supplier for replacement.
DF14	BR	Brake unit fault	1. defective brake cable or damaged brake elements; 2. External brake resistor disconnected or not connected.	1. Check brake resistor; 2. Replace the controller.
DF15	OF	Output phase lost	1. Output cable break or loose terminal. 2. Motor stator cable dis-connect.	1. Check output cable/terminal; 2. Check motor stator cable.
DF16	SCF	Output current remains at elevator stop.	Controller damaged.	Change the controller.

CHART 8.3 DRIVER FAULT LIST (CONT'D)

Error Code	Display	Definition	Possible Causes	Possible Solution
DF17	SRF	Elevator slip after stop	1. Brake/encoder loose; 2. Encoder interference.	1. Fasten brake/encoder; 2. Remove interference source.
DF18	UF	Signal U of encoder wire lost	Encoder damaged or wiring incorrect.	Check encoder and wirings
DF19	VF	Signal V of encoder wire lost	Encoder damaged or wiring incorrect.	Check encoder and wirings
DF20	WF	Signal W of encoder wire lost	Encoder damaged or wiring incorrect.	Check encoder and wirings
DF21	DF	Parameter setting error	Parameter setting error	Check parameter setting
DF22	SDF	Internal programmer self check error	Internal data setting error	Please contact supplier

8.4. Motor Initial Angle Tuning Faults

For Incremental encoders

CHART 8.4 MOTOR INITIAL ANGLE ROTATION TUNING FAULT LIST 1

Error Code	Definition	Possible Causes	Possible Solution
RF1	Rotation tuning error	1. Motor with load; 2. Motor phase is not correct; 3. Encoder damage or wiring incorrect.	1. Make sure motor has no load; 2. Correct the phase of motor; 3. Check the encoder and wiring.
RF2	Auto tuning data error	1. Motor parameter setting error; 2. Encoder damaged or wiring incorrect; 3. High interference.	1. Check motor parameter setting; 2. Check encoder and its wiring; 3. Reduce interference.
RF3	Z-phase pulse lost at tuning	1. Encoder damaged; 2. Encoder wiring is incorrect	1. Check encoder; 2. Correct the wiring of encoder
RF4	Auto tuning result is not correct	1. Motor parameter setting incorrect; 2. Encoder and its wiring is incorrect; 3. Auto tuning motor with loads; 4. Speed circle P/I set too large.	1. Check motor parameter setting; 2. Check encoder and its wiring; 3. Make sure motor has no load; 4. Reduce P/I parameter value.
RF5	Auto tuning UVW repeated input	The encoder UVW wire have short circuit or disconnected	Check the encoder and wiring
RF6	Motor cannot rotate normally	1. Motor with load; 2. Motor phase sequence is incorrect.	1. Make sure motor has no load; 2. Check motor phase sequence.
Others	Check controller for fault.	If drive has fault, it cannot perform auto tuning, and it will give fault code.	Check the drive is fault or not

For Sine/Cosine encoders

CHART8.5 MOTOR INITIAL ANGLE ROTATION TUNING FAULT LIST 2

Error Code	Definition	Possible Causes	Possible Solution
RF232	Motor does not rotate at auto tuning	1. Encoder connection fault; 2. Motor has load or brake close; 3. Motor parameter input error; 4. Motor & controller connection error.	1. Check encoder signal connection; 2. Motor parameter input correct; 3. Check motor/controller connection; 4. Make sure motor has no load & brake open.
RF233	Motor rotate in wrong direction	Motor phase sequences does not match encoder	1. Adjust motor phase sequence 2. Adjust encoder A-, A+ or B-, B+
RF234	Encoder Z pulse signal error.	1. No detection of Z pulse signal; 2. Motor/Controller connection error.	1. Check wiring for Z pulse signal; 2. Make sure motor has no load. 3. Check motor/controller connection.

Static Initial Angle Tuning Error

CHART8.6 MOTOR INITIAL ANGLE STATIC TUNING FAULT LIST

Error Code	Definition	Possible Causes	Possible Solution
PF235	Encoder Z pulse signal lost.	No encoder Z pulse signal detected after motor tuning for 7s.	If motor can run, check the encoder wiring; otherwise find out why motor cannot run.
PF236	Internal counting error.	Internal counting error.	1. Check the parameter input 2. Check motor/controller connection.

CHART8.7 MOTOR INITIAL ANGLE STATIC TUNING FAULT LIST (CONT'D)

Error Code	Definition	Possible Causes	Possible Solution
PF237	Motor is not held still	Motor brake is not close or brake is too loose	Check motor brake.
	Tuning results error too large	After tuning 3 times, tuning results have large differences.	Check motor and encoder wiring ground condition.
PF238	Detection current is too small	Motor/Controller connection is incorrect.	Check motor/controller connection.
PF239	Tuning results have too large errors	After tuning 3 times, tuning results have large differences.	Check motor and encoder wiring ground condition, then try again.
PF240- PF249	For incremental PG tuning, UVW signal error	The encoder UVW wires have wrong sequence or disconnection.	Check the UVW wiring with encoder

8.5. Motor Parameters Tuning Faults

Motor parameters tuning error code and their possible causes and solution are shown below in table 8.6 and table 8.8. (Including rotation and static parameters tuning)

Motor Parameters Rotation Tuning Faults

CHART8.6 MOTOR PARAMETERS ROTATION TUNING FAULT LIST

Error Code	Definition	Possible Causes	Possible Solution
PF2	Motor parameter input incorrect or no input.	1. Motor parameter input error; 2. Motor/Controller connection error.	1. Check motor parameters; 2. Check motor/controller connection.
PF3	Motor resistor tuning result error.	1. Input motor data is incorrect; 2. Wire not secured on terminal block.	1. Check input parameters; 2. Check the motor wiring and secured them on terminal block.
PF4	Motor leakage inductance tuning result error	1. Input motor data is incorrect; 2. Motor tuning with load.	1. Check the input parameters; 2. Make sure motor has no load.
PF5	Motor does not rotate in auto tuning.	1. Motor parameter input incorrect; 2. Wire loose on terminal block; 3. PG card damaged or wiring incorrect.	1. Check the input parameters; 2. Secure the wire on terminal block; 3. Check PG card and its wiring.
PF6	Motor cannot reach rated speed or rotate direction error.	1. Input motor data incorrect; 2. Motor input phase incorrect; 3. Encoder /PG card /wiring error.	1. Check the input parameters; 2. Check motor input phase; 3. Check encoder, PG card and wiring
PF7	No-Load Current error	Auto tuning motor with loads	Make sure the motor has no load.

Motor Parameter Static Tuning Faults

CHART8.8 MOTOR PARAMETER STATIC TUNING FAULT LIST

Error Code	Definition	Possible Causes	Possible Solution
PF2	Initial fault	1. Motor parameters input incorrect; 2. Motor/Controller connection error.	1. Input correct motor parameters; 2. Check motor/controller connection.
PF3	Motor resistor tuning result error.	1. Input motor data is incorrect; 2. Wire not secured on terminal block.	1. Check input parameters; 2. Check the motor wiring and secured them on terminal block.
PF4	Motor leakage inductance tuning result error	1. Input motor data is incorrect; 2. Motor/Controller connection error.	1. Check input parameters; 2. Check motor/controller connection.
PF237	Motor is not held still at initial tuning period.	Motor brake is not close or brake is too loose, causing sheave move during initial tuning period	Make sure motor brake is tightly closed.
PF238	Current too small at initial tuning period.	Motor/Controller connection error.	Check motor/controller connection.

Chapter 9: Maintenance

This chapter describes precautions and notes for drive storage and maintenance.

9.1. Safety Precautions for Drive Maintenance & Storage

Danger

- ✧ There are high voltage terminals in integrated controller, please DO NOT TOUCH.
Otherwise there has potential risk of electric shock.
- ✧ Make sure to install front protection cover before power on integrated controller and cut power before removing the front protection cover.
Otherwise there has potential risk of electric shock.
- ✧ Before open case service/maintenance, make sure the power is cut for 10 minutes, power on LED (CL) is off and DC+/- bus voltage is lower than 24V.
Otherwise there has potential risk of electric shock due to capacitor remain voltage.
- ✧ Only authorized and qualified personnel are allowed to inspect/service integrated controller.
Otherwise there has potential risk of electric shock and damage the product.
- ✧ Before maintenance, technicians must remove any metal objects (watch, ring, ect), and must wear cloth with qualified isolation level.
Otherwise there has potential risk of electric shock.
- ✧ DO NOT remove or change terminal ports at controller power on.
Otherwise there has potential risk of electric shock.
- ✧ DO NOT change internal structure of the integrated controller.
Otherwise there has potential risk of electric shock and damage the product.
- ✧ After maintenance, please make sure all terminals and contactors are tightly secured.
Otherwise there has potential risk of controller not functioning or even get damaged.

Attention

- ✧ CMOS integrated circuits are applied in control board, please be aware.
If touch by hand directly, the control board may get damaged due to static charge.

9.2. Daily Check

In order to increase the life time of controller and make sure the safety operation of elevator, it is necessary to check and inspect controller in a daily basis. As it is not allowed to remove the controller front cover with controller power on, the controller can be checked by observing the device external condition, including:

1. Check if fan is working properly, including any abnormal noise.
2. Check if the LED indicator and digital operator of controller is working properly.
3. Check if there are any abnormal noise, vibration or smell.
4. Check thermal condition of controller and motor.
5. Check the ambient environment (Temperature $-10\sim 45^{\circ}\text{C}$, humidity $5\sim 95\text{RH}$, no frozen, no oil mist or powder in air)
6. Check if the comfort level of elevator has decreased dramatically.
7. Check if the input power and frequency are within rated range.

9.3. Routine Inspection

In order to increase the life time of controller and make sure the safety operation of elevator, it is necessary to check and inspect controller in a routine basis. At routine check, first switch elevator to inspection mode, stop elevator operation and cut system power. Then please perform inspections procedures based on table 9.1, following safety precautions and notes mentioned above.

Table 9.1 Routine Inspection Check List

Check Item	Definition	Possible Solution for fault
Terminal, connector, screws	Check for loose screws/bolts	Tighten the loose screws/bolts
	Check for loose connector	Reconnect the loose connector
Heat sink & Wind tunnel	Check for dust or any blockage.	Use dry air gun (0.4-0.6MPa) to clean dust, use proper tools to remove other attached objects.
PCBs	Check for dust, oil (conducting).	Use dry air gun (0.4-0.6MPa) to clean dust, use proper tools to remove other attached objects, replace PCB if necessary.
Cooling Fan	1. Abnormal noise & vibration 2. Color/shape change due to heat 3. Loose bolts, screws.	For 1,2: Change fan For 3: Tighten screws.
Power device	Check for dust	Use dry air gun (0.4-0.6MPa) to clean dust or other objects.
Capacitor	Check for color, smell	Change controller or capacitor if necessary.

9.4. Quick Wear parts

Controller is made from many components inside, all these parts have their lifetimes, and they depend on environment and working condition. As a result, in order to increase the life time of controller and make sure the safety operation of elevator, it is necessary to check and inspect some of these parts in a regular basis, replace them if needed. Table 9.2 below is the components change standard.

CHART9.2 COMPONENT CHANGE STANDARD

Item	Life time	Change method
Cooling Fan	2-3 year (20000hrs)	Change new fan
Main circuit capacitor	5 year	Change new capacitor (Decide after inspection)
Main circuit fuse	10 year	Change new fuse
Capacitors on PCB	5 year	Change new PCB (Decide after inspection)
Other components	-----	Decide after inspection

Note: Conditions below are required in order for components to reach life time mentioned above.

Ambient temperature: Average 30°C around one year

Load rate: Average below 80%

Running rate: Daily usage time <12 hrs.

9.5. Warranty

Integrated controller warranty period is 18 months after manufacturer (based on product name plate). However, even within the 18-month warranty period, repair cost will be charged in the following cases:

1. Damage caused by miss-operation – not following manual guidance
2. Damage due to use outside rated range
3. Damage due to abnormal application of the drive
4. Damage due to natural environment, such as fire, flood, earthquake ect.

Chapter 10: Controller installation with EMC Standard

This chapter explains in detail the integrated controller installation with EMC standard for reference.

10.1. EMC Briefing

EMC (short for Electromagnetic Compatibility) refers to the device/system capability to function normally in an environment with electromagnetic interference. It has two parts: first, the device/system must be able to work normally in environment with electromagnetic interference. Then, the electromagnetic interference it generated must be within a certain level so it will not affect other devices/systems in the environment.

10.2. EMC Characteristics of Integrated Controller

Same as other electronic devices, the integrated controller is affected by electromagnetic interference and at the same time it is also a source of electromagnetic interference. In order to enable the controller work normally in an electromagnetic environment, at the same time not to affect other devices, it is specially designed to deal with EMC characteristics shown below.

1. Input current is non-sine wave, with high frequency, this will cause strong electromagnetic interference.
2. Output voltage is high frequency PWM wave, this will cause strong electromagnetic interference.
3. As electromagnetic receiver, if controller receives too strong interference, it may not work properly.
4. Reduce controller generated electromagnetic interference will increase its own EMC level.

10.3. EMC Installation Guide

As determined by operating principle, the elevator integrated controller produces certain noises during operation. The effect of noise on peripheral equipment is relevant to the noise type, transmission path as well as the design, installation, wiring and grounding of drive system.

10.3.1 Noise Control

Basic strategy for noise control is to cut the transmission channel between noise source and noise receiver. Detail solutions are shown below:

1. Power cable and signal cable should be lay out separately and stay as far as possible, make sure to avoid two kind of cables stay in parallel or tied together. When meet situations in which signal cable must pass power cable, make sure two cables stay in perpendicular crossing and stay as far as possible.
2. All controller signal cable must have net shield, and the shield should be grounded at the controller side, with grounding area as large as possible.
3. For signal cables easy to get interference, such as encoder cable, it should have double twist shield cover, with grounding area as large as possible. One suggestion is to put the cable in metal tube or in a individual metal cable tunnel with reliable grounding condition.

4. Power cable and motor cable should use power cable with armor cover or shield. Power cable should use individual metal cable tunnel with reliable grounding point at controller side. Motor cable should follow the same grounding principle and its shield should also connect to motor cover at motor side.
5. Power cable should be connected to inverter use RFI filter or output reactor. Motor cable should be connected with output filter (sine/cosine filter) or install output reactor. Another solution is to surround motor cable twice with ferrite magnetic circle.
6. Other devices that are easy to get interference should be put far away from the controller and power cable.
7. Inductive devices around controller such as contactor, relay, brake unit, their coil need to install surge controller (such as RC filter, resistor or freewheeling diode).

10.3.2 Wiring

1. Wiring in Control Cabinet

- 1) Inside control cabinet, signal cable and power cable should be placed in different area, with minimum distance of 20cm. DO NOT put two kinds of cables in parallel or tied together. If must cross two cable, they must remain strictly perpendicular with each other.
- 2) The input (power) and output (motor) of power cable cannot cross or tied together, especial when the cable is connected with input/output filter.
- 3) Inductive devices inside control cabinet (such as contactor, relay, brake unit), their coil need to install surge controller (such as RC filter, resistor or freewheeling diode).
- 4) Both signal and power cable should have net shield/armor with high frequency low impedance.
- 5) Cable shield should ground with large area.

2. Wiring at site

- 1) Power cable must have 5 wires, including U/V/W, one for ground and one for neutral, DO NOT mix use.
- 2) At site, signal cable and power cable should be placed in different area, with minimum distance of 20cm. DO NOT put two kinds of cables in parallel or tied together. If must cross two cable, they must remain strictly perpendicular with each other.
- 3) Signal cables must have net shield, the shield should be grounded at controller side with large ground area.
- 4) Power cable and motor cable should use power cable with armor cover or shield. Power cable should use individual metal cable tunnel with reliable grounding point at controller side. Motor cable should follow the same grounding principle and its shield should also connect to motor cover at motor side.

10.3.3 Ground Connection

Controller must be connected to the ground at work, grounding helps to solve the EMC issue, at the same time it brings safety to the device and people. Ground correctly is the most important (and most reliable/economic) solution to EMC issue, and it should be considered first. Notes for ground connections are shown below:

1. Control cabinet must have GND public terminal (copper plate).
2. The case of control cabinet must be connected to the ground public terminal. This connection can be made between cabin door and ground public terminal copper plate (width >15mm).
3. All ground connection must remain complete on both sides, cannot connect two grounding wire in the middle.
4. The ground of integrated controller must be connected to the ground public terminal.
5. Power cable, motor cable and brake resistor cable (if necessary) shield/armor must be connected to the ground public terminal.
6. The distance from cable shield to ground public terminal should be <50mm.
7. Ground connection wire should have low impedance (large cross sectional area and short in length).
8. Power cable should have 5 cores (U,V,W, neutral & ground) with shield, motor cable should have 4 core (U, V, W, ground) with shield. For motor cable ground wire, one terminal should be grounded at controller side, another terminal should be grounded at motor side.

10.3.4 Leakage Current

Leakage current happens between wire and to ground, it depends on wire capacitance and controller carrier frequency. Leakage between wire is related to wire capacitance between controller input (power cable) and output (motor cable), controller carrier frequency, motor/power cable cross sectional area and length, while leakage current to ground is located at ground public terminal, it will get into the system and (in some case) affect other electrical devices through ground connection.

Countermeasure for leakage current:

1. Reduce controller carrier frequency;
2. Keep the power and motor cable as short as possible;
3. Power and motor cable cross sectional area should not be too big;
4. For long motor cable (>50m), controller output should have filter or reactor;
5. Should equip inverter use leakage current circuit break.

10.3.5 Power Line Filter

The power line filter is two-way low pass filter which only permits flowing of DC current or 50HZ operating frequency AC current but stops flowing of higher frequency electromagnetic interference current. Therefore, it can not only inhibit the equipment's electromagnetic interferences flowing into power line but also inhibit the noises in power line flowing into equipment.

Precautions for Installation of Power Line Filter:

1. In the cabinet, the filter should be located close to the power line inlet as practicably as possible. Additionally, the filter supply line section left in the control cabinet must be as short as possible.
2. The power line filter should be grounded with reliable connection, and the grounding area should be as large as possible.
3. The power line filter metal case should be securely attached to the control cabinet plate, with contacting area as large as possible and ensure good electrical connection.
4. Please use power line filter that matches the system, such as inverter use power line RFI filter.

10.4. EMC standard satisfied by Integrated Controller

When install integrated controller and EMI filter, if the installation procedures are following EMC installation guide, then the system could meet the standards below:

EN61000-6-4: EMC test in Industrial Environment1800-3。

EN61800-3: EMC Standard (2nd Level Environment)

EN61000-6-3: EMC Standard (Residential Environment)

EN61000-6-4: EMC Standard (Industrial Environment)

Chapter 11: Accessories

11.1. Elevator Car Communication Board (BL2000-CZB)

Car communication board BL2000-CZB shape and dimension are shown below in fig. 11.1.

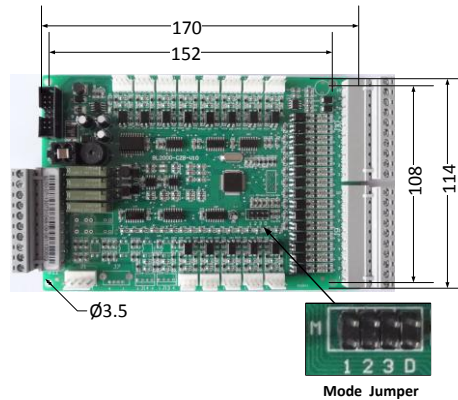


FIGURE 11.1BL2000-CZB DIMENSION

11.1.1 Function

1. Car call input and registers

COP BL2000-CZB has Opt-coupler interface with several input/output, and it can support up to 8 floors car call and register. By connecting extension board BL2000-CEB (support for another 8 floors), it can support up to 64 floors. The wiring of car call and register is shown figure 11.3.

2. Car floor number and running direction display

Car floor number and running direction display unit is same with hall station display unit. Its interface is on figure 11.4. In case of landing call and display unit are used as car display, terminal J1 connect with COP J1, J2 not connect with J3, floor address should be set as 0 (set method can refer to landing call and display unit).

3. Mode Jumper

As shown in fig.11.1, when there is no jumper, COP is in main COP mode; when jumper 1 short circuit, COP is in front door auxiliary COP mode; When only jumper 2 short circuit, COP is in rear door auxiliary COP mode.

4. Simplified wiring scheme

Refer to Appendix 6: BL6-U Series Elevator Integrated Controller Intensive Serial Communication Resolution.

11.1.2 Terminal Specification

BL2000-CEB-V7 Board Terminal Specification:

1. J1 Single Pin Bar 3.96/4P
2. J2~J6, JN1~JN8 Single Pin Bar 2.54/4P
3. J7 Single Pin Bar 2.54/5P
4. J8 Double hole bar 2.54/10P
5. J9~J11 Multiple bend wire socket DK5EHDRC-10P; Rated voltage:300V, Rated current:15A, Voltage limit:4KV, Leg Distance:5mm
6. J12 Double Pin Bar 2.54/14P

11.1.3 Interface Circuit

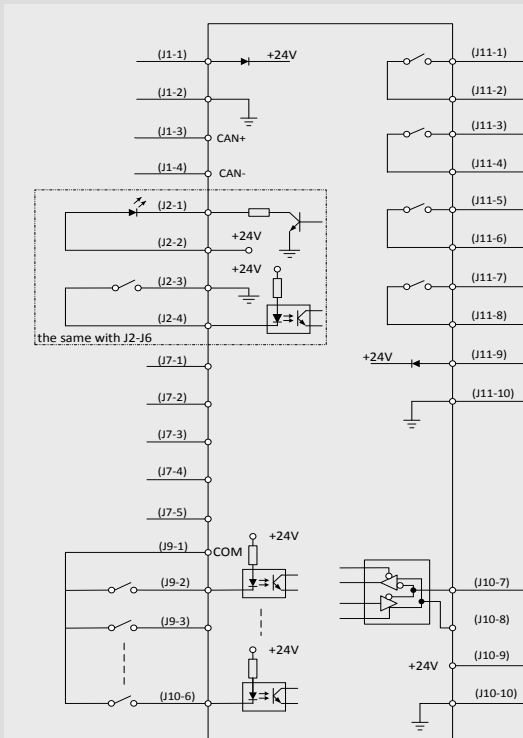


FIGURE 11.2 BL2000-CZB INTERFACE CIRCUIT

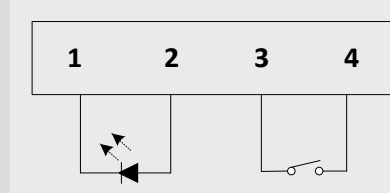


FIGURE 11.3 CAR CALL BUTTON CONNECTION

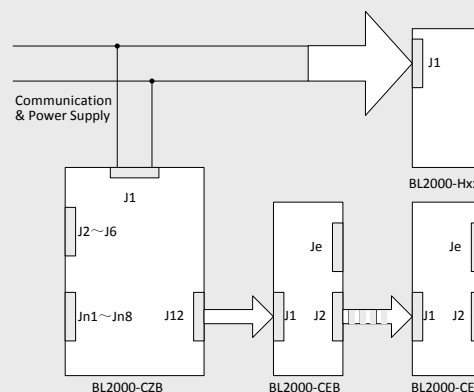


FIGURE 11.4 CZB & CEB CONNECTION

11.1.4 Terminal Definition & Specification

CHART11.1 CAR COMMUNICATION BOARD BL2000-CZB TERMINAL DEFINITION/SPECIFICATION LIST

Name	Port	Position	Definition	Usage	Terminal Specification		
					Interface	Rated Load	Max Speed
J1		J1-1	24V Input	Power&Commu nicationInterfac e			
		J1-2	24V Input GND				
		J1-3	CAN BUS H				
		J1-4	CAN BUS L				
J2		J2-1	Door Open 1 Answer	Door open 1 Button & Answer	OC	Current-limiting resistance560Ω	
		J2-2	24V Output				
		J2-3	24V Output GND		Pho-coupler	8mA	
		J2-4	Door Open 1 Input				
J3		J3-1	Door Close 1 Answer	Door close 1 Button & Answer	OC	Current-limiting resistance 560Ω	
		J3-2	24V Output				
		J3-3	24V Output GND		Pho-Coupler	8mA	
		J3-4	Door Close 1 Input				

CHART 11.1 CAR COMMUNICATION BOARD BL2000-CZB TERMINAL DEFINITION/SPECIFICATION LIST(CONT'D)

Name	Port	Position	Definition	Usage	Terminal Specification		
					Interface	Rated Load	Max Speed
J4		J4-1	Door Open 2 Answer	Door open 2 button & Answer (Rear Door)	Open Collector	Current limiter 560Ω	
		J4-2	24V Output				
		J4-3	24V Output GND		Pho-coupler	8mA	
		J4-4	Door Open 2 Input				
J5		J5-1	Door Close 2 Answer	Door close 2 button & Answer (Rear Door)	Open Collector	Current limiter 560Ω	
		J5-2	24V Output				
		J5-3	24V Output GND		Pho-coupler	8mA	
		J5-4	Door Close 2 Input				
J6		J6-1	Door Open Delay Button	Door open delay Button & Answer (Optional)	Open Collector	Current Limiter 560Ω	
		J6-2	24V Output				
		J6-3	24V Output GND		Pho-coupler	8mA	
		J6-4	Door Open Delay Input				
J7		J7-1	RS232Receive	RS232Commu nication	RS232 Level		
		J7-2	RS232Send				
		J7-3	Signal GND				
		J7-4	RS232 Output Control				
		J7-5	RS232 Input Control				
J8	Programming Interface						
J9	CMM	J9-1	Common Terminal	Input	Pho-Coupler	8mA	500Hz
	KMV1	J9-2	Door Open Limit				
	GMV1	J9-3	Door Close Limit				
	KAB1	J9-4	Safety Plate 1				
	CZ	J9-5	Overload				
	MZ	J9-6	Full Load				
	KAB2	J9-7	Safety Plate 2				
	QZ	J9-8	Light Load				
	KZ	J9-9	Empty Load				
	SZH	J9-10	Attendant				
J10	SZY	J10-1	Special Use	Input	Pho-Coupler	8mA	500Hz
	SZS	J10-2	Drive by-pass				
	ZHS	J10-3	Attendant Up				
	ZHX	J10-4	Attendant Down				
	KMV2	J10-5	Door Open Limit 2				
	GMV2	J10-6	Door Close Limit 2				
	RT-	J10-7	Serial Load detection RT-	SJT-150 Serial Input	RS485		
	RT+	J10-8	Serial Load detection RT+				
	24V	J10-9	+24V				
	CMM	J10-10	0V				

CHART11.1 CAR COMMUNICATION BOARD BL2000-CZB TERMINAL DEFINITION/SPECIFICATION LIST (CONT'D)

Name	Port	Position	Definition	Usage	Terminal Specification		
					Interface	Rated Load	Max Speed
J11	BLV-	J11-1	Arrival Gong 1A	Output	Relay	DC5A24V AC5A250V	20cpm On/Off time ≤ 5/10mS
	BLV+	J11-2	Arrival Gong 1B				
	N1	J11-3	Light Control A				
	ZM	J11-4	Light Control B				
	GMO	J11-5	Serial Door Close Output; Spare 1A				
	MCOM	J11-6	Serial Door Close/ Open Common Terminal ; Spare 1B				
	CZD	J11-7	Overload Indicator A				
	CMM	J11-8	Overload Indicator B				
	KM10	J11-9	Serial Door Open 1 Output				
	KM20	J11-10	Serial Door Open 2 Output				
J12	24V	J12-1,2	Power +24V Input	Car call Extension			
	5V	J12-3,4	Power +5V Input				
	0V	J12-5,6	Power 0V Input				
		J12-7~ 12	Data Signal				
		J12-13, 14	Spare				
JN1 ~ JN8		JNn-1	Answer Output	1~8 floor car call/answer output	Open Collector	DC24V20mA Current Limiter 560Ω	
	24V	JNn-2	+24V				
	0V	JNn-3	GND				
		JNn-4	Car Call Input		Pho-Coupler	DC24V6mA	50Hz

11.2. Elevator Car Call Extension Board BL2000-CEB

Shape and flat setting size of Car Call Extend Board BL2000-CZB is shown below in fig. 11.5.



Prot J12 on BL2000 board is the socket for extend the car call and register. Extension BL2000-CEB can be connected to this port, and it can also be connected to the next extension board. Each BL2000-CEB can support 8 floors car call and register. The max extension is 7 units.

BL2000-CEB-V1/V2 Terminal Specification

-

For car extension board interface circuit please see fig.11.6 on the right.

Terminal definition and specification for Car extension board BL2000-CEB can be seen below in Chart 11.2.

133

Name	Port	Position	Definition	Usage	Terminal Specification		
					Interface	Rated Load	Max Speed
J1	24V	J1-1,J1-2	Power +24V Input	Connect to previous board			
	5V	J1-3,J1-4	Power +5V Input				
	0V	J1-5,J1-6	Power 0V Input				
		J1-7~J1-12	Data Signal				
		J1-13,J1-14	Empty				
J2			Same as J1	Connect to next board			
JEN		JEn-1	Answer Output	8i+1~8i+8 floor car call input / answer interface	OC	DC24V20mA Current Limiter 560Ω	
	24V	JEn-2	+24V				
	24V	JEn-3	+24V				
		JEn-4	Car Call Register		Pho-Coupler	DC24V6mA	50Hz
Note	irefers to the position of extension board						

11.3. Elevator Landing Call & Display Unit BL2000-Hxx

BL2000-series elevator landing call & display unit can be seen below in fig. 11.7

BL2000-HAH-N1.1BL2000-HAH-B9

BL2000-HEH-M-K9.1BL2000-HEH-L2.3

BL2000-HAH-M2.1



BL2000-HBH-C9

BL2000-HBH-N

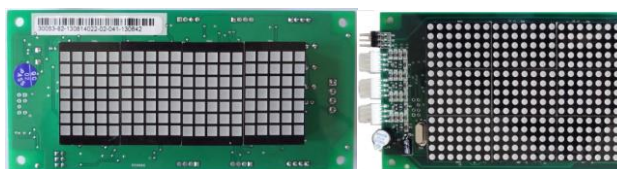


FIGURE 11.7 BL2000-SERIES LANDING C

11.3.1 Function

Landing call and display board BL2000-Hxx-xn have various type. It has horizontal and vertical style. According to block light mode,

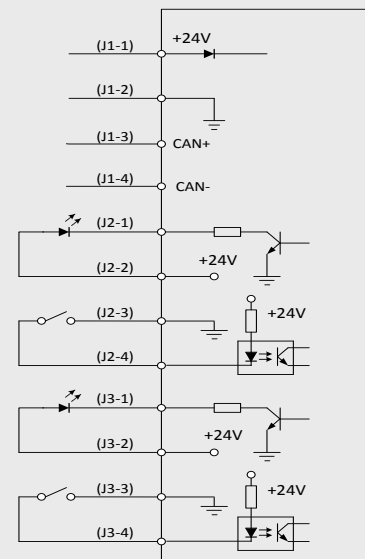


FIGURE 11.8 BL2000-Hxx INTERFACE CIRCUIT

it is displayed by 7-segment or dot matrix, and according to the block dot size, shape, and brightness, dot matrix also can be divided to large dot matrix, small dot matrix, square dot matrix, highlight, super highlight, ultra highlight, and so on.

11.3.2 Terminal Specification

BL2000-Hxx Display board terminal specification:

1. J1 Single Pin Bar 3.96/4P
2. J2,J3 Single Pin Bar 2.54/4P
3. J4 Double hole bar 2.54/10P
4. S1,CZ,JC Jumper 2P

11.3.3 Interface Circuit

Display board interface circuit is shown in figure 11.8 on the right.

11.3.4 Terminal Definition & Specification

Landing call and display unit BL2000-Hxx terminal definition and specification is shown below in chart 11.3.

CHART 11.3 LANDING CALL & DISPLAY UNIT BL2000-HXX TERMINAL DEFINITION/SPECIFICATION LIST

Name	Location	Definition	Usage	Terminal Specification		
				Interface	Rated Load	Max Speed
J1 (PW)	J1-1	24V Input	Power & Communication		Dot:100mA 7-seg: 160mA	
	J1-2	24V GND Input				
	J1-3	CAN BUS H				
	J1-4	CAN BUS L				
J2 (SH)	J2-1	Up Call Answer	Landing Call up button/ answer & voltage output	OC	Current Limiter 120Ω	
	J2-2	24V Output				
	J2-3	24V GND Output		Pho-Coupler	8mA	50Hz
	J2-4	Up Call Input				
J3 (XH)	J3-1	Down Call Answer	Landing Call down button/ answer & voltage output	OC	Current Limiter 120Ω	
	J3-2	24V Output				
	J3-3	24V GND Output		Pho-Coupler	DC24V8mA	50Hz
	J3-4	Down Call Input				
J4	Programming Interface					
S1	Serial communication terminal resistor jumper (On board)					
AN	Address Setting key (On board)					

11.3.5 Setting the Landing call/Display Address

Hall call station use serial communication, so each unit can only have one communication address. Hall calling and display unit setting address by observing signals and “AN” button on the call board. If set the address as 0, hall calling will set address by absolute floor number (1-64) with bottom floor as 1, the second to bottom floor as 2, and so on.

The method of setting hall calling and display board address is shown below:

1. Power on, presses button AN, hall calling/display unit will show the set address. Hold button AN for 5 seconds, then hall calling/display unit will enter setting mode.
2. At setting mode, every time press the button AN, address will add 1, up to 64, then it will start from beginning again.
3. After setting, release the AN button for 2s, the address number will flash and save.
4. When address is set to 1, jumper S1 on the board need to be shorted. It means CAN bus on the board has been connected with terminal resistor.



Only bottom floor (address number 1) need to connect with terminal resistance. Address setting varies with different boardtypes, please follow the related document on address setting procedures.

11.3.6 Landing Call/Display Unit Shape and Dimension

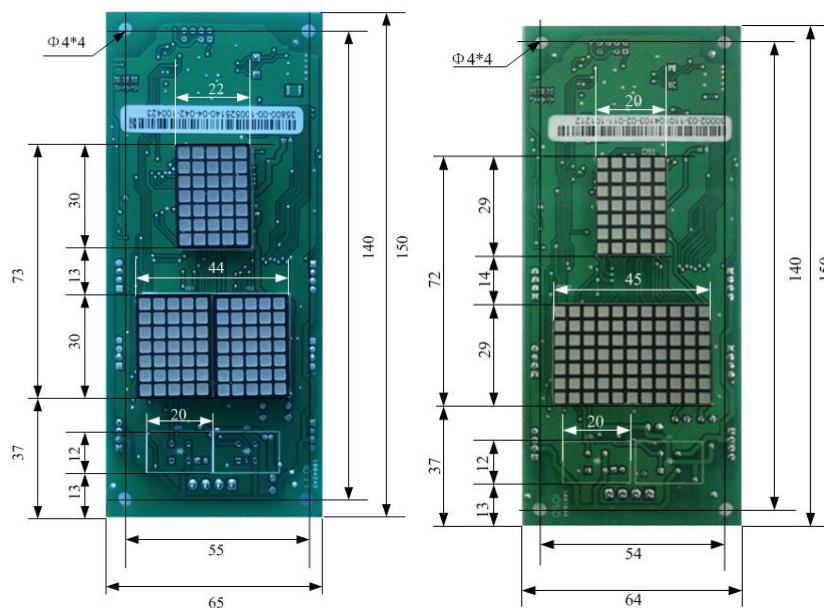


FIGURE 11.9 BL2000-HAH-A4.0 FIGURE 11.10 BL2000-HAH-M2.1

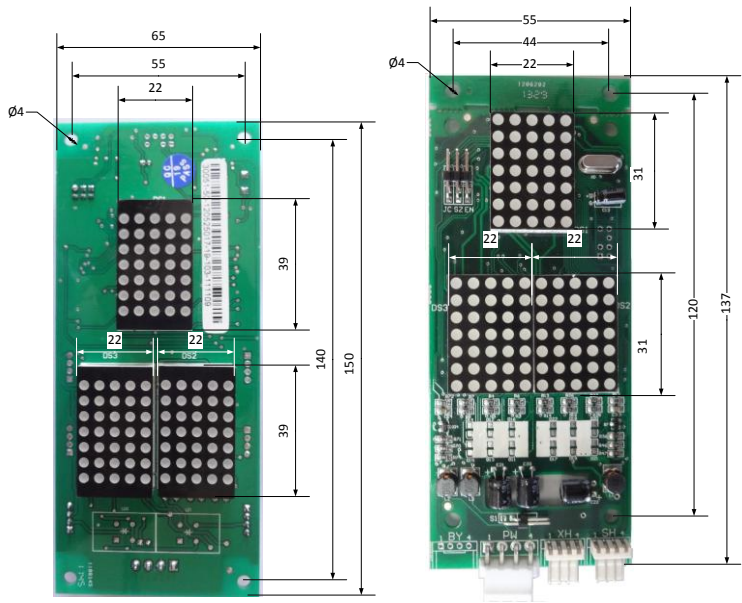


FIGURE 11.11 BL2000-HAH-B9FIGURE 11.12 BL2000-HAH-N1.1

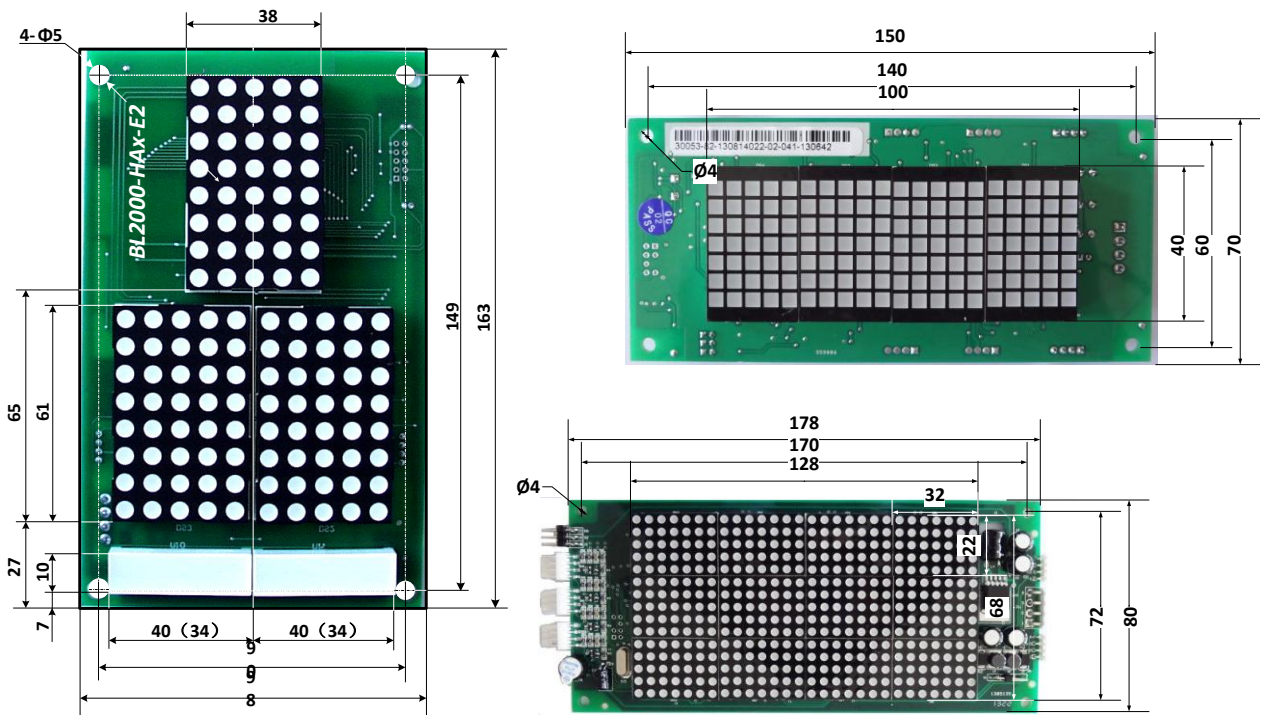


FIGURE 11.13 BL2000-HAR-E4.1FIGURE 11.14 BL2000-HBH-C9, N2

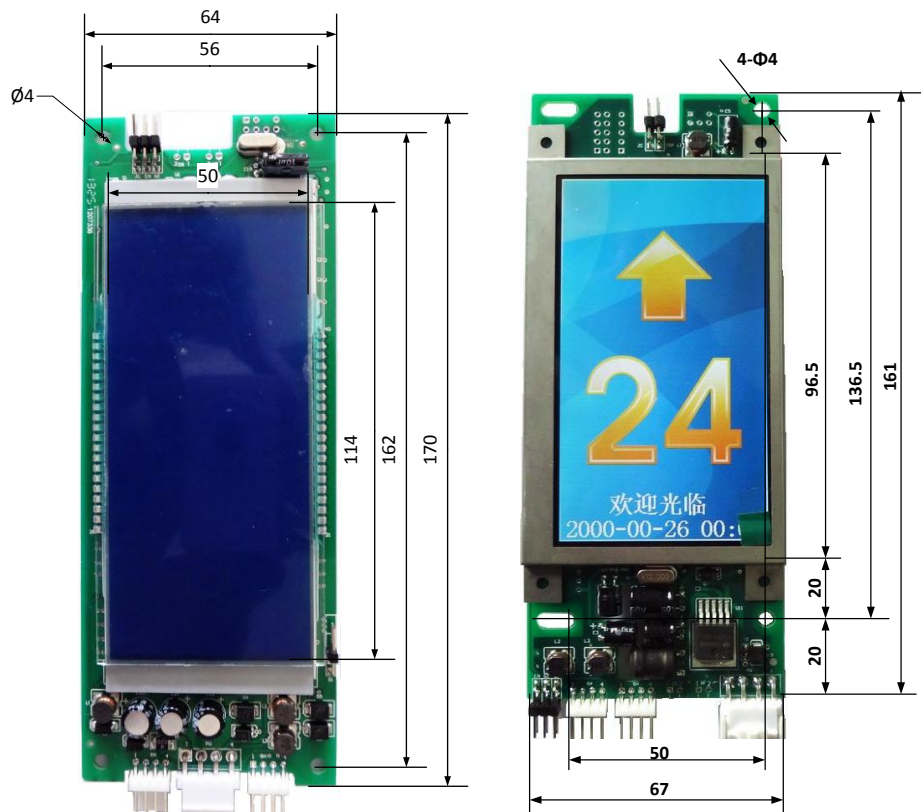


FIGURE 11.15 BL2000-HEH-K9.1FIGURE 11.16 BL2000-HEH-L2.3

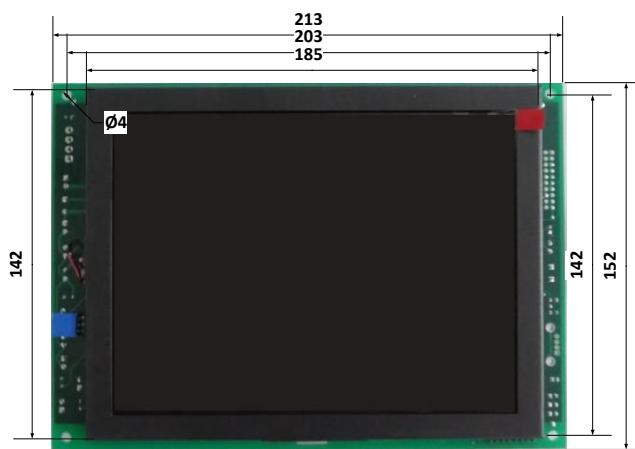


FIGURE 11.17 BL2000-HEH-M1

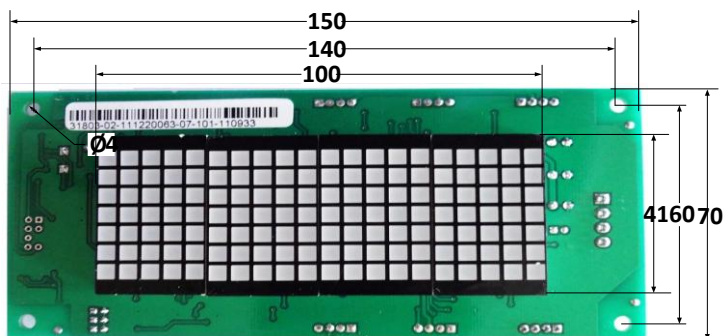


FIGURE 11.18FJ-HPI-V9

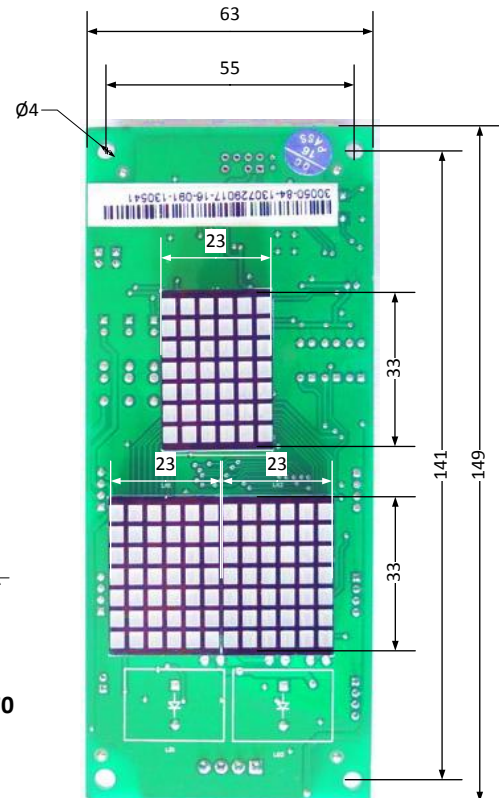


FIGURE 11.19FJ-HTB-V9

11.3.7 Landing call/Display Unit Specification

Landing Call and display unit specification is shown below in Chart 11.4

CHART11.4 LANDING CALL/DISPLAY UNIT BL2000-Hxx SPECIFICATION

Model	Display Specification						
	Number	Layout	Shape	Type	Color	L×W×H mm	Lightness
BL2000-HAH-B9	1257AH	Vertical	Dot (small)	Dot Matrix		30×22×10	Light
BL2000-HAH-M2.1	1012A	Vertical	Square Dot (small)	Dot Matrix		30×22×8	Light
BL2000-HAH-N1.1		Vertical	Dot (small)	Dot Matrix		30×22×8	Ultra thin Light
BL2000-HBH-C9	1257AH	Horizontal	Square Dot	Dot Matrix		42×25×7	Light
BL2000-HBH-N2	1057AS	Horizontal	Dot	Dot Matrix		61×38×8	Light
BL2000-HEH-K9.1	1057ASR	Vertical	7-segment			114×50×8	White betters on blue
BL2000-HEH-L2.3		Vertical	LCD			96.5×52.8×8	4.3-inch color LCD
BL2000-HEH-M1		Horizontal	LCD			127×101×8	5.6-inch color LCD
BL2000-MBQ-V3		Horizontal	LCD			185×142×10	9-inch color LCD
FJ-HTB-V9		Vertical	Square Dot	Dot Matrix		30×22×10	Light
FJ-HPI-V9		Horizontal	Square Dot	Dot Matrix		42×25×7	Light

Note: The light plane tube can be welded on customer requiring, the above pictures are only for reference.

11.4. Elevator Group Control Landing Call board BL2000-HQK

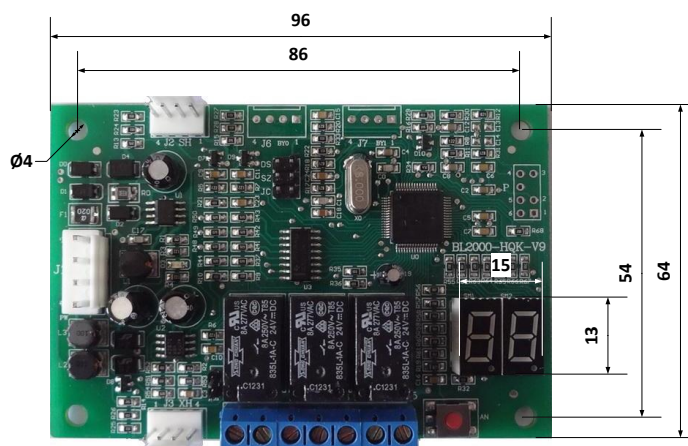


FIGURE 11.20 BL2000-HQK SHAPE & DIMENSION

11.4.1 Function

BL2000-HQK is designed to be specially used as landing call board for group control, it has no display.

11.4.2 Terminal Specification

BL2000-HQK-V1/V2 Terminal Specification

1. J1 Single Pin Bar 3.96/4P
2. SH,XH Single Pin Bar 2.54/4P
3. J4 Double Pin Bar 2.54/10P
4. J5 Connecting Terminal DG301-7P
5. S1 Jumper 2P

11.4.3 Interface Circuit

The interface circuit as shown in Fig.11.21。

11.4.4 Terminal Definition & Specification

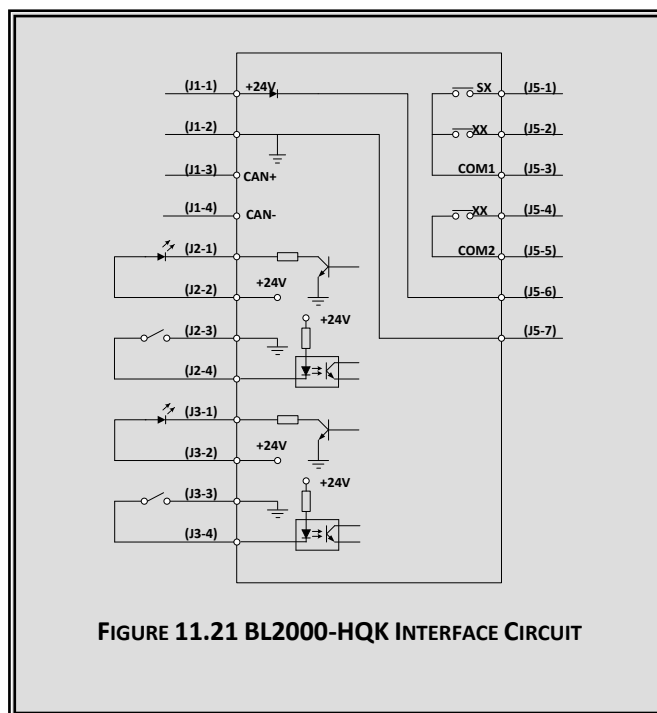


FIGURE 11.21 BL2000-HQK INTERFACE CIRCUIT

CHART11.5 GROUP CONTROL LANDING CALL BOARD BL2000-HQK TERMINAL DEFINITION & SPECIFICATION LIST

Name	Location	Definition	Usage	Terminal Specification		
				Interface	Rated Load	Max Speed
J1	J1-1	24V Power Input	Power & Communication			
	J1-2	24V Power GND				
	J1-3	CAN BUS H				
	J1-4	CAN BUS L				
J2	J2-1	Up Call Answer	Up call button input/Answer & power output	OC	Current Limiting Resistor 120Ω	
	J2-2	24V Output				
	J2-3	24V GND Output		Pho-coupler	8mA	50Hz
	J2-4	Up Call Input				
J3	J3-1	Down Call Answer	Down call button input/Answer & power output	OC	Current Limiting Resistor 120Ω	
	J3-2	24V Output				
	J3-3	24V GND Output		Pho-coupler	DC24V8mA	50Hz
	J3-4	Down Call Input				
J4	Programming Interface					
J5	J5-1	Up Indicator Output	Output	Relay	DC5A24V AC5A250V	20cpm On/Off Time≤ 5/10ms
	J5-2	Down Indicator Output				
	J5-3	Up/Down Indicator Output Public				
	J5-4	Arrival Gong Output				
	J5-5	Arrival Gong Output COM				
	J5-6	24V Output				
	J5-7	24V GND				
S1	Serial Communication Terminal Resistor Jumper (On the board)					
AN	Address Setting Button (On the board)					

11.5. Elevator Group Control Board BL2000-QKB-V1

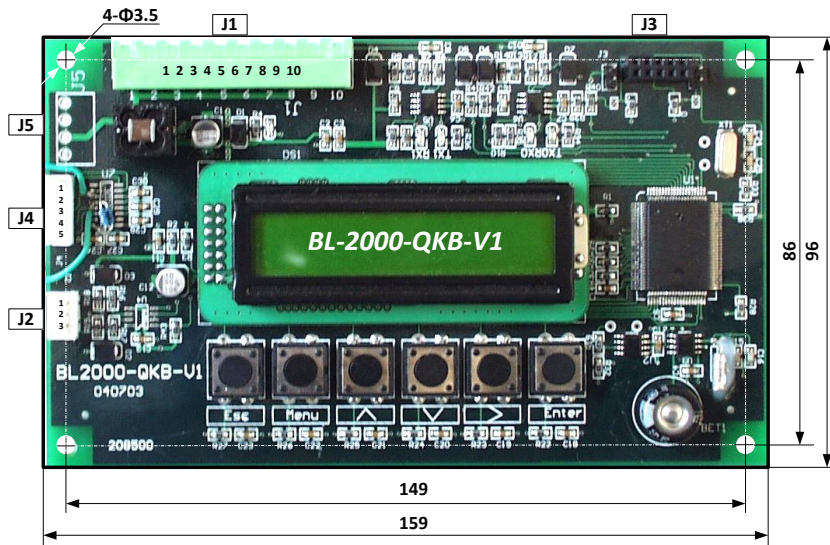


FIGURE 11.22 GROUP CONTROL BOARD BL2000-QKB-V1 SHAPE & DIMENSION

11.5.1 Function

1. Group control system is combined with one group control board "BL2000-QKB-V1" and several integrated controllers in every elevator in the group. Group controller collect hall call, car call and status information of every elevator through CAN BUS, process them, and deliver distribution orders to every elevator. In this way the group control for up to 8 elevators & 64 floors is achieved.

2. Four Running Modes

- Up peak mode: At set time, all elevators answer landing call with up call from base floor has highest priority.
- Down peak mode: At set time, one elevator answer up call with priority; other elevators answer down call (one elevator on each area) with priority to minimize the down call reaction time.
- Balance mode: Landing call distribution is optimized according to shortest time response principle.
- Spare mode: 3 minutes at the balance mode without landing/car call, elevator will wait for the order from the first floor on each area so that response to hall car as soon as possible.

When elevator is at status of fault, attendant, inspection, parking, fire and special use mode, it will be excluded from group control mode. Please follow the relevant chapter in this user guide for individual elevator operation in group control mode.

11.5.2 Application

1. Group Control from 3 to 8 elevators;
2. Elevator speed 0.5-4m/s;
3. Can be used up to 64 floors;
4. Applies to passenger and residential elevator.

11.5.3 Terminal Specification

1. J1 Multiple Wire Socket DK5EHDRC-10P; Rated Voltage: 300V, Rated Current: 15A, Max Voltage: 4KV, Leg: 5mm.
2. J2 Connector 2.54/3P
3. J3 Twin housing 2.54/10P
4. J4 Connector 2.54/5P
5. J5 Single shield plug-in 3.96/4P

11.5.4 Interface Circuit

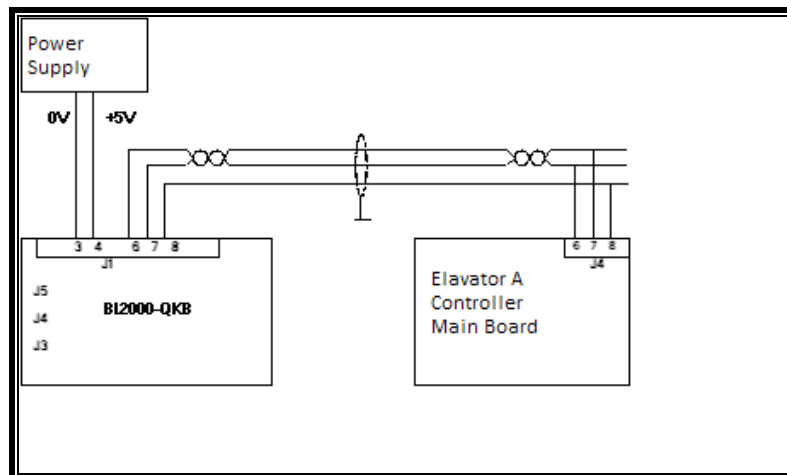


FIGURE 11.23 GROUP CONTROL BOARD BL2000-QKB-V1 INTERFACE CIRCUIT

11.5.5 Terminal Definition & Specification

CHART11.6 GROUP CONTROL BOARD BL2000-QKB-V1 TERMINAL DEFINITION & SPECIFICATION LIST

Name	Terminal	Location	Definition	Usage	Technical Specification		
					Interface Type	Rated Load	Max Speed
J1	GND3	J1-1	0V	Power & Communication			
		J1-2					
	GND3	J1-3	0V				
	5V IN	J1-4	5V Input			200mA	
		J1-5					
	TXA+	J1-6	Group Control				
	TXA-	J1-7	Communication				
	GND3	J1-8	0V				
		J1-9	Spare CANComm.TXA+				
		J1-10	Spare CANComm.TXA-				
J2	DA+	J2-1		RS485			
	DA-	J2-2					
	GND	J2-3					
J3	Programming Interface						
J4	TX	J4-1	Communication Send	RS232			
	RX	J4-2	Communication Receive				
	IN	J4-3	Control Input				

CHART 11.6 GROUP CONTROL BOARD BL2000-QKB-V1 TERMINAL DEFINITION & SPECIFICATION LIST(CONT'D)

Name	Terminal	Location	Definition	Usage	Technical Specification		
					Interface Type	Rated Load	Max Speed
J4	OUT	J4-4	Control Output				
J5	TXA+	J5-1	Group Communication				
	TXA-	J5-2					
	GND3	J5-3	0V				
		J5-4					

Appendix 1: Hoistway Switches Information (Partly)

F1.1 Leveling Switches & Flag Installation

For elevator leveling control, two leveling switches (up/down leveling switches) and some door zone flags (one in each floor) are required. Two leveling switches are installed on top of car, door zone flag is installed in hoistway, their dimensions and positions are illustrated in figure F1.1. Leveling switches can be optical or magnetic.

Door zone flag adjustment:

1. Elevator stop at each floor, measure car and hall sills difference ΔS on each level at elevator park (car sills higher is position, lower is negative)
2. Adjust door zone flag on each floor, if $\Delta S > 0$, flag on this floor should move down ΔS ; move flag up ΔS if $\Delta S < 0$.
3. Elevator need to redo the hoistway parameter learning after door zone flag adjustment.
4. Check elevator leveling on each floor, redo part 1-3 if necessary.

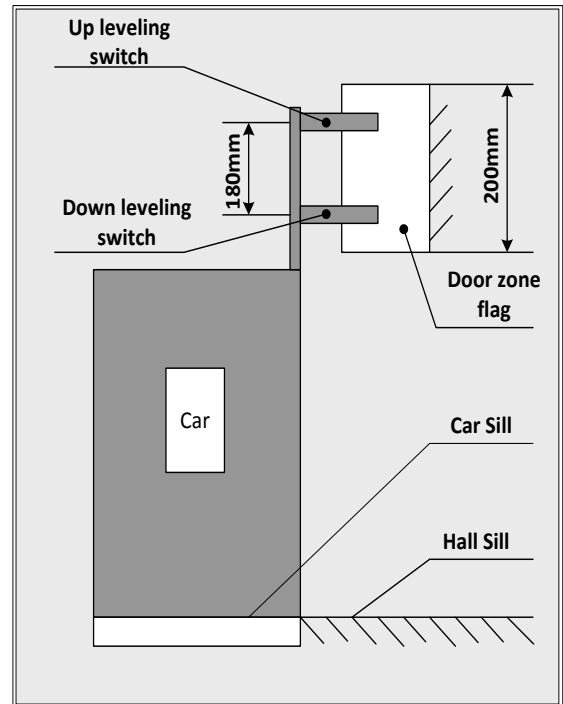


FIGURE F1.1 DOOR ZONE FLAG & LEVELING SWITCH

POSITION

F1.2 Up/Down Terminal Switches Installation

1. Terminal switches are recommended to use non-contact type, such as magnetic switch.
2. Up/Down terminal switches are installed in hoistway guide rail; terminal flag is installed on top of car. Their positions are shown below in figure F1.2 & F1.3.
3. For elevator speed $\leq 1.75\text{m/s}$, only one up and one down terminal switch and one terminal flag is required. For elevator speed $\geq 2.0\text{m/s}$, more terminal switches should be installed for safety purpose. Please see below table F1.1 for up/down terminal switches position with different elevator speed.

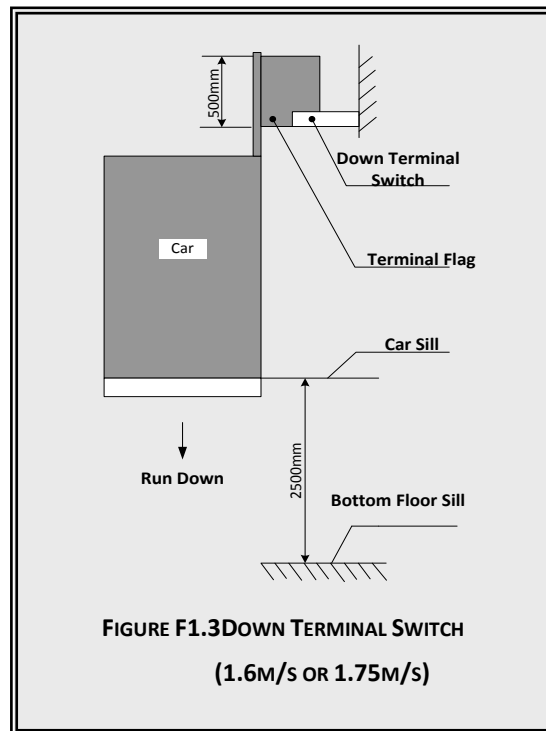
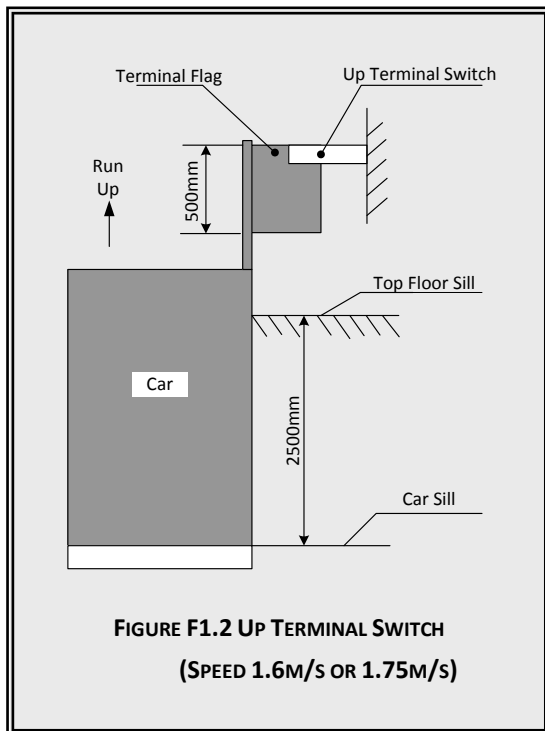


CHART F1.1 Up/Down Terminal Switches with Different Elevator Speed

Speed Terminal	Terminal Switch Location					
	0.5m/s	1.0m/s	1.6m/s 1.75m/s	2.0m/s	2.5m/s	4.0m/s
Up/Down Terminal Switch 1	1m	1.3m	2.5m	2.5m	2.5m	2.5m
Up/Down Terminal Switch 2				4m	6.25m(4m)	8m
Up/Down Terminal Switch 3						

F1.3 Confirm the Terminal Switches Location


Up/down terminal switches signal is used for elevator force change speed and floor position calibration, they should be installed 2.5m from car top/bottom to top/bottom floor leveling position. (For elevator speed at 1.6m/s or 1.75m/s). To confirm such position:

1. Make sure elevator in inspection mode;
2. Set inspection speed to 0.3m/s , run up/down elevator;
3. Stop elevator when touching up/down terminal switches;
4. At this time the car sills and hall sills should have a distance of 2.5 ± 0.1 m.

Appendix 2: Re-Leveling & Door Open in Advance

F2.1 Safety Control Board (SJT-ZPC-V2) Drawings

Figure F2.1 Safety Control Board (SJT-ZPC-V2) Drawings

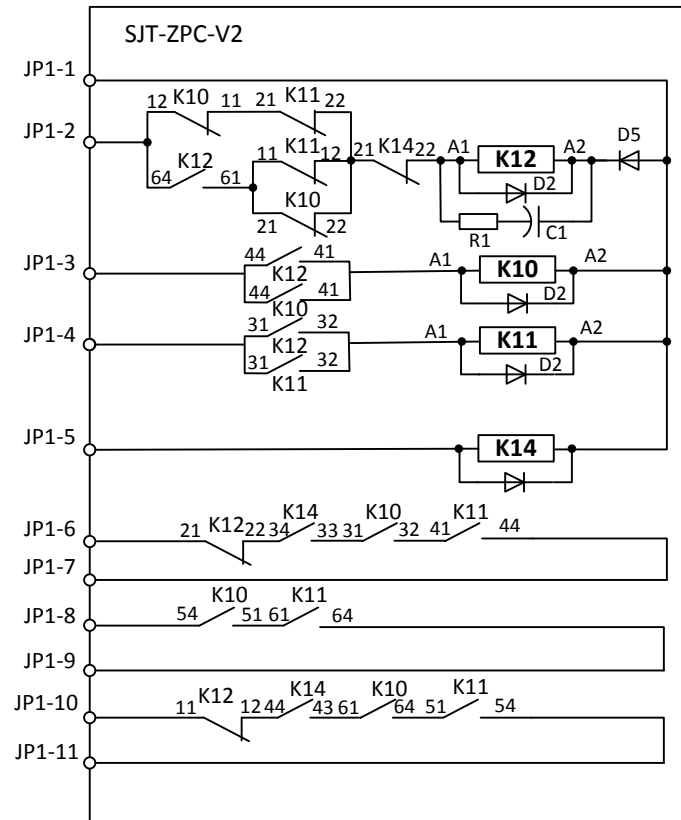


F2.2 Safety Control Board Terminal Definition

CHART F2.1 SAFETY CONTROL BOARD TERMINAL DEFINITION

Name	Location	Definition
JP1	JP1-1	24V+
	JP1-2	0V
	JP1-3	Re-leveling up door zone
	JP1-4	Re-leveling down door zone
	JP1-5	Control system re-leveling conditions satisfied
	JP1-6	Re-leveling conditions satisfied output
	JP1-7	Re-leveling conditions satisfied output Public terminal
	JP1-8	Re-leveling door zone output
	JP1-9	Re-leveling door zone output public terminal
	JP1-10	By-pass door inter-lock +
	JP1-11	By-pass door inter-lock-

F2.3 Re-Leveling & Door Open in Advance Wiring Diagram

Figure F2.2 Re-Leveling & Door Open in Advance Wiring Diagram

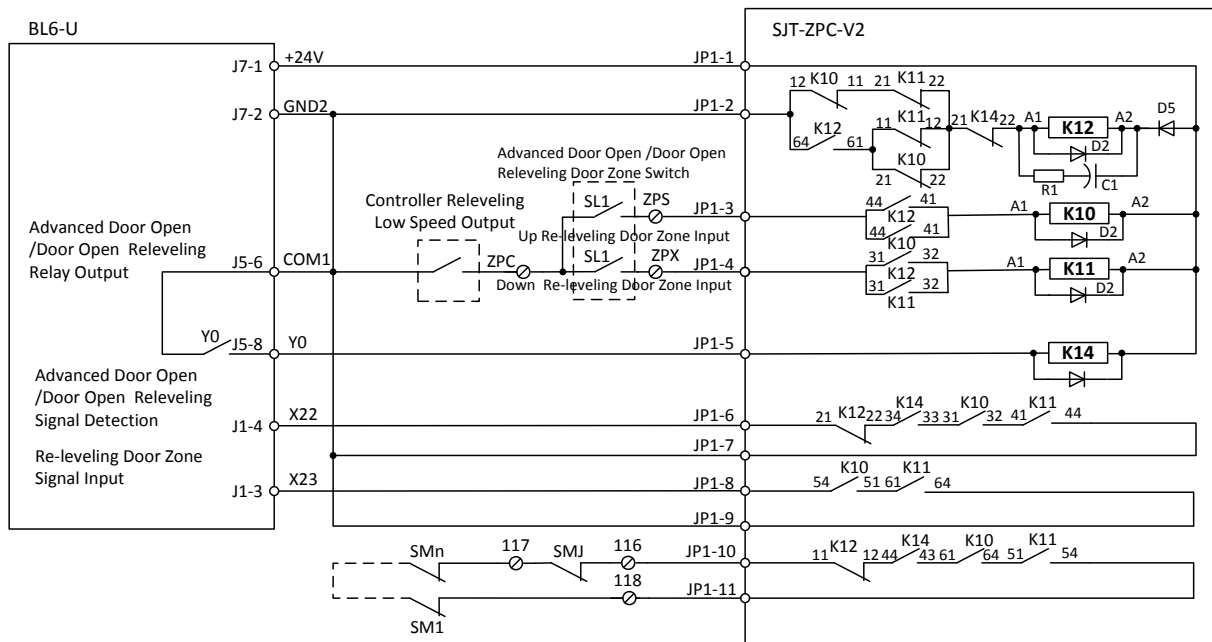

F2.4 Installation for Re-Leveling Door Zone Switches

When using the function of advance door open and re-leveling, besides the up and down leveling switches, two extra re-leveling switches should also be installed. Their installation is shown in Fig F2.3.

mq1: up leveling switch; mq2: down leveling switch; sl1: up re-leveling switch; sl2: down re-leveling switch; All leveling switches should be installed in sequence. Otherwise the direction of the re-leveling running will be reversed.

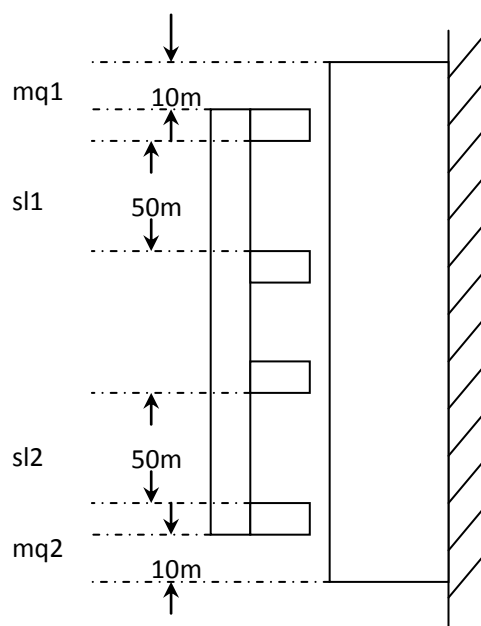


FIGURE F2.3 RE-LEVELING DOOR ZONE SWITCHES POSITION

If SI1 and SI2 are magnetic sensor, their distance must remain at least 5cm, otherwise two sensors will be affected by each other and not able to function.

F2.5 Main Control Board Parameters Setup

F2.5.1 Enable this function in Special function list

CHART F2.2 DOOR ADVANCE OPEN/RE-LEVELING FUNCTION ENABLE SETUP

Function Number	Definition
*FU4-06-19	ON: Re-levelling enable; OFF: Re-levelling disable.
*FU4-06-20	ON: Door open in advance enable; OFF: Door open in advance disable.

F2.5.2 Running Parameters Setup

There are 3 parameters related to door open in advance/re-leveling function.

1. Advance door open elevator speed (F1-07): After elevator enter door zone in normal running, the elevator speed at advance door opening.
2. Re-leveling speed limit (F1-08): In the process of advance door opening and re-leveling, if elevator speed is higher than this value, elevator will stop.
3. Re-leveling running speed (F1-09): Set the elevator running speed at re-leveling.

Appendix 3: Parameters List

CHARTF3.1 CONTROLLER PARAMETERS & FACTORY SETTING LIST

Parameter	Name	Default Value	Set Value
U0-00	Lower Limit	0	
U0-01	Upper Limit	0	
U0-02	Lower Slowdown 1	0	
U0-03	Lower Slowdown 2	0	
U0-04	Upper Slowdown 1	0	
U0-05	Upper Slowdown 2	0	
U0-06	Floor Data 1	0	
U0-07	Floor Data 2	0	
U0-08~68	Floor Data 3~63	0	
U0-69	Floor Data 64	0	
U1-00	Input Data	--	
U1-01	Input Bin	--	
U1-02	Input App	--	
U2-00	Output Data	--	
U3-00	Car Input Data	--	
U4-00	Run Times	0	
U4-01	Run Hours	0	
U4-04	CAN1SendAPP	--	
U4-05	CAN1ReceiveAPP	--	
U4-06	InterferApprais	--	
U4-07	Encoder Apprais	--	
U4-09	Loading Data		
U5-00	Ctrsoftware NO	--	
U5-01	DriveCodeVer	--	
U5-02	CpldEdition	--	
U6-00	Power	--	
U6-01	Ref Speed	--	
U6-02	Feedback Speed	--	
U6-03	Load	--	
U6-04	DC Voltage	--	
U6-05	Output current	--	
U6-06	temperature	--	
U6-07	Output torque	--	
F0-00	Total floor	6	
F0-01	Homing Floor	1	
F0-02	Fire floor	1	
F0-03	Parking floor	1	
F0-04	VIP floor	1	
F0-05	1 st floor indicator setting	1	

CHART F3.1 CONTROLLER PARAMETERS & FACTORY SETTING LIST (CONT'D)

Parameter	Name	Default Value	Set Value
F0-xx	Xxth floor indicator setting	1~63	
F0-68	64 th floor indicator setting	64	
F1-00	Car speed	1.60m/s	
F1-01	Motor speed	1450r	
F1-03	Insp speed	0.3m/s	
F1-04	Start speed	0m/s	
F1-05	Leveling Speed	0.3m/s	
F1-06	Least Speed	0.96m/s	
F1-07	Open Door Speed	0.25m/s	
F1-08	Relevelst Speed	0.30m/s	
F1-09	Relvelrun speed	0.05m/s	
F1-10	Acceleration B1	0.7m/s ²	
F1-11	Deceleration B2	0.7 m/s ²	
F1-12	S Curve P1	0.6 m/s ³	
F1-13	S Curve P2	0.6 m/s ³	
F1-14	S Curve P3	0.6 m/s ³	
F1-15	S Curve P4	0.6 m/s ³	
F1-16	Zero Speed	1RPM	
F1-17	Leveling Adj	50mm	
F1-18	Load Adj	0	
F1-21	Drive mode	0	
F1-22	Two Door Mode	0	
F1-23	Fire Mode	0	
F1-24	Parallel No.	0	
F1-25	Twins Control	0	
F1-26	Group Control	0	
F1-27	Far monitor	0	
F1-28	Auto Parking	0	
F1-29	Load Enable	0	
F1-30	Open Delay Time	0	
F1-31	Brake Feedback	0	
F1-32	Solution Ladder Password	0	
F2-00	Brake ON Time	0.5s	
F2-01	Brake OFF Time	0.5s	
F2-02	Insp Brake Time	0.5s	
F2-04	Zero Time	0.3ms	
F2-05	Open Door time	3s	
F2-06	Open Delay Time	60s	
F2-07	Homing Time	60s	
F2-08	Door Run Timse	5s	

CHART F3.1 CONTROLLER PARAMETERS & FACTORY SETTING LIST (CONT'D)

Parameter	Name	Default Value	Set Value
F2-09	Beep Delay Time	0.15s	
F2-10	Enable Delay	0s	
F2-11	Lamp Off Time	15min	
F2-12	Over Time	45s	
F2-13	SmoothStart Time	0	
F2-14	Start Time/Hour	00	
F2-15	Start Time/Minute	00	
F2-16	Stop Time/Hour	00	
F2-17	Stop Time/Minute	00	
F2-18	Start Time 1/Hour		
F2-19	Start Time 1/Minute		
F2-20	Stop Time 1/Hour		
F2-21	Stop Time 1/Minute		
F3-00	Input type	--	
F3-01	Car input type	--	
F3-02	Input select 1	19	
F3-03	Input select 2	22	
F3-04	Input select 3	23	
F3-05	Input select 4	24	
F3-06	Input select 5	25	
F3-07	Output select 1	0	
F3-08	Output select 2	11	
F3-09	Output select 3	12	
F4-00	Set Stop Floor1	0xFFFFFFFF	
F4-01	Set Stop Floor2	0xFFFFFFFF	
F4-02	TIM Stop Floor1	0x00000000	
F4-03	TIM Stop Floor2	0x00000000	
F4-04	Door Select A1	0xFFFFFFFF	
F4-05	Door Select B1	0xFFFFFFFF	
F4-06	Function Select	4	
F4-07	Function Select 2	0	
F5-00	Motor type	--	
F5-01	Poles	--	
F5-02	Rated Freq	--	
F5-03	Motor rated power	--	
F5-04	rated speed	--	
F5-05	V IN	--	
F5-06	L_phase	--	
F5-07	R_phase	--	
F5-08	Rated FLA	--	
F5-09	Non-load current	--	

CHARTF3.1 CONTROLLER PARAMETERS & FACTORY SETTING LIST (CONT'D)

Parameter	Name	Default Value	Set Value
F5-10	slip frequency	1.3HZ	
F6-00	Carrier Freq	8HZ	
F6-02	SpeedZoom	100%	
F6-03	DirSel	0	
F6-04	Kp	220	
F6-05	KI	110	
F7-00	PIMulEnable	0	
F7-01	PI1 Range	0	
F7-02	PI2 Range	0	
F7-04	PI3 Range	0	
F7-05	Kp1	300	
F7-06	Kx1	200	
F7-07	Kp2	300	
F7-08	Kx2	200	
F7-11	Kp3	300	
F7-12	Kx3	200	
F8-00	Encoder PPR	8192	
F8-02	PG Type	0	
F9-00	Max Torq Comp	0%	
F9-01	SPDSOURCESel	2	
F9-03	Spderr Set	10%	
F9-11	Load Comp Enable	0	
F9-13	Load Source Sel	0	
F9-14	FanMode	1	
F9-19	UP Comp Bias	0	
F9-20	DOWN Comp Bias	0	
F9-21	FULL Comp Pro	100%	
FA-00	StratKP	30	
FA-01	StratKI	750	
FA-08	PLKP	3600	
FA-09	PLTime	900ms	
FA-11	IntegralGain	800	
FA-12	FluxGain	125	
A0-00	Language Sel	0	
A0-01	User Password	000000	
A0-02	Factory password	--	
A0-03	Set Quick Menu	000000	
A0-04	Contrast	5	

Appendix 4: Emergency Leveling Function

BL3-U series integrated controller is designed to work with elevator emergency leveling device to offer customers with the most reliable elevator emergency rescue solutions.

F4.1 Emergency Leveling Device Model

Suitable Motor power:

SJT - YU - A: Below 7.5KW

SJT - YU - B: 7.5-15KW

SJT - YU - C: 15-22KW

Series: YU (Note: UPS Control)

F4.2 Emergency Leveling Device Specification

1. Power Supply: AC220V \pm 15%; 50HZ \pm 10%
2. Power Output: AC220V \pm 10%; 50Hz \pm 2%
3. Ambient Temperature: 0°C~40°C
4. Relative Humidity: 20~90%NO DEW
5. Leveling Precision: \pm 15mm
6. Suitable Motor Power: Type A: Below 7.5kW
Type B: 7.5~15KW
Type C: 15 ~22KW

7. Maximum Running Time: \leq 2min

8. Cabinet Dimension: SJT-YU-A/B/C: 604*247*556 (Only for Reference)

(Note: As UPS shape change from power rating, the emergency leveling device cabinet dimension is also different with power. Please contact supplier for actual cabinet dimension if needed.)

F4.3 Caution

- F4-06-22 Set to "ON", emergency power supply should be 380V
Set to "OFF", emergency power supply should be 220V

The effect of F4-06-22 parameter is that when the emergency power supply is 220V, the voltage of DC-bus will drop and cause low voltage fault; when emergency leveling input X18 is enable on integrated controller, the elevator will run in emergency leveling mode. At this time if the parameter is set "OFF", the integrated controller will by-pass such fault and continue the rescue operation.

If emergency power supply is 380V, or UPS output is 380V, please set the parameter to ON. Otherwise when X18 input signal is active, the controller cannot detect the voltage drop on main DC-bus and it cannot start the rescue operation.

Appendix 5: KFX & KDY Contactor


This function is used in the cabinet running contactor (KDY) and machine internal SC contactor (KFX) separately. To lower the cost, some customers ask to have a machine internal SC contactor separately, and not choose the contactor of our standard layout. In this case please use this function.

When machine internal SC contactor and running contactor are used separately, please set the integrated controller parameter F4-06-29(FU-29) to "ON", then the controller will automatically increase the output (Y8) and feedback input (X11) of machine internal SC contactor. When running contactor acts, machine internal SC contactor will operated too. If you use this function, and X11 of controller does not receive the feedback signal of machine internal SC contactor action, fault ER33 will be triggered to report machine internal SC contactor feedback fault.

When pressing on the running contactor, machine internal SC contactor will open after detecting the action of running contactor. This is to prevent system short-circuit at motor forced auto tuning with running contactor by-passed intentionally.

KFX (normally closed) has an action delay of 300ms (after delay it remains closed condition). This way system can make sure the running contactor close 300ms earlier, then close KFX to protect the machine. This is to prevent KFX close before running contactor (KDY) not completely open and cause machine short-circuit.

KFX, KDY wiring diagram is shown below:

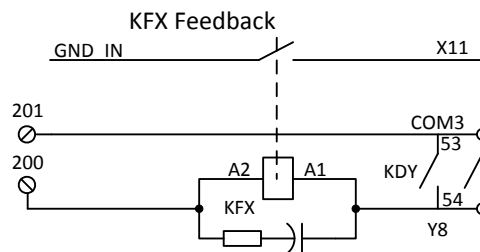

Please refer to final wiring diagram of the system for detail wiring, this drawing is only a reference for Y8 output and X11 feedback connection.

Appendix 6: BL6-U Series Elevator Integrated Controller Intensive Serial Communication Resolution

Intensive serial communication function is only valid for controller with software version 7001 and above, and its detail function description and setting method as follow:

Setting F4-07-34 as ON, top limit and bottom limit signals are not necessary to be wired in hoistway cable, and 2 cables will be saved.

Top terminal and down door zone signals are active at the same time, and up door zone is not active ,system will generate a top limit signal automatically; Bottom terminal and up door zone signals are active at the same time, and down door zone is not active ,system will generate a bottom limit signal automatically.

Note: When using this function,short circuit X5(J3-3) and GND_IN(J6-2) as a self-checking signal to avoid floor fault causing by external circuits power lose.

For controller with software version 7001 and above, and with the use of BL2000-CZB-V10, CAN bus controlling COP door open or close can be achieved. In this way, 5 cables of two door open /close signals and their common terminal will be saved.

BL2000-CZB-V10 COP serial door open/ close function setup steps:

Jumper 1	Jumper 2	Jumper 3	Jumper D	
Yes	Yes	Yes	No	Setup COP

Firstly, setup COP function by jumper 3, 2, 1 and D. COP buzzer beep two times, and COP enters to setting mode. Now, door open 1 button state indicates that serial door open/ close function has been enabled or disabled. Door open 1 button light on means serial door open/ close function has been enabled; Door open 1 button light off means serial door open/ close function has been disabled. Press door open 1 button to switch the two states. After setting up, remove the jumpers, and the setting value will flash 3 times. At the same time, buzzer beeps 3 times, then COP saves the setting, and quit the setting mode.

When serial door open/ close function has been enabled, door open 1 relay, door open 2 relay, and door close relay use the same common terminal(J11-6). J11-5 is door close relay output, J11-9 is door open 1 relay output, J11-10 is door open 2 relay output. Y2~Y5 relays on board still output door open/ close signals synchronously with COP door open/ close signals output, and can be used to observe the state of door open/ close commands on CAN bus.

Electric lock command and fire command are added into the CAN communication between integrated controller and HOP. With BL2000-HAH-M1.1, FR2000-HAH-V9, BL2000-HAH-B9 dot matrix display HOP, serial bus controlling lock and fire mode can be achieved. In this way, 2 cables of electric lock and fire signal and their common terminal in hoistway cables can be saved.

Serial fire and electric lock functions setup method: Short circuit the “DS” jumper.



For one elevator, only one HOP board can short the “DS” jumper. If lock floor and fire floor are not at the same floor, please wire to other floor HOP board from this board.

IMPORTANT

BY0-3 24V Common Terminal BY0-4 Spare input 0

BY1-3 24V Common Terminal BY1-4 Spare input 1

Default: Spare input 0 is electric lock input; Spare input 1 is fire input.

Integrated controller main board parameters should be set as follow:

F4-07-35 setting as ON, serial electric lock function is enabled.

F4-07-36 setting as ON, serial electric lock type is reversed.

F4-07-37 setting as ON, serial fire function is enabled.

F4-07-38 setting as ON, serial fire type is reversed



Serial fire signal has been enabled, main board fire signal (X12) is still available, both of the two signals can bring the elevator into fire mode.


IMPORTANT




If main board enables the serial electric lock and serial fire function, but it has no wire to HOP or jumper “DS” on HOP board is not shorted or communication is interrupted, the elevator cannot enter into electric mode or fire mode.

IMPORTANT

Appendix 7: Menu operation processes with Digital tubes & operation keys

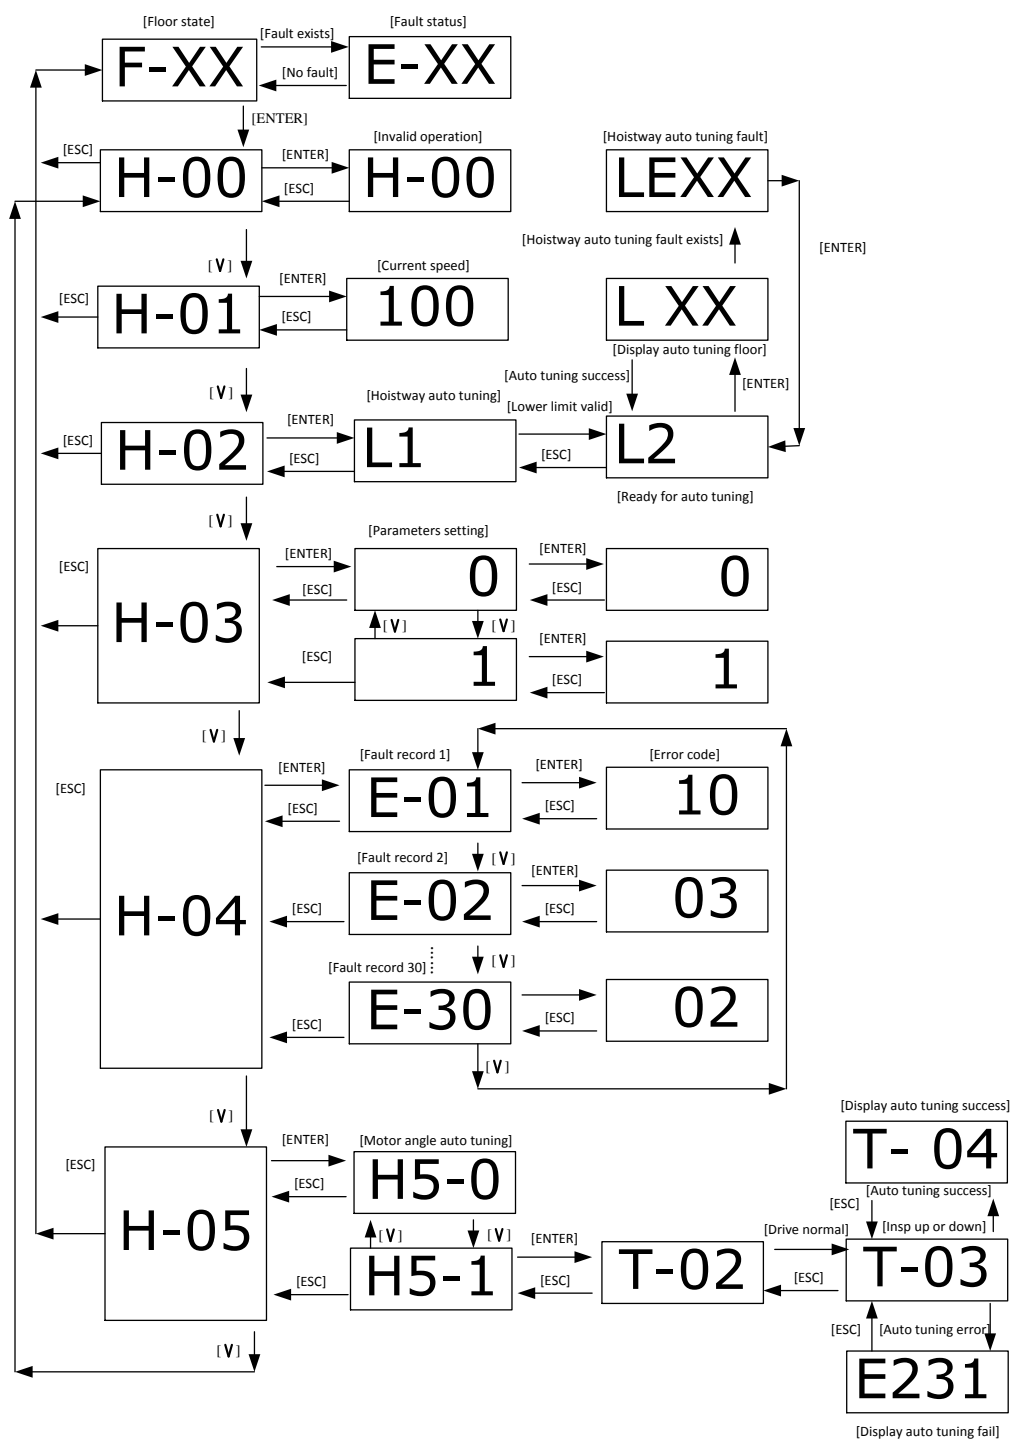

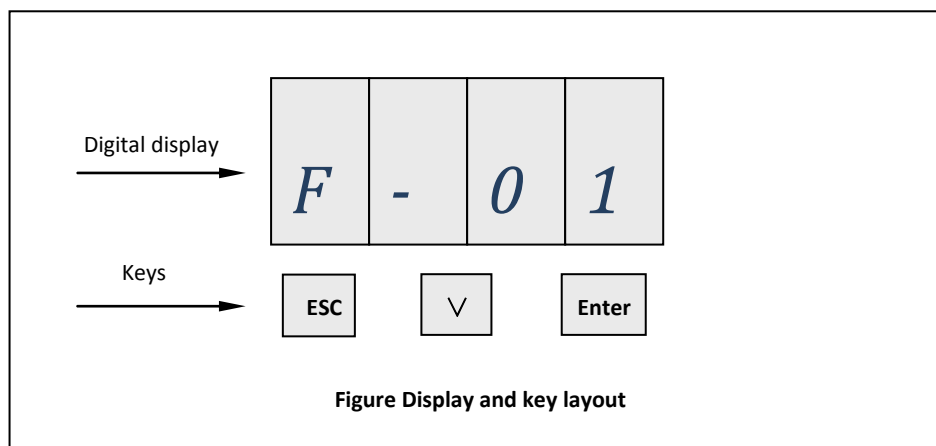


ESC: Cancel/return key;


∨: Flip key;

ENTER: OK key;






1. Normally, display current floor F-XX:

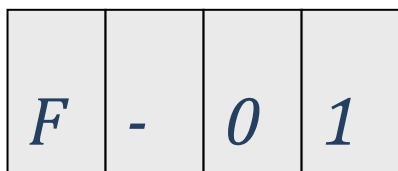

2. Digital tube flashing display error code when fault occurs.

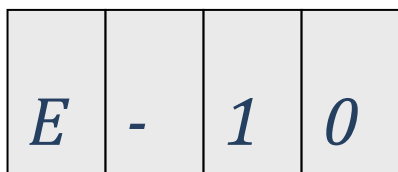


3. Press ENTER key and Flip key to select H-00~H-04 parameters:

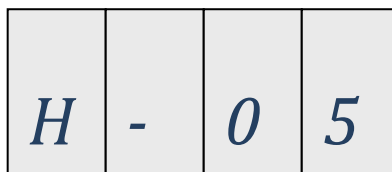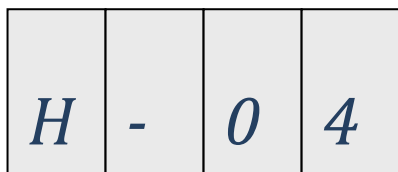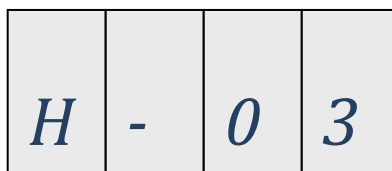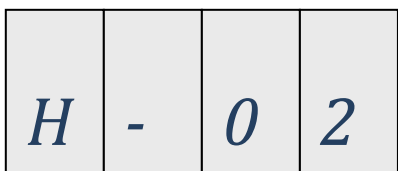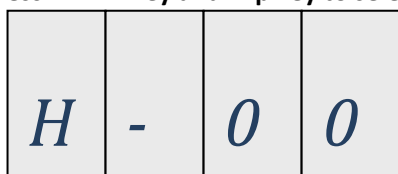


4. H-00: Invalid parameter;


5. H-01: Display current running speed(Unit: cm/s):

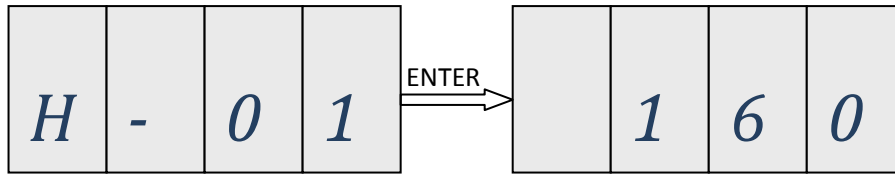


6. H-02: Hoistway parameter self-learning:

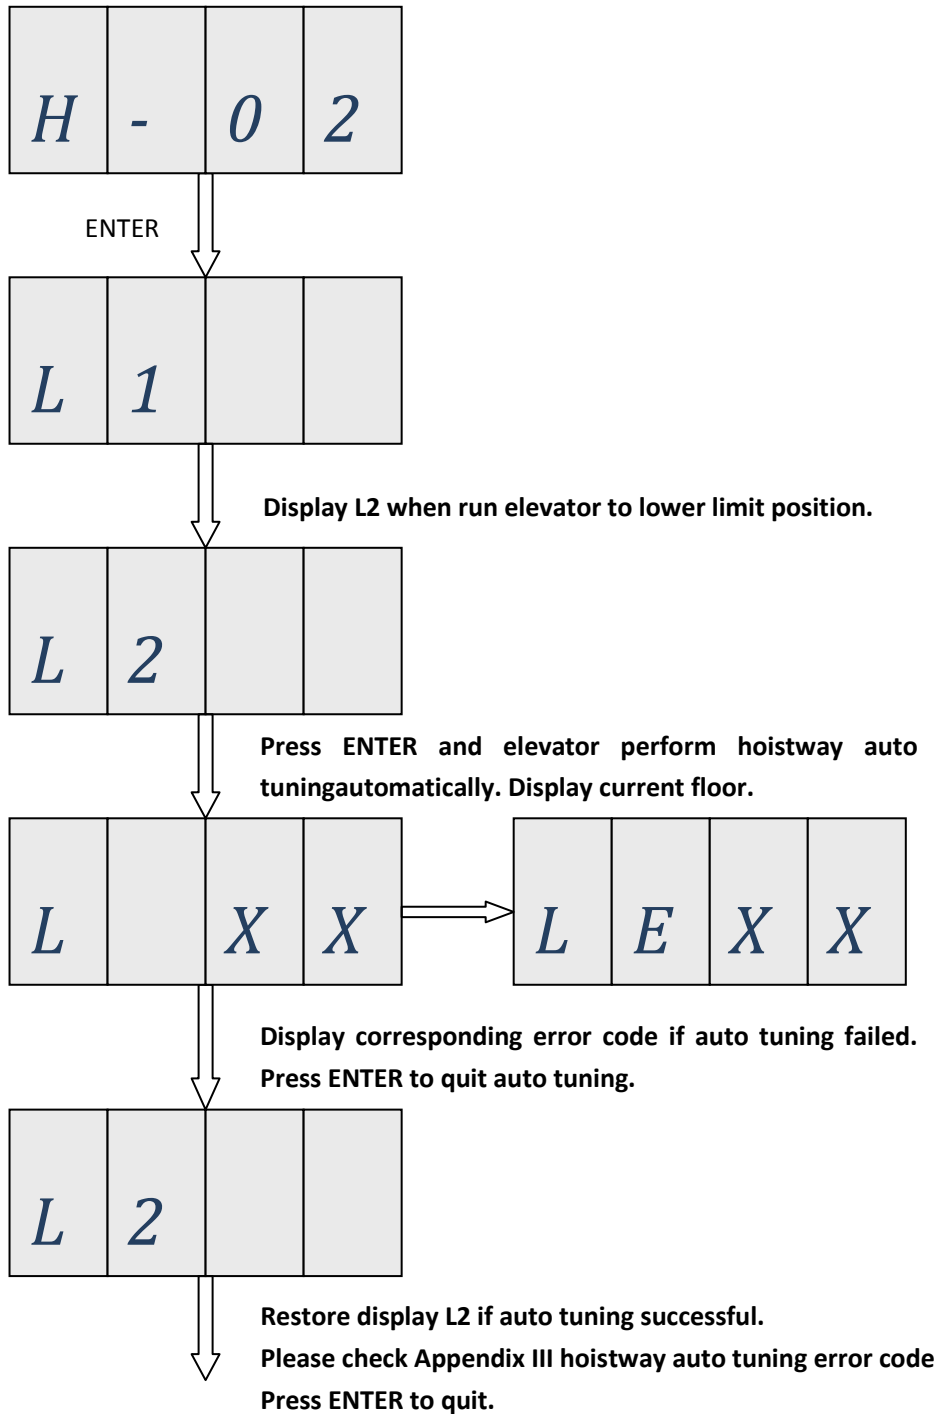


7. H-03: Parameters setting with hand operator. Set once the parameter when connecting digital operator.(Set this parameter again to support hand operator after main board reset).

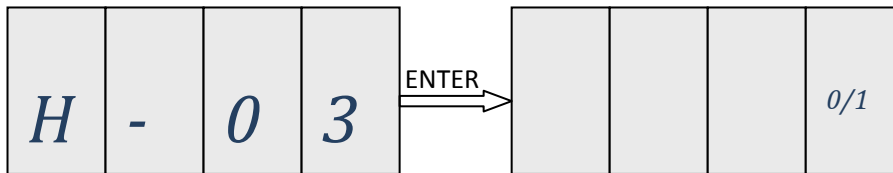


8. H-04: View 30 fault recodes.

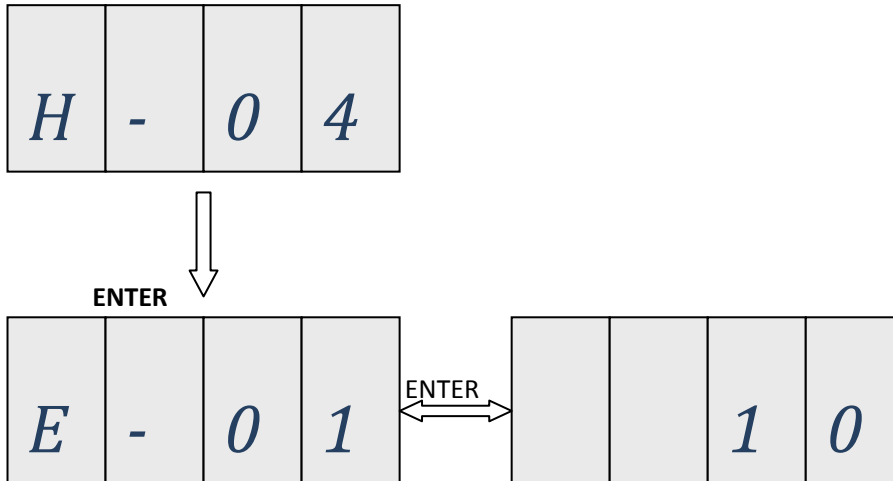

Fault No. Error code(Please check Appendix III elevator system faults)

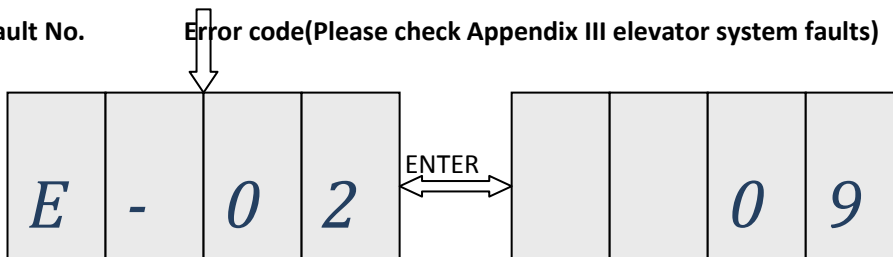

.....

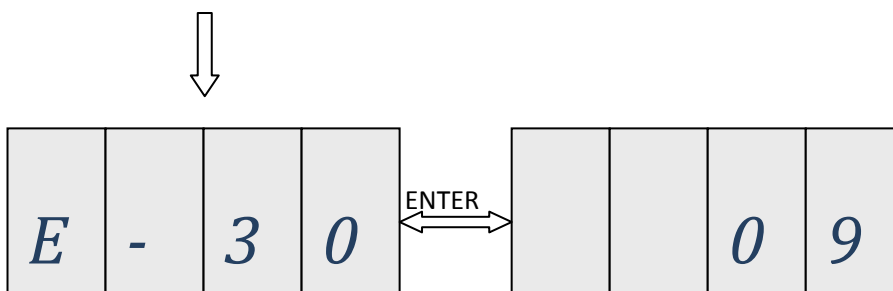

9. H-05: Motor static angle auto tuning

<i>H</i>	-	<i>0</i>	<i>5</i>
----------	---	----------	----------



<i>H</i>	<i>5</i>	-	<i>0/1</i>
----------	----------	---	------------




Choose 1, press ENTER to enter motor auto tuning mode.

<i>T</i>	-	<i>0</i>	<i>2</i>
----------	---	----------	----------




After drive microcontroller answer normal, display is shown below:

<i>T</i>	-	<i>0</i>	<i>3</i>
----------	---	----------	----------



Keep pressing jog up or jog down to rotate motor 3 circles.

Auto tuning fault



<i>E</i>	<i>X</i>	<i>X</i>	<i>X</i>
----------	----------	----------	----------

Handling according to error information prompted.

<i>T</i>	-	<i>0</i>	<i>4</i>
----------	---	----------	----------

Auto tuning proceeds gradually.

Press ENTER to quit.