



USER MANUAL



WWW.GLOBAL-LEELEN.COM

XIAMEN LEELEN TECHNOLOGY CO.,LTD

Foreword

Legal Information

© 2023 Xiamen Leelen Technology Co.,Ltd.All Rights Reserved

For this manual

The Manual includes how do users operate functions in daily life and set simple parameters to meet application requirements in daily life. This file will be updated as the device is optimized or upgraded.The latest user manual for the device can be downloaded from LEELEN website. (<https://www.global-leelen.com>).

Please use the manual with the guidance and assistance of professionals trained in supporting the production.

Product	Model	Detail
V39 Indoor station	EH-IS-V39-ENA04	Indoor Unit V39 (Black, Android,10.1')
V39 Indoor station	EH-IS-V39-ENA03	Indoor Unit V39 (White, Android,10.1')

Revision History

Version	Revision	Release Time
V1.0	First release	Jan. 2023

Important safety information

To prevent severe injury or loss of life or property, and to ensure proper and safe operation of your product, read this section carefully before using the product.

Warning

Preventing fire, electric shock, and short circuits

- Leave installation work to the dealer. Installation work requires technical knowledge and experience. Electrical connection work should be performed by certified personnel only. Failure to observe this may cause fire, electric shock, injury, or damage to the product. Consult the dealer.
- Do not place objects on the power cables. Install the product where no one can step or trip on the power cables.
- Do not allow the power cables to be excessively pulled, vent or placed under heavy objects.
- Make sure all connections from the power outlet to the power supply unit are secure.
- Never touch the power supply unit and power cables with wet hands.
- Do not use the power supply unit for outdoor installations (it is for indoor use only).

- Do not disassemble or modify the product. Refer servicing to an authorised service centre when service is required. Disassembling the product or manipulating the product in a way not described in the documentation may expose you to dangerous voltages and other risks.
- Do not touch the product or the power supply unit during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not connect non-specified devices.
- When opening holes in walls for installation or wiring, or when securing the power cable, make sure you do not damage existing wiring and ductwork.
- Do not make any wiring connections when the power outlet is turned on.
- Do not install the product and power supply unit in the following places:
 - Places where the product and power supply unit may be splashed with water or chemicals
 - Places where there is a high concentration of dust or high humidity
- Do not push any objects through the openings of the product.
- If any of the following conditions occur, disconnect the Ethernet (LAN) cable from the product, disconnect the power supply unit from the power outlet, and then refer servicing to an authorised service centre.
 - The product emits smoke, an abnormal smell or makes unusual noise
 - The power cables are damaged or frayed
 - Metal objects have been dropped inside the product
- Do not use the product in unstable areas or areas prone to strong vibrations. This may cause the product to fall, resulting in damage to the product or injury.
- Always connect power cables to the appropriate connection terminals. Incorrectly connecting the power cables may damage the power supply unit.
- Insert the power cables firmly all the way into the terminals. If the cables are not inserted all the way, heat may be generated.
- If the wiring passes outdoors, use a conduit and a surge protector.
- If the wiring passes underground, use a conduit, and do not make any connections underground.
- Install the product securely adhering to the instructions in this document to prevent it from falling off the wall. Avoid installing onto low-strength walls, such as gypsum board, ALC (autoclaved lightweight concrete), concrete block, or veneer (less than 18 mm thick) walls.
- Do not put your ear(s) near the speaker, as loud sounds emitted from the speaker may cause hearing impairment.
- To prevent serious injuries due to the product unexpectedly falling, the product with a wall mount feature must be installed at a height of 2 m or lower.

Privacy

When installing or using the product, please take into consideration the rights of others with regard to privacy and rights of portrait.

- It is generally said that "privacy" means the ability of an individual or group to stop information about themselves from becoming known to people other than those whom they choose to give the information. "Rights of portrait" means the right to be safe from having your own image taken and used indiscriminately without consent.
- Please observe the legal regulations (data protection, video surveillance) in your country during use.

Environment

- The product should not be exposed to direct sunlight.
- The product should be kept away from heat sources such as radiators, cookers, etc. It should not be placed in rooms where the temperature is less than 0 °C or greater than 40 °C. Damp basements should also be avoided.
- Do not install the product in locations that are suspect to sudden changes in temperature. Failure to do so may cause condensation to form on the product causing malfunction.
- In areas surrounded by a high electrical field, disturbances may occur in the product's image or sound.


Content

Foreword	2
Content	5
1. Product Overview	7
2. Introduction to Menu	8
3. Access the Device	9
3.1 WIFI Setting	9
3.2 Call Settings	11
3.2.1 Add Contact	11
3.2.2 Call Resident	11
3.2.3 Receive Call	13
3.2.4 Call Records	14
3.2.5 Blocklist	15
3.3 Monitoring Settings	16
3.3.1 Add IPC	16
3.3.2 Monitor IPC and outdoor station	17
3.3.3 Monitor Records	18
3.4 Message	19
3.4.1 Message Edit	19
3.4.2 Message Records	19
3.5 Arm/Disarm	20
3.5.1 Set Arm Mode	20
3.5.2 Alarm process	21
3.5.3 Arm status check	22
3.5.4 Arming Records	23
3.5.5 Arming parameter settings	23
3.6 SOS	25
3.6.1 SOS emergency call	25
3.6.2 Privacy	26
3.7 Other Common parameters	26
3.7.1 Date & Time settings	26
3.7.2 Language settings	27
3.7.3 Display settings	28
3.7.4 Sound settings	29
3.7.5 Call Transfer	30
3.7.6 Device information	31
3.7.7 Password settings	32
3.7.8 Restart	33
4. Remote control APP	34
4.1 APP download and register	34
4.1.1 APP download	34


4.1.2 APP register	34
4.2 APP bind and Unbind	36
4.2.1 APP bind	36
4.2.2 APP and device unbind	37
4.3 APP account management	38
4.3.1 Home switch	39
4.3.2 Family management	40
4.3.3 Name setting	41
4.3.4 Cancel account	42
4.4 APP function	43
4.4.1 Monitoring	43
4.4.2 Intercom	44
4.4.3 Records query	45
4.4.4 Other function	46
5. FAQ	48
6. Contact US	48

1. Product Overview


V39 indoor station is a 10.1 inch Android digital HD indoor intercom. It can realize audio and video communication with outdoor station, unlock, monitor outdoor station & IPC and other functions. Users can use this device to carry out information exchange, video monitoring, APP remote interaction, etc. Besides, users can more easily grasp the outdoor situation, and remote unlock the outdoor door. The indoor station is mainly used in villa, apartment, office and other scenarios.

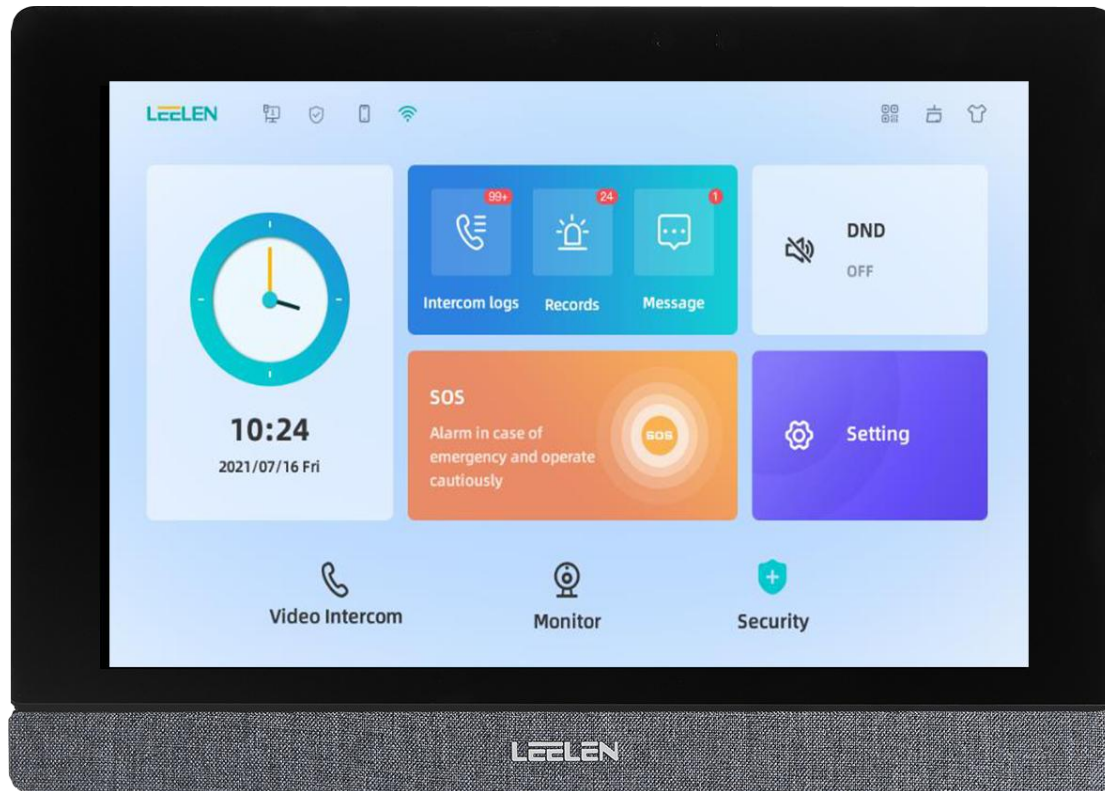


2. Introduction to Menu

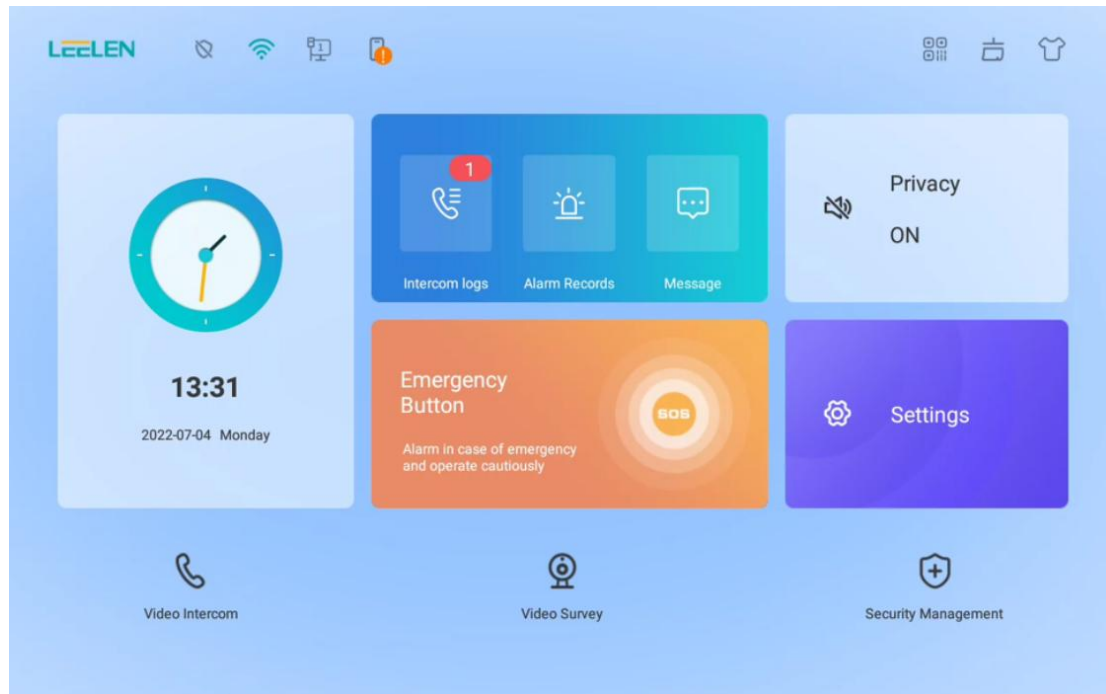

Status: The upper left corner of the interface displays some working status of device, including Security warning status, WIFI status, LAN status, APP binding status, etc. If the operating status is not normal, the icon is displayed with a Red Cross or an exclamation mark. If it works normally, the Red Cross or exclamation mark disappears.

APP Binding: tap  to open the QR code, means that APP scans the QR code to bind the device.

Clean the Screen: Before cleaning the screen, tap  to lock the screen for 10 seconds to clean the screen without causing faulty operation.

Night Vision Switch: For people with amblyopia, night vision is an option.

Time View: You can view the current time on the device. The device can obtain the local time from the network or the management machine even after the power is powered on again.

Records Query: Including Intercom Logs, Alarm Records and Message on the device.

SOS (Emergency Button): One-tap call to Service Center (Long press 2s).

Privacy Setting: When user wants to be free from indoor station ringtones during a period of time. You can set the Privacy mode on the home page.

Settings: Including the information of equipment and user settings. Entering user settings (default password: 123456), users can set date time, alarm setting, sound, display, WiFi, language, call transfer, unlock code, user password, binding information, restart.

Video Intercom: Outdoor station and indoor station or indoor station and indoor station between the realization of visual intercom.

Video Survey: Monitor the outdoor station and IPC.


Security Management: A variety of working modes: Away mode, home mode, disarmed.


3. Access the Device



3.1 WIFI Setting

If the network is not connected, you can set the LAN or WIFI as required. Usually, the LAN is configured by engineers. For details about how to configure the LAN, Please look at the configuration manual.

We suggest that users preferentially choose WIFI in the environment to realize information interaction between indoor monitor and external network. The configuration process of WIFI is shared as follows:

On the home screen, tap **Settings->User Settings** (default password:123456)->WIFI;Turn on the WIFI and select the WIFI available in the current environment. After tapping the available WIFI and enter the WIFI password , tap . When the WIFI connected,the font will turn green with the word "connected" below it. Click again, you can see the "Wi-Fi Connection Information" including status information, connection speed, IP address.

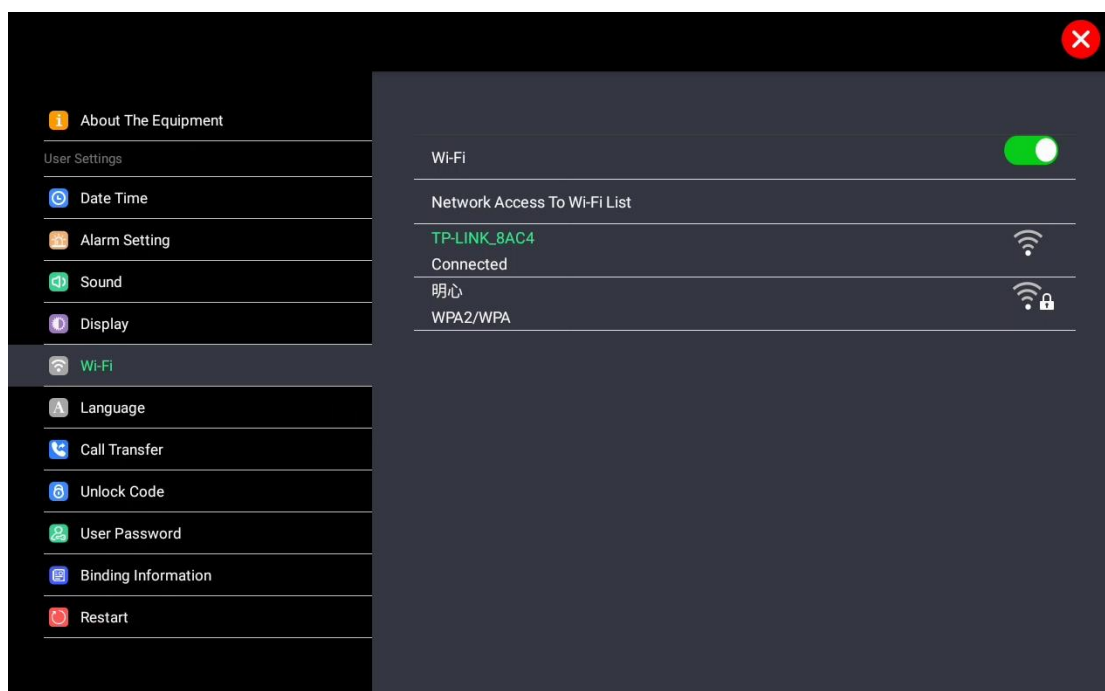

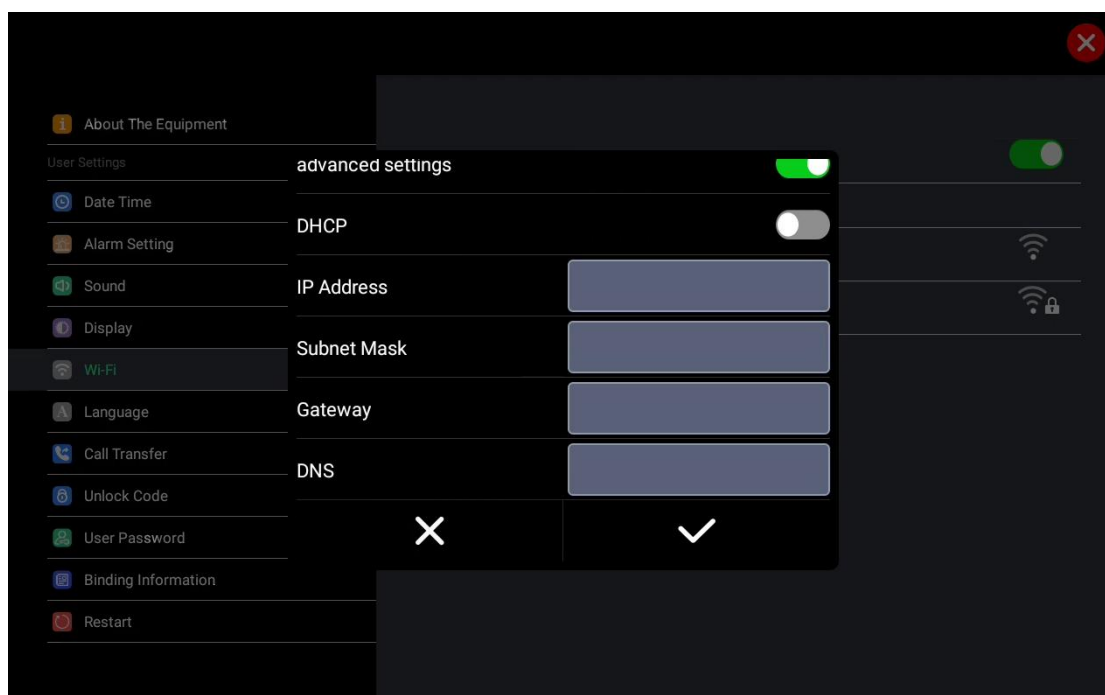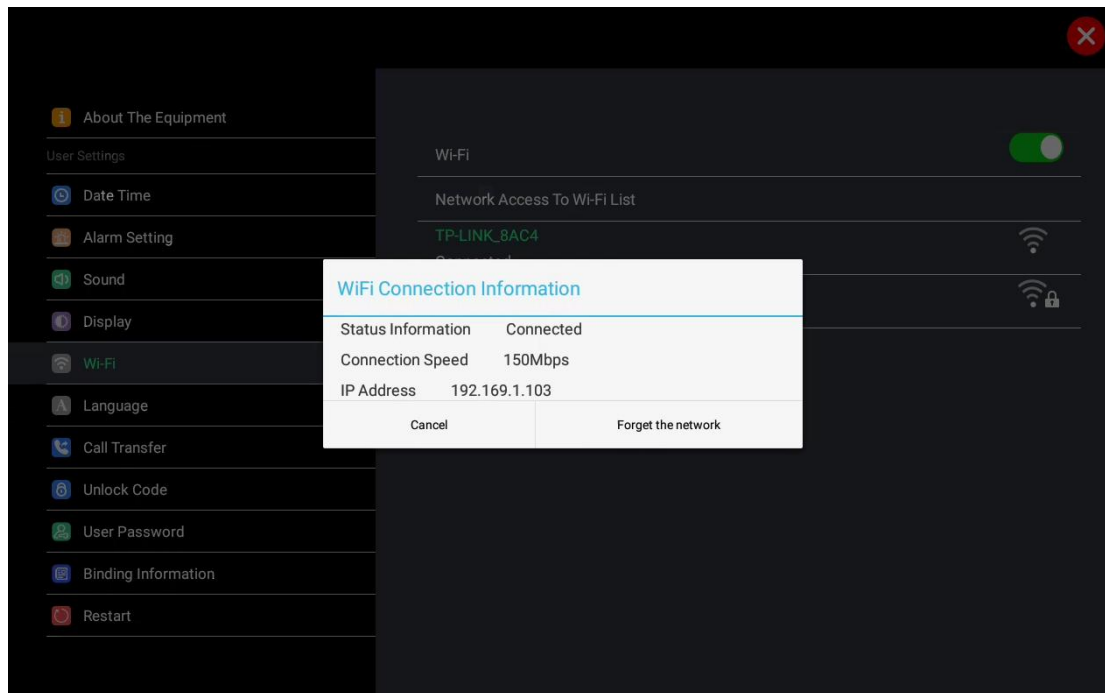

Before connecting, you can tap on the right icon of any Wifi, and turn on “advanced settings’ to set the parameters of the corresponding WIFI .

The system has two ways as follows.

◇ When turning off "DHCP", enter “IP Address, Subnet Mask , Gateway,DNS and then tap


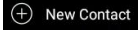

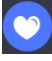

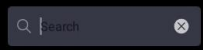
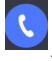



◇ Tap “**DHCP**”, turn on DHCP to obtain the information automatically.

To obtain IP information with DHCP function, use a router with DHCP function.

3.2 Call Settings


3.2.1 Add Contact

Tap "Video Intercom" -> upper right corner  -> . Enter the user name and device number in the edit box, and tap **Complete**. If the editing content is wrong, you can tap **Edit** to modify it. To delete the number, click . To favorite/tag this number, click . To add the number into blacklist, click . If there are so many contacts, you can enter the contact's name/device number in the search bar . And you can tap , edited number each time you dial the speed dial number.

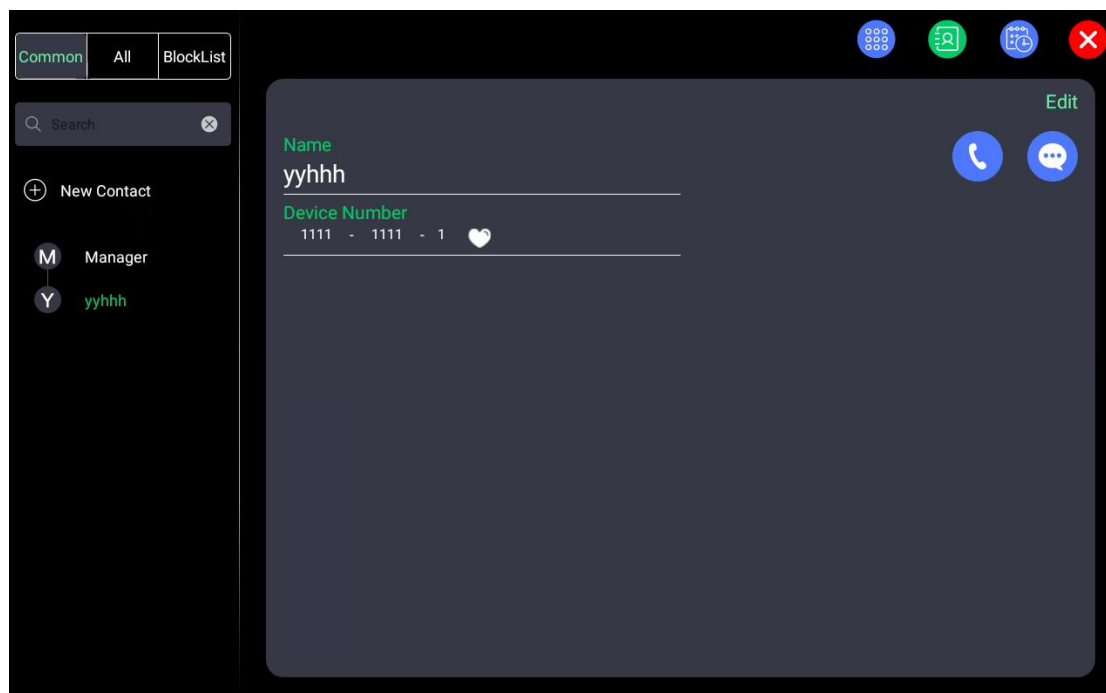




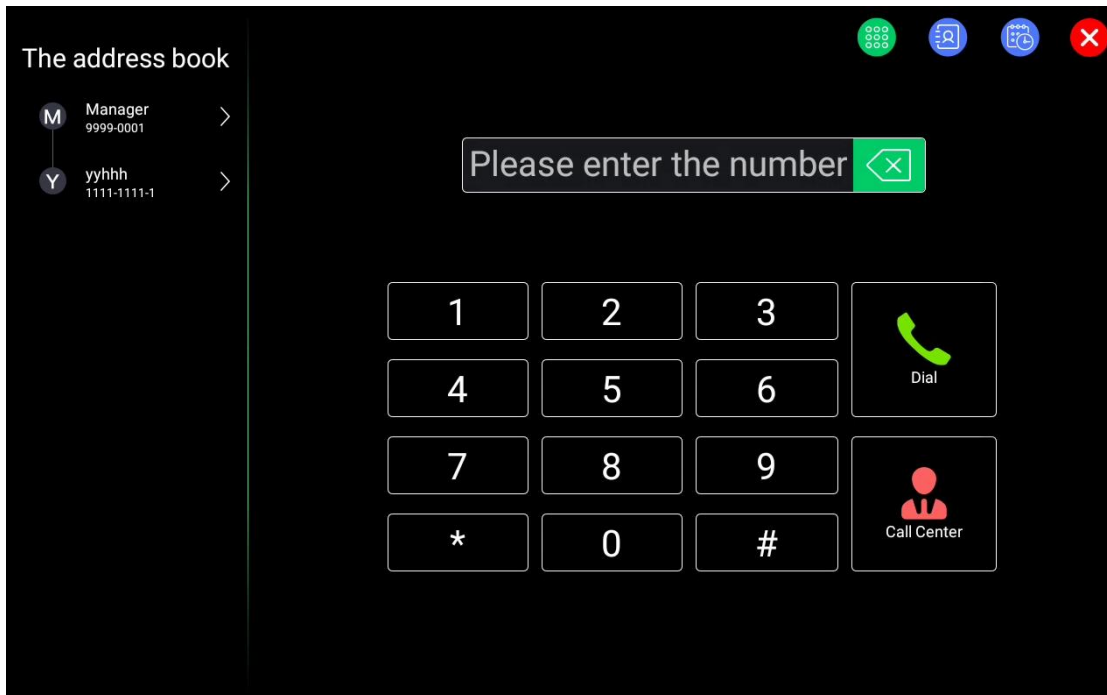
Note:A maximum of 100 contacts can be added to the contact list.

3.2.2 Call Resident

You can call a user in two ways: 1.Select a contact from the address book and click  Implement on the right to make a quick call. 2. You can also make a call by entering a number in the dial pad. The following describes how to make a call through the dial pad.


A.digit dialing

You can enter the number in the digital key area and click  to call. If you want to call the management center, click . The center number is set by the engineering personnel. For details, refer to the project configuration manual. You can delete a character by tap .






B. Alphabetic dialing

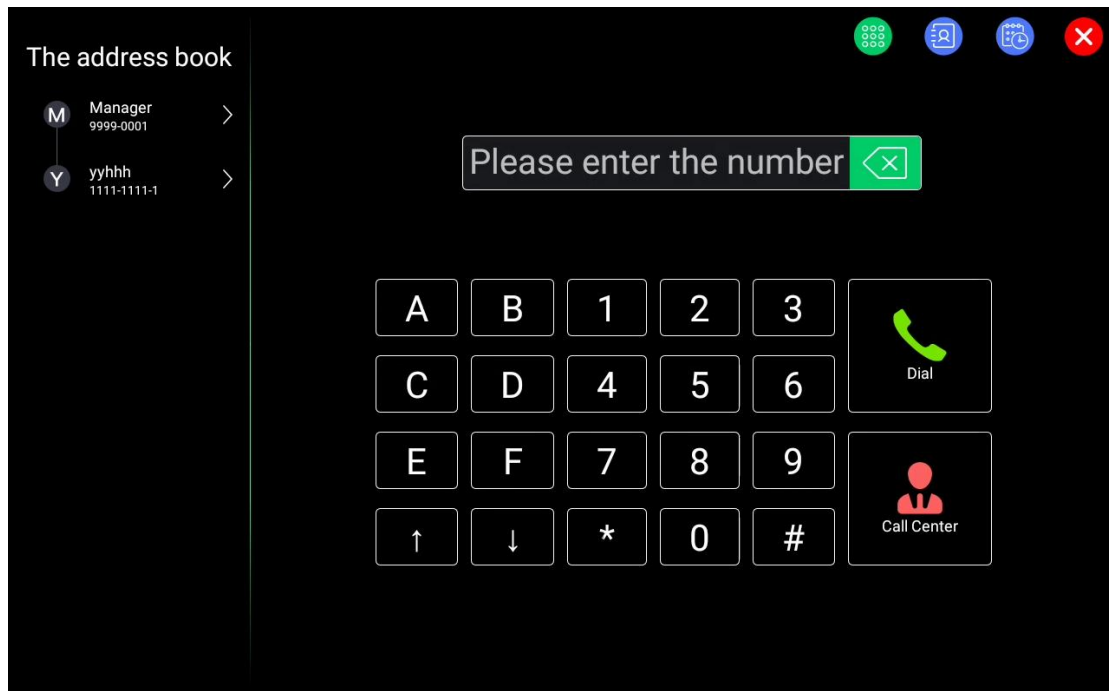
You can set alphabetic dialing in project settings, please look the configuration manual. When the device is the alphabetic dialing, user can enter one alphabetic and four digits or four digits. When you want to enter the alphabetic, you can tap **Video Intercom** in the home page, and the dial plate will display 6 letters(ABCDEF). Then you can enter one alphabetic and four digits in the key area and click to call.

**Note:**

1. Ensure that the number of buildings in the cell is less than or equal to 6, and that the first four digits of the outdoor station number are 0001 to 0006.



3.2.3 Receive Call

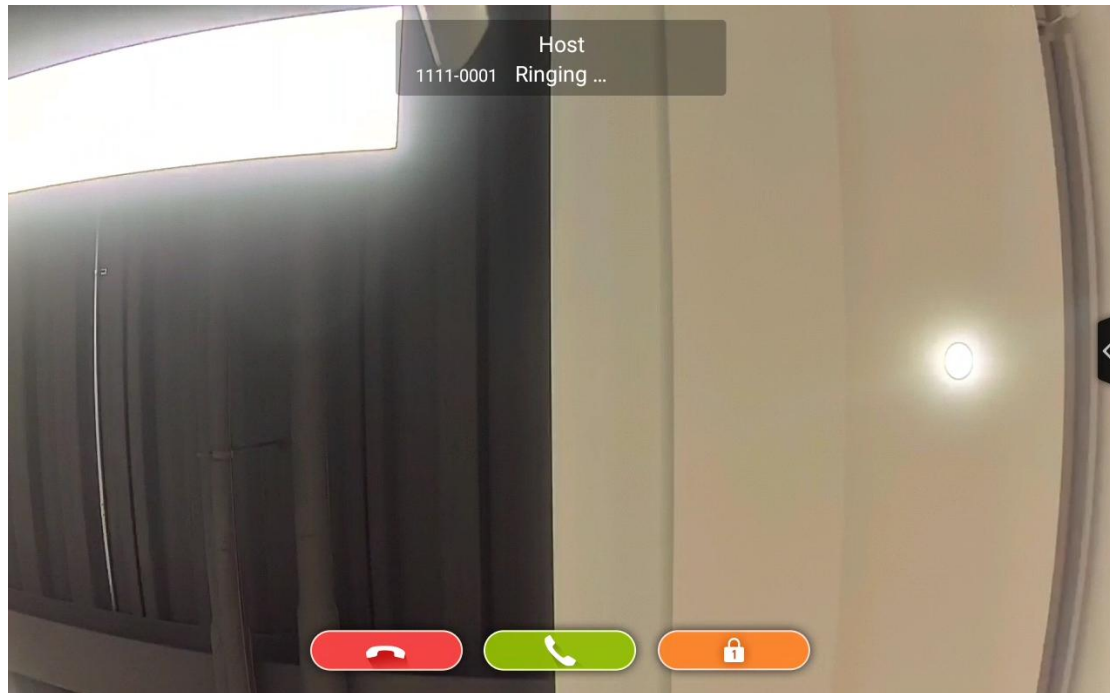
When a outdoor station or a indoor monitor makes a call to the indoor monitor, the device automatically enters the visual ringing state. Tap  to enter the ringing. Tap  to unlock. Tap  to reject call.




3.2.4 Call Records

You can query intercom records in either of the following ways. One way, you can tap **Intercom Logs** in the main interface to enter the Intercom record query. The second way is to tap **Video**

Intercom, and then tap  to enter the Intercom record query. In the record list, device number, intercom time, call status, call duration, unlock or not, and capture and message information are displayed. You can enter the details page and tap  to delete a single intercom


record, or tap  on the bottom button to play messages. If you record multiple pages, you can use slide to turn pages.

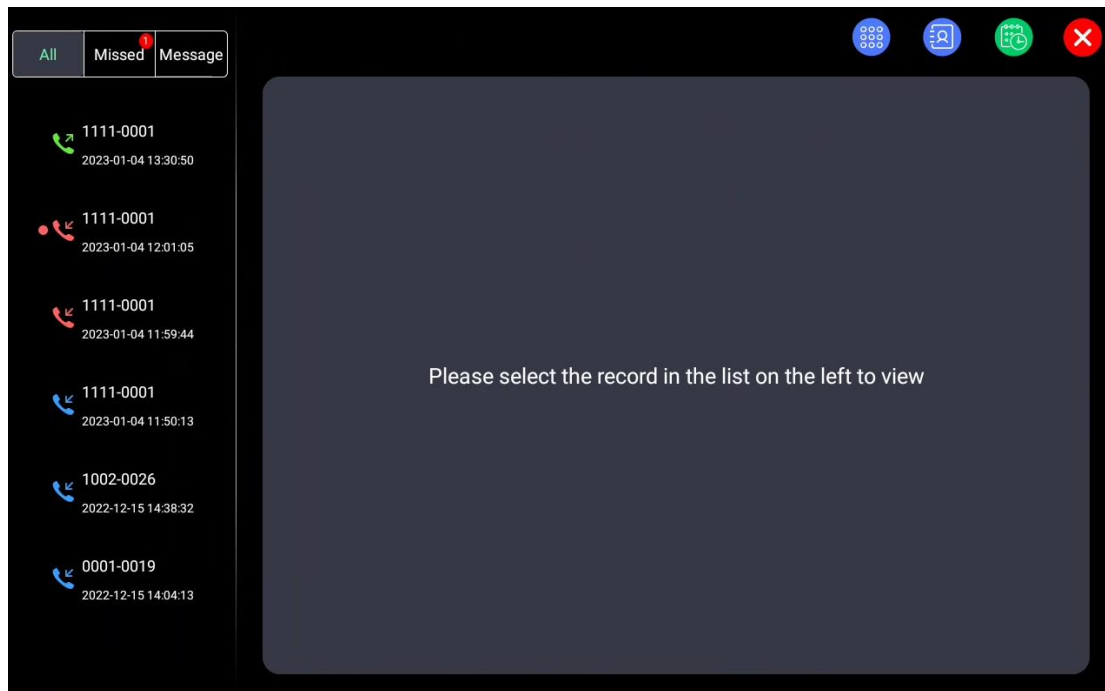**Note:**


1. A total of 100 intercom records can be stored. Capture pictures up to 50. One intercom can capture up to 5 and messages up to 10.
2. A red dot before an intercom record indicates that the intercom record is a missed call. The red arrow indicates that the call is hung up, and the blue arrow indicates that the call enters the intercom phase. The arrow pointing down indicates the received ring, and the arrow pointing up indicates the sent ring.


3.2.5 Blocklist

If a user does not want to receive an intercom or message from a certain number, the user can take the number into blocklist. There are three ways to add blocklist. The first is to tap **Intercom**

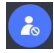Logs, and select the record in the list on the left, then click . Alternatively, you can tap

Video Intercom and tap  to add a new contact in the blocklist . Last one is to tap

Video Intercom and tap , then add the saved contacts to the blocklist.

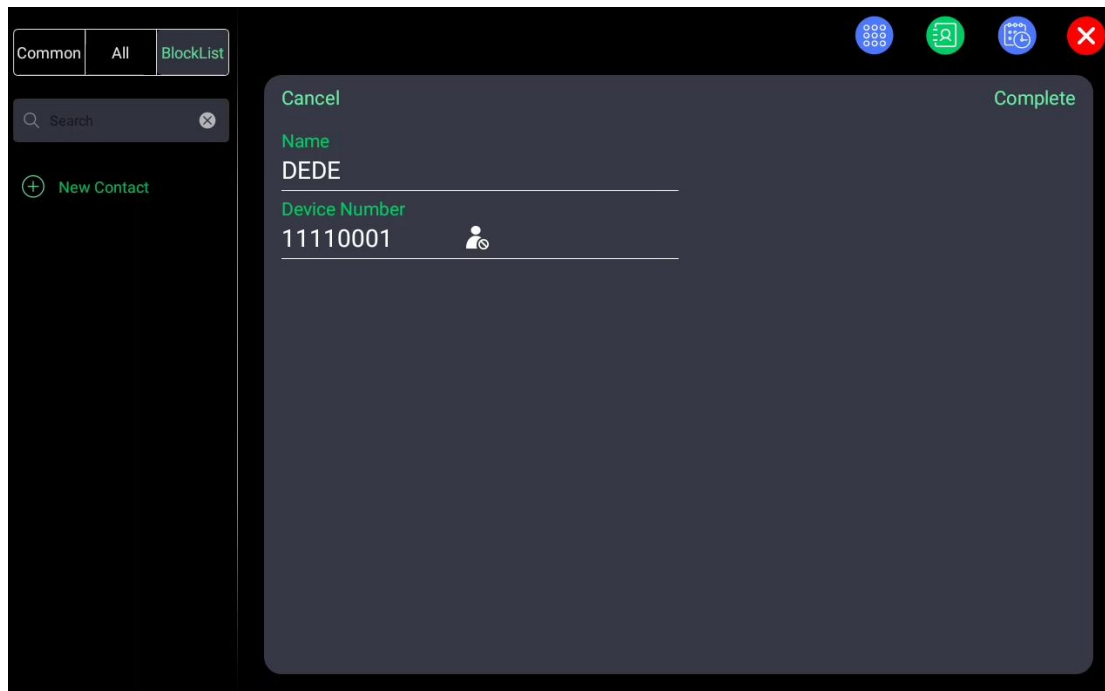


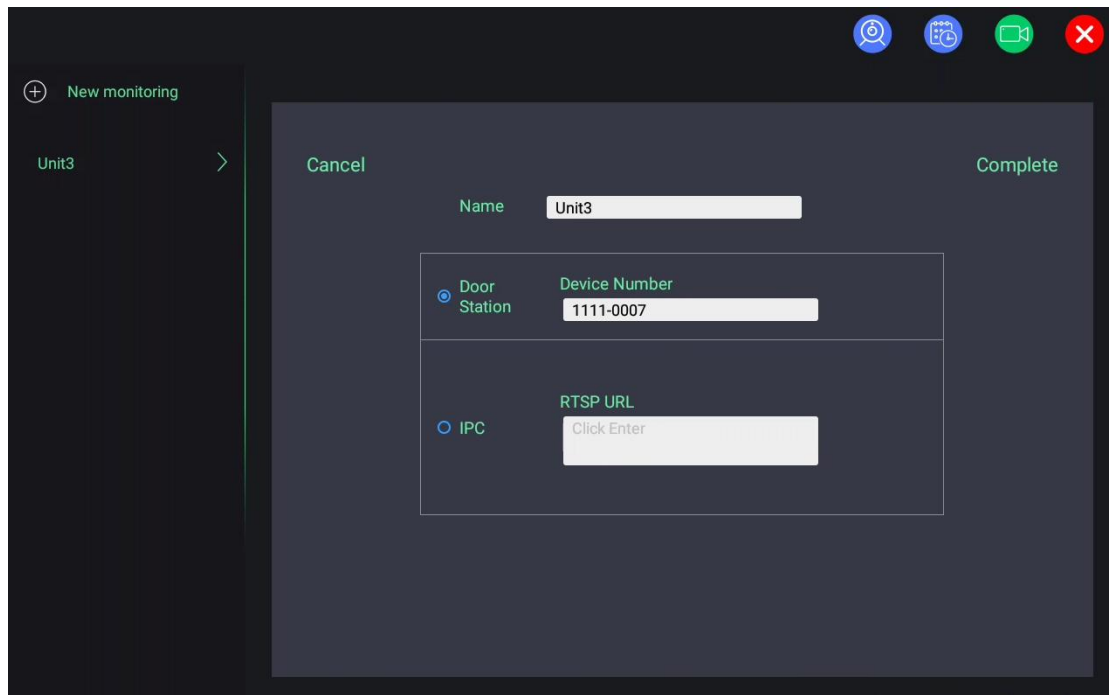
Note:You can add a maximum of 50 blocklist entries.

3.3 Monitoring Settings


The user can use the indoor station to monitor the IPC or outdoor station.


3.3.1 Add IPC


Tap **Video Survey** on the home page and then tap  and **New monitoring** to add. The IPC name and RTSP address settings, at this time the content of the RTSP is: the RTSP: / / test: leelen123456@10.54.57.182:554 / Streaming/Channels / 1, you can query the parameters of the IPC for the information.




3.3.2 Monitor IPC and outdoor station

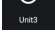
Tap **Video Survey** on the home page and tap  to monitor, At this time, you can unlock, record video and capture the picture.

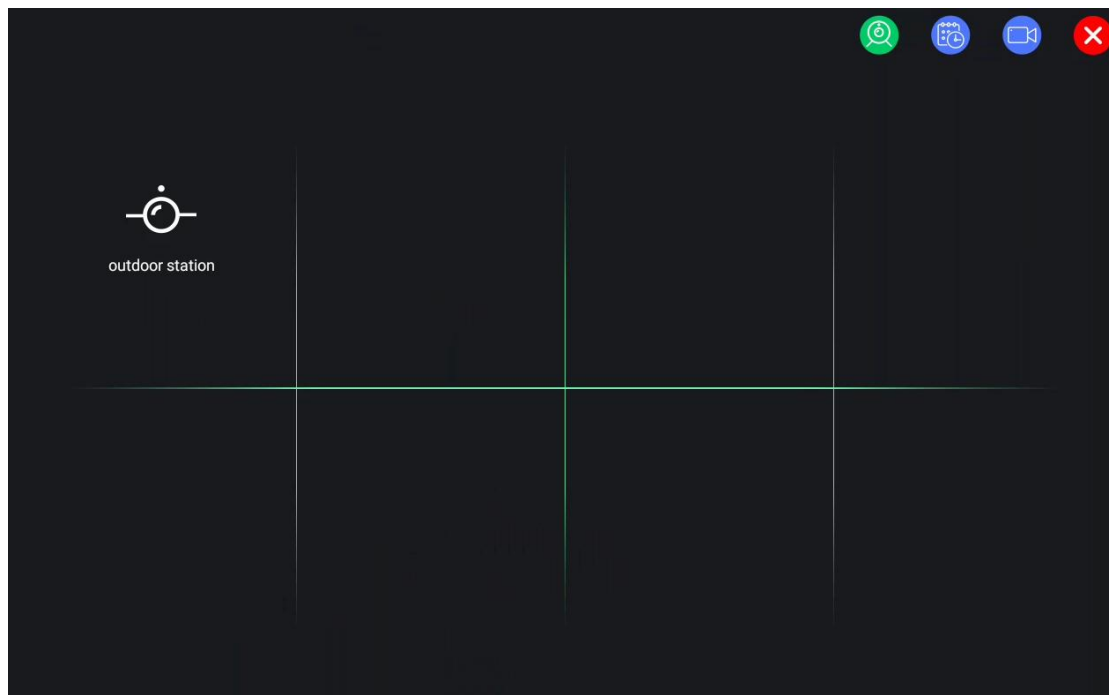

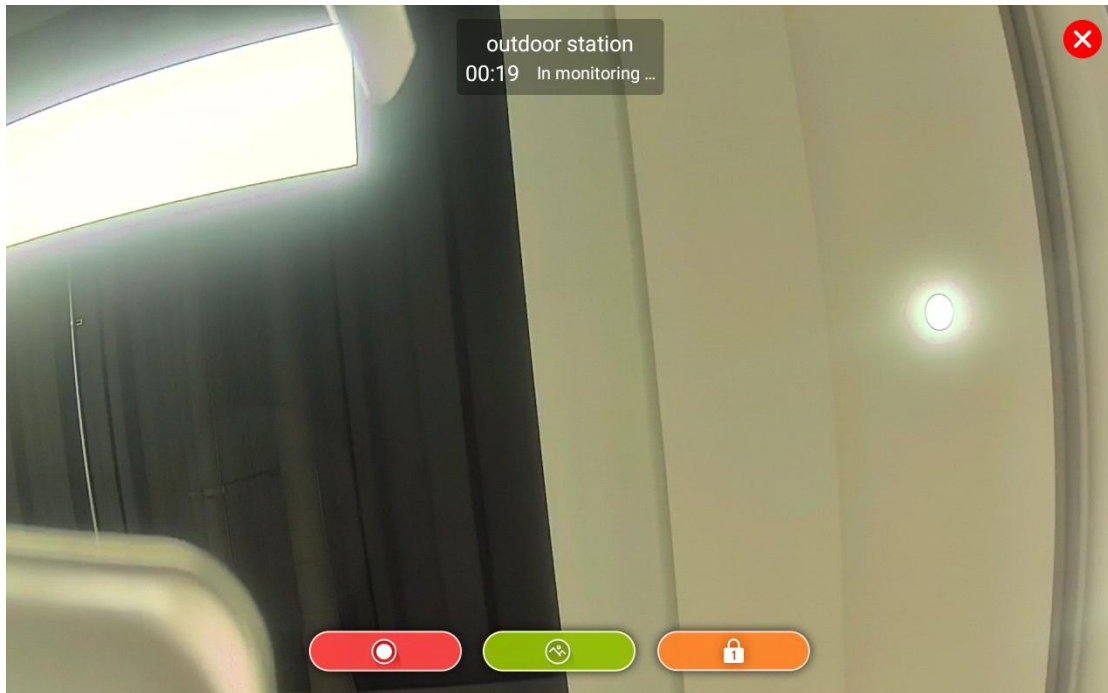

3.3.3 Monitor Records

The user taps  to query the monitor record, includes the video name of outdoor station/IPC, device type, monitoring duration, unlock or not, video recording and captures. You can click **Delete** to delete records.

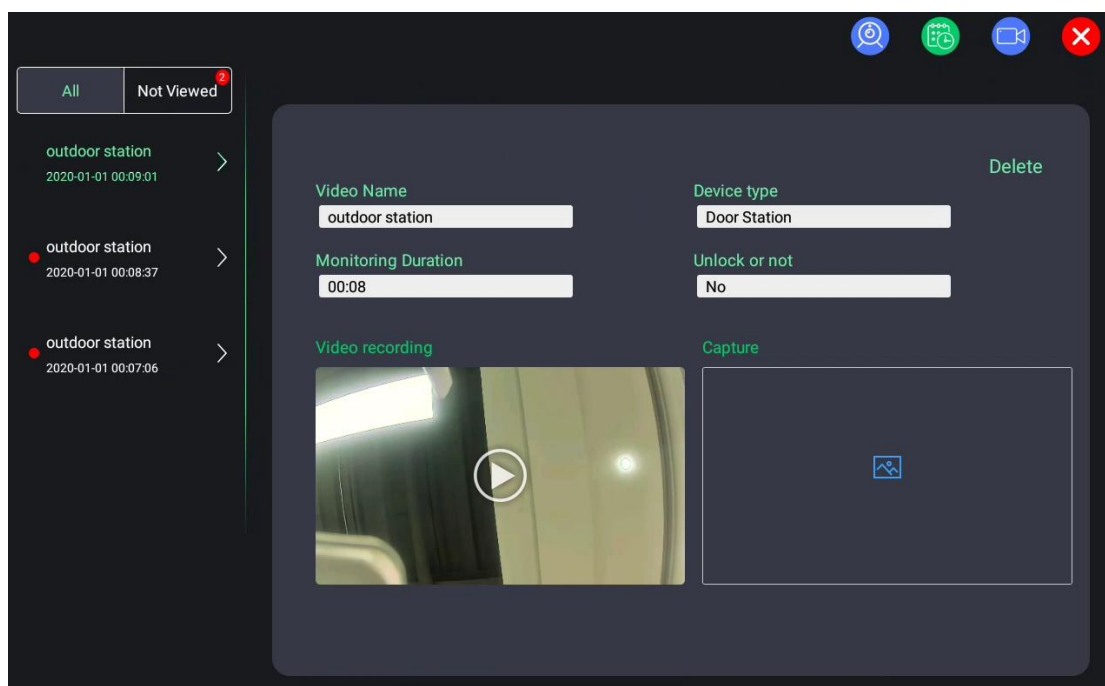

Note:The monitoring records can store 50 records. If the number of records exceeds this number, the previous record information will be erased.

3.4 Message

Users can edit, send, and receive messages on the indoor station.


3.4.1 Message Edit

You can edit and send information on Message on the home screen, click **New Message** -> **Information Recipient** to choose the recipient from the address book, or manually enter contact number. Enter the title in **Information Subject**. Enter the content in the **Information Content**. And it support adding attachments. Finally, click **Send** to send the message.

The screenshot displays a mobile application interface for editing a message. On the left, a contact list shows 'M Manager 9999-0001' and 'F fffffg 1111-0002'. The main screen features a form with three input fields: 'Information Recipient' (with placeholder 'Please enter the contact number'), 'Information Subject' (with placeholder 'Please enter the title'), and 'Information Content' (with placeholder 'Please enter content'). Below these fields is an 'Add Attachments' button with a paperclip icon. At the top right of the form, there are 'Cancel' and 'Send' buttons. A red 'X' icon is visible in the top right corner of the screen.

3.4.2 Message Records



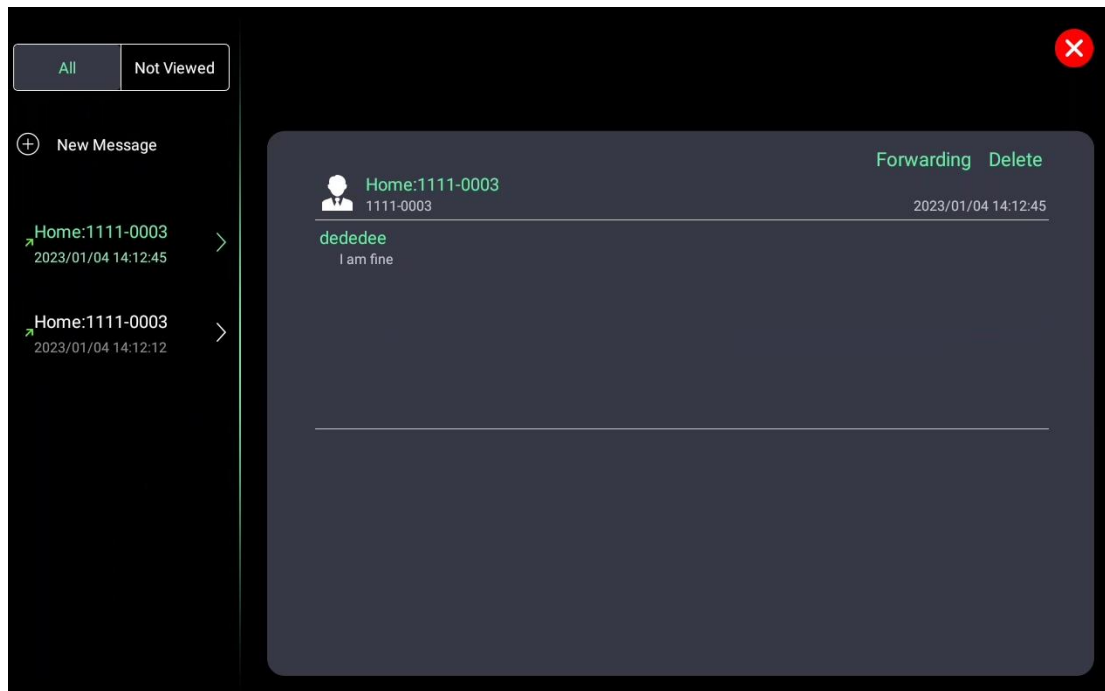


The user can query the corresponding sent or received message in the list. Click the corresponding information to enter the detailed content of the message. A green arrow means received/sent, an arrow down means a text message received, and an arrow up means a text message is sent. Click on user information to forward, reply and delete message.




Note:The message records can store 100 records. If the number of records exceeds this number, the previous record information will be erased.

3.5 Arm/Disarm


3.5.1 Set Arm Mode

Tap “Security Management”, the Users can turn on the alarm according to the layout of the defense area sensor at home. There are three states that can be set, including away mode , home mode  and disarmed . Tap every icon to choose the mode. When you choose , you can enter the user password: 123456 (Default), to authenticate. Click , there are detailed information, including defense zone number, name, detector type, status and alarm type.

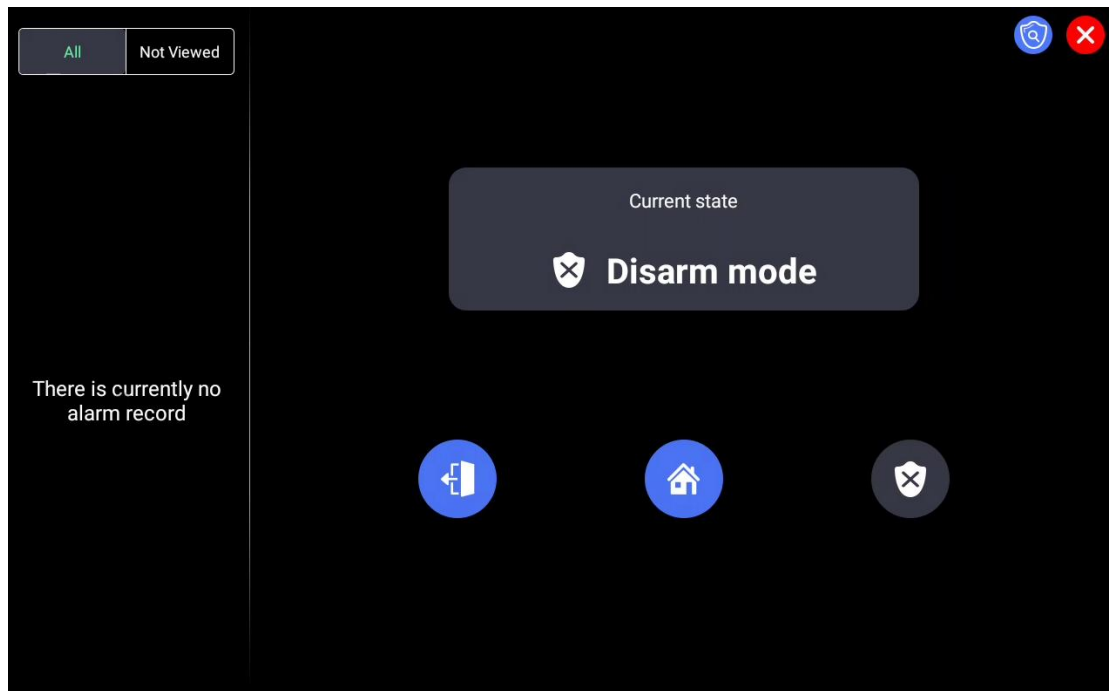


3.5.2 Alarm process

When someone triggers the sensor of the defense area at home, the alarm bell will be issued and the alarm pop-up window will be displayed on the interface. At this time, the user can immediately take corresponding safety precautions and eliminate the alarm on the indoor station. When the user tap Disarm, the user password needs to be entered for verification to prevent fire protection that is not carried out by the owner. At this time, if multiple sensors are triggered at the same time, it will be displayed on the interface at the same time, warning up to 8 sensors at the same time, you can turn the page to query the alarm information on the interface, at this time, if you tap Disarm, All alarm pop-ups will be closed at the same time.

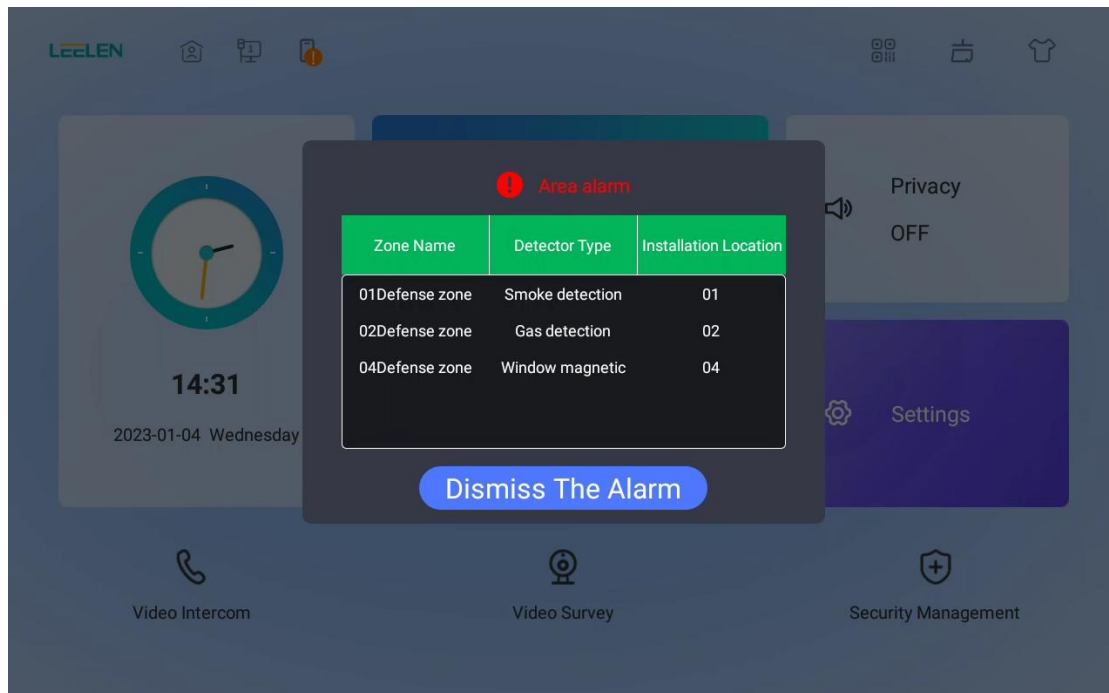


3.5.3 Arm status check

Users tap  to view the status of home defense area settings. There are detailed information, including defense zone number, zone name, detector type, zone status and alarm type. The setting of parameters related to these alarm areas or sensors is the content set by engineers. If you want to know the setting process, you can refer to the configuration manual.

Defense Zone Number	Zone Name	Detector Type	Zone Status	Alarm Type
01	01Defense zone	Smoke detection	Abnormal	Immediately
02	02Defense zone	Gas detection	Abnormal	Immediately
03	03Defense zone	Infrared detection	Abnormal	Delayed
04	04Defense zone	Window magnetic	Abnormal	Immediately

3.5.4 Arming Records

User tap **Security Management** in the home page to query information about alarm records, tap **All** to check all alarm records and tap **Not Viewed** means that have been missed.


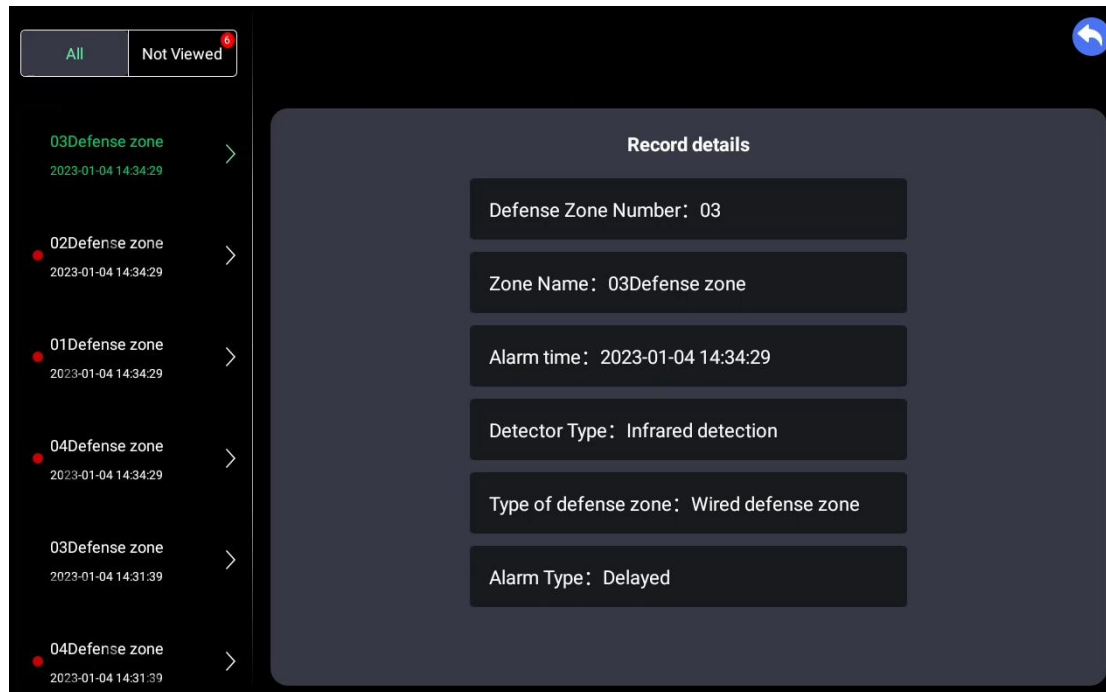



3.5.5 Arming parameter settings

Users can set the mode of away mode or home mode, the alarm state of each sensor in home, and alarm ring parameter information.

First tap **Settings** -> **User Settings** (Default password 123456) -> **Alarm Setting**, you can set delay arming time, delay alarm time, recall interval and tamper detection settings.

Tap **Out-of-office mode settings** or **Home mode settings** to enable defense zone settings.

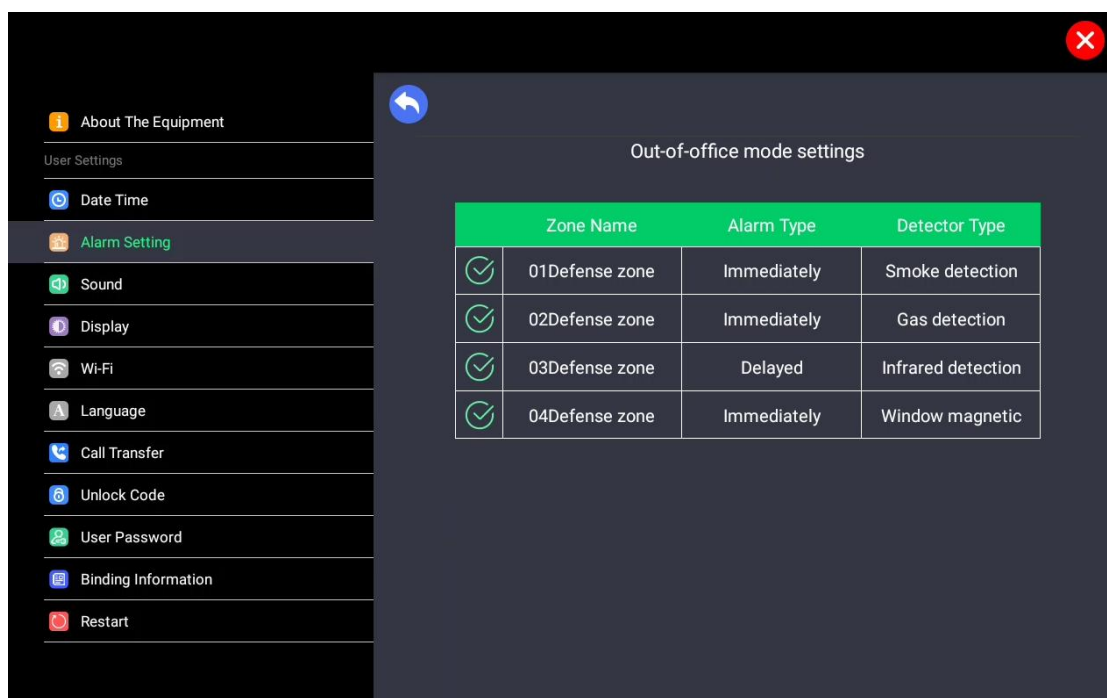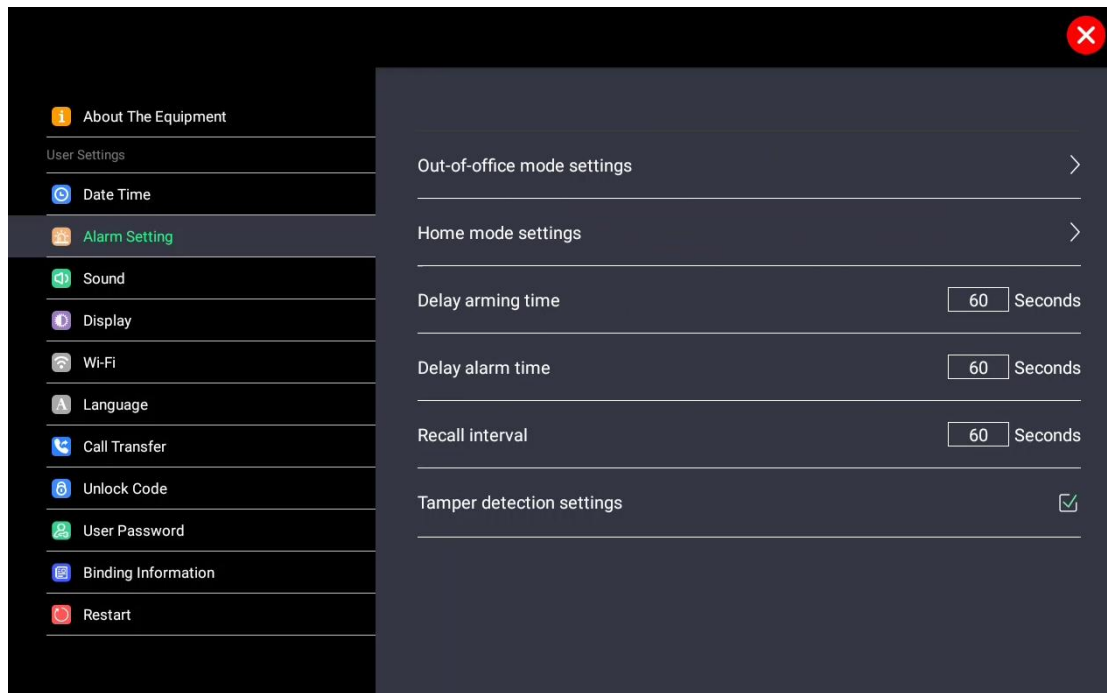


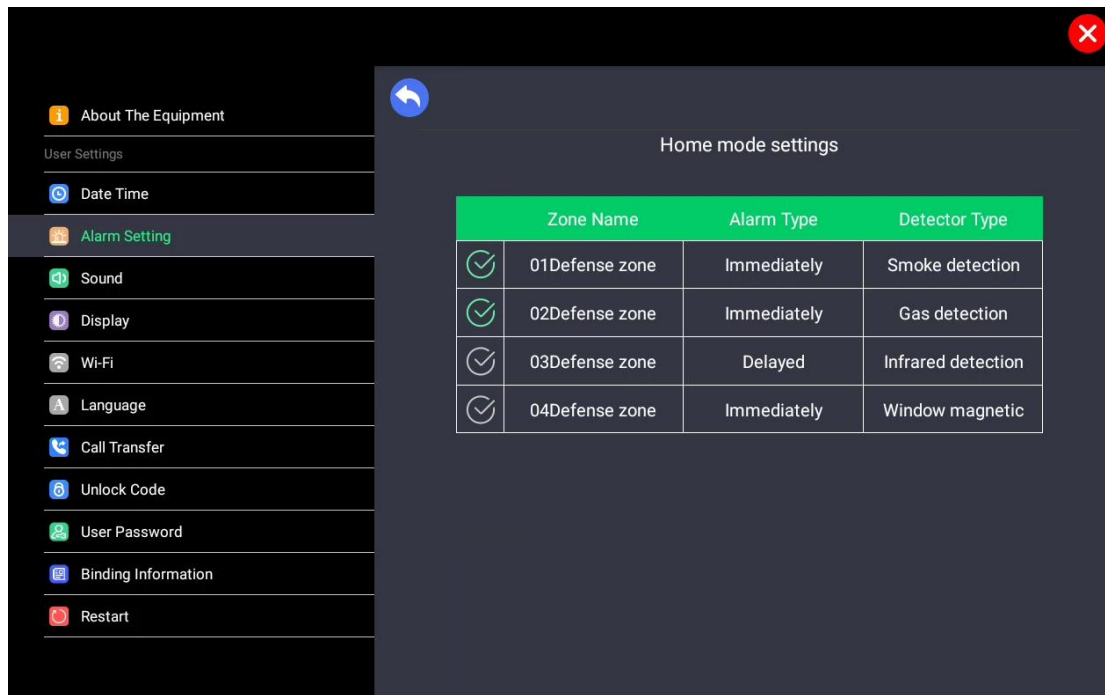



3.6 SOS


3.6.1 SOS emergency call

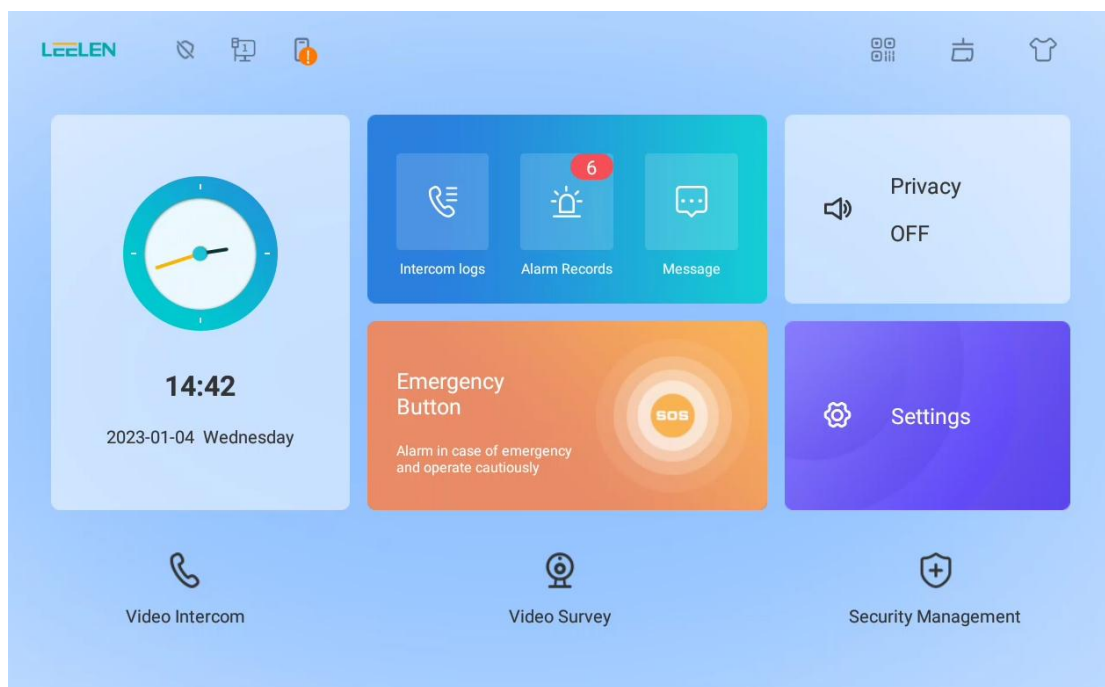In case of an emergency, users can tap SOS for 2S to send emergency call to the management machine in the property center. Property manager received the information, immediately make the corresponding event processing verification. The SOS property center number is set by the engineer, if you want to know the setting process, you can refer to the configuration manual.



3.6.2 Privacy


When user wants to be free from indoor station ringtones during a period of time. You can set the Privacy mode on the home page . When the user wants the indoor station to be privacy state  , turn on the **Privacy** switch. If the **Privacy** switch is turned off, the speaker icon will be displayed as .

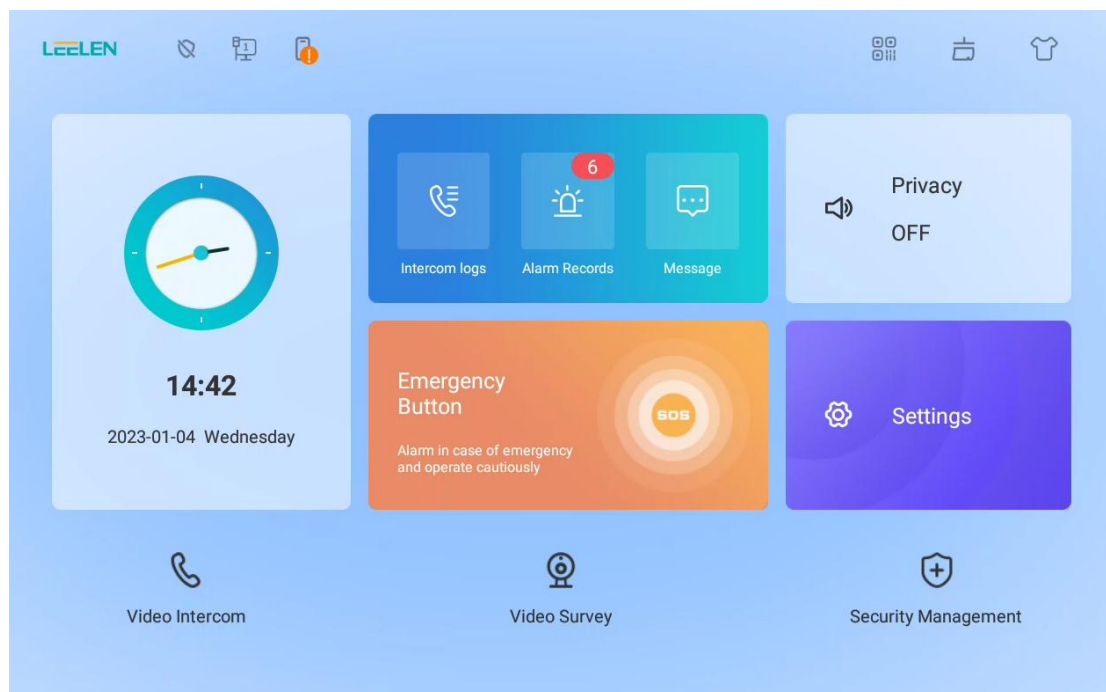

3.7 Other Common parameters

3.7.1 Date & Time settings


You can tap the **Settings**-> **User Settings** -> **Date Time**, select Date Time from the upper menu, and set the corresponding time parameters.

You can customize the time displayed on the home page or screen saver. You can set the date, time, use 24-hour format or not, choose date format, set NTP (Net Time Protocol) server domain name, and time zone of the region. After setting these parameters, tap  to save them.

If time cannot be synchronized after a power failure, you can set a local NTP address. After a power failure and a restart, the device automatically obtains the local time from the


network. For example, the NTP address of Australia is ntp.cs.mu.oz.au. After setting the NTP address, users can check "Automatically determined date and time,time to use the ntp net time" to obtain the time from the network immediately. Otherwise, the indoor station automatically obtains the time from the network within 10 minutes. If the indoor station obtains the time successfully, it automatically obtains the time from the network in 8 hours.

If there is a guard station in the system, and the number of the guard station is set on the indoor station, but the NTP address is not set, you can click "Automatically determined date and time, synchronize the time of the guard station". By this way, the time of the indoor station is synchronized with that of the guard station. If the NTP address is set, the indoor station gain preferentially synchronizes time with the network.

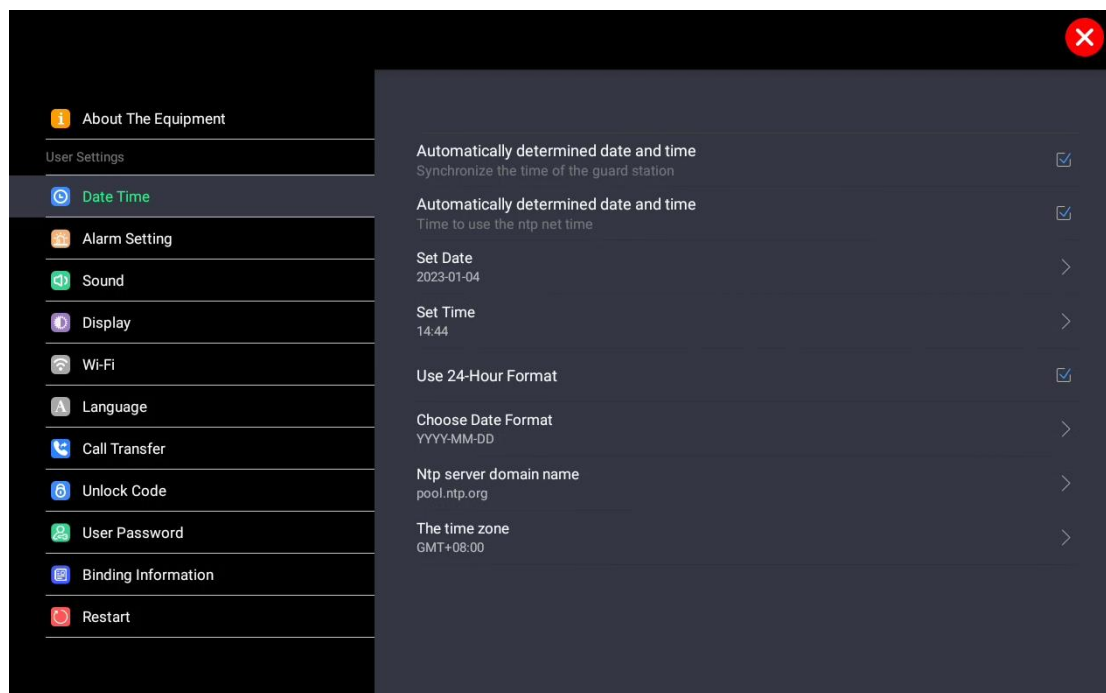

3.7.2 Language settings


Users can set the language on the device, it contains simplified Chinese, traditional Chinese, English, Polski, Turkish, Vietnamese, French, Portuguese, Italian. The user tap **Settings-> User Settings-> Language**, and select the corresponding language.


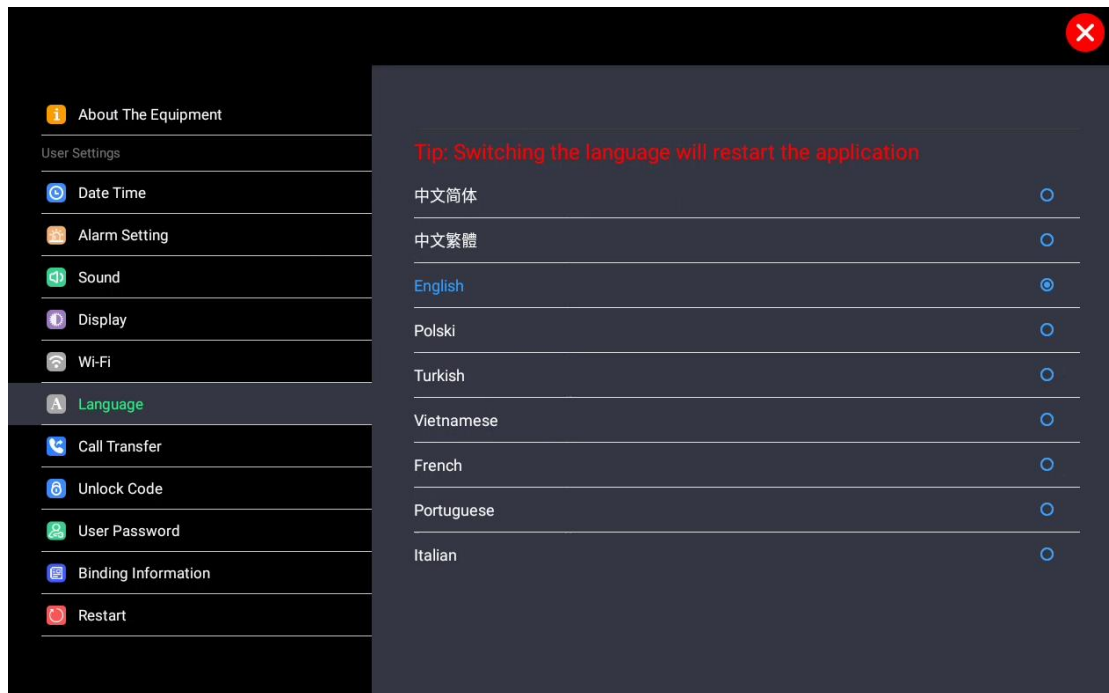


Tips: Switching the language will restart the application

3.7.3 Display settings



The user tap **Settings**->**User Settings** -> **Display**, and adjust the brightness of the home page on the device. You can tap **Brightness** and adjust the brightness through the length bar. Next, the screen saver time can be set to 15 seconds, 30 seconds, 1 minutes, 2 minutes, 5 minutes, 10 minutes, 30 minutes and never. Third is that you can choose screen saver modes, including black screen, clock and picture play.

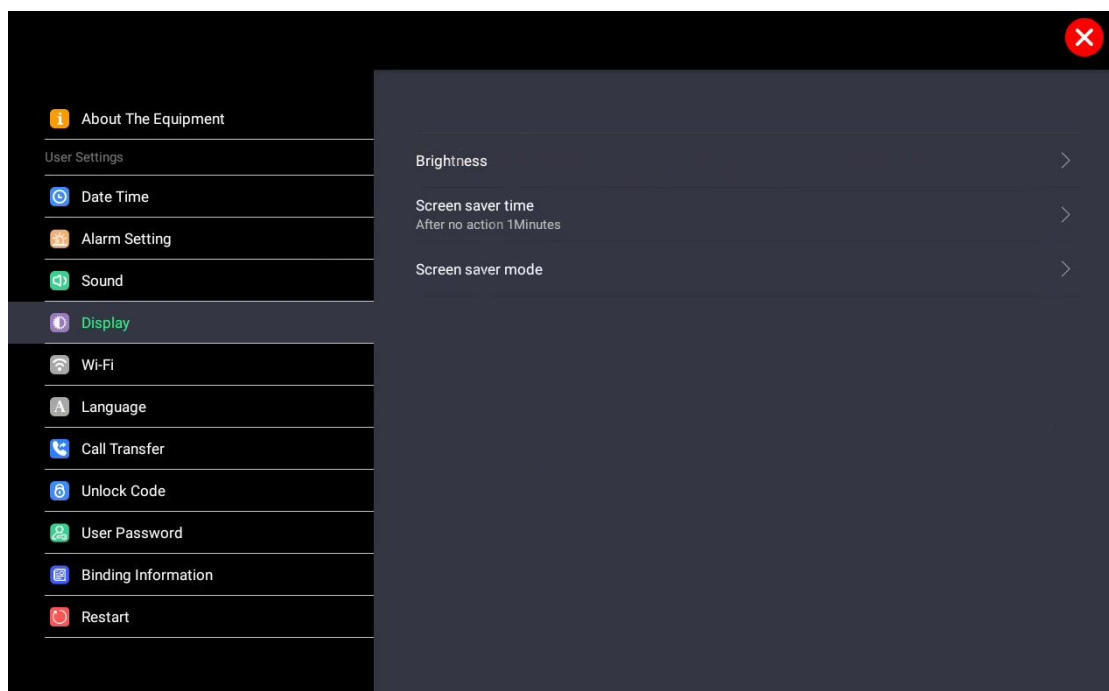

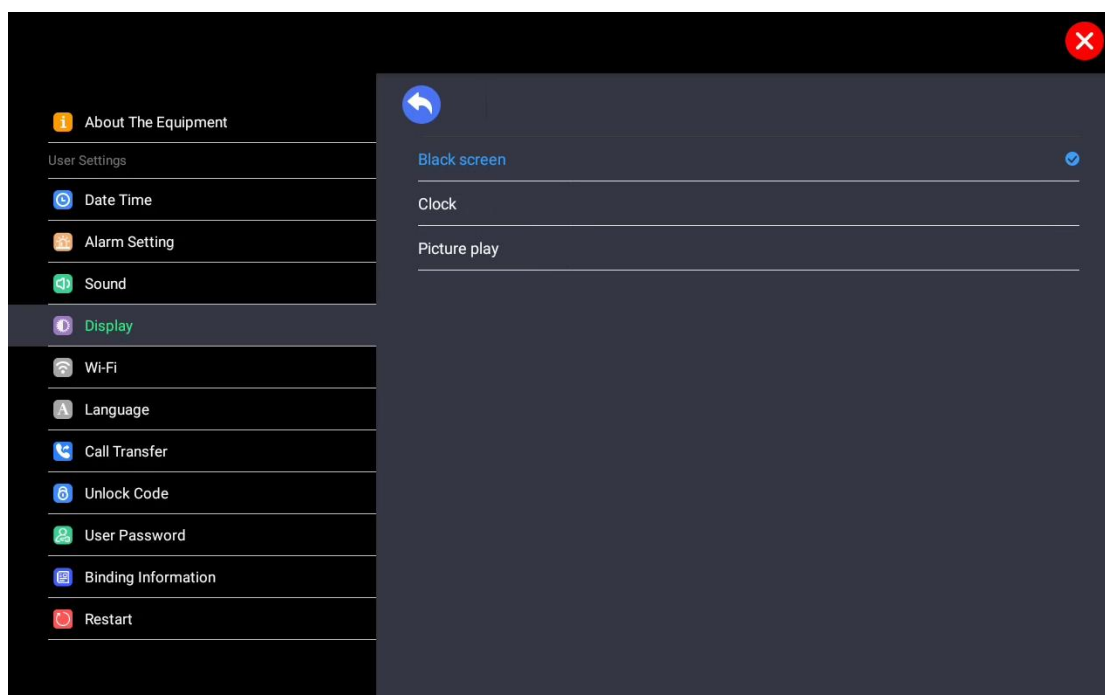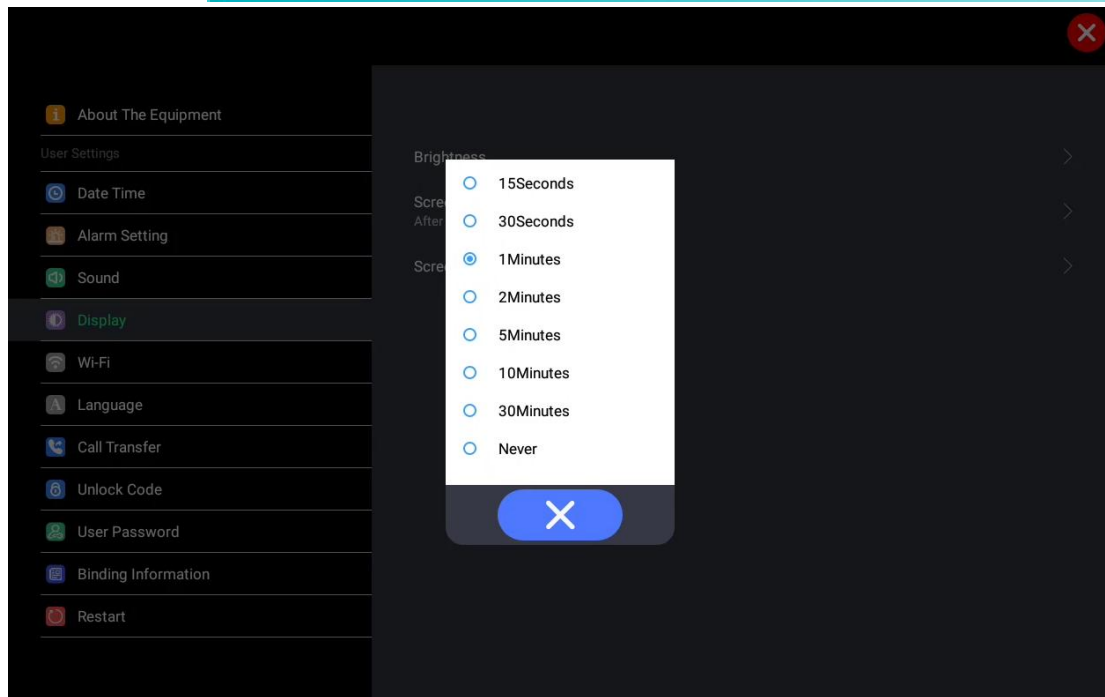


3.7.4 Sound settings

The user tap **Settings->User Settings->Sound** to set the volume, you can tap **Volume Setting** to set the volume in 3 scenarios: ringing volume, call volume and prompt volume. The ringtone volume has 10 levels to choose, from 0% to 100%. Besides, there are 5 built-in ringtones in the device, you can set the ringtones in the following 5 ringtone types: Outgoing ringtone, outdoor station call ringtone, indoor station call ringtone, guard station call ringtone and other devices call ringtone.

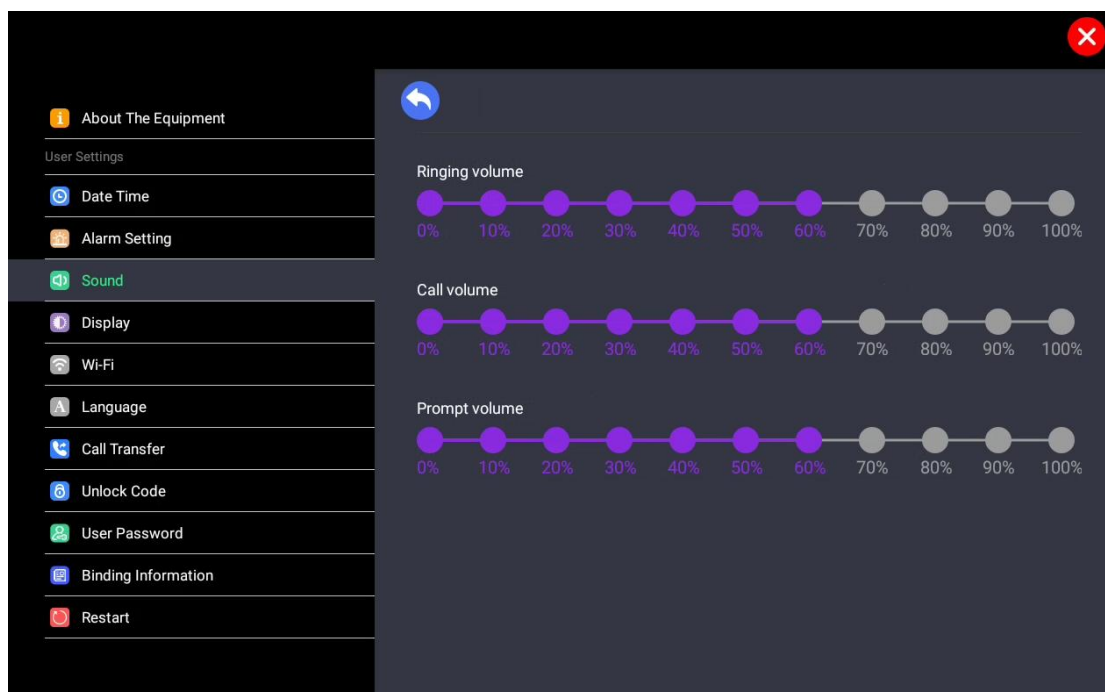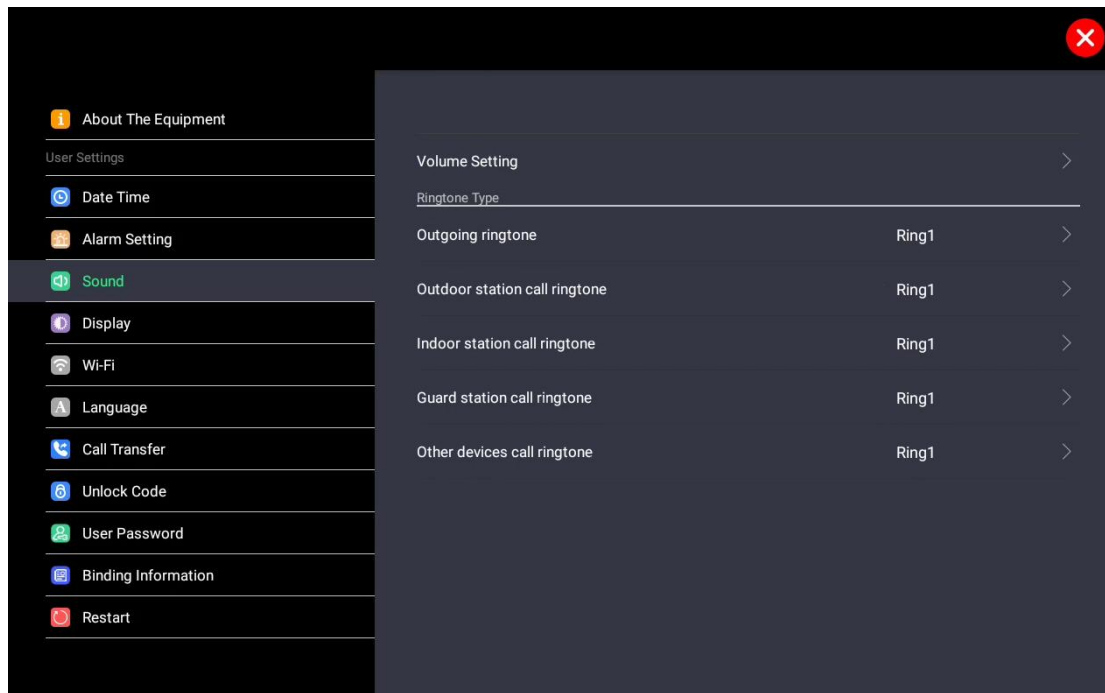


3.7.5 Call Transfer

If the customer wants to be called by his own indoor station, but misses it accidentally, he can set up automatic transfer to other indoor station or guard station. The user tap **Settings->User Settings call-> Call Transfer**, and turn on the switch, you can set the call transfer time for a call to be automatically transferred to another device. And set the number of the device you want to transfer.

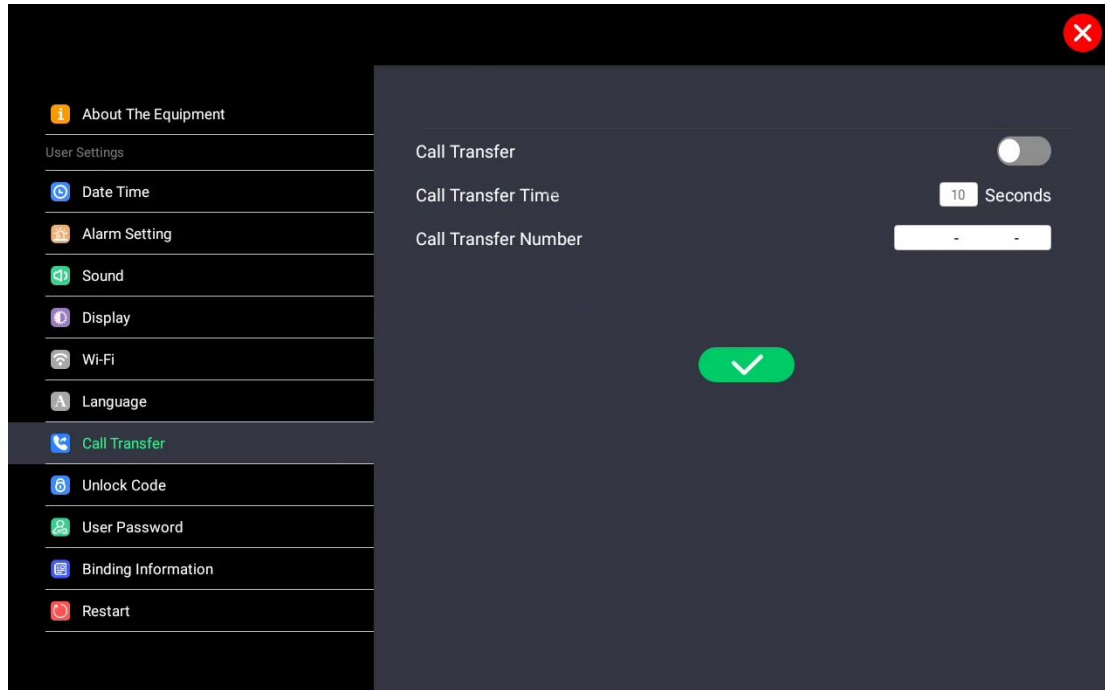

3.7.6 Device information


You tap **Settings-> About The Equipment**,to query the software and hardware version information,device No., Device IP, Android Version, Kernel Version and MAC address.

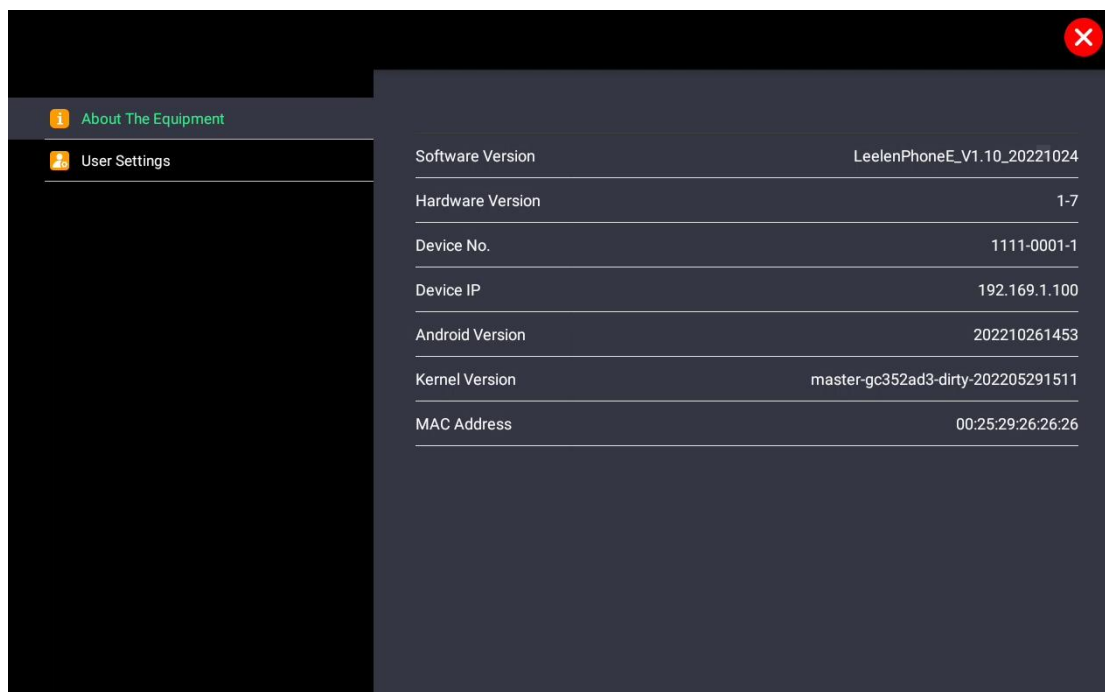


3.7.7 Password settings


The password has two kinds of password, one is about Unlock Password Settings, another is the User Password Settings (Default 123456).

A. Unlock password

The user tap **Setting** ->**User Settings**->**Unlock Code**. On the screen, you can set a lock password with a number of 6. Enter your password and tap . Please note that when you are held hostage by a suspicious person in front of the outdoor station outside the gate, you can enter 9 first and then enter the unlock code. At this time, the property center platform will issue the alarm bell and prompt for hijacking, and you can even notify the property security personnel to request rescue.

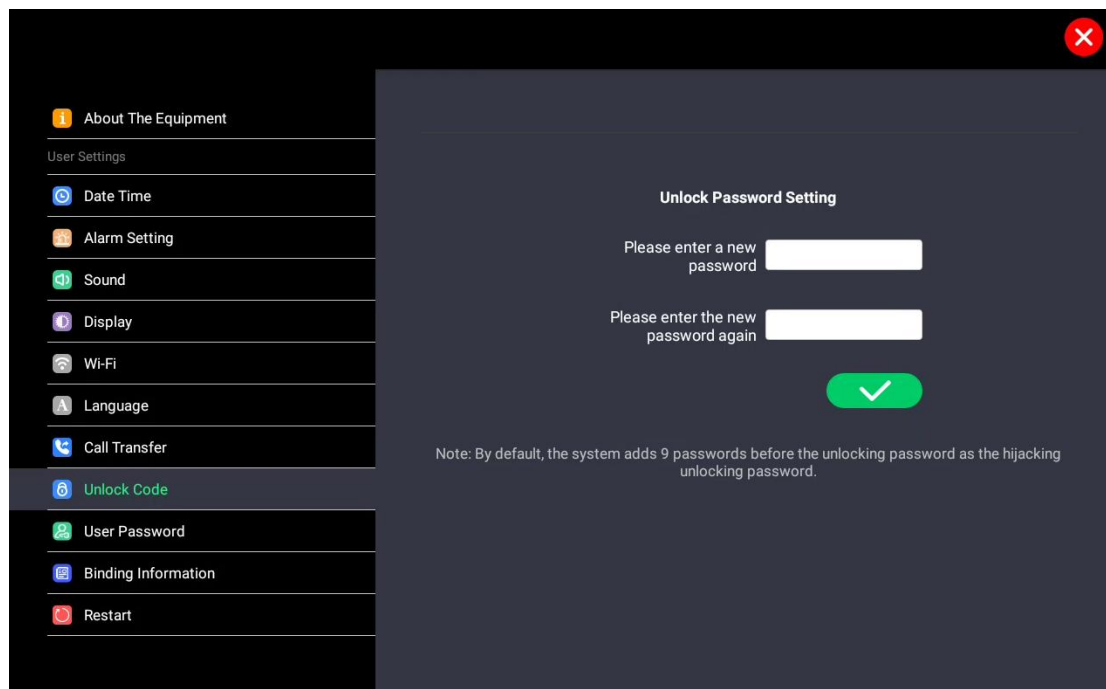


B. User password


When the user wants to enter the user setting interface for the corresponding parameter setting, or to alarm need to use the user password. In this case, the user tap **Settings**->**User Settings**-> **User Password** to enter the screen, and tap **User Password**. After entering the screen, the user can set the number 6 as user password for indoor station. Enter your password and tap




. Please note that when you are held hostage by a suspicious person in front of the indoor station outside the gate, you can enter 9 first and then enter the unlock code. , and then the property center platform will issue a kidnapping alarm bell and prompt, you can even notify the property security personnel to request rescue.

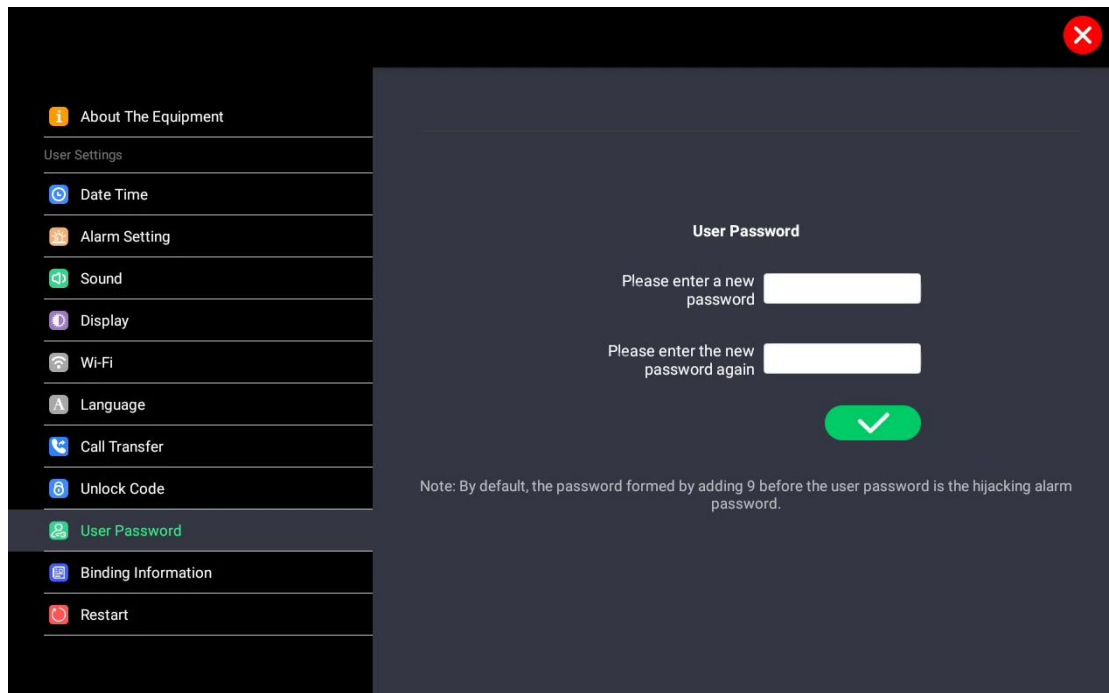

3.7.8 Restart

User can restart the device on this page. User can tap **Settings->User Settings->Restart->** , the device will into restart.

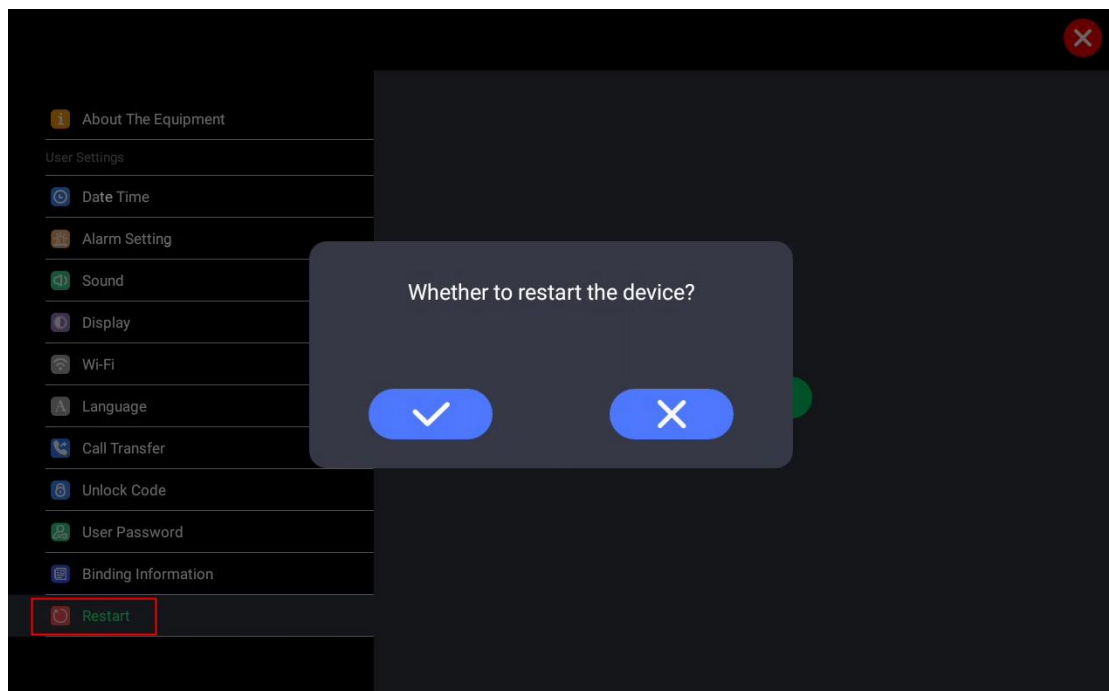


4. Remote control APP

If the user wants to use the APP for remote control, the functions can be realized include: remote monitoring of the outdoor station and IPC, remote intercom, remote unlocking, remote viewing of alarm and intercom records and other information.

4.1 APP download and register

4.1.1 APP download


Users can download Leelen APP (Intercom-Technology for life) from the APP Store or Google Play.

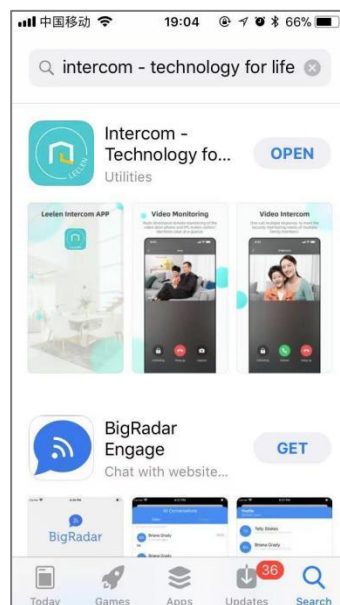

4.1.2 APP register


User download the APP, and you should register the account, follow the step:

1. Open the APP, tap **Sign up** at the bottom of the login page;

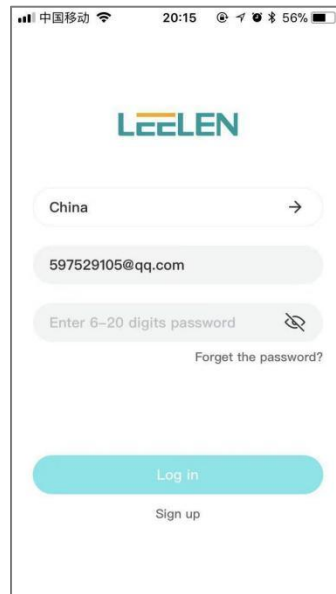


Tap **region** as the country->enter E-mail as the account->tap **Get code** to gain the Verification code->enter code->enter password->enter password again->Check **Privacy Statement**->tap **Sign up**

2. Come back the login page, enter the country, account, password, tap **Log in**, to go to home page;

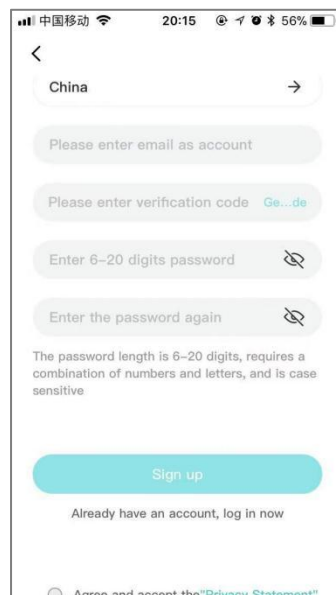

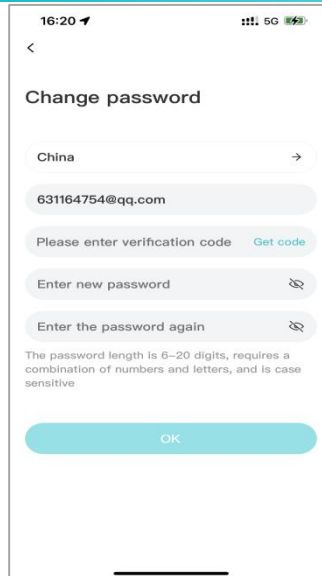

3. If you forgot the password,you can tap **Forget the password**.In the **Change password** page,you can set the password, gain the verification code,enter the new password,enter the new password again,tap **OK**.





4.2 APP bind and Unbind

4.2.1 APP bind

1) User open the indoor station and tap  on the top right corner of home page .Note: When you open the QR code, it display: Tuya Cloud platform is not connected, please connect. Or the network is not connected, please connect. In this case, check whether the indoor station is properly connected or connected to the Internet.

2) User open the APP,to tap  on the top right corner, to scan the QR code;

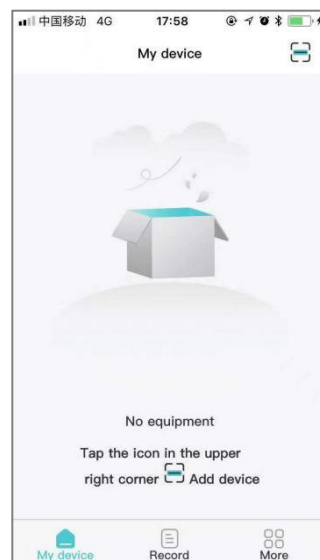

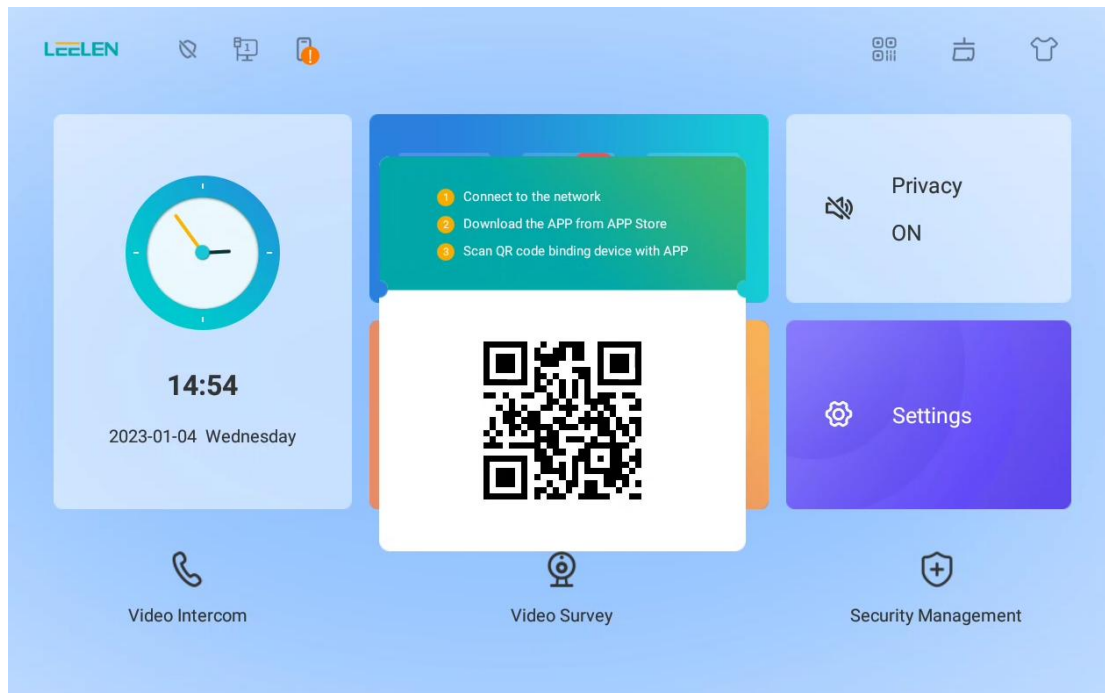


4.2.2 APP and device unbind

There are two way of unbind from APP and device,you can unbind APP on the indoor station or APP

4.2.2.1 APP unbind

User tap **More->Family management->Account of APP->tap Remove** , At this point, it will remind the main account to remove the other accounts under the home will also be removed ,tap yes,it will remove from the home.

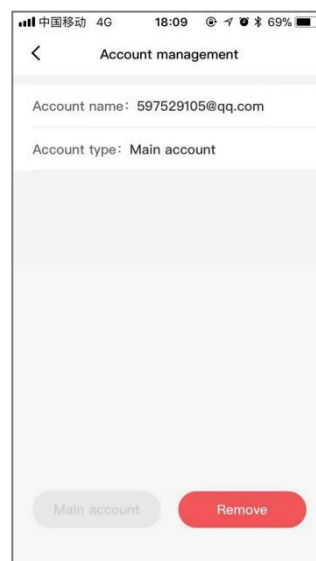


Note:

Do not remove the account easily. If the main account should no longer follow the home, and other accounts are still under the current home, you can remove the permission of the main account to other members.

4.2.2.2 The device unbind


The user can tap **Settings** -> **User Settings** -> **Binding Information** in the indoor station, and it remind Whether to unbind the device and APP, and the device will restart will be displayed. After tap **OK**, the APP will be unbound. At this time, the data stored by the user of the device will be cleared at the same time, and the device will enter the restart state.

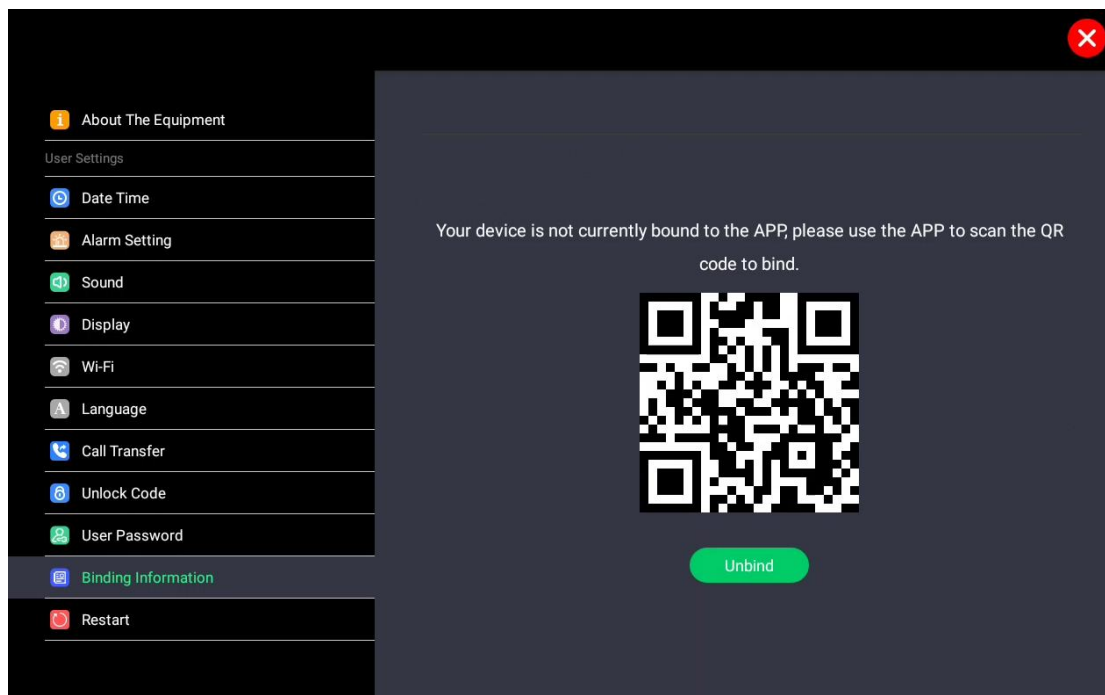

4.3 APP account management


Users using the same APP account can bind multiple indoor station to create multiple homes.

The same home has one main account, and can be bound to four sub-accounts (if the network is stable). If you want all accounts to watch the screen at the same time and run stably, it is recommended to bind three accounts (one main account and two sub-accounts) under one home.

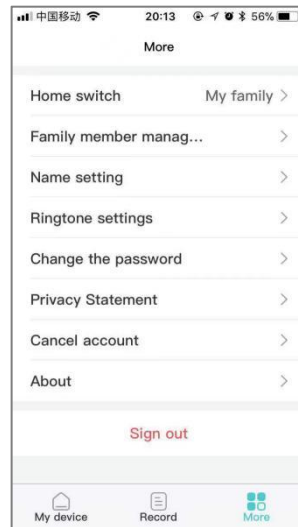

4.3.1 Home switch



The same account can be bound to 20 homes at the same time. The user can tap More to select the home. After switch the home, all the following operations are carried out for the current home, except for the call ring.

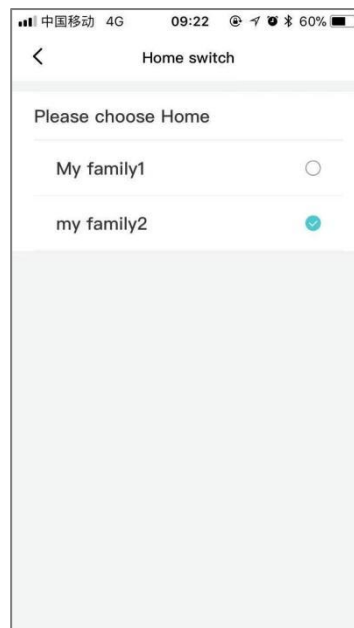

4.3.2 Family management


4.3.2.1 Invite new member

User tap **More->Family management->Invite new members**,In the **Invite new members**, enter the new account ,tap **Invite**.At this point, the sub-account can refresh the following table by pulling up and down on the main interface, and the device under the home page can appear. (In this case, the sub-account still needs to meet the email format)

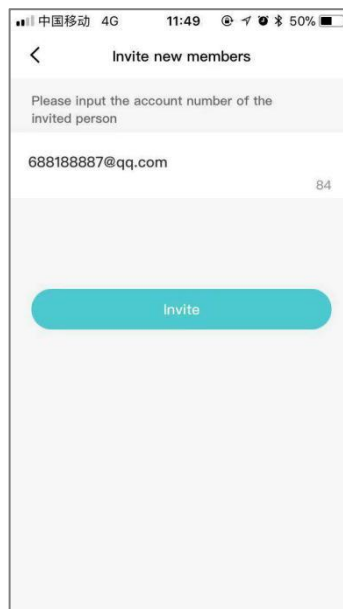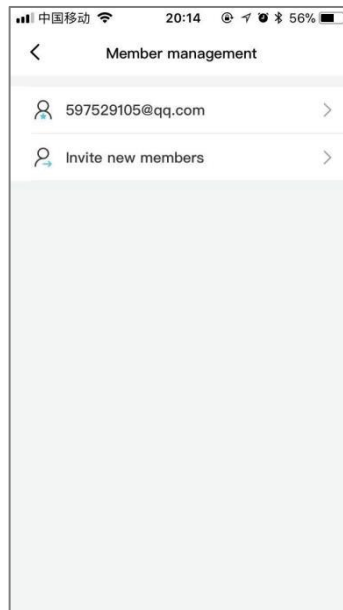


4.3.2.2 Remove account

When the account is the main account, if the account is removed, all accounts will be removed from this home. Therefore, if you want to make sure that everyone exits the home, you can directly remove the main account and all sub-accounts. If you only want to remove a single account, you can first set the sub-account as the main account in the

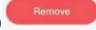APP of sub-account, then enter the current account page, and tap  to remove the account.


Differences between main account and sub-account:

1. The sub-account can be removed from the home; The main account can remove not only itself, but also sub-account;
2. Main account Can add or remove sub-accounts of the same home;
3. Under the same home of multiple indoor stations, must only choose one of the indoor station binding APP.

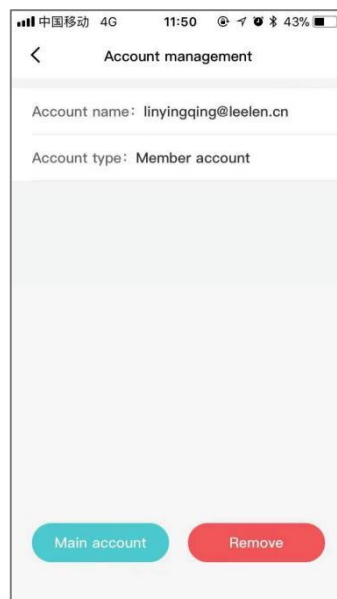


4.3.3 Name setting

User tap **More->Name setting**, to modify the home name and device name under the current home. The family name contains a maximum of 25 characters. The device name contains a maximum of 50 characters.

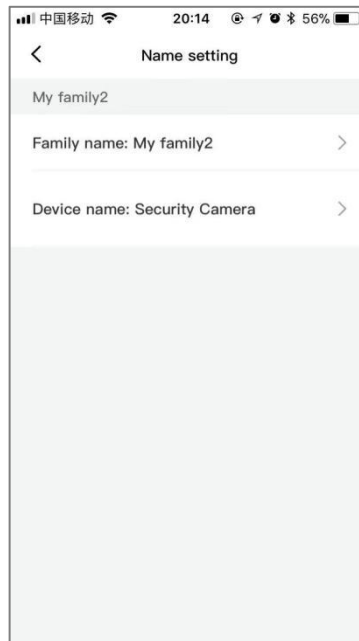


4.3.4 Cancel account

User tap **More->Cancel account->Agree to the statement->OK**, to cancel account. When a user logs out of an account, the protection period of the account is 7 days. If the user does not use the account within 7 days, the account is permanently logged out. If the user needs to use the account, the user can register again. However, if the user uses the account again within the seven-day protection period, they can use the account forever.

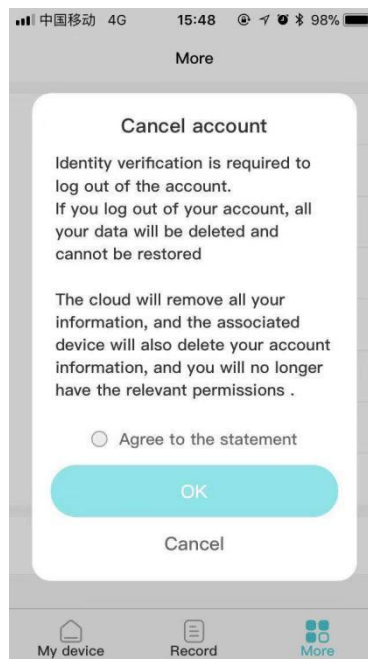

4.4 APP function

4.4.1 Monitoring

User tap **My device**-> ,The monitoring page is displayed,you can unlock, hang up the monitor, capture a picture, transfer the monitor to an intercom, or switch devices.

A. Unlock


User tap **unlocking** to open the door, and then the outdoor station and APP will remind “the door is open”or”Unlock successfully”.

B.Capture


If a user sees a suspicious person from the outdoor station or IPC during monitoring, you can tap **Capture** to take a screenshot and save records in mobile phone.


C.Intercom

When the user is monitoring, if the visitor in front of the outdoor station just arrives, you can tap **Intercom** to initiate Intercom to the outdoor station.

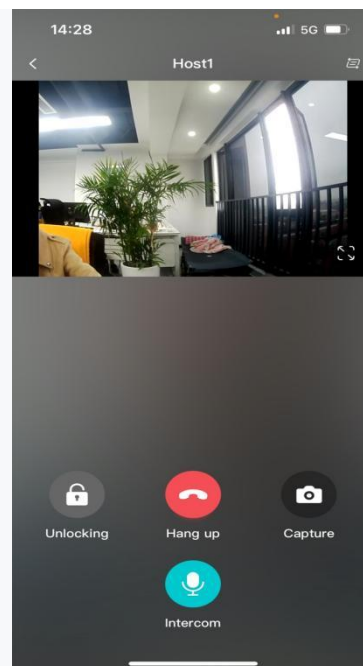

4.4.1.3 Switch device


If you want to monitor other outdoor station or IPC , you can tap  in the upper right corner of the interface ,to switch the device.

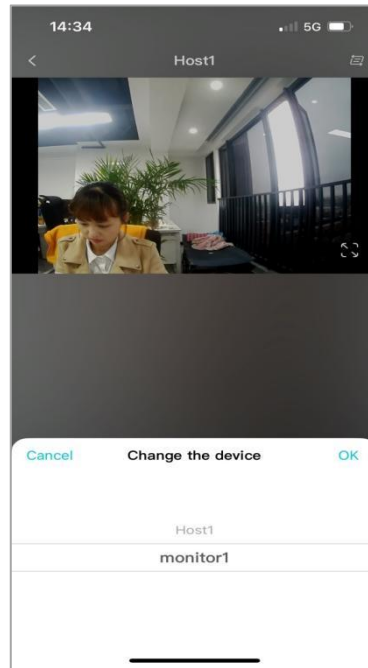

Note:The indoor station in a home can monitor up to four devices(Monitor all outdoor station first).

4.4.2 Intercom


When a visitor calls the indoor station, the APP bound to the corresponding home will also receive the ringing push. Tap the ringing push or tap the APP to enter the call ringing interface. Tap **Answer** to enter the intercom state. Tap Hang up to **Hang up** the ring or call. During a ringing or call, you can tap **Unlocking** to unlock the phone.

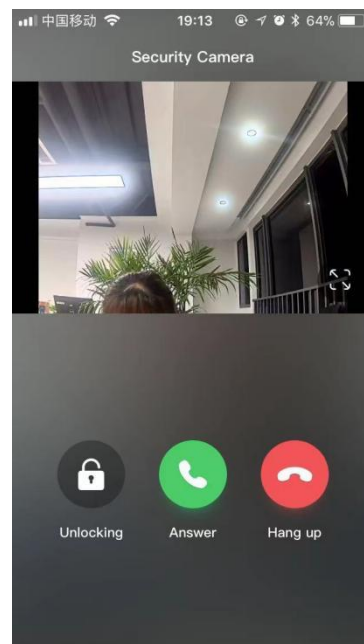

4.4.3 Records query

4.4.3.1 Intercom records

User can tap **Intercom Record**, to query the intercom records in this home, included incoming number, outgoing number, intercom time.

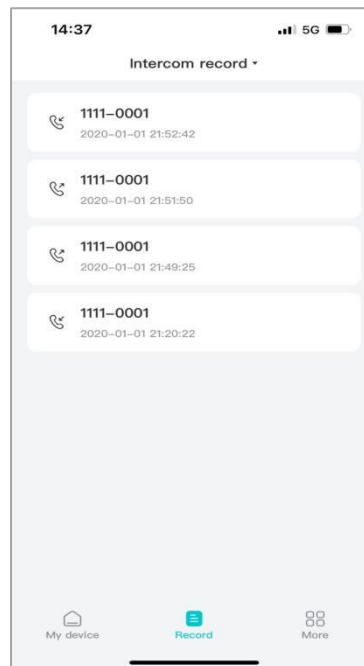

4.4.3.2 Alarm records


User can tap **Alarm Record** to query the alarm records, included alarm time, alarm address, alarm inductor type.



4.4.4 Other function

4.4.4.1 Change ringtone

User can tap **More**->Ringtone Settings,to choose your ringtone,included Ring1-Ring7.

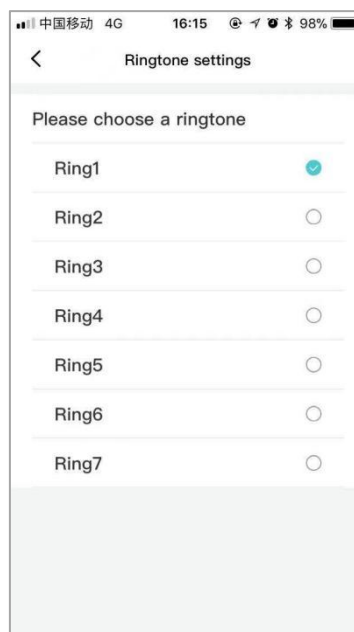

4.4.4.2 Change Password

User tap **More**->**Change Password**,In this page,enter country 、 account 、 gain verification 、

password.After the password is successfully changed, you need to return to the login page and log in to the account and password again.

16:20 5G

<

Retrieve password

China →

631164754@qq.com

Please enter verification code [Get code](#)

Enter new password

Enter the password again

The password length is 6–20 digits, requires a combination of numbers and letters, and is case sensitive

OK

5. FAQ

Q1: How to obtain IP address of V39

A1: You can use the display screen to get the IP information, just check the IP address at **Settings > About the Equipment**.

Q2: Can I communicate other indoor monitor with indoor monitor?

A2: Leelen device can communicate with each other, no matter it is indoor monitor, outdoor station.

Q3: What is user password?

A3: The default of password is 123456.

Q4: How do Users import third-party software?

A4: Contact engineer to import the software through the WEB.

6. Contact US

For more information about the product, please visit us at www.global-leelen.com or feel free to contact us by

Sales email: export@leelen.com

Tel: (0086) 592 6157677

Fax: (0086)592 6157677

We highly appreciate your feedback about our products.